






35.2342 Cab detail set for Talmya LRDG Chevrolet

- B1 Bumper x1
- B2 Dashboard x1
- B3 Under plate x1
- A Clutch pedal x1
- B Clutch pedal x 1
- C Brake pedal x1
- D Gear lever x1
- E Hand brake x1
- F Clutch lever x1
- G Accelerator pedal x1
- H Bumper stay x2

- I Windscreen x 2
- J Canvas door left x1
- K Canvas door right x1
- L Sun compass x 1
- M Front hook x 2
- N Rifle stowed x21
- O Left rifle bracket x1
- P Right rifle bracket x1
- Q Rifle stay x1
- R Rifle fixation bracket x1+2
- S Wing nuts x4+2
- T POW x2
- U POW fixation x2
- V Battery box X1
- W Sand mat x1
- X Sand mat x1






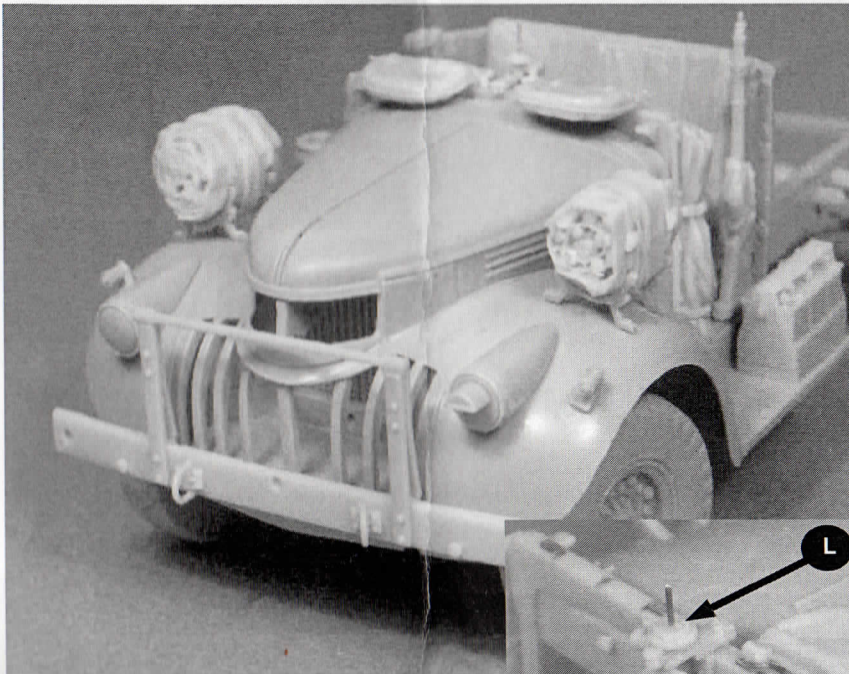


Make «knome» on sun compass from very thin sprue

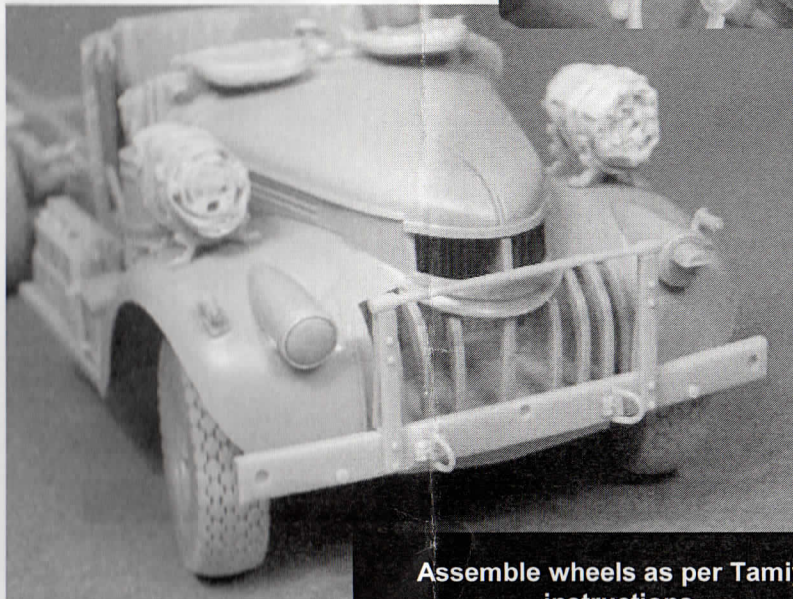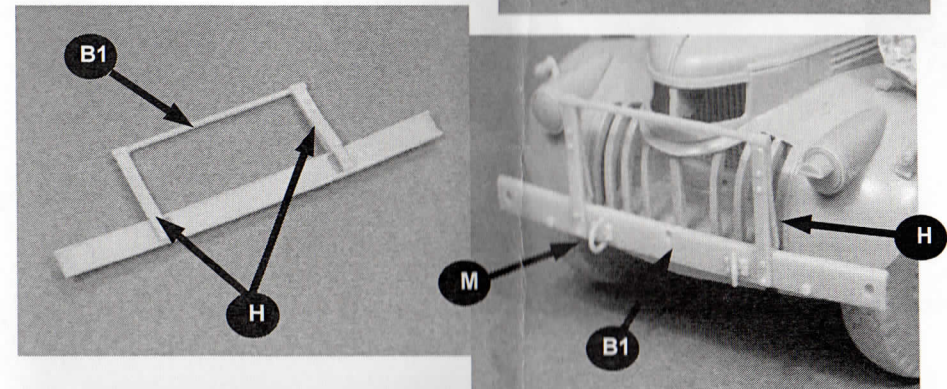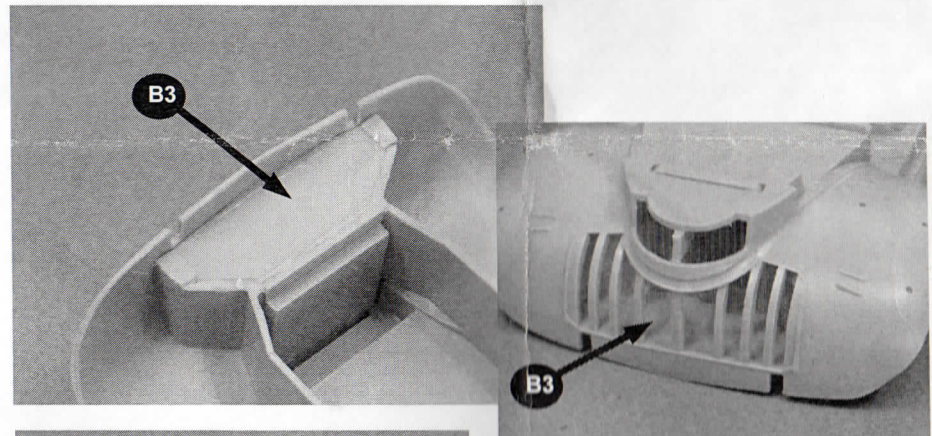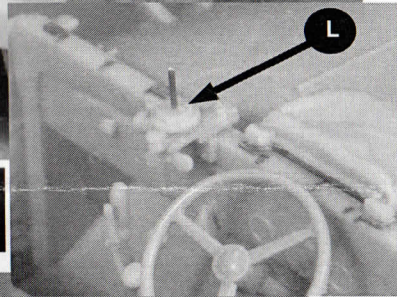


Assemble wheels as per Tamiya instructions

Thanks to Sean & Arno
Special thanks to Miran

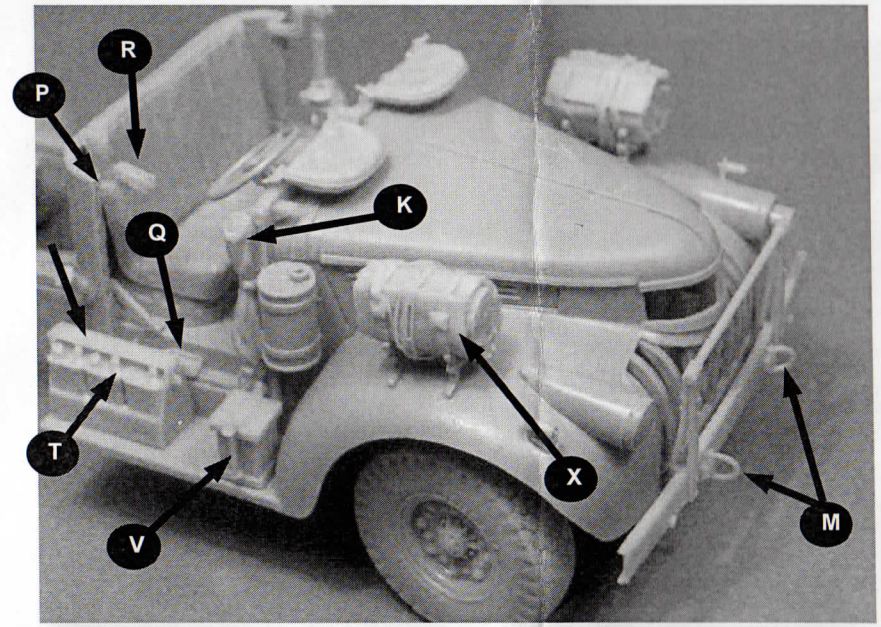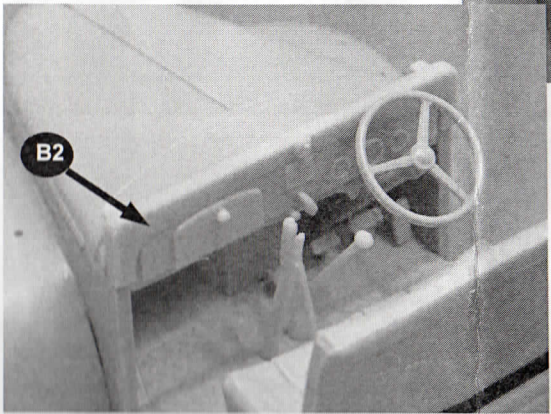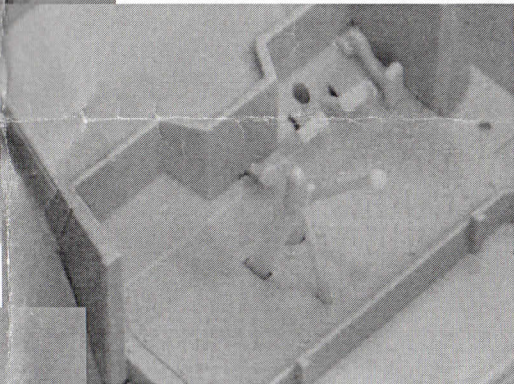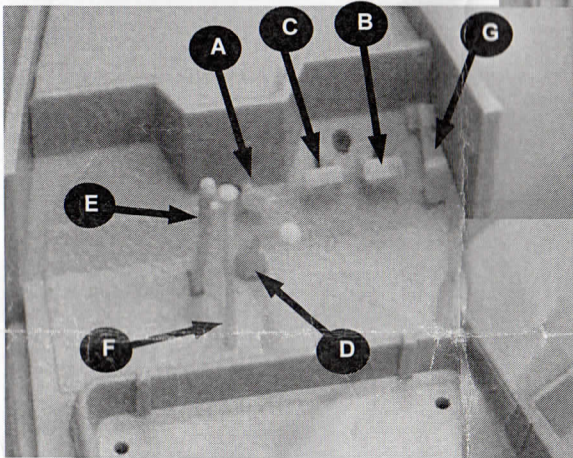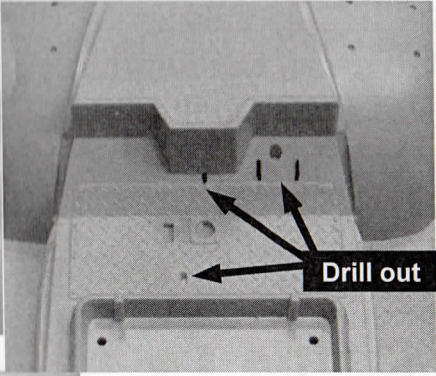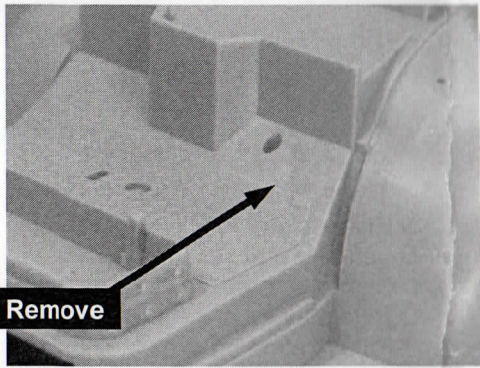

Q & R are to be used if stowed rifle H is not used

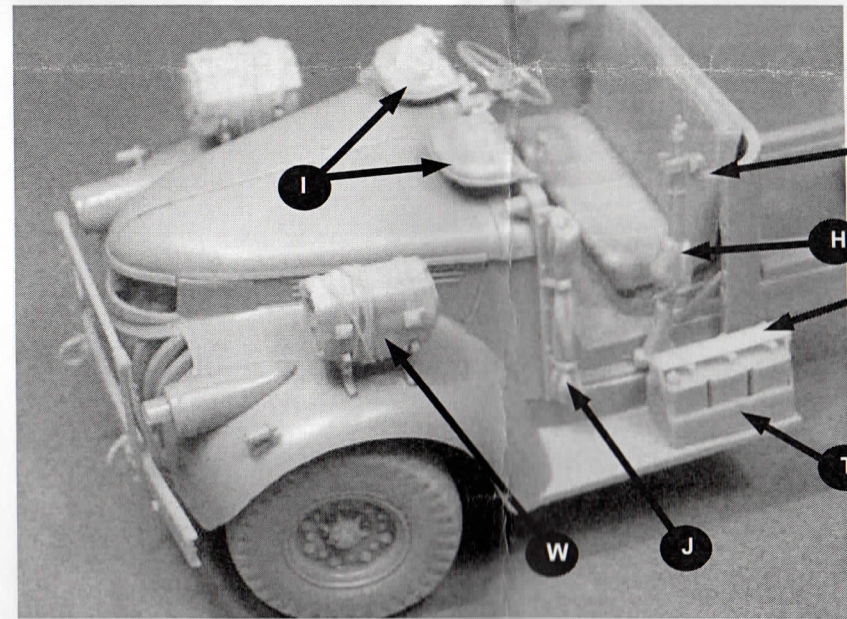

Place wing nuts S at extremity of windcreens I