


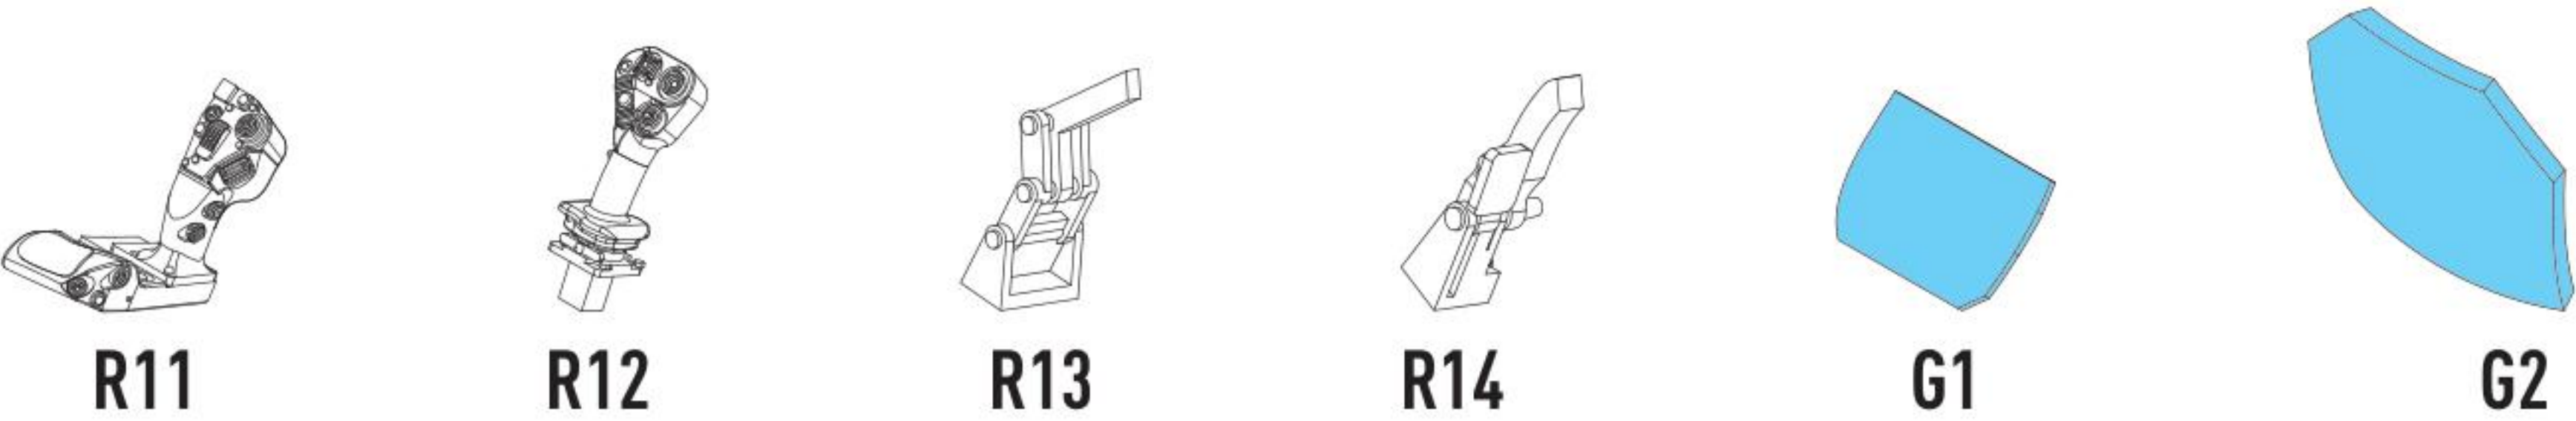
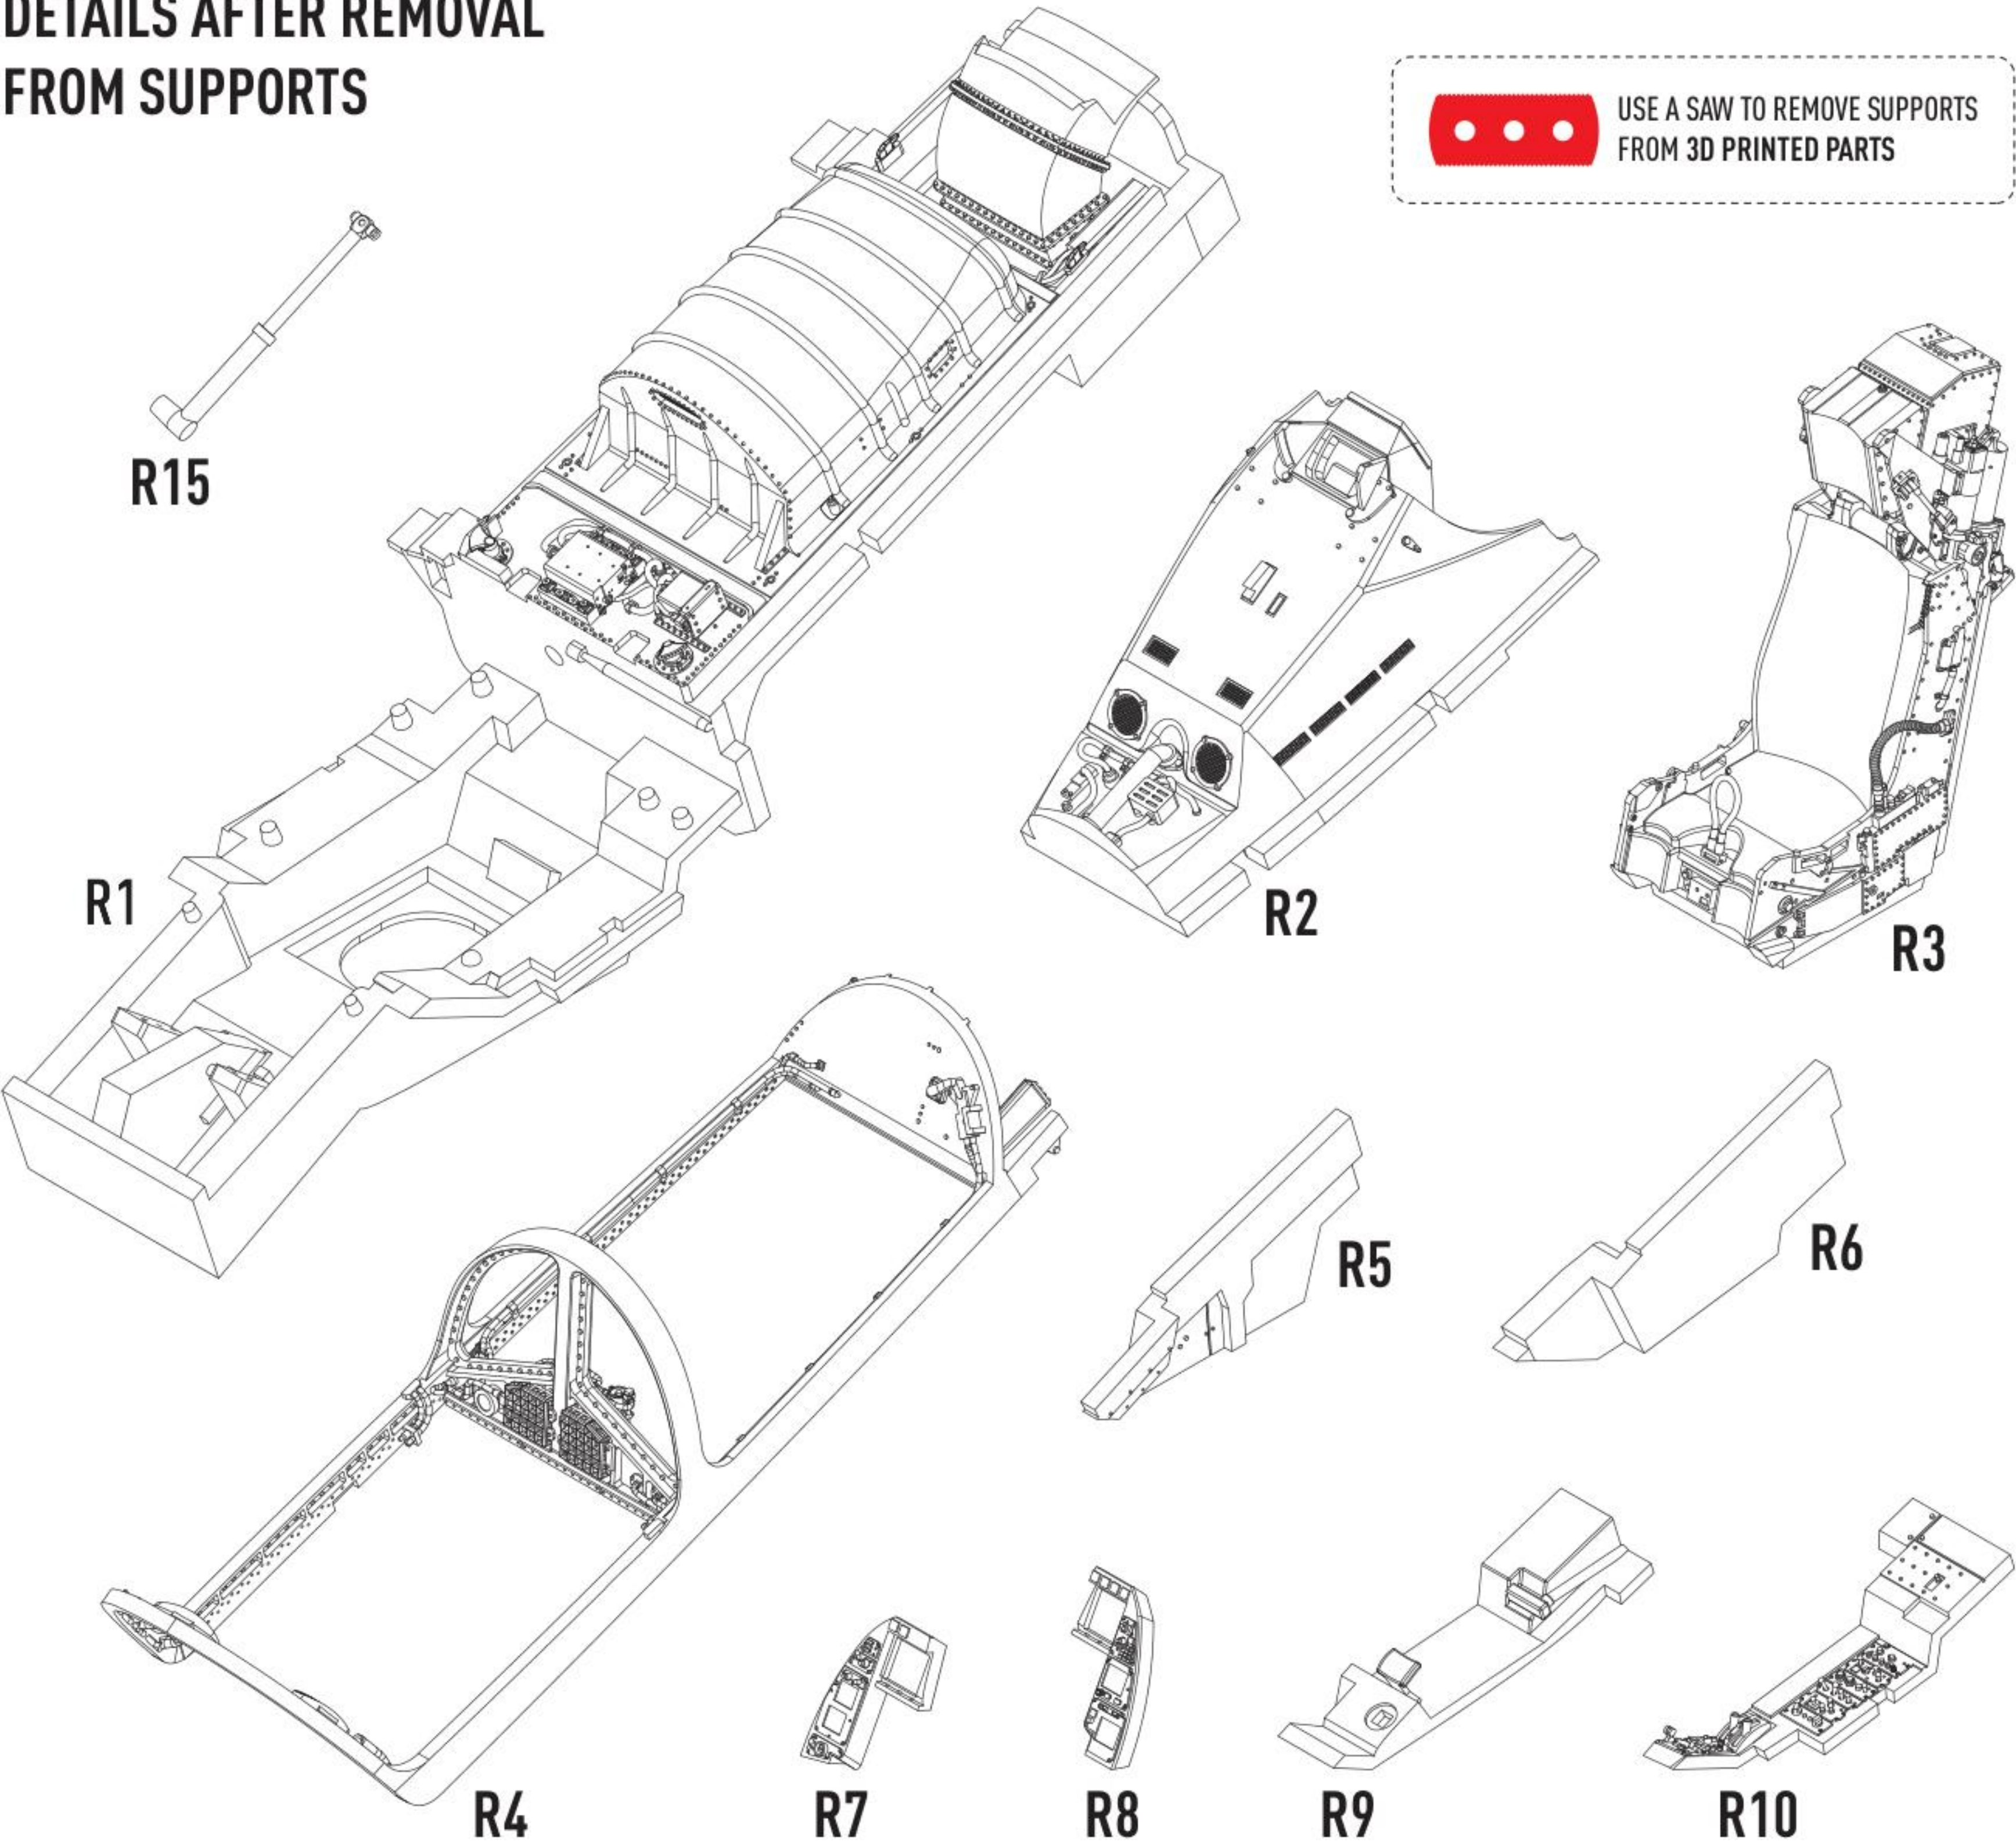
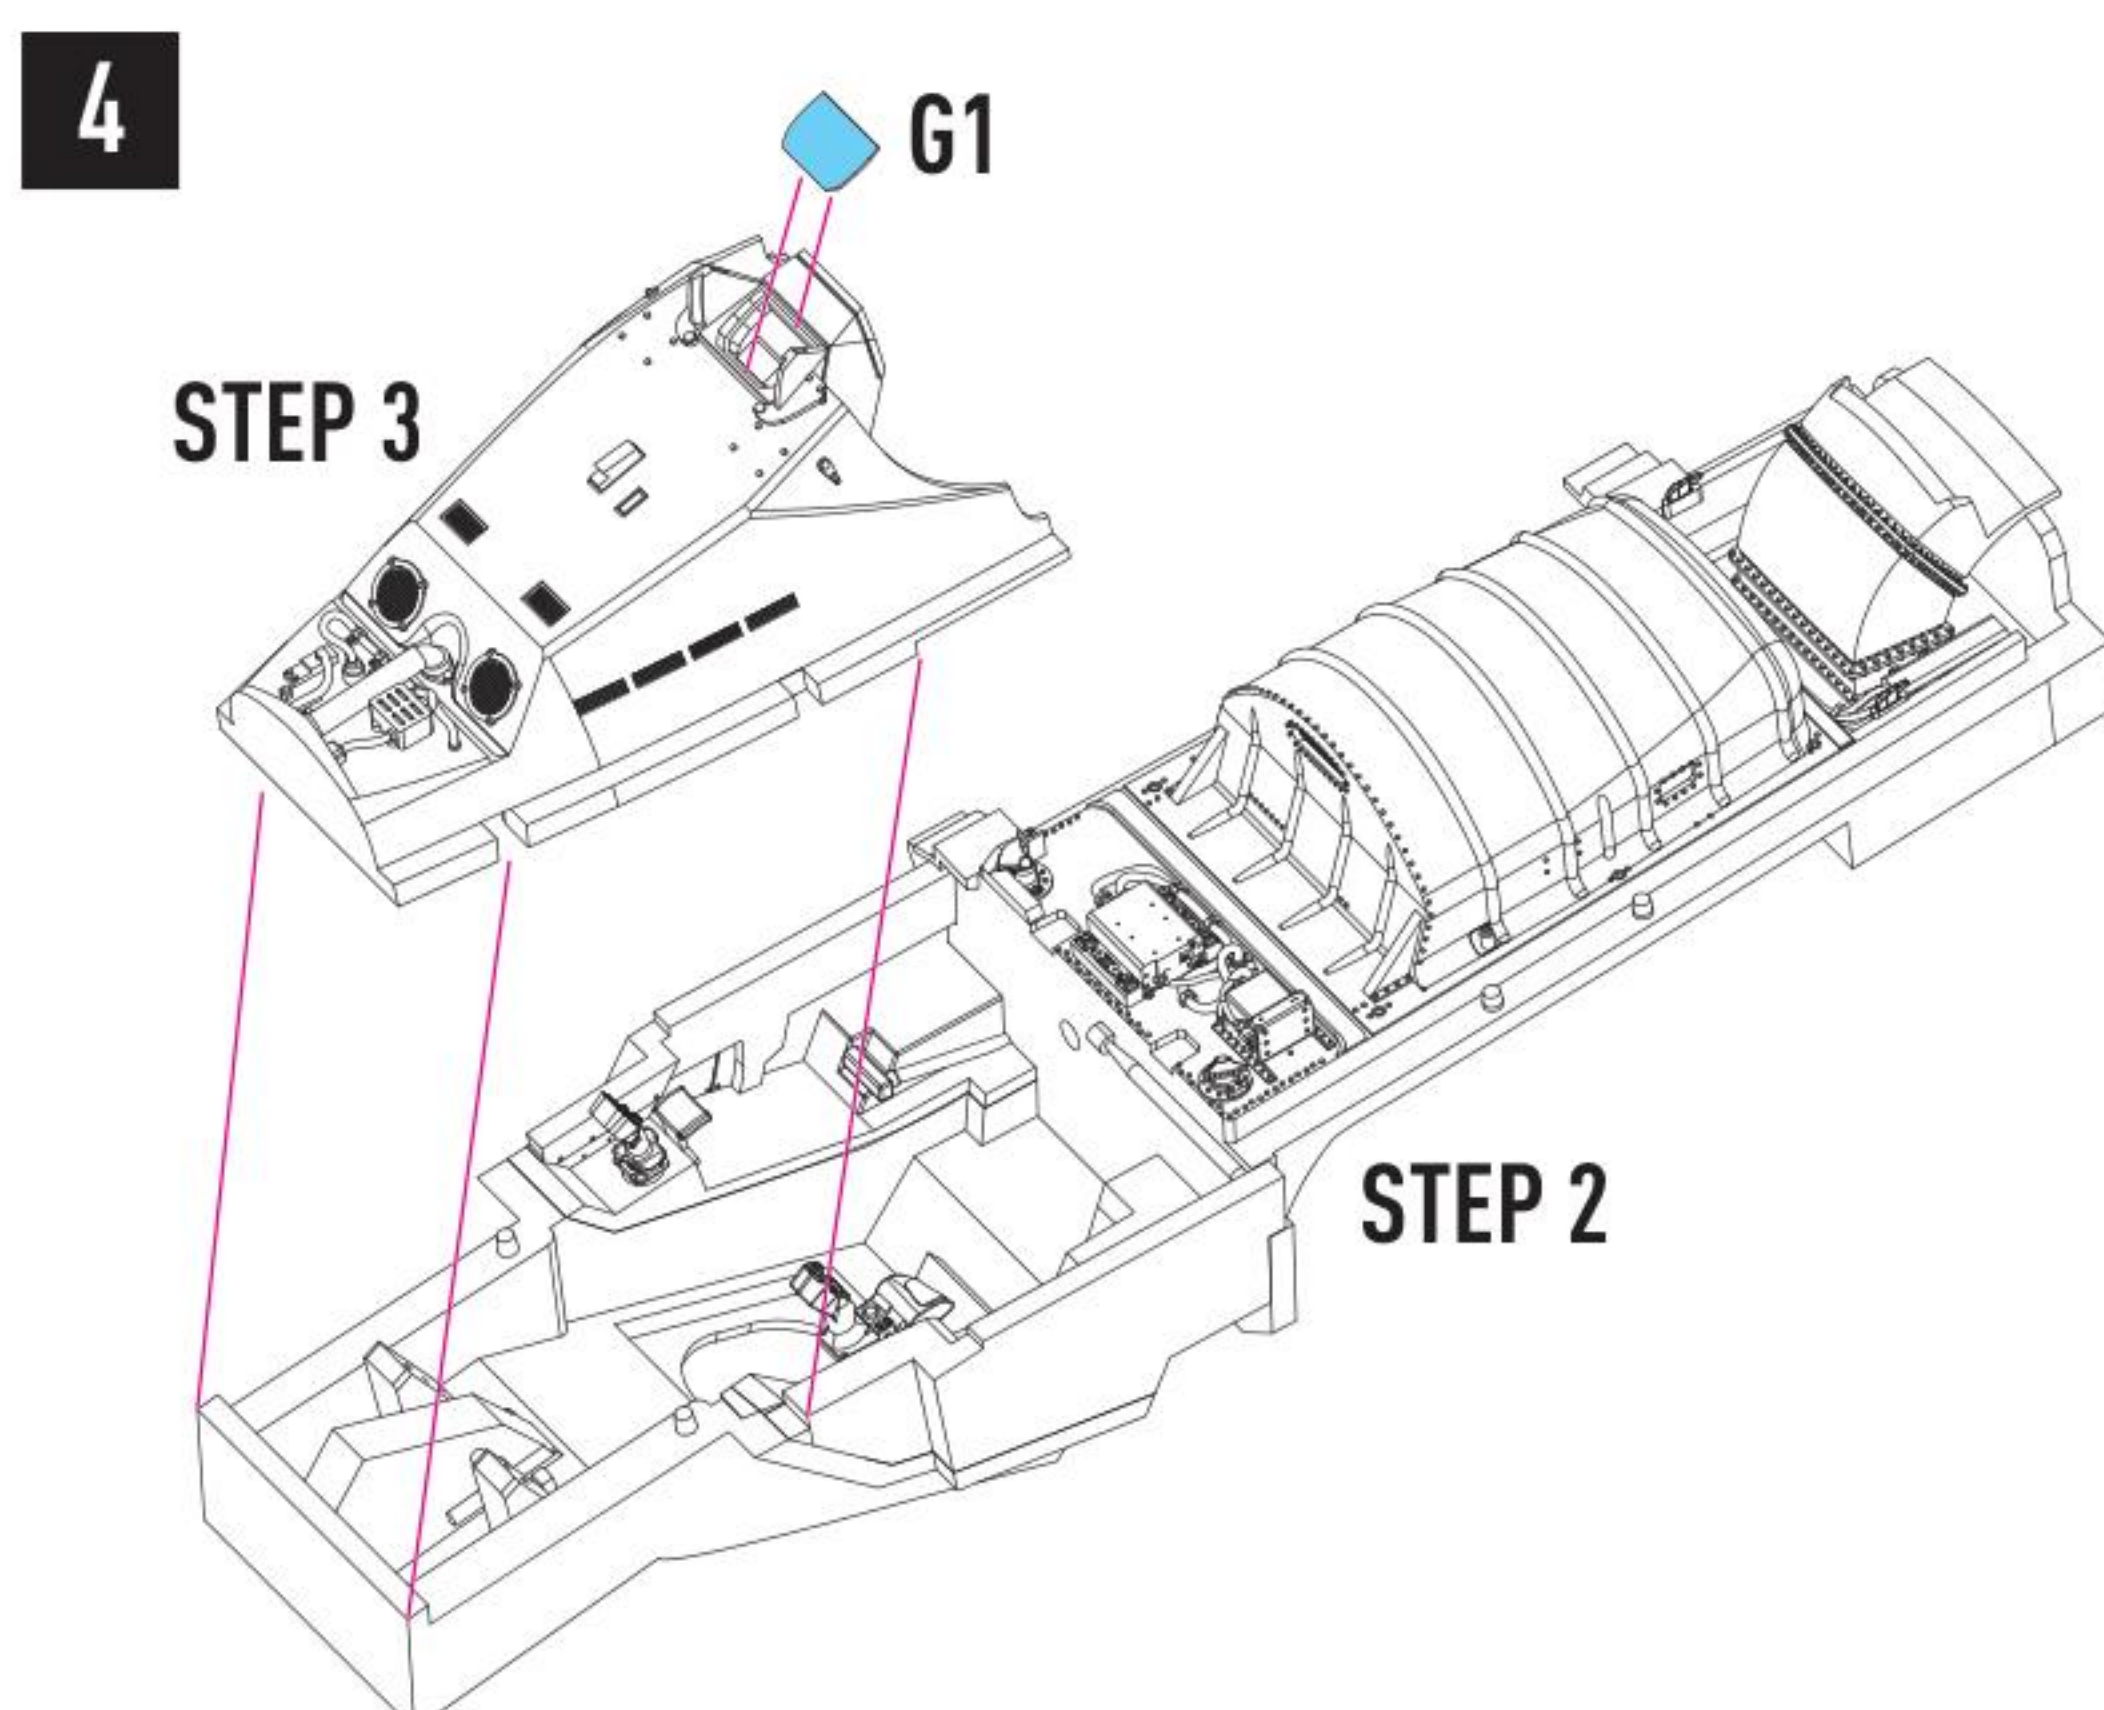


DETAILS AFTER REMOVAL
 FROM SUPPORTS

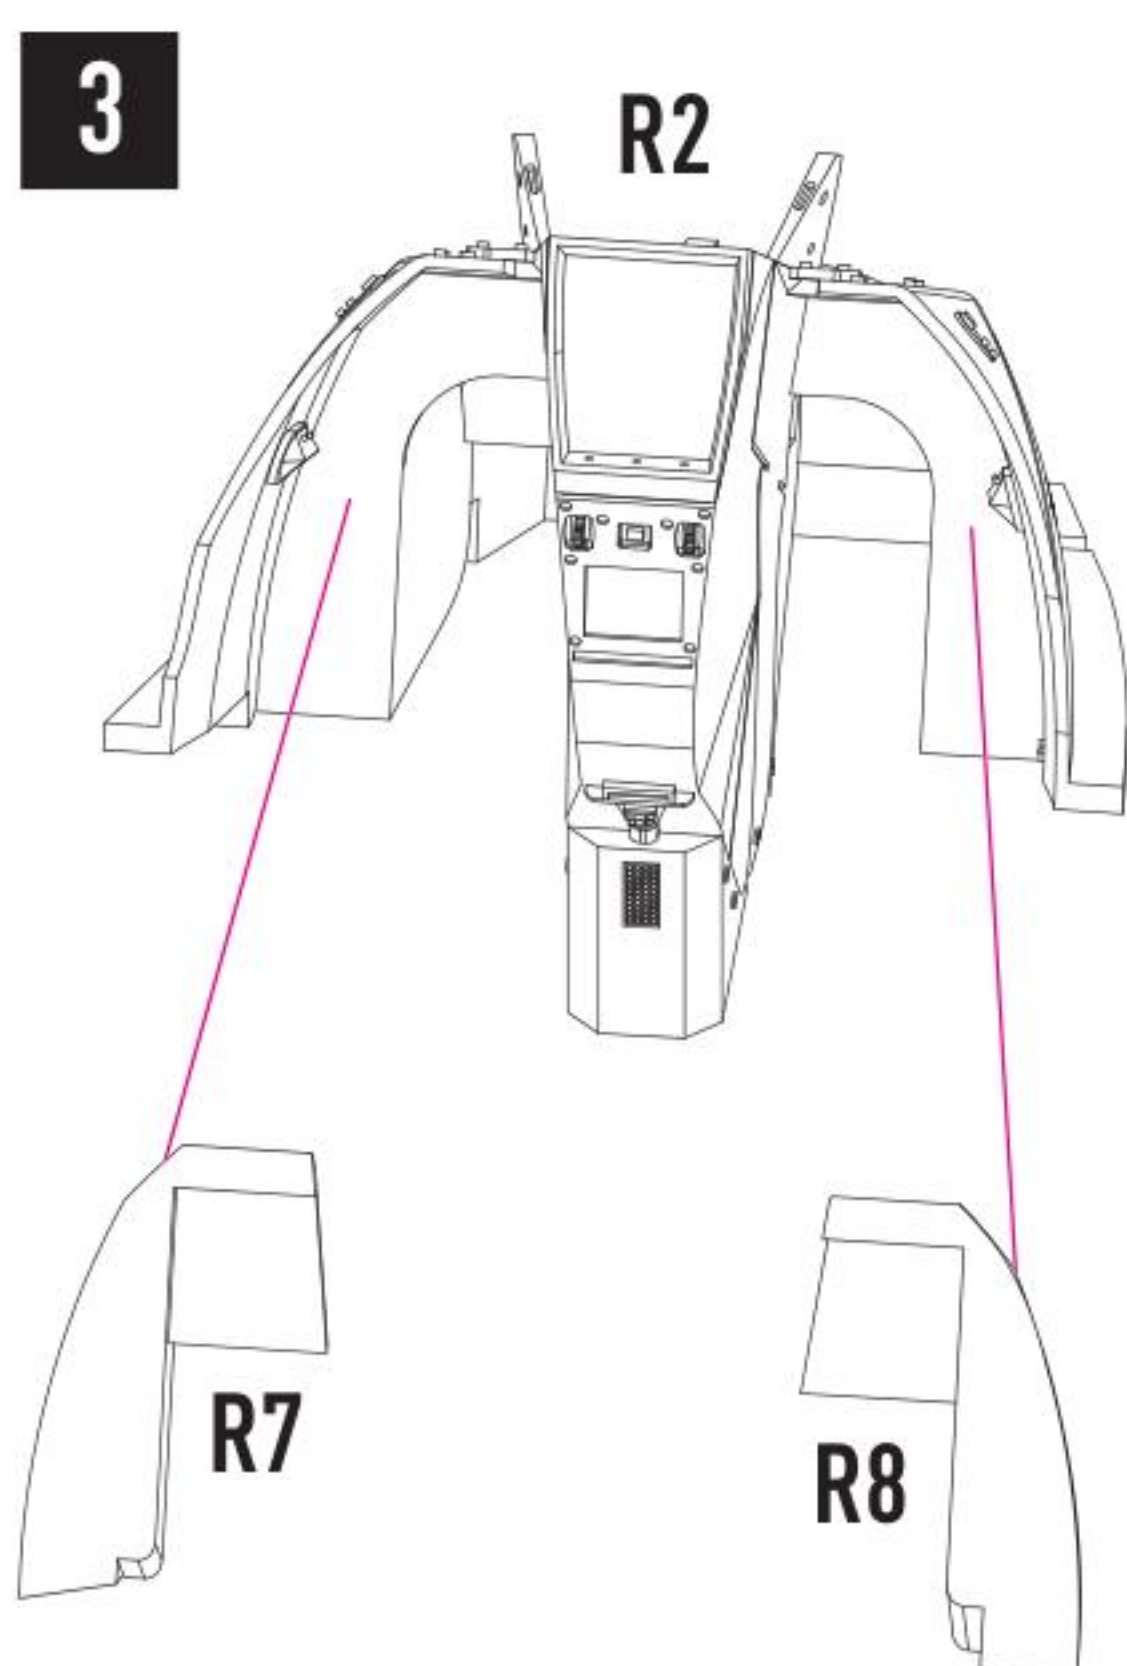


PARTS G1 AND G2 SHOULD BE COATED WITH GLOSSY VARNISH BEFORE USE

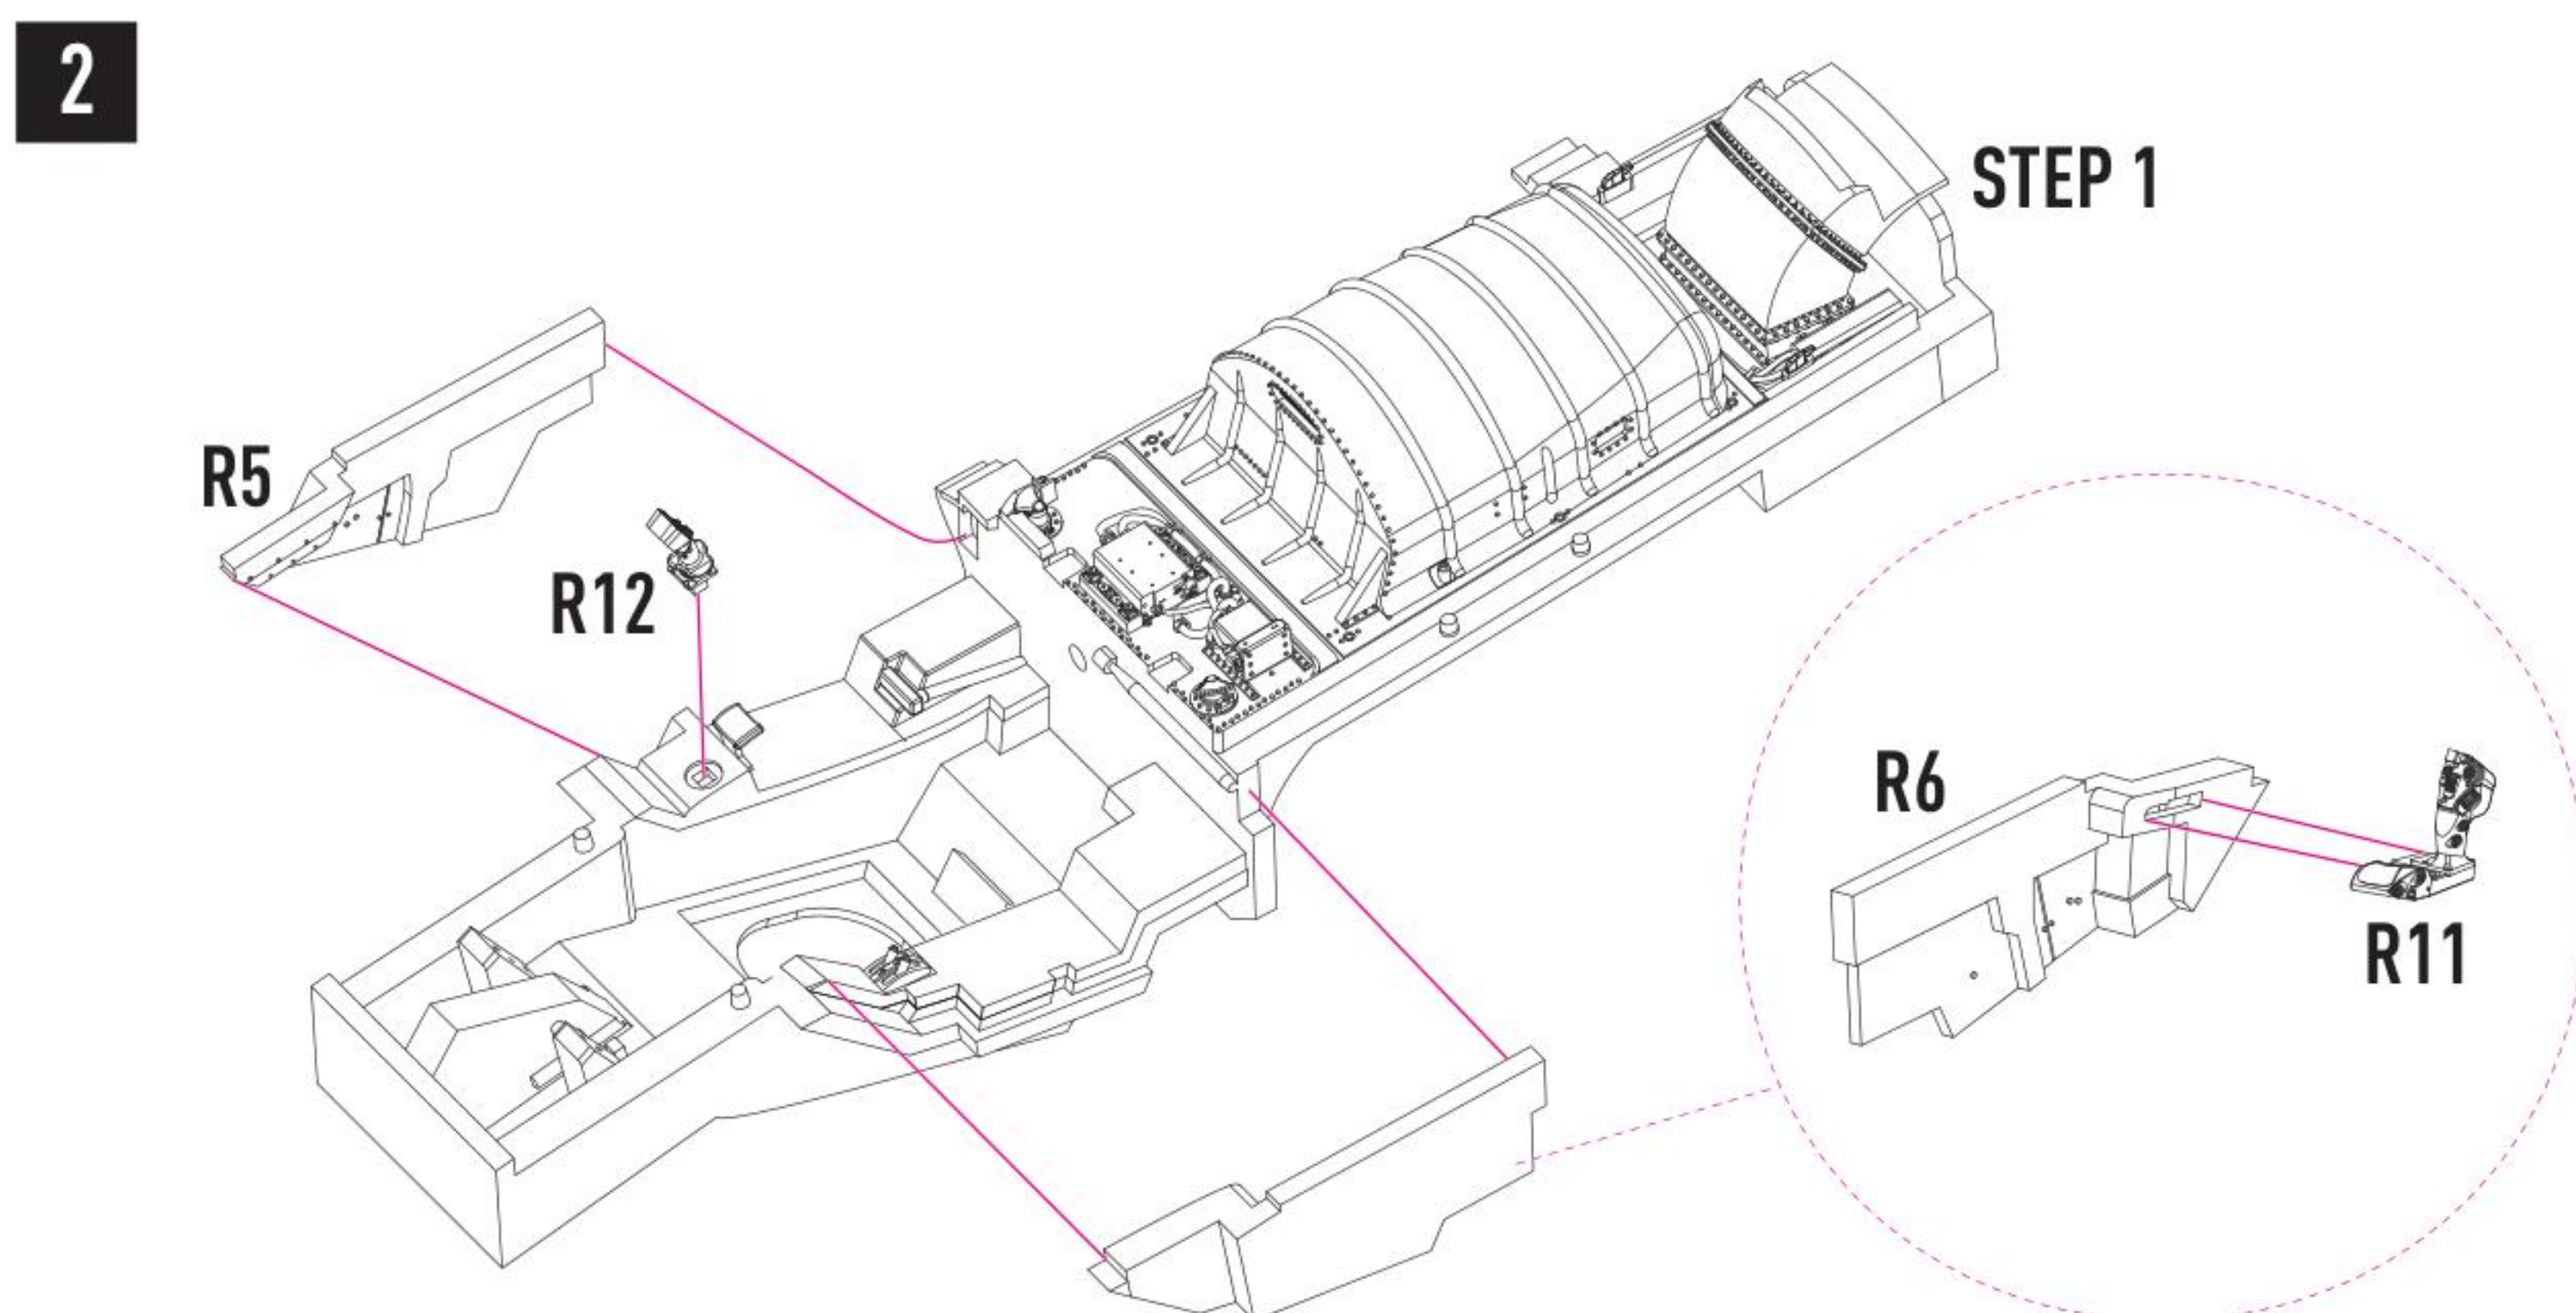

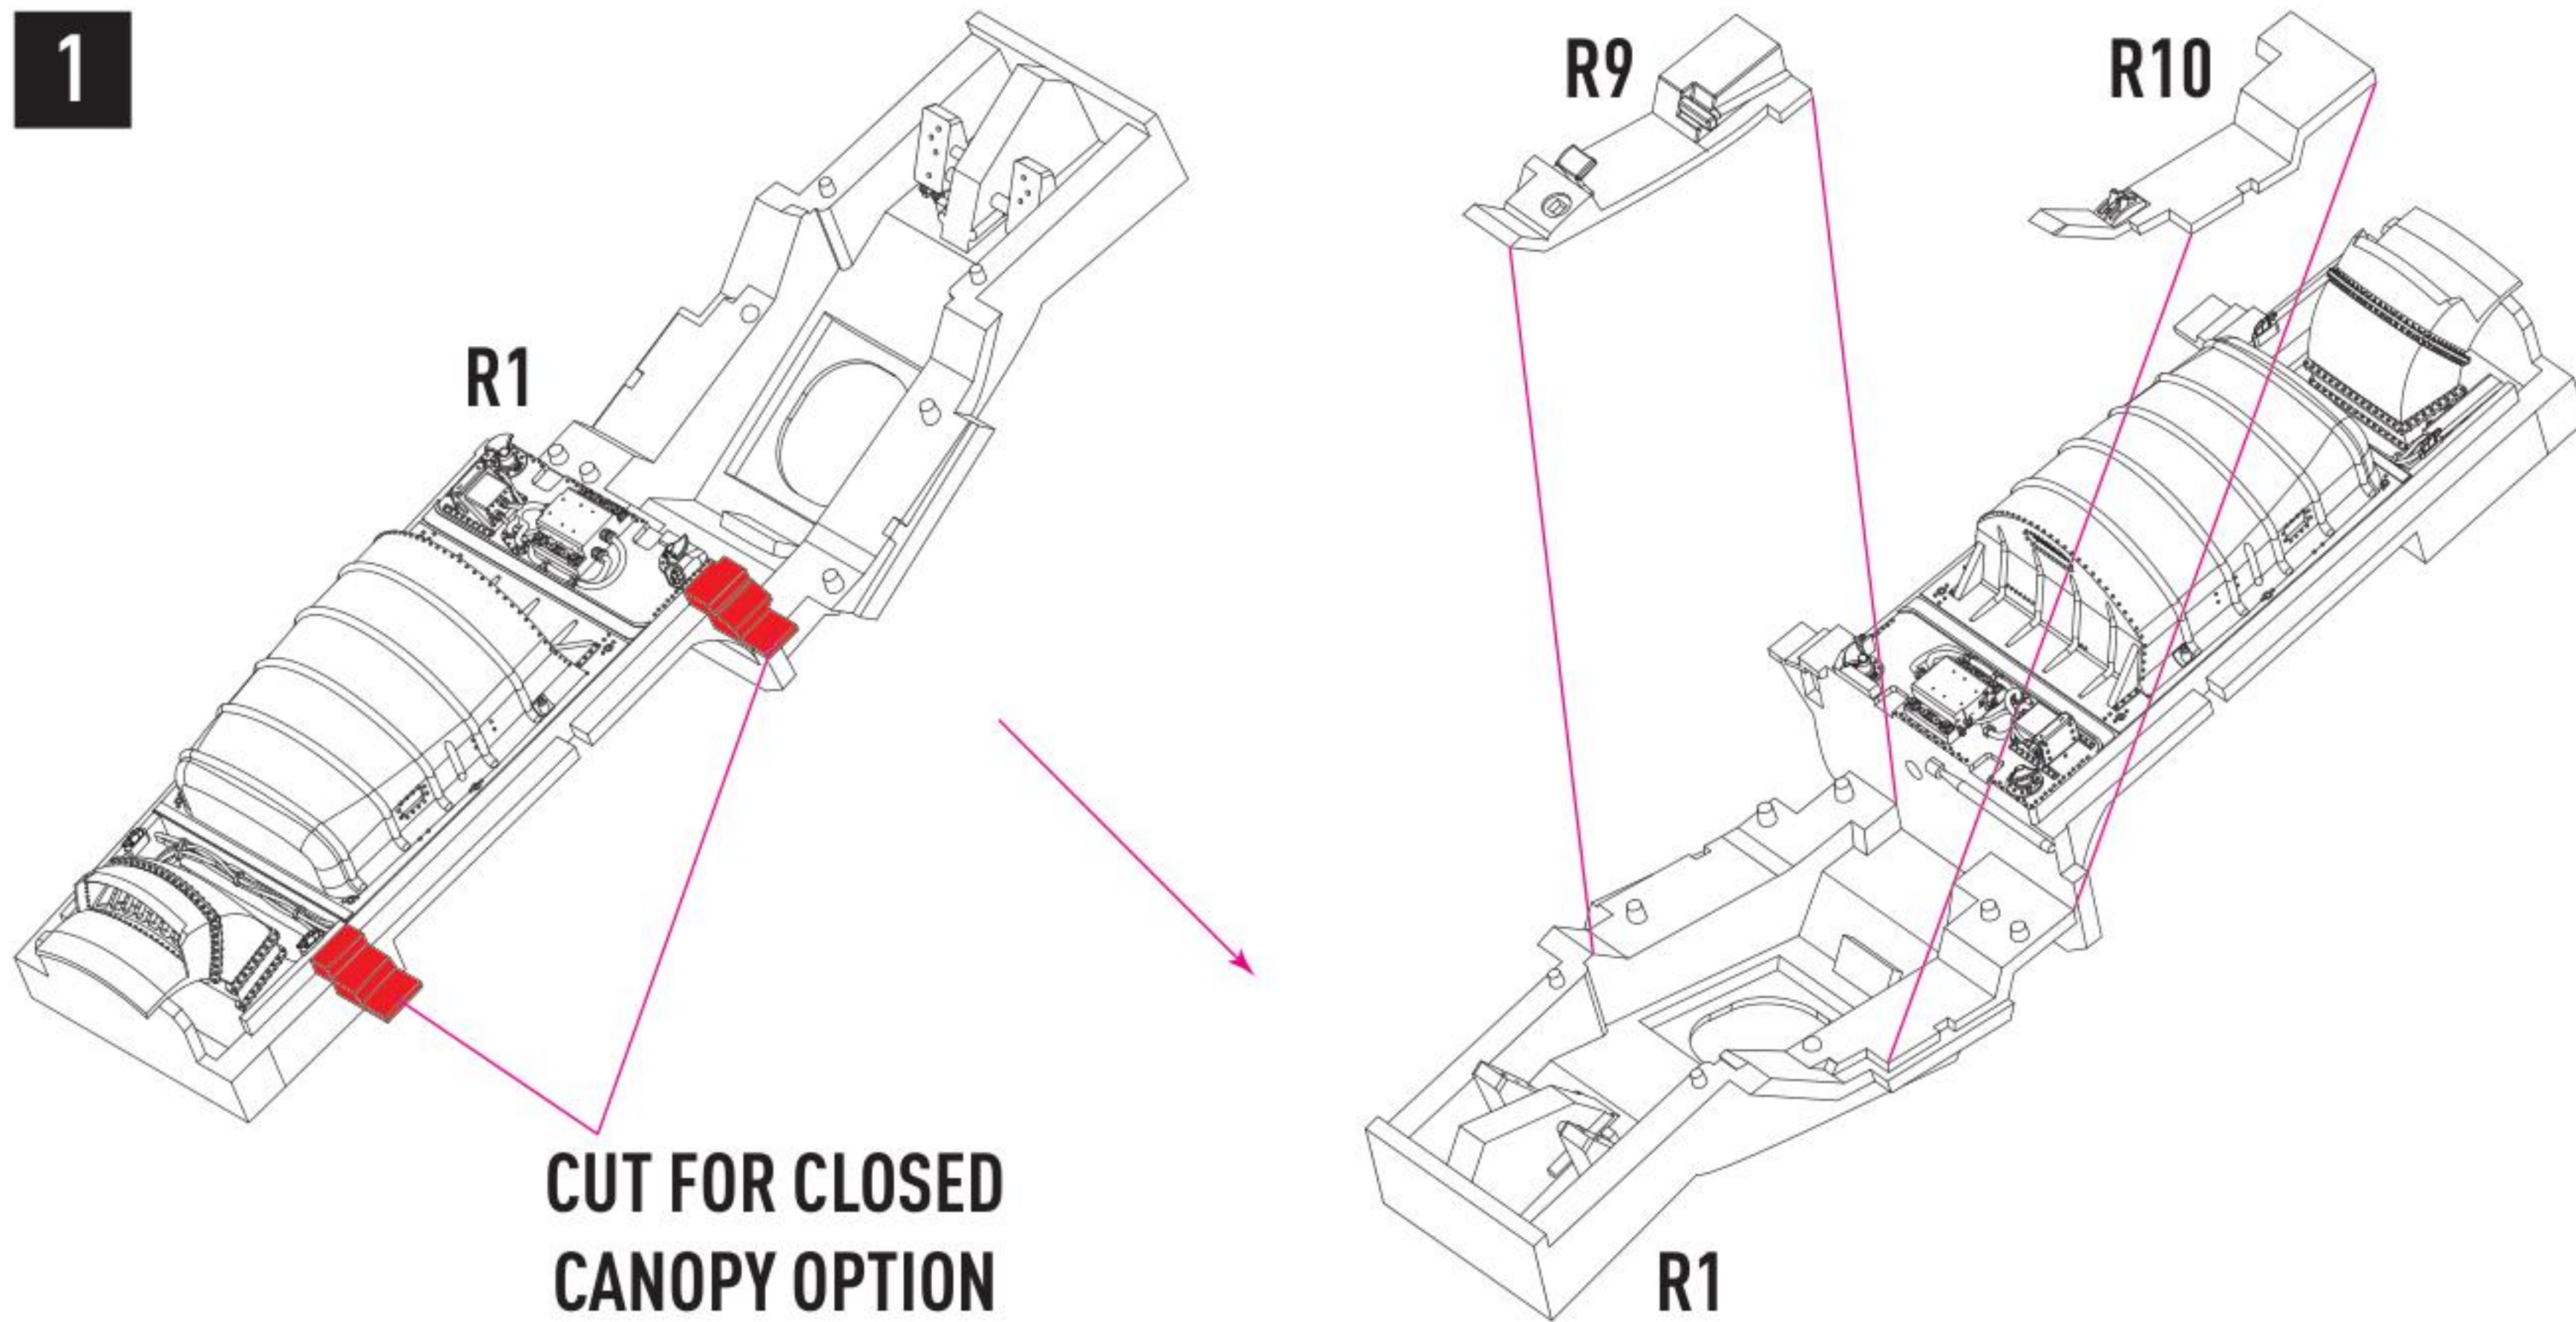

5


PART A1
FROM THE KIT

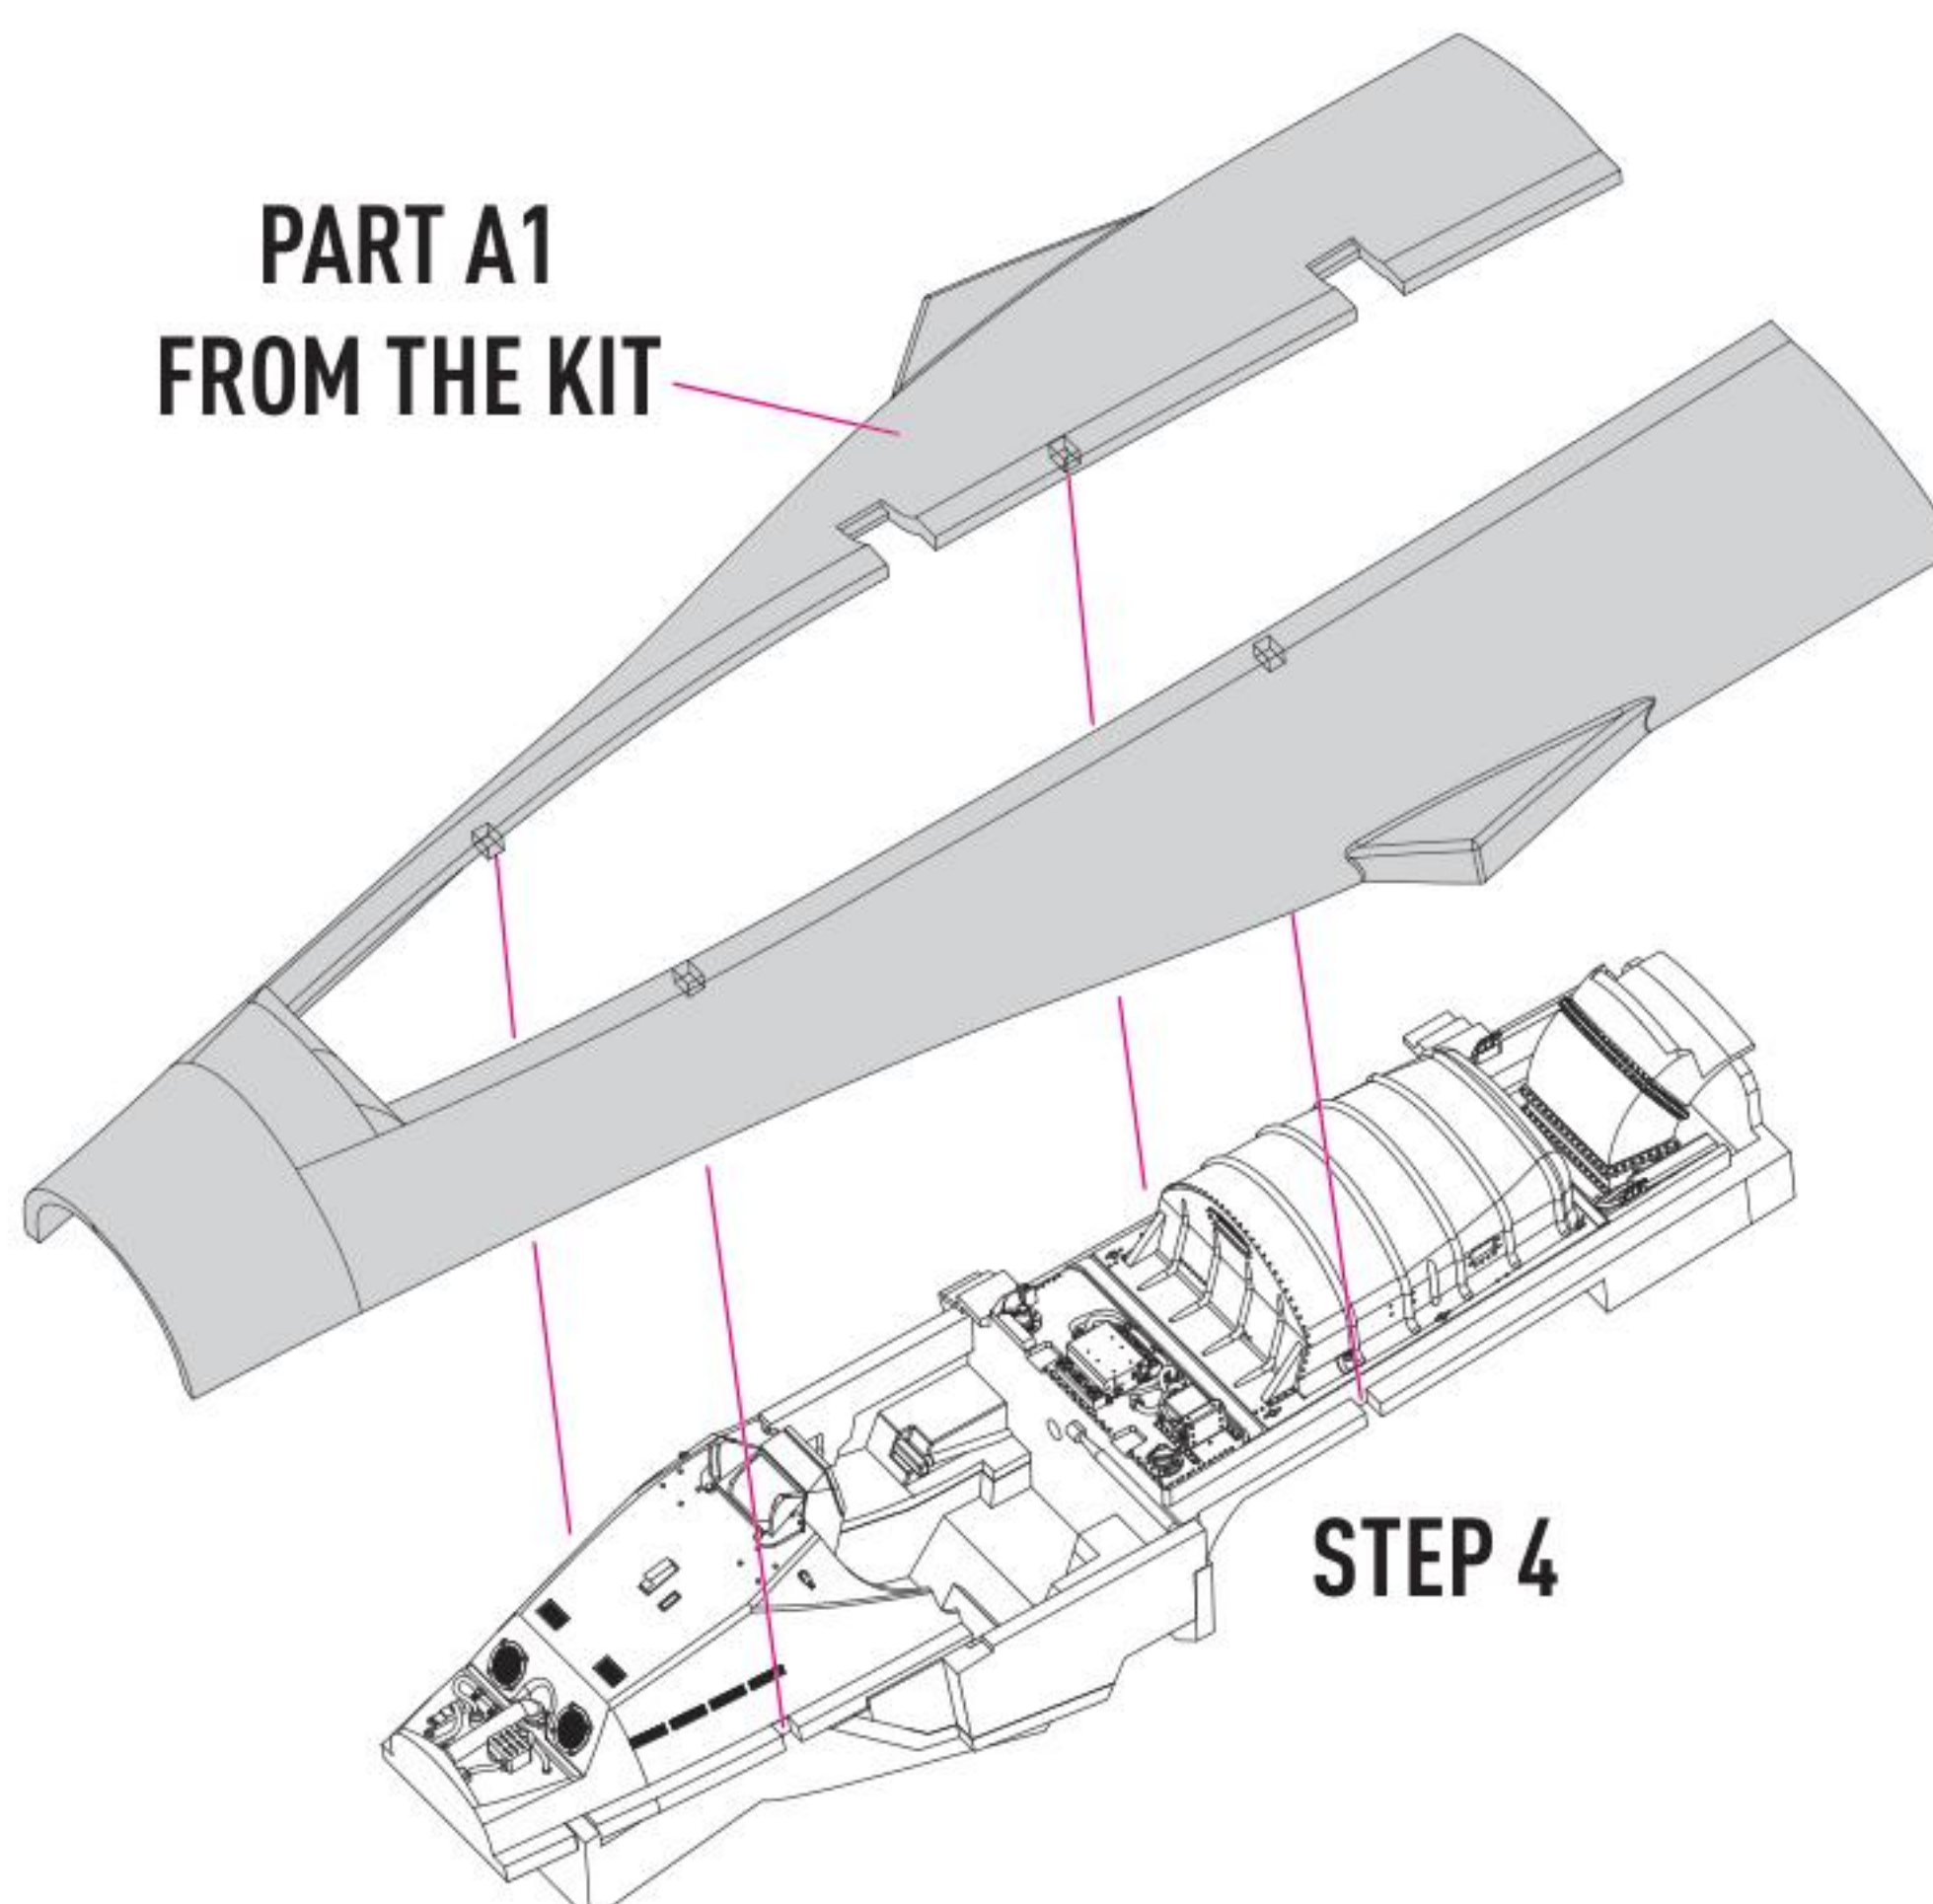

STEP 4

6


PART K2
FROM THE KIT

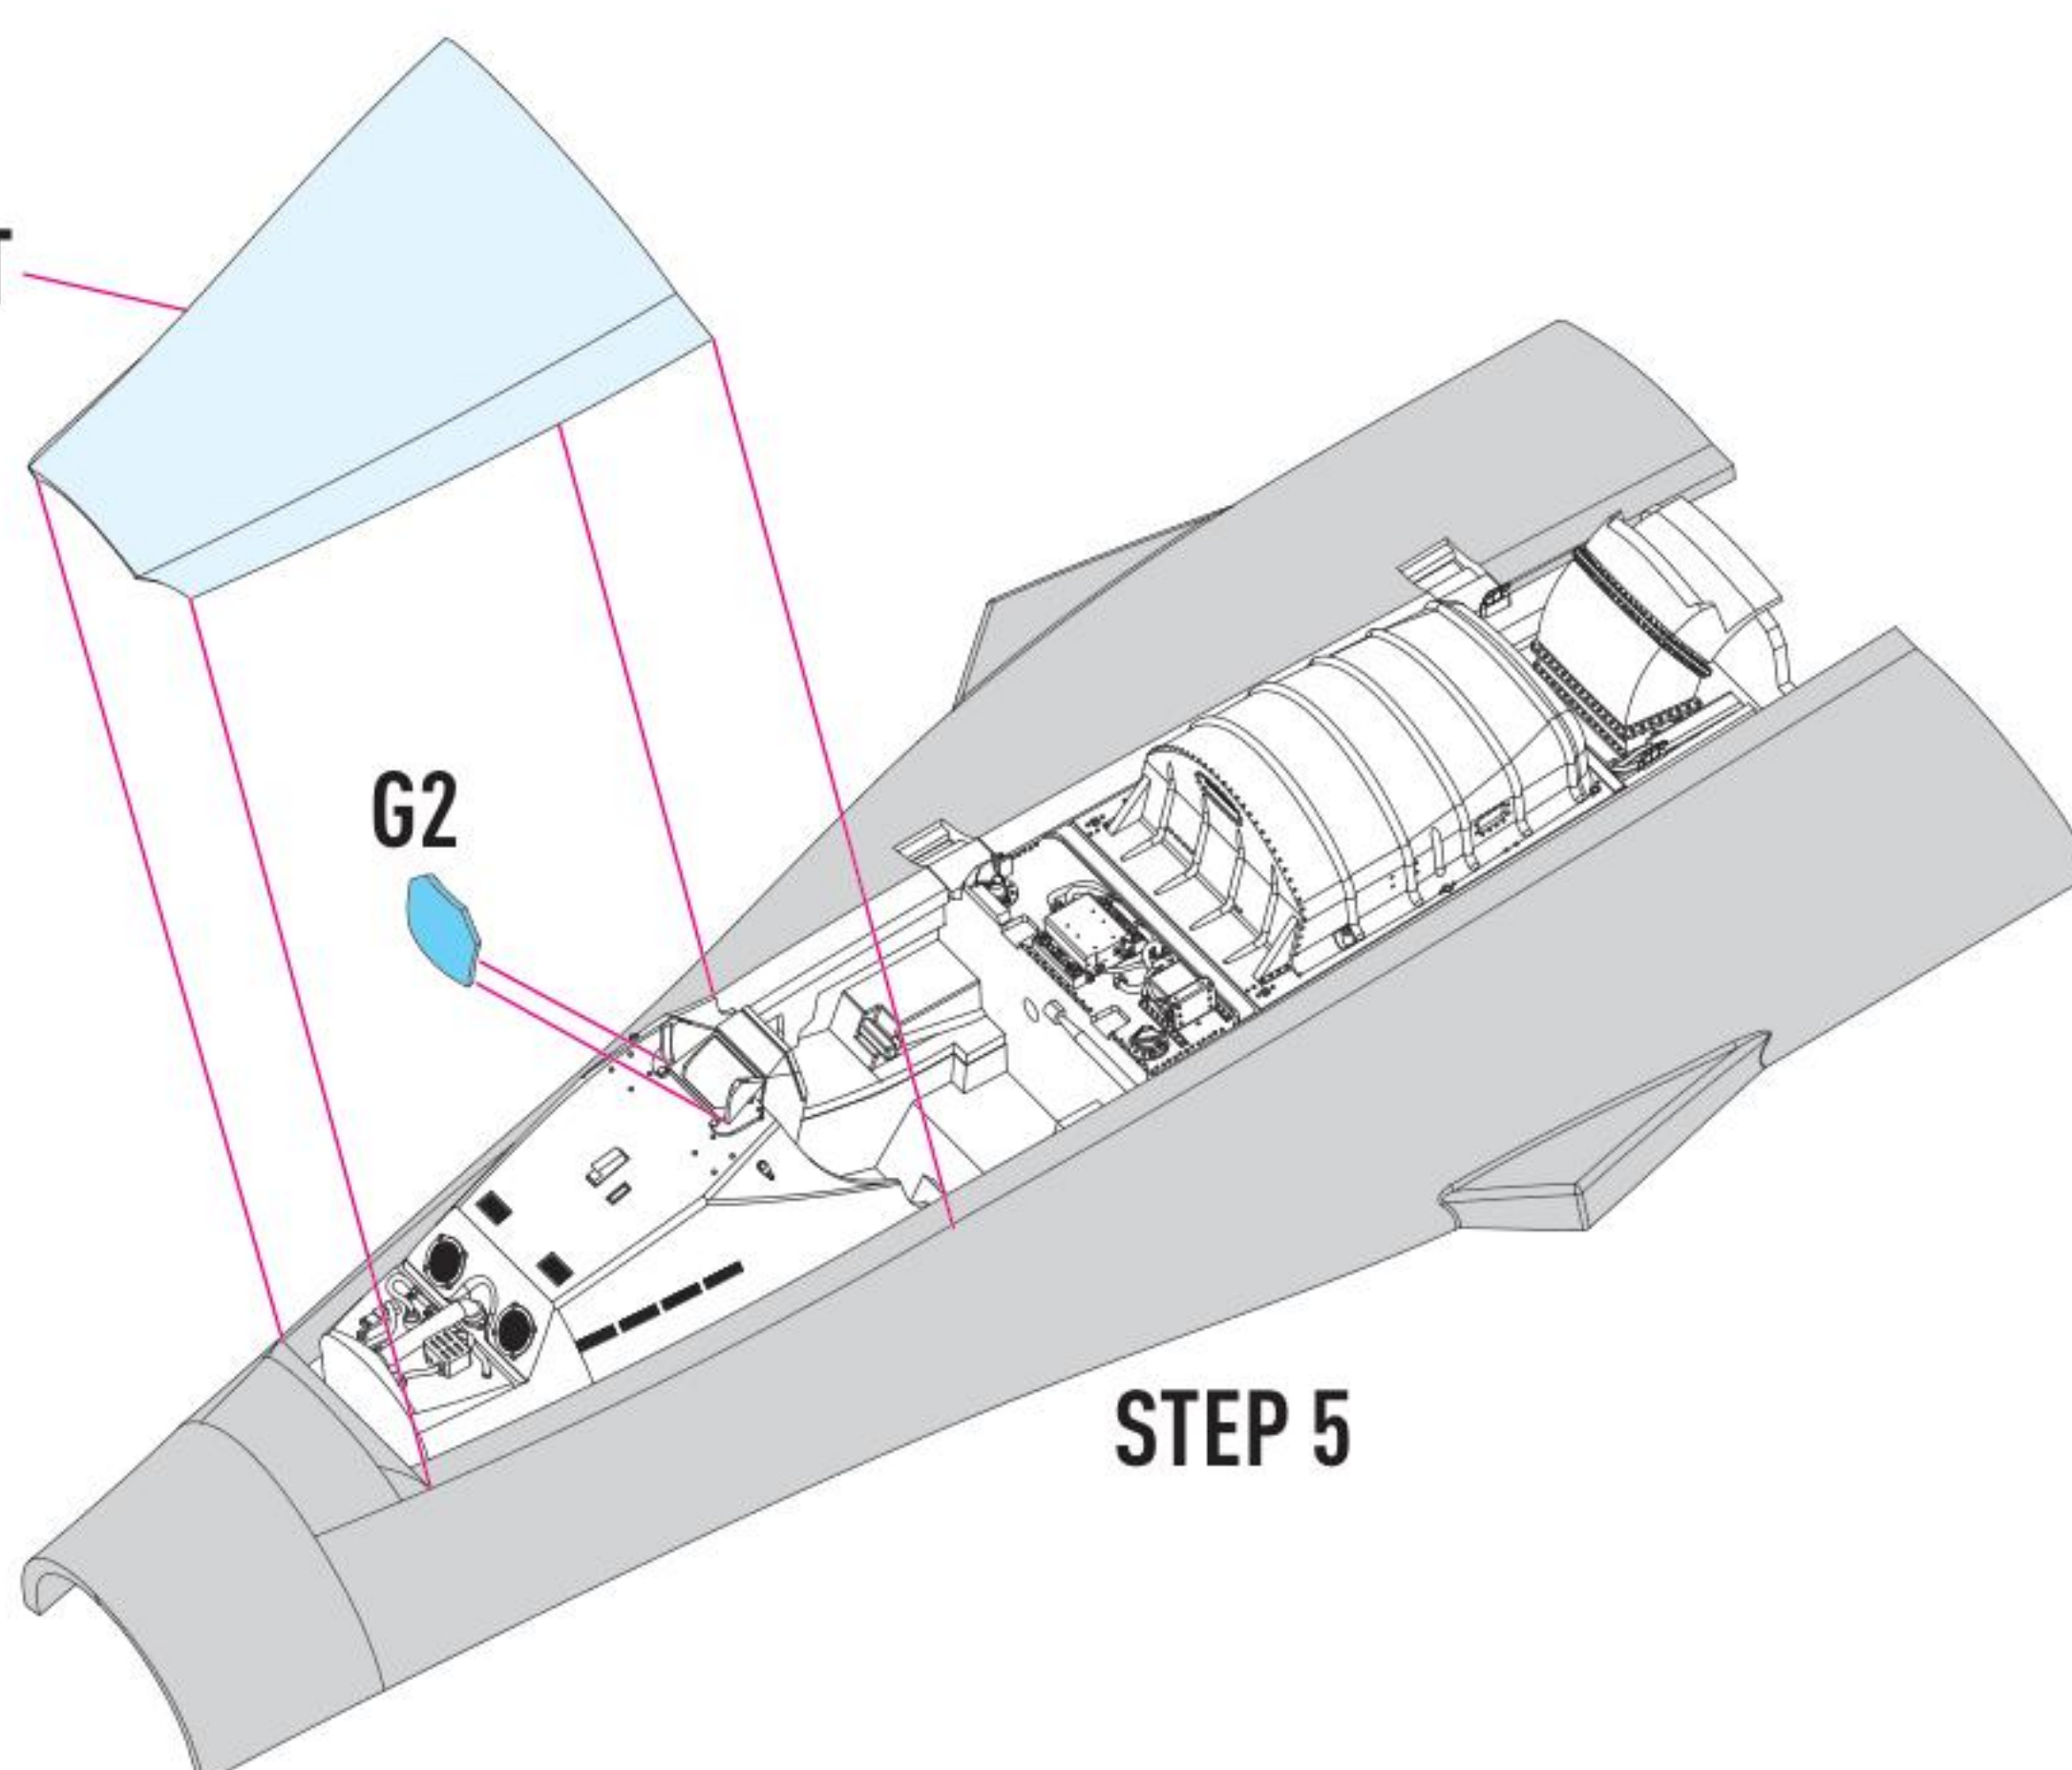


STEP 5

7


PART K3
FROM THE KIT

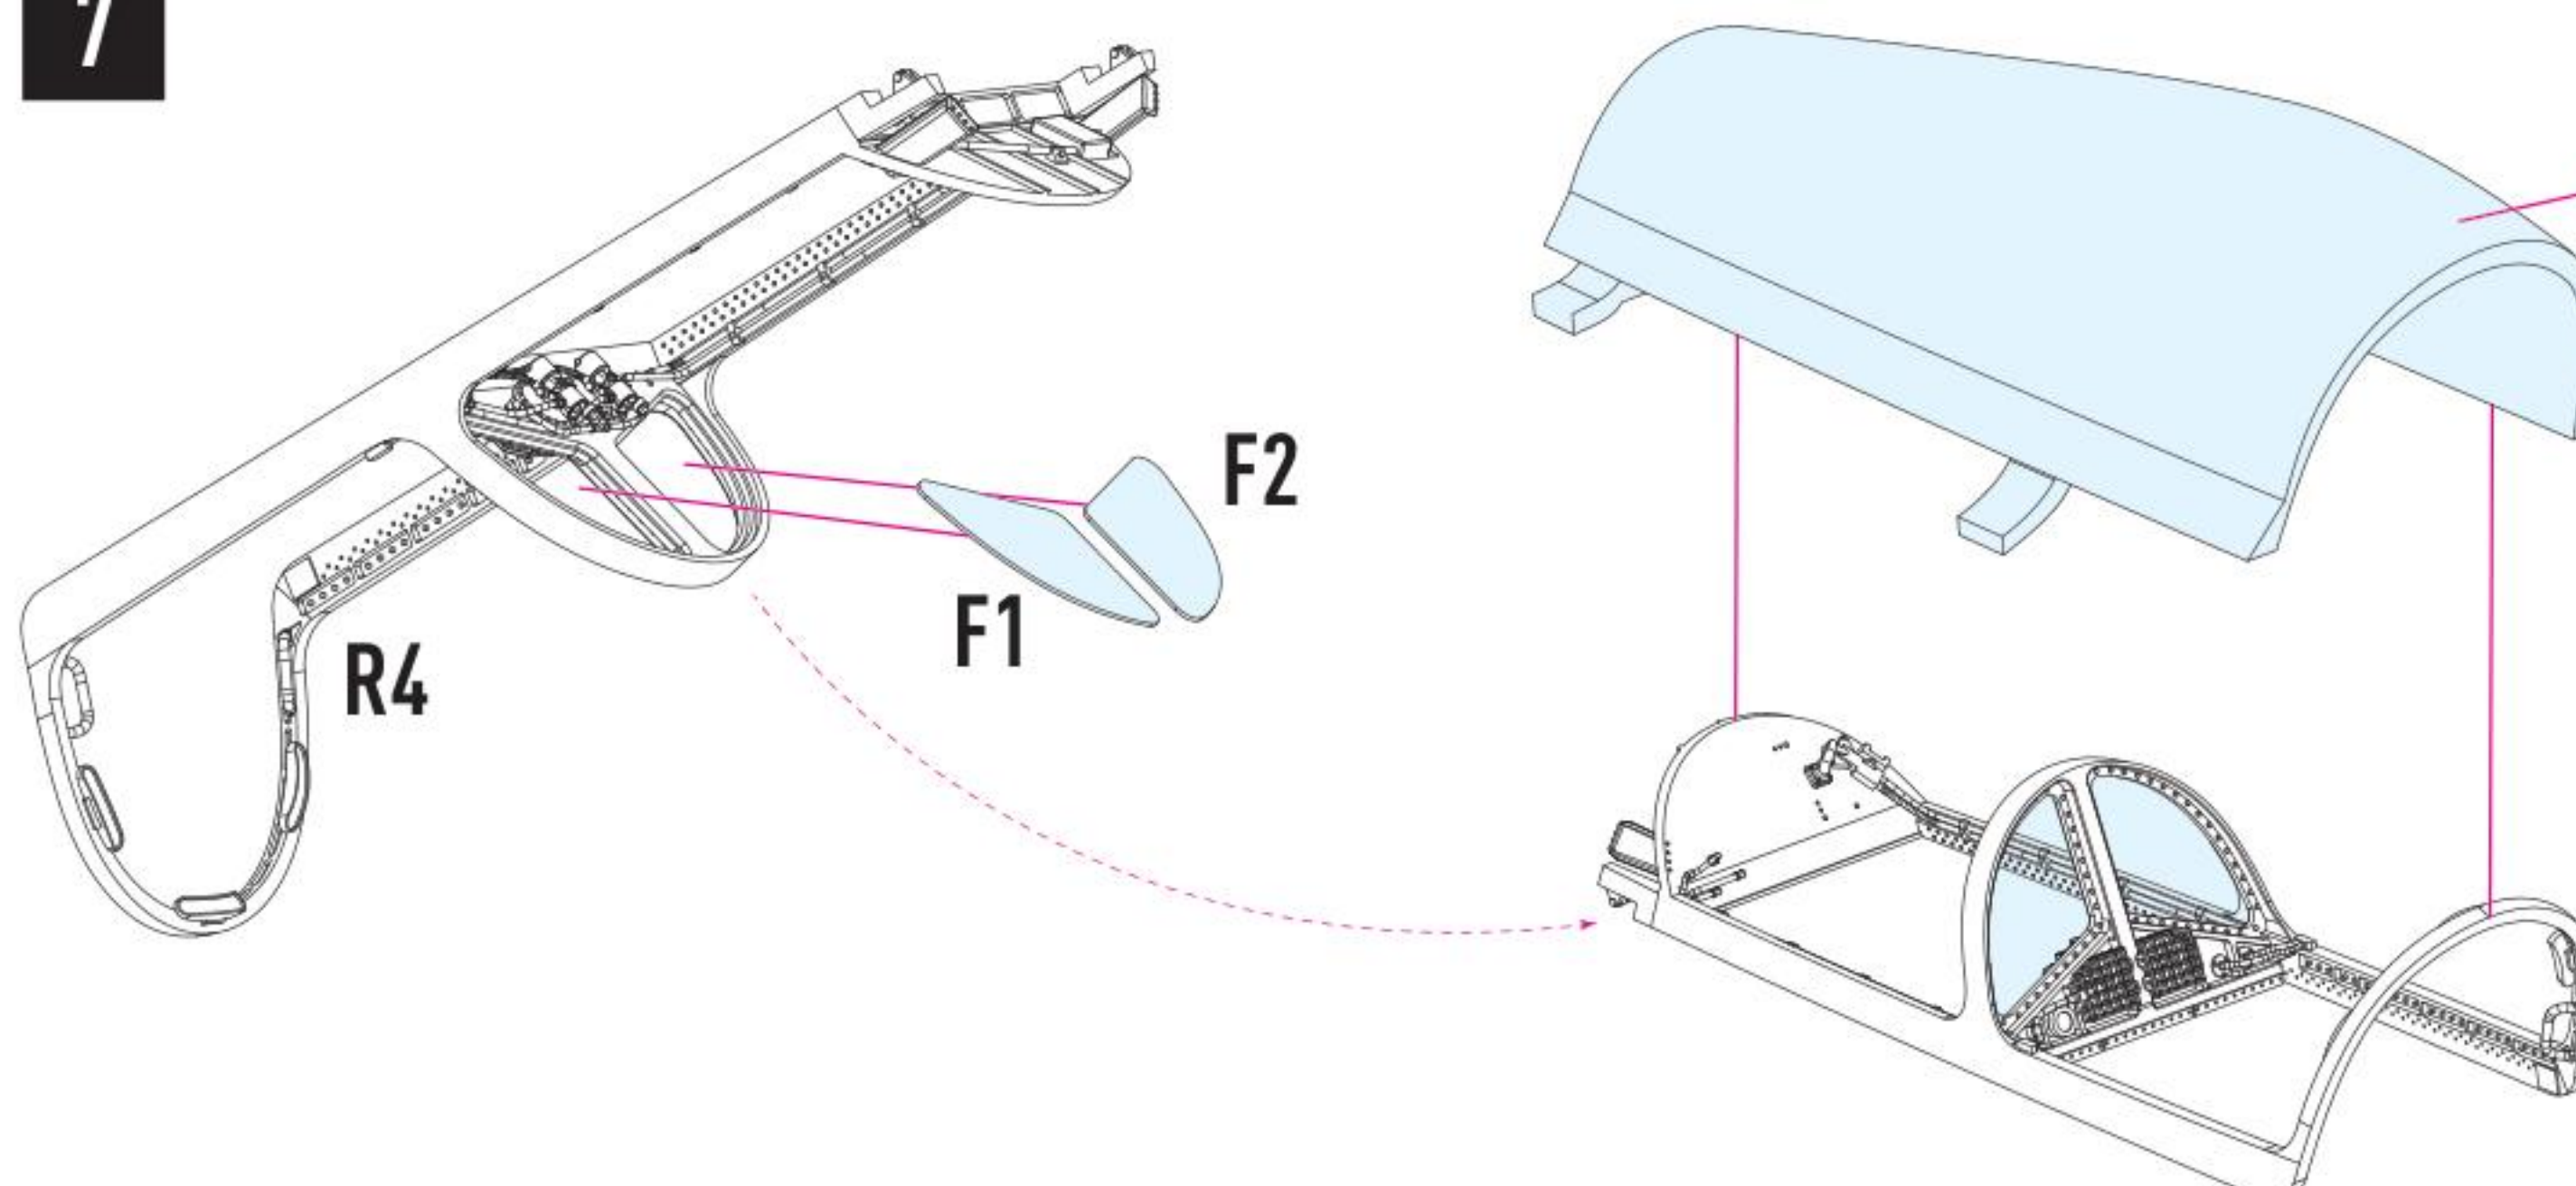


8

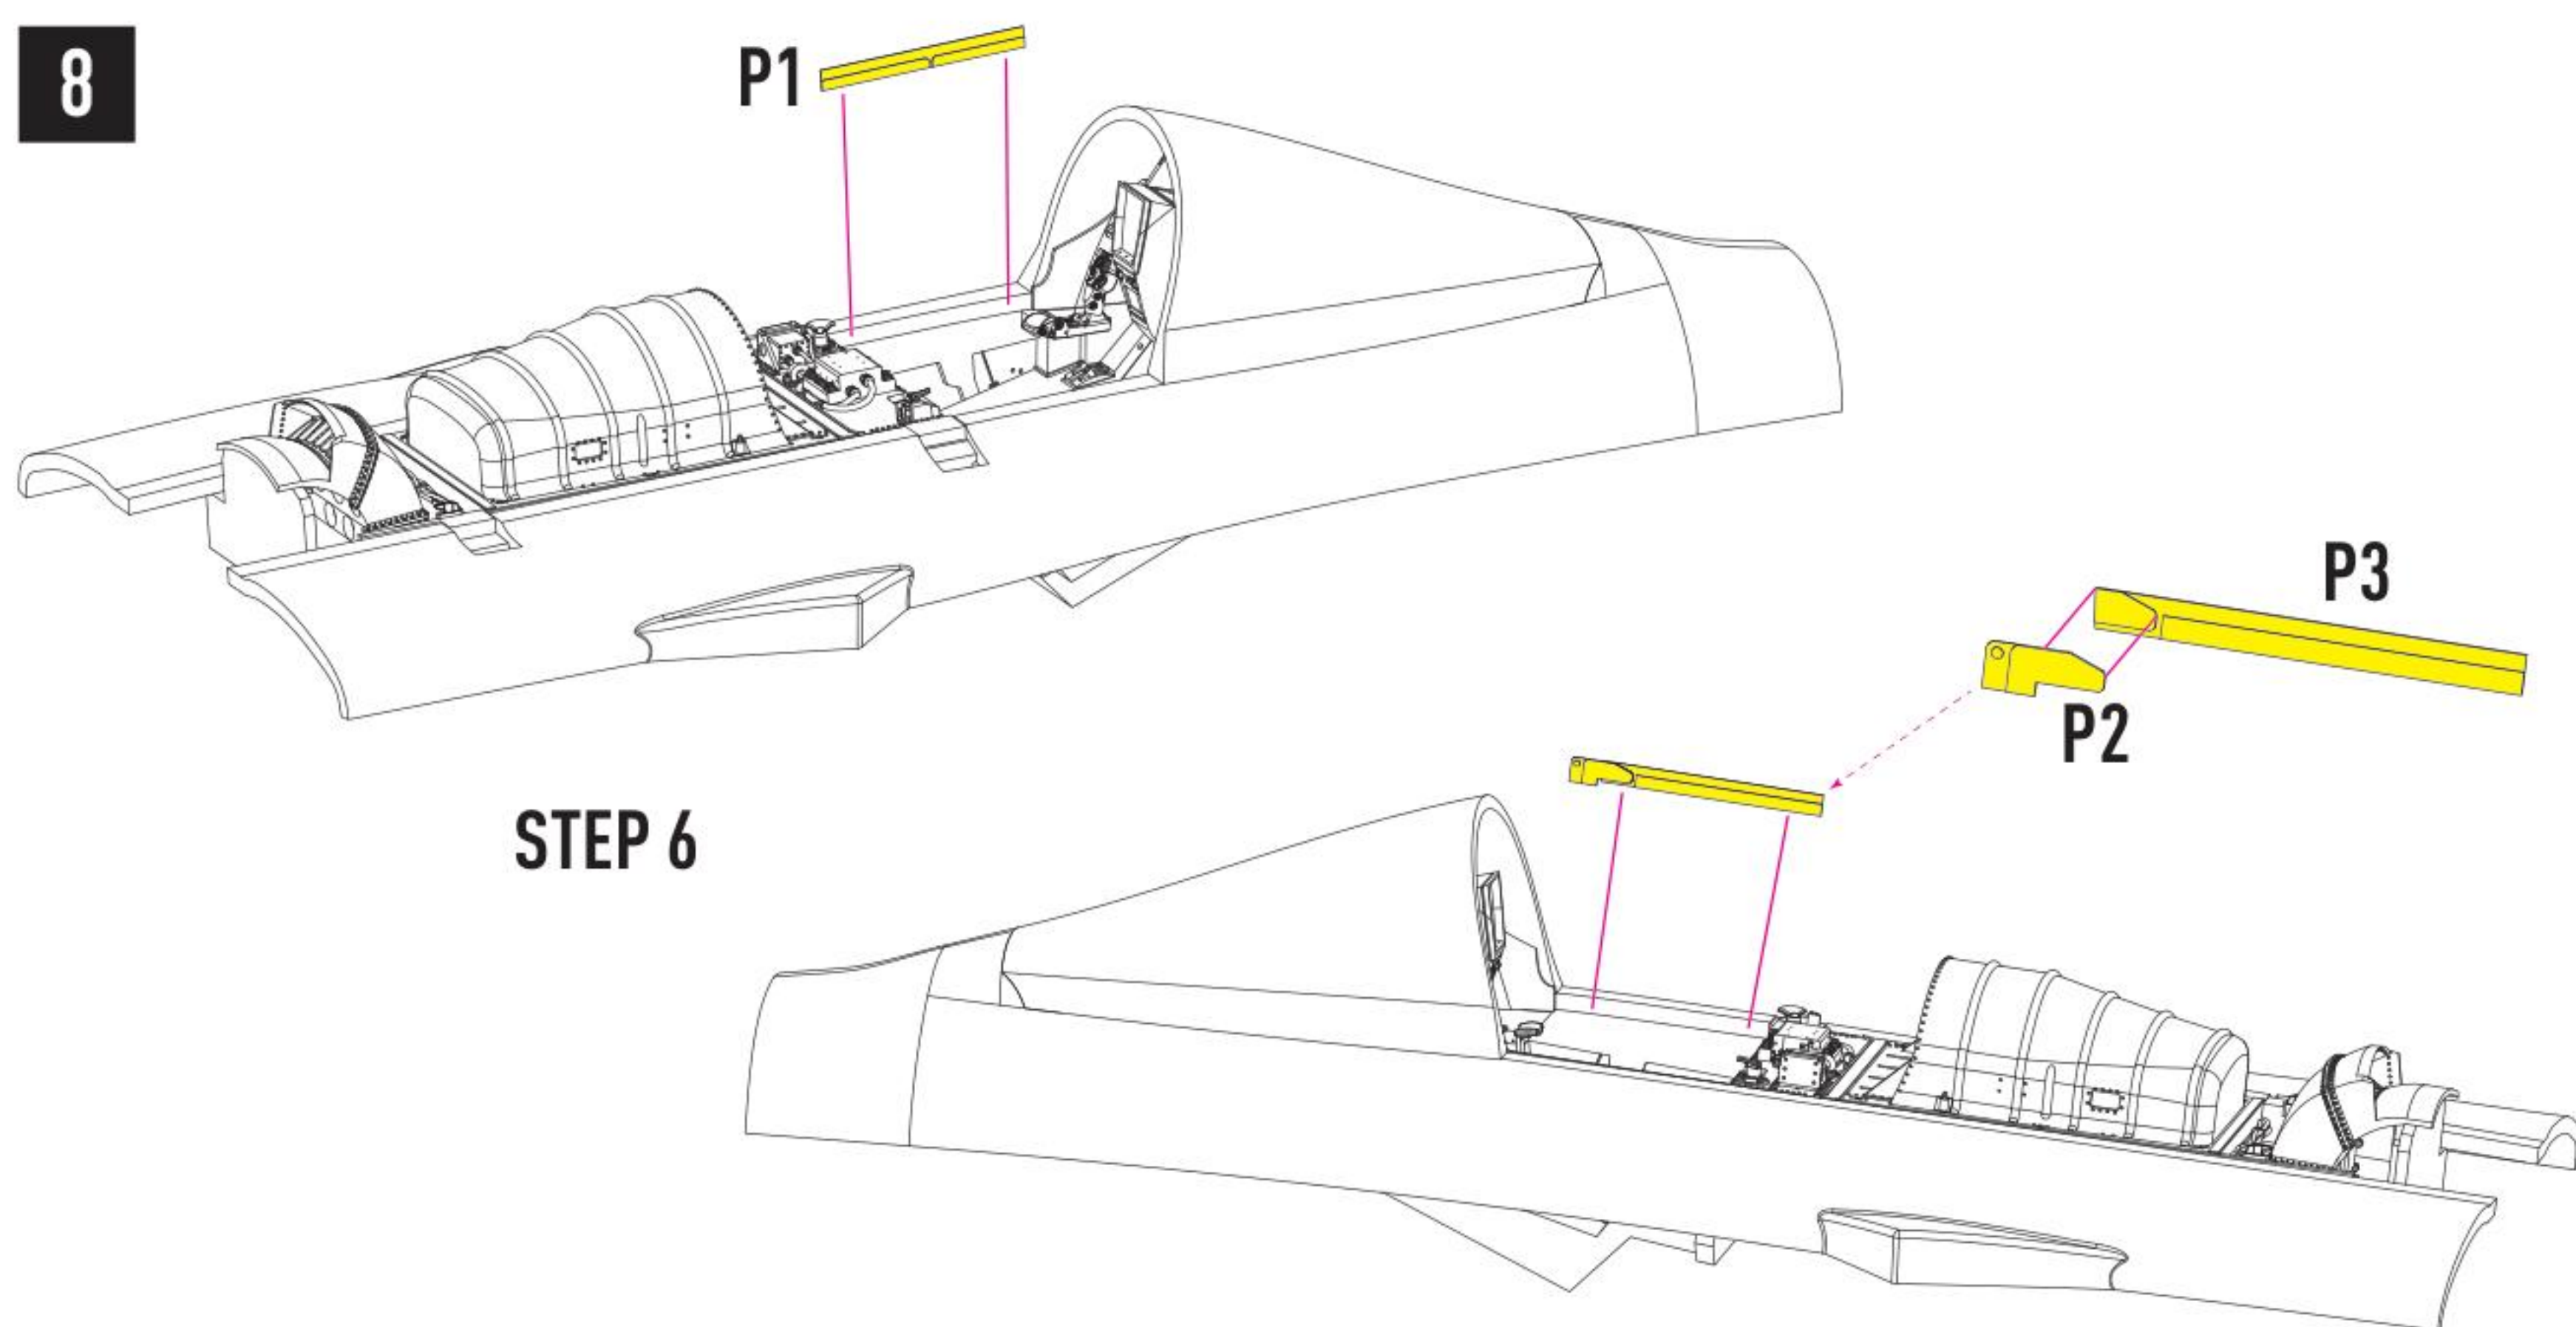



9 FOR A CLOSED CANOPY


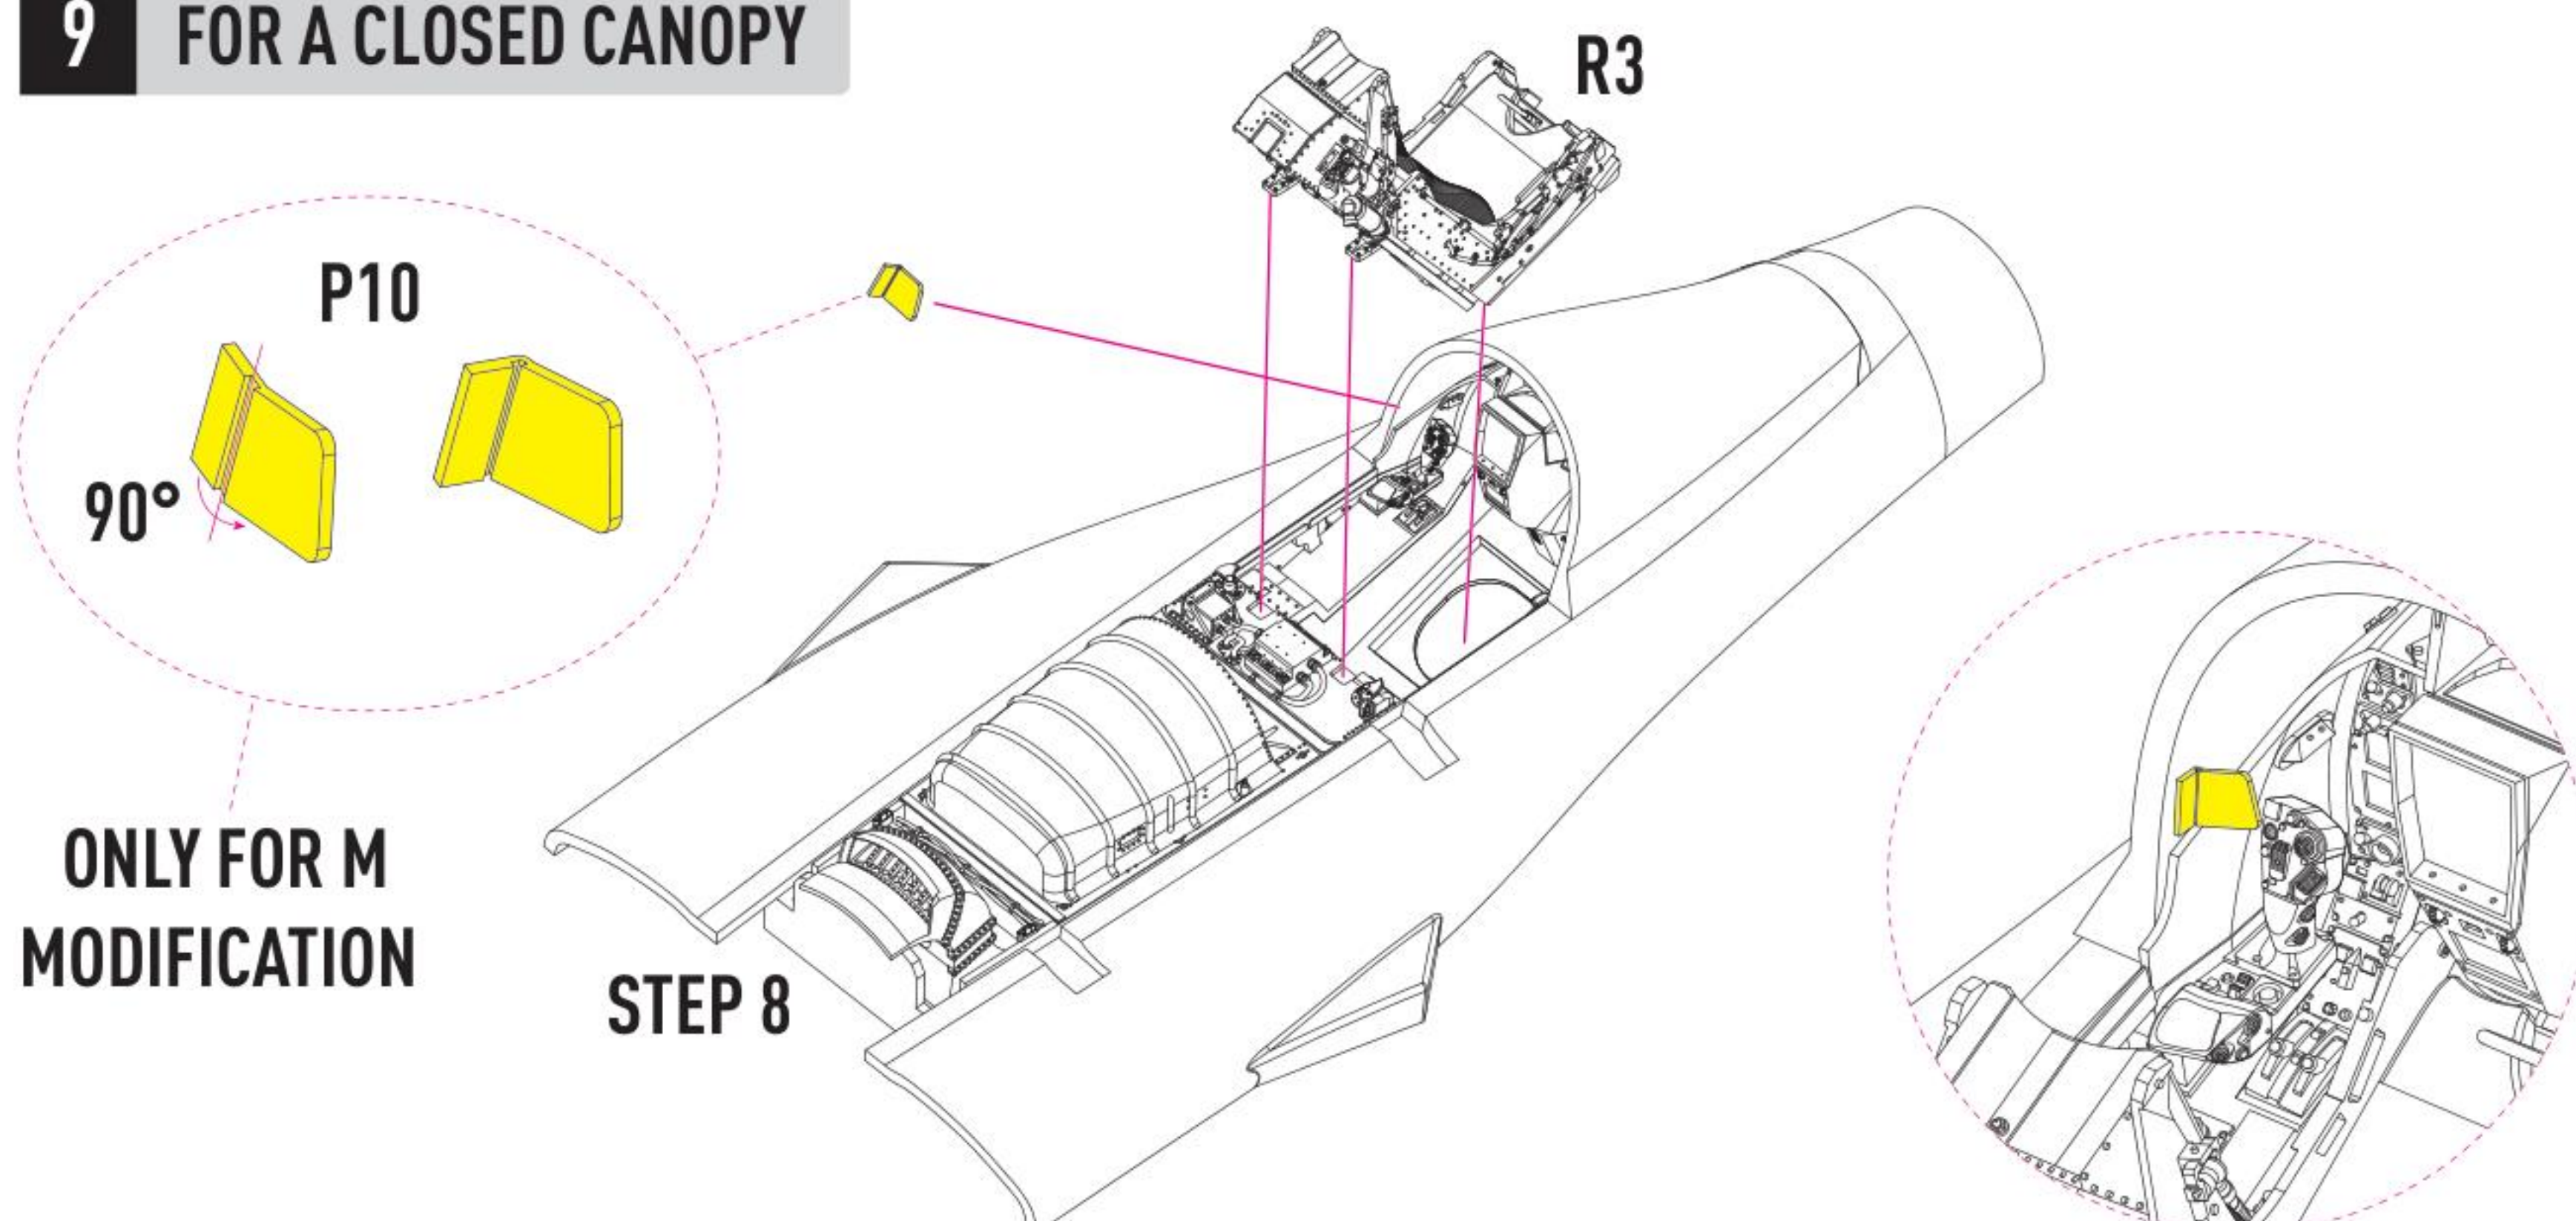


10

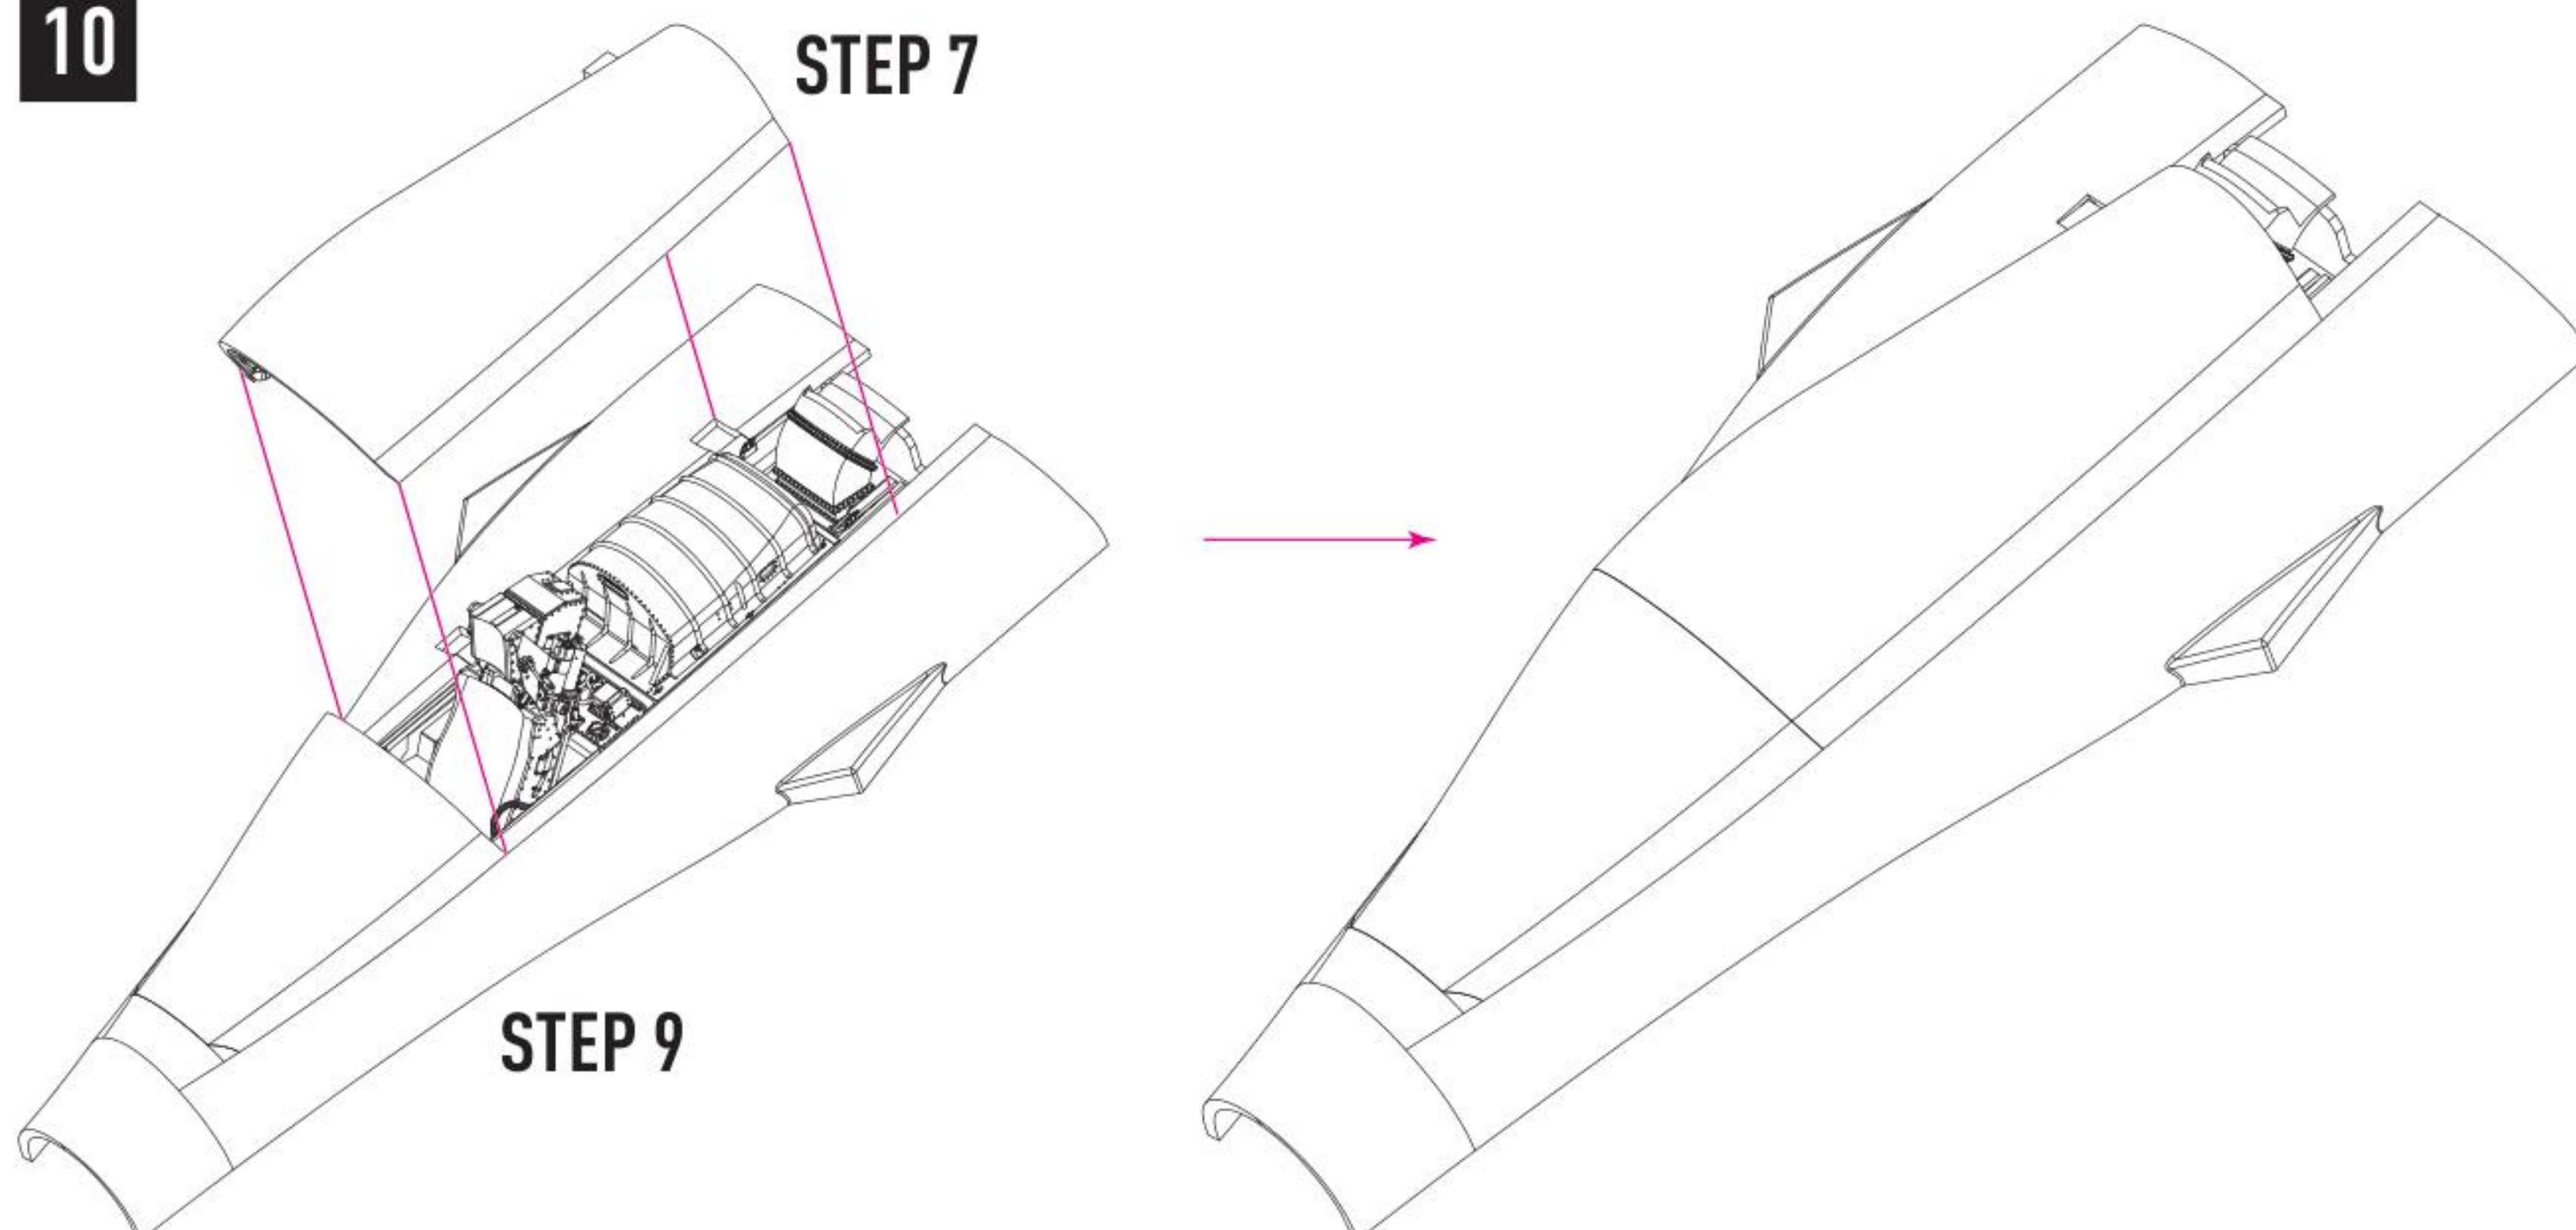


11 FOR A OPEN CANOPY

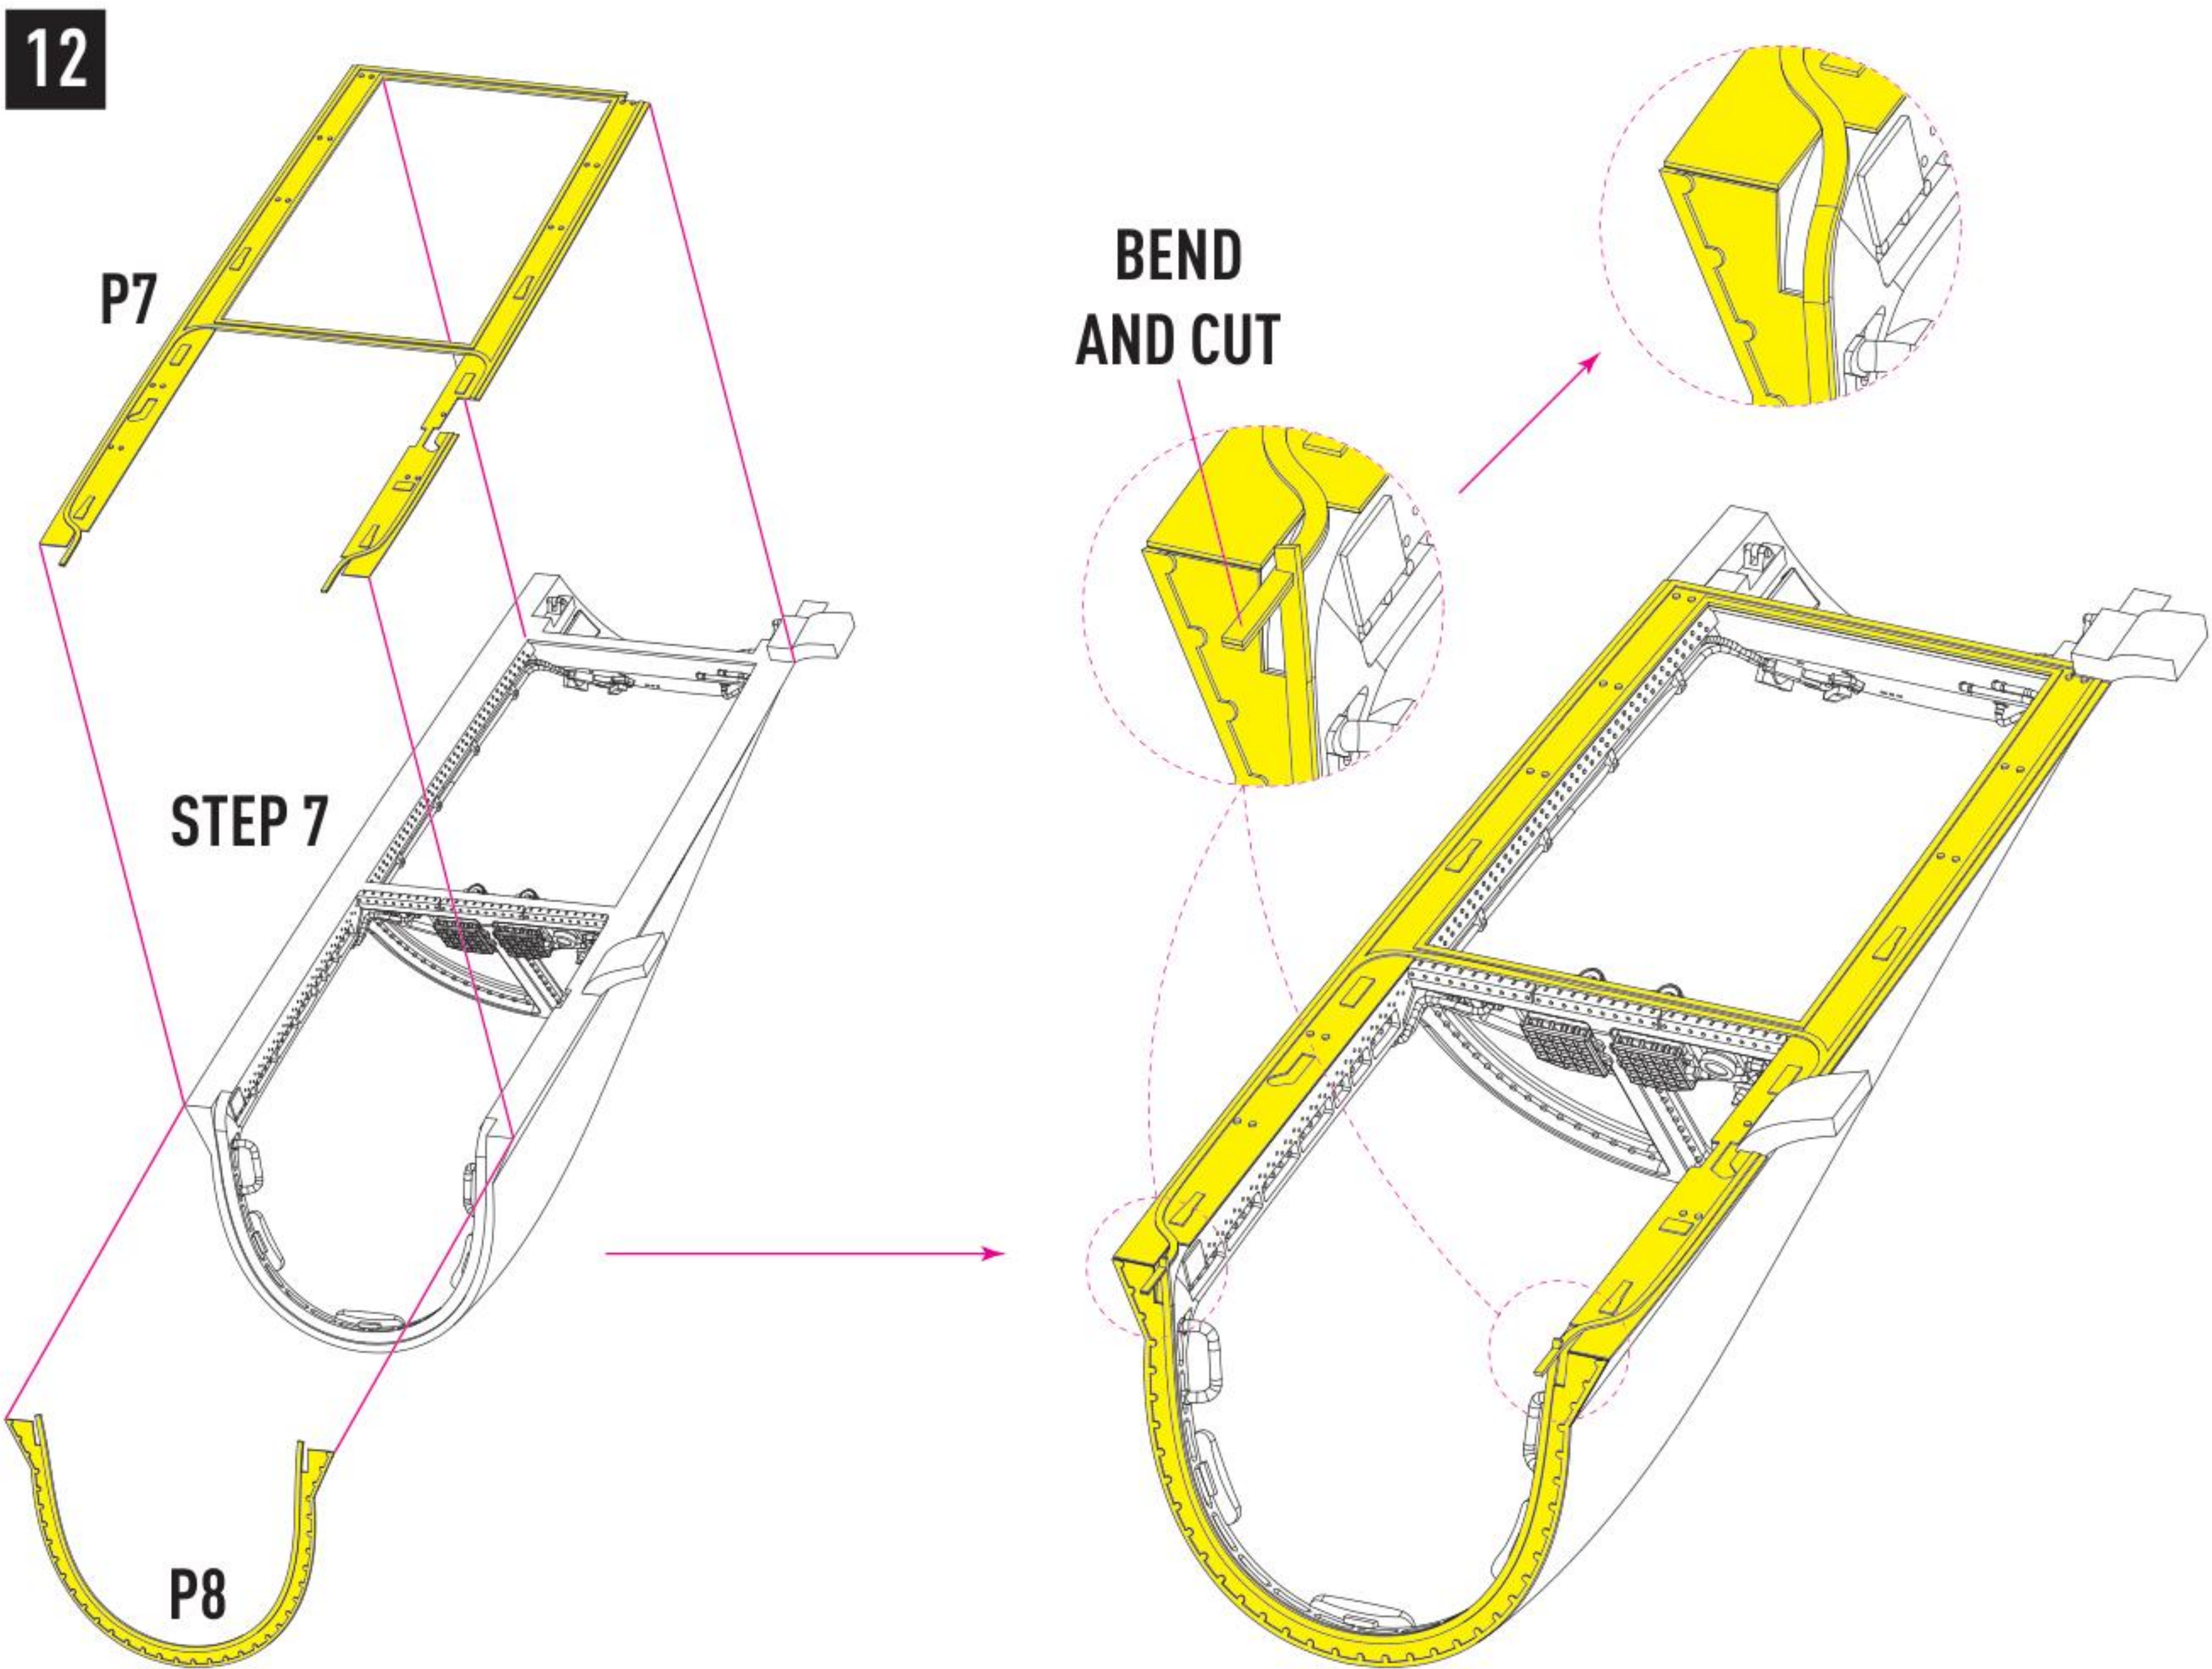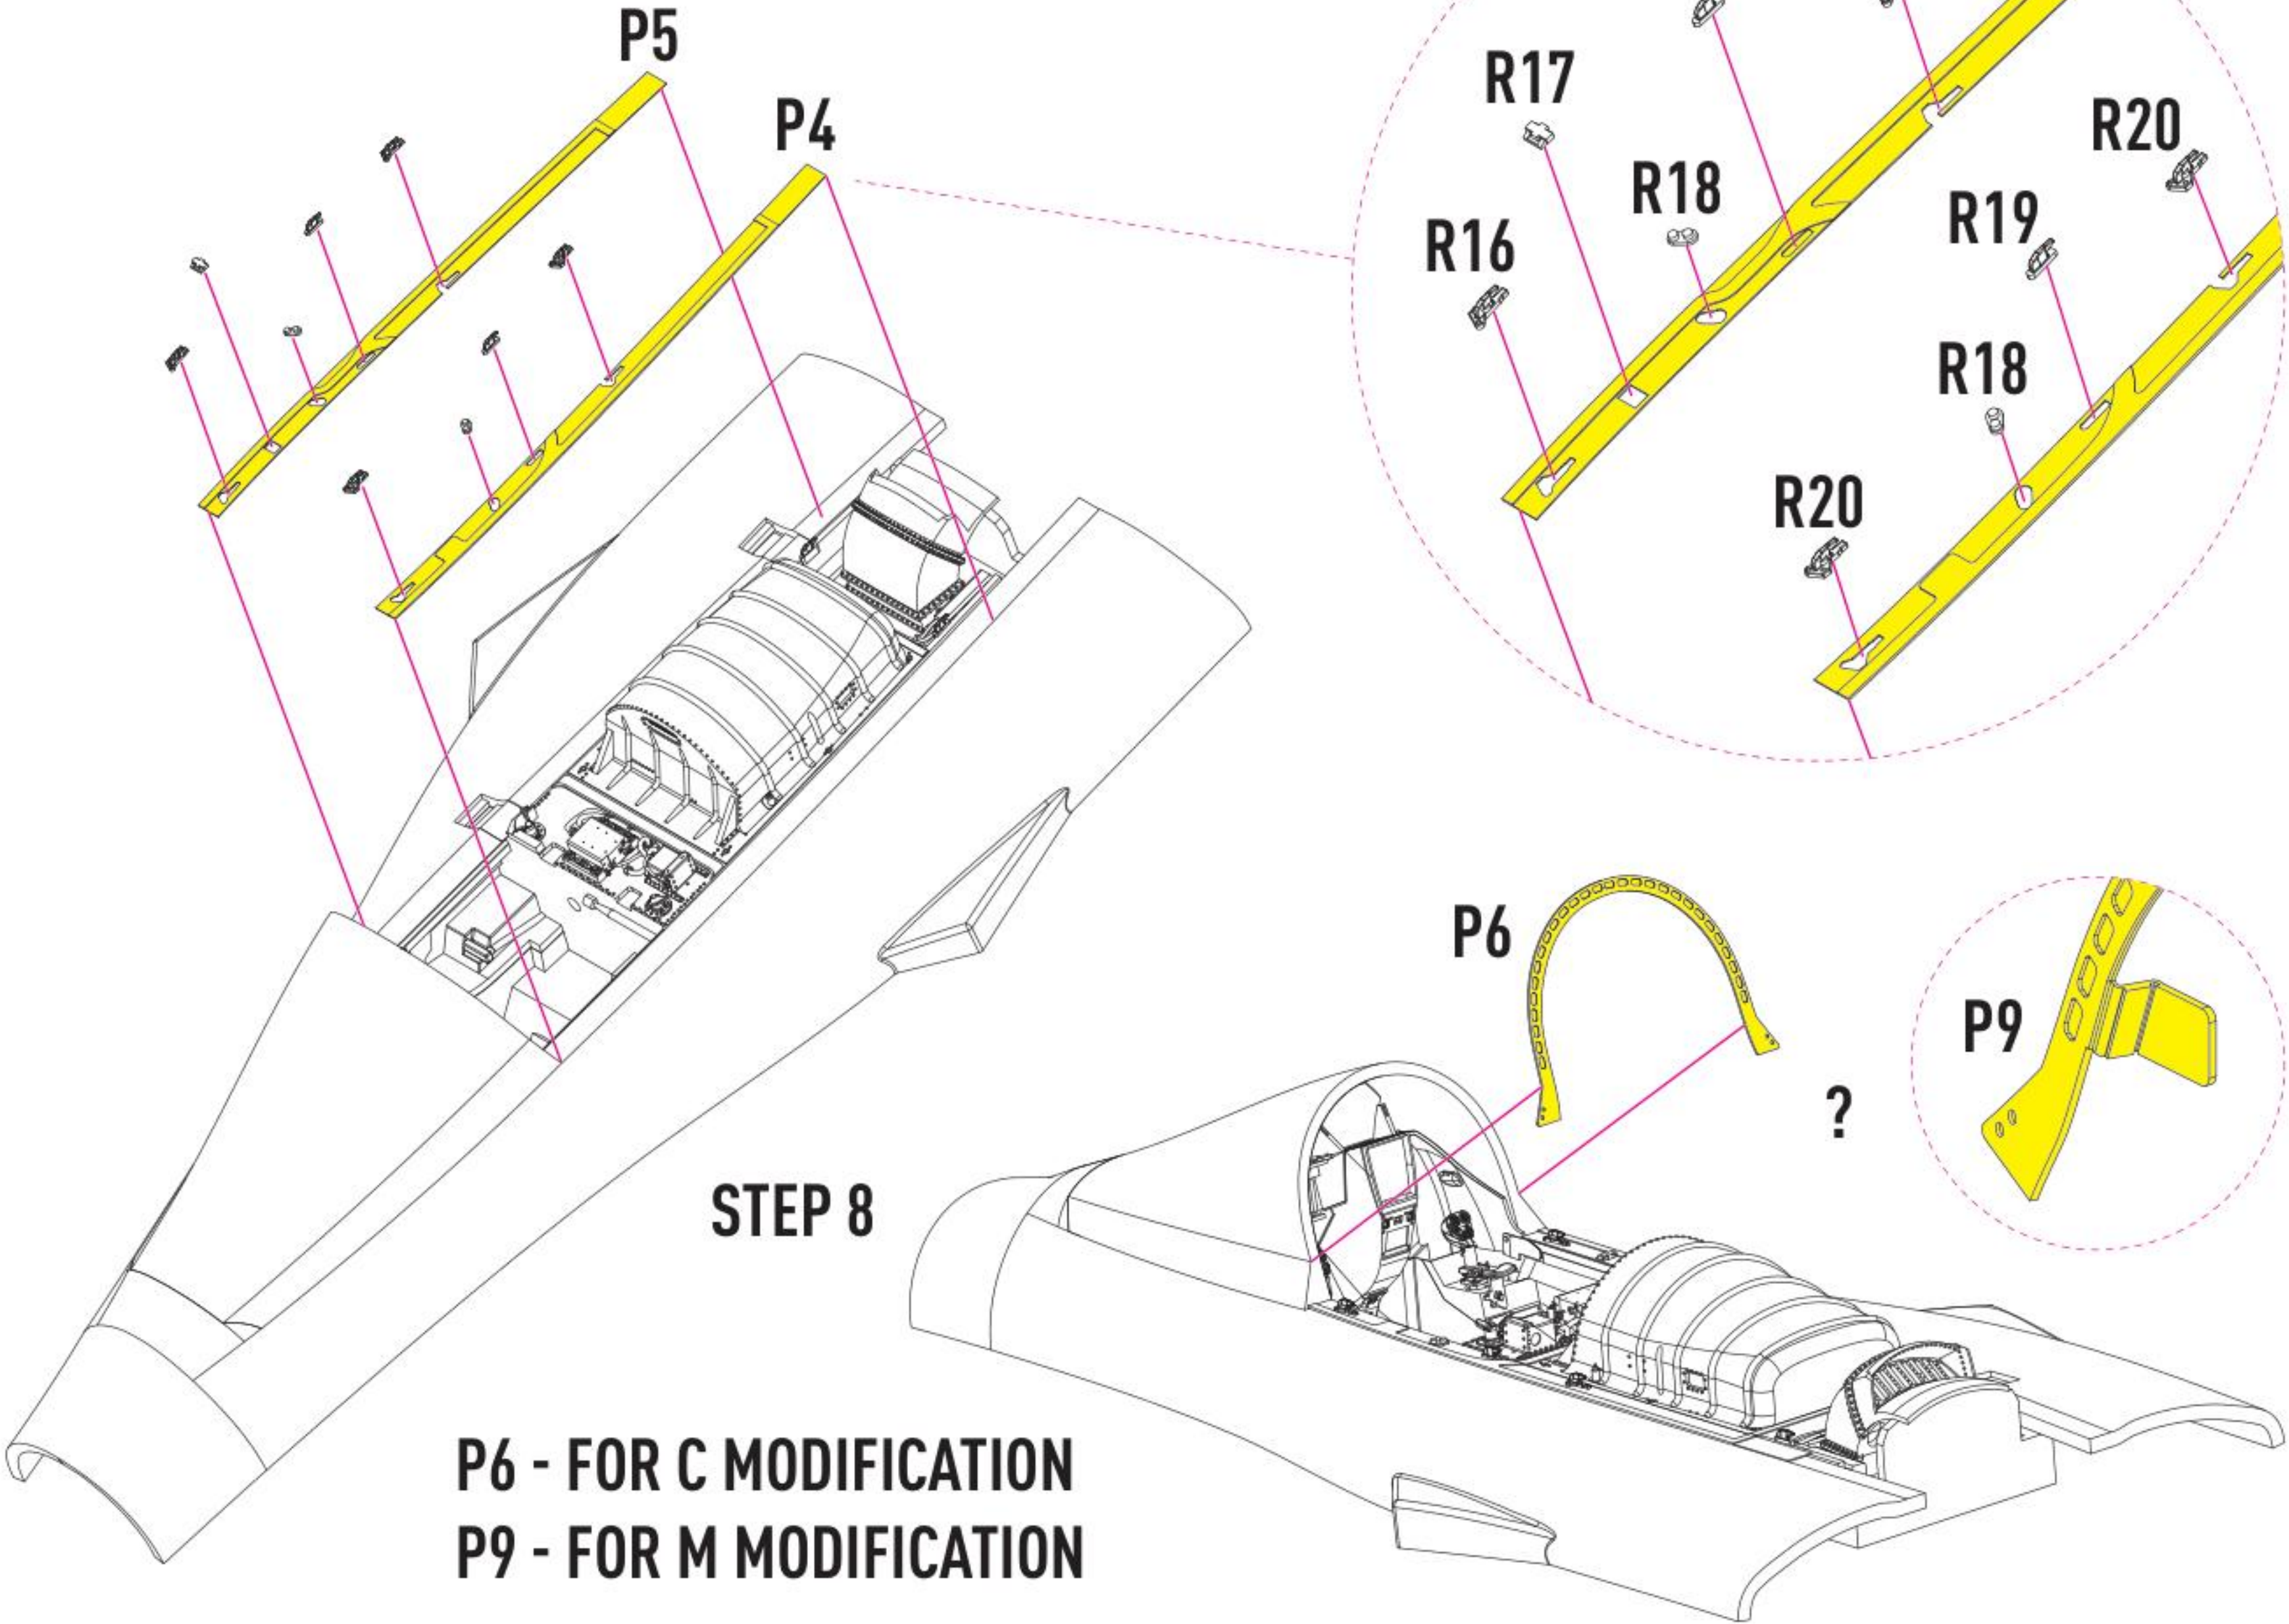

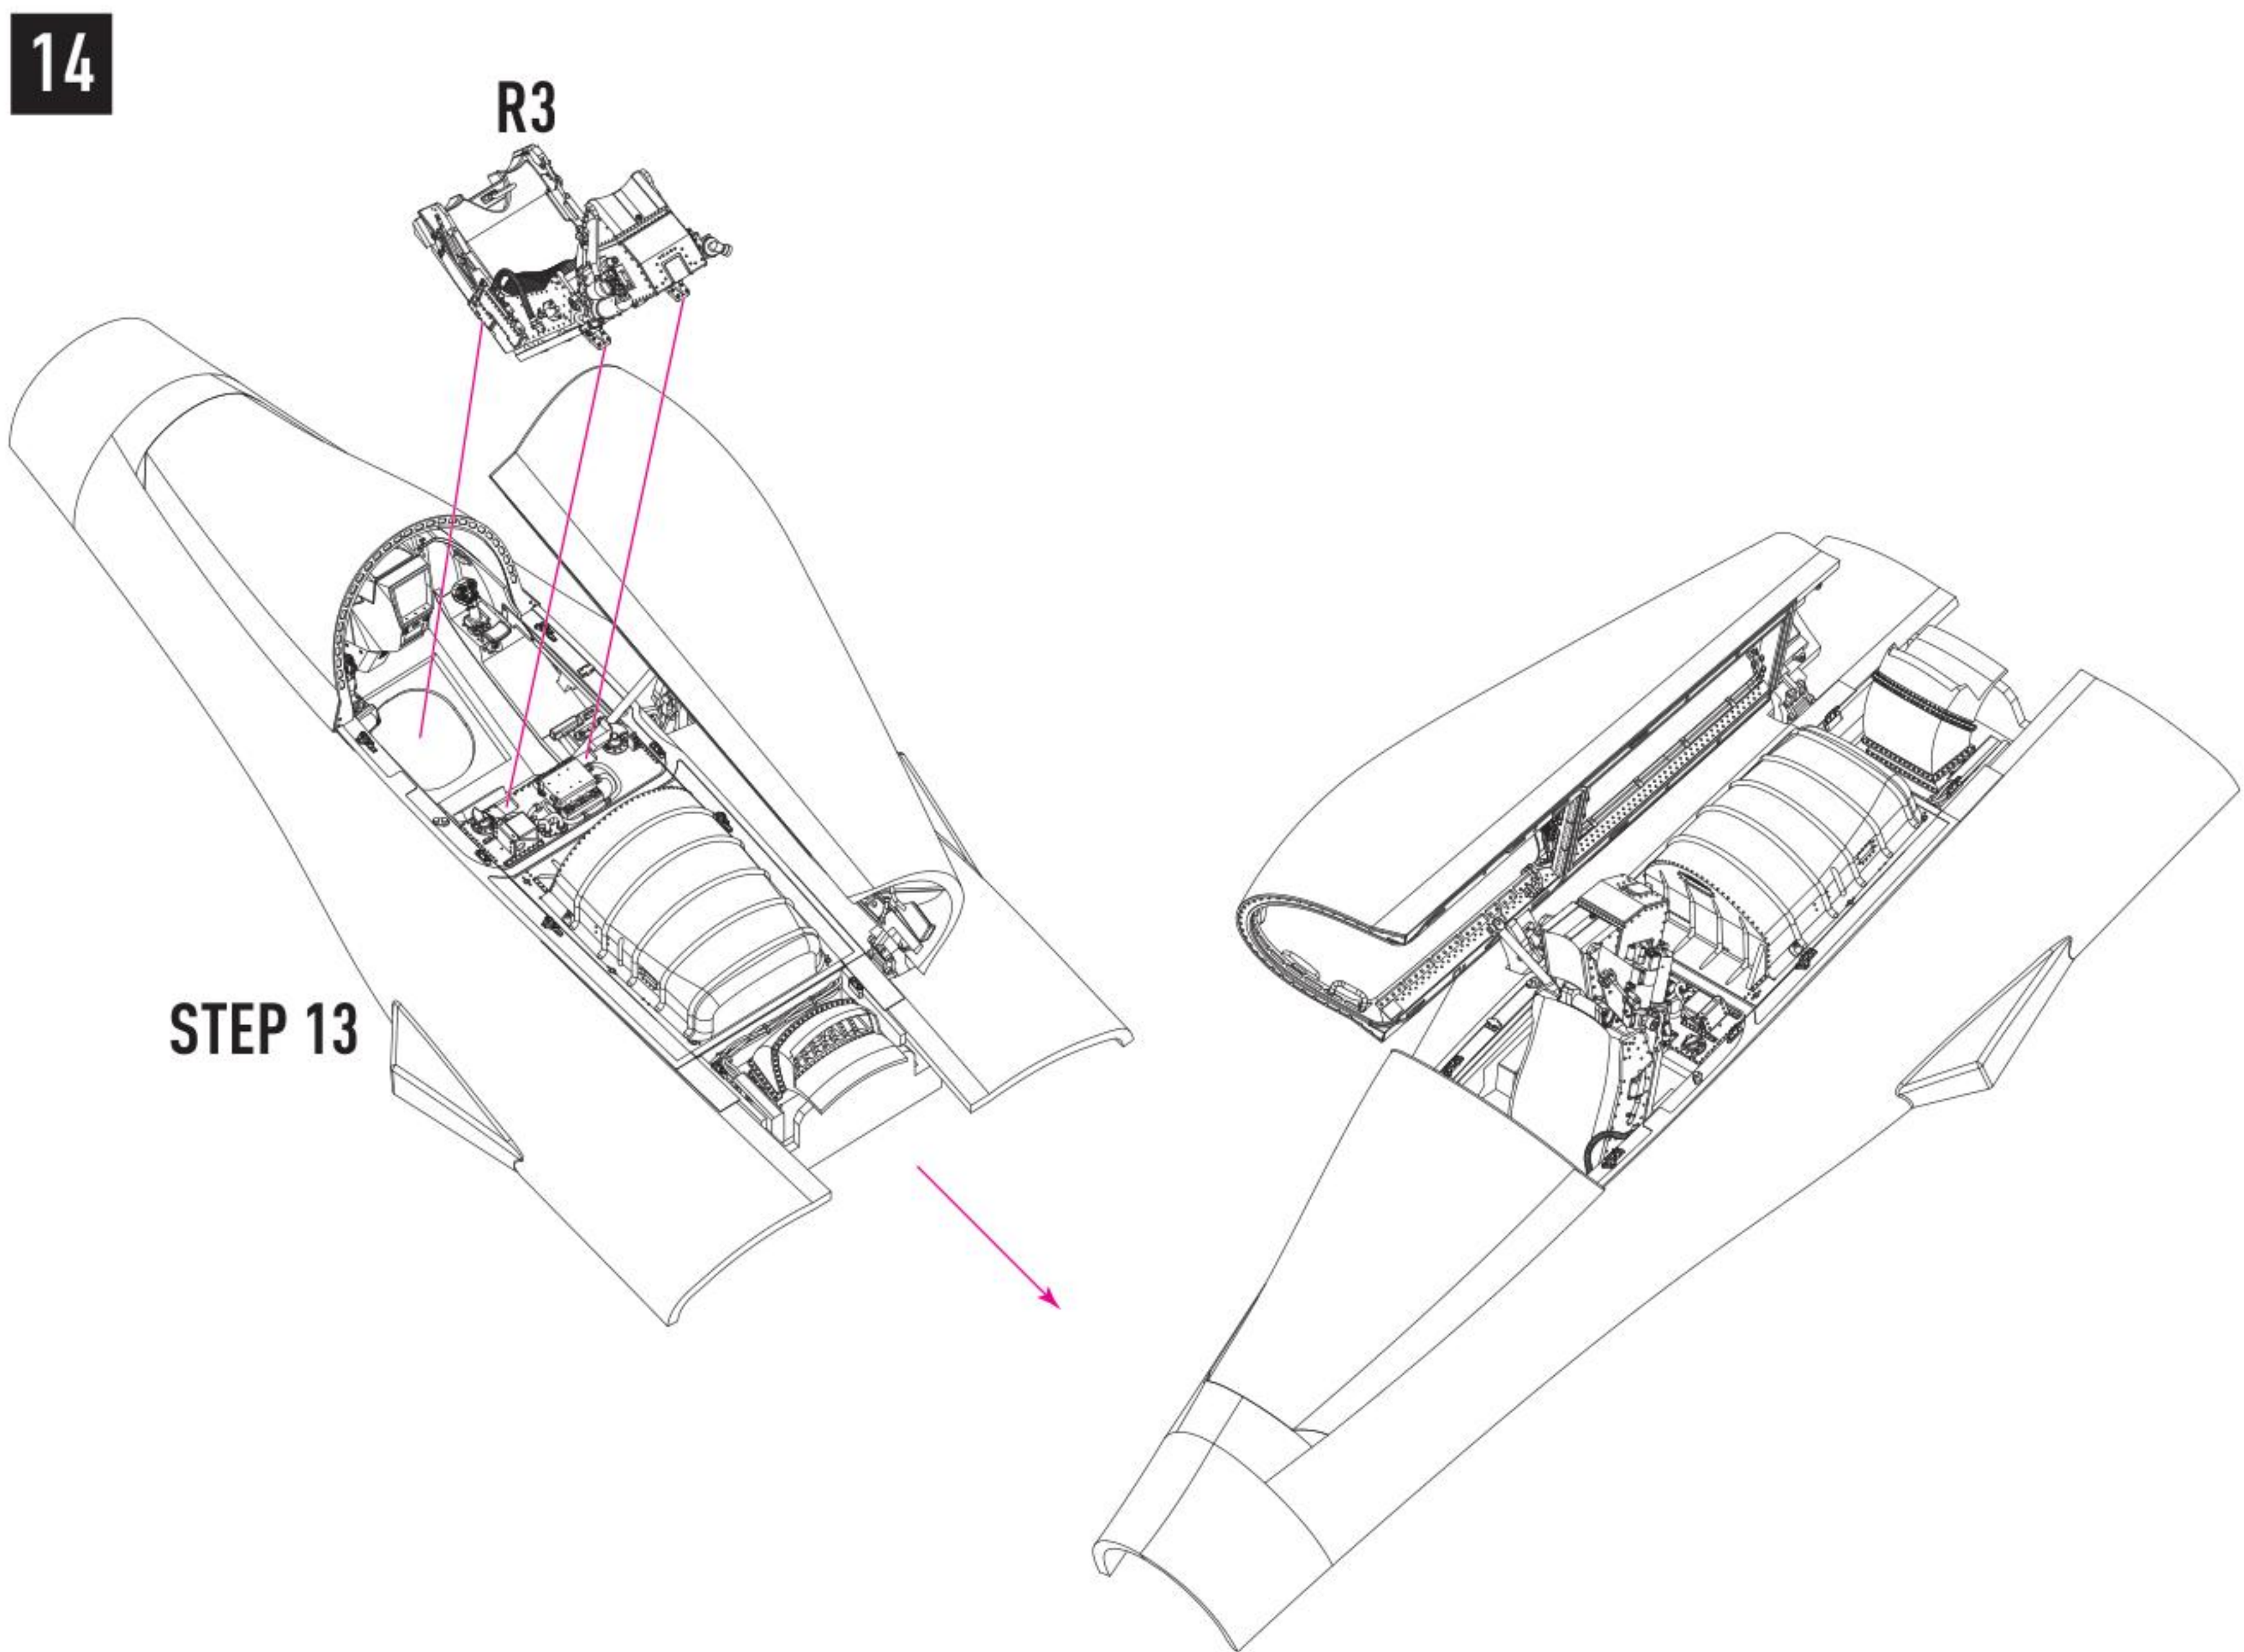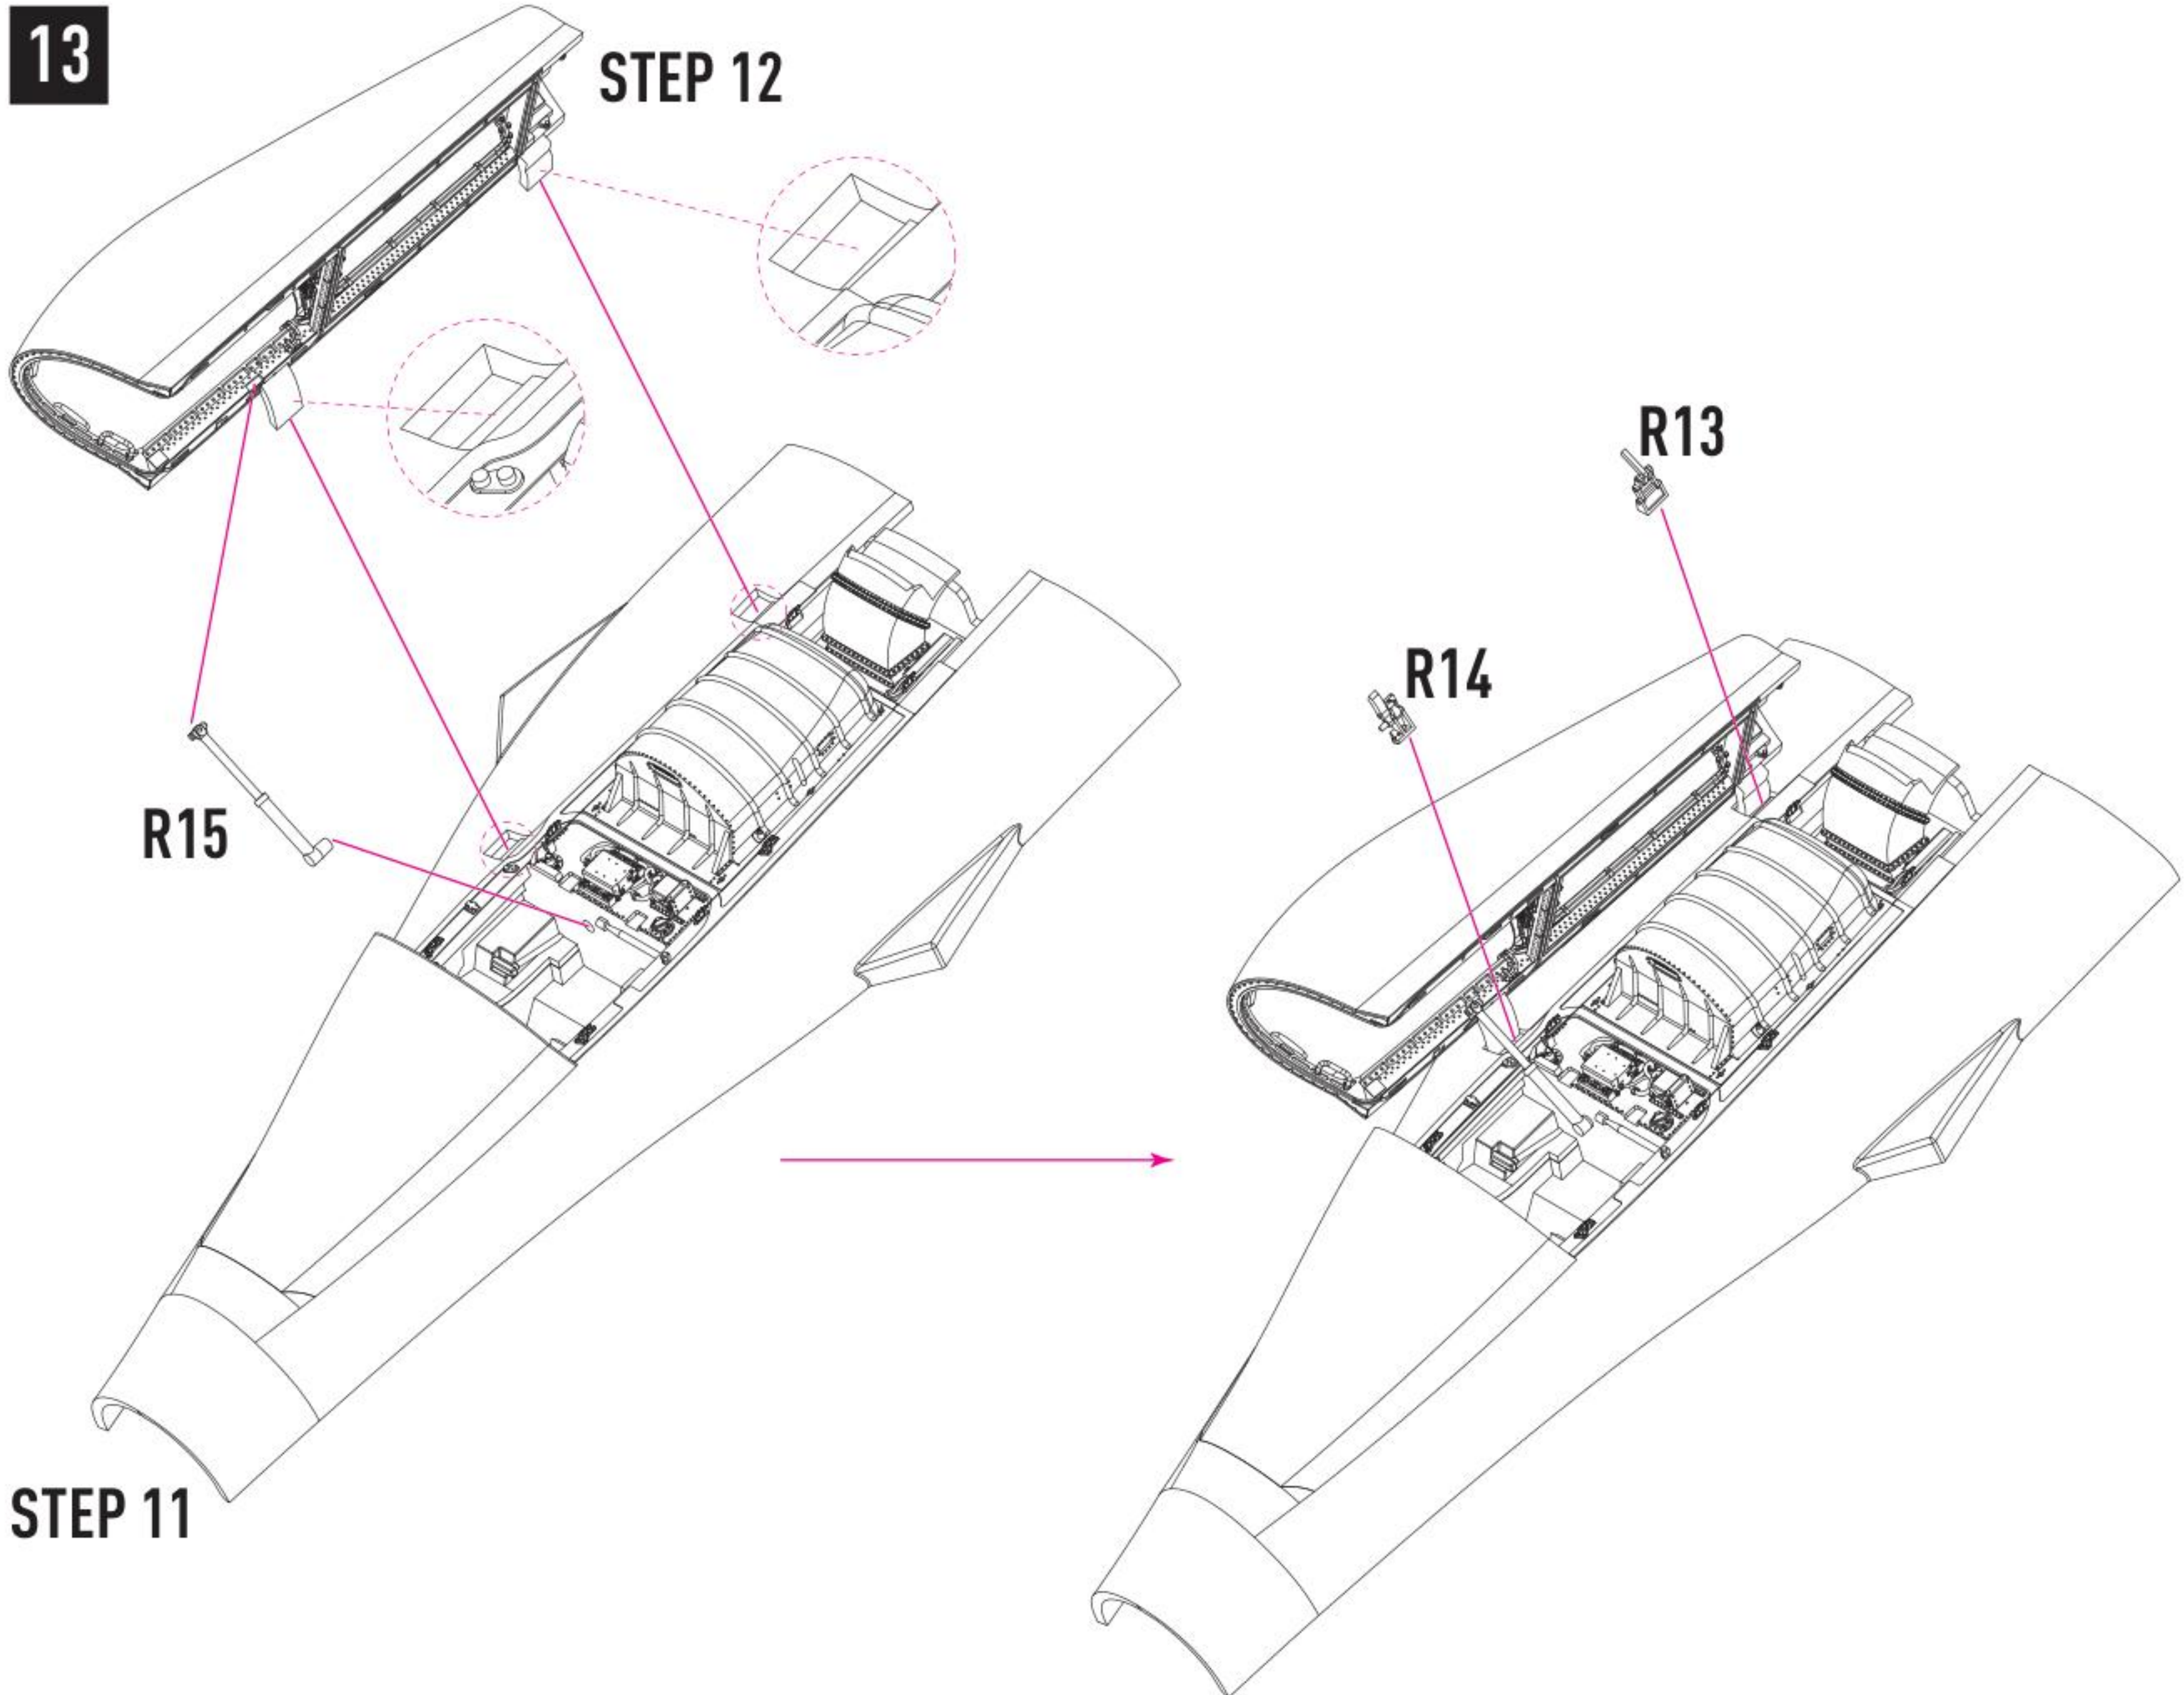

3D-DECAL INSTRUCTION

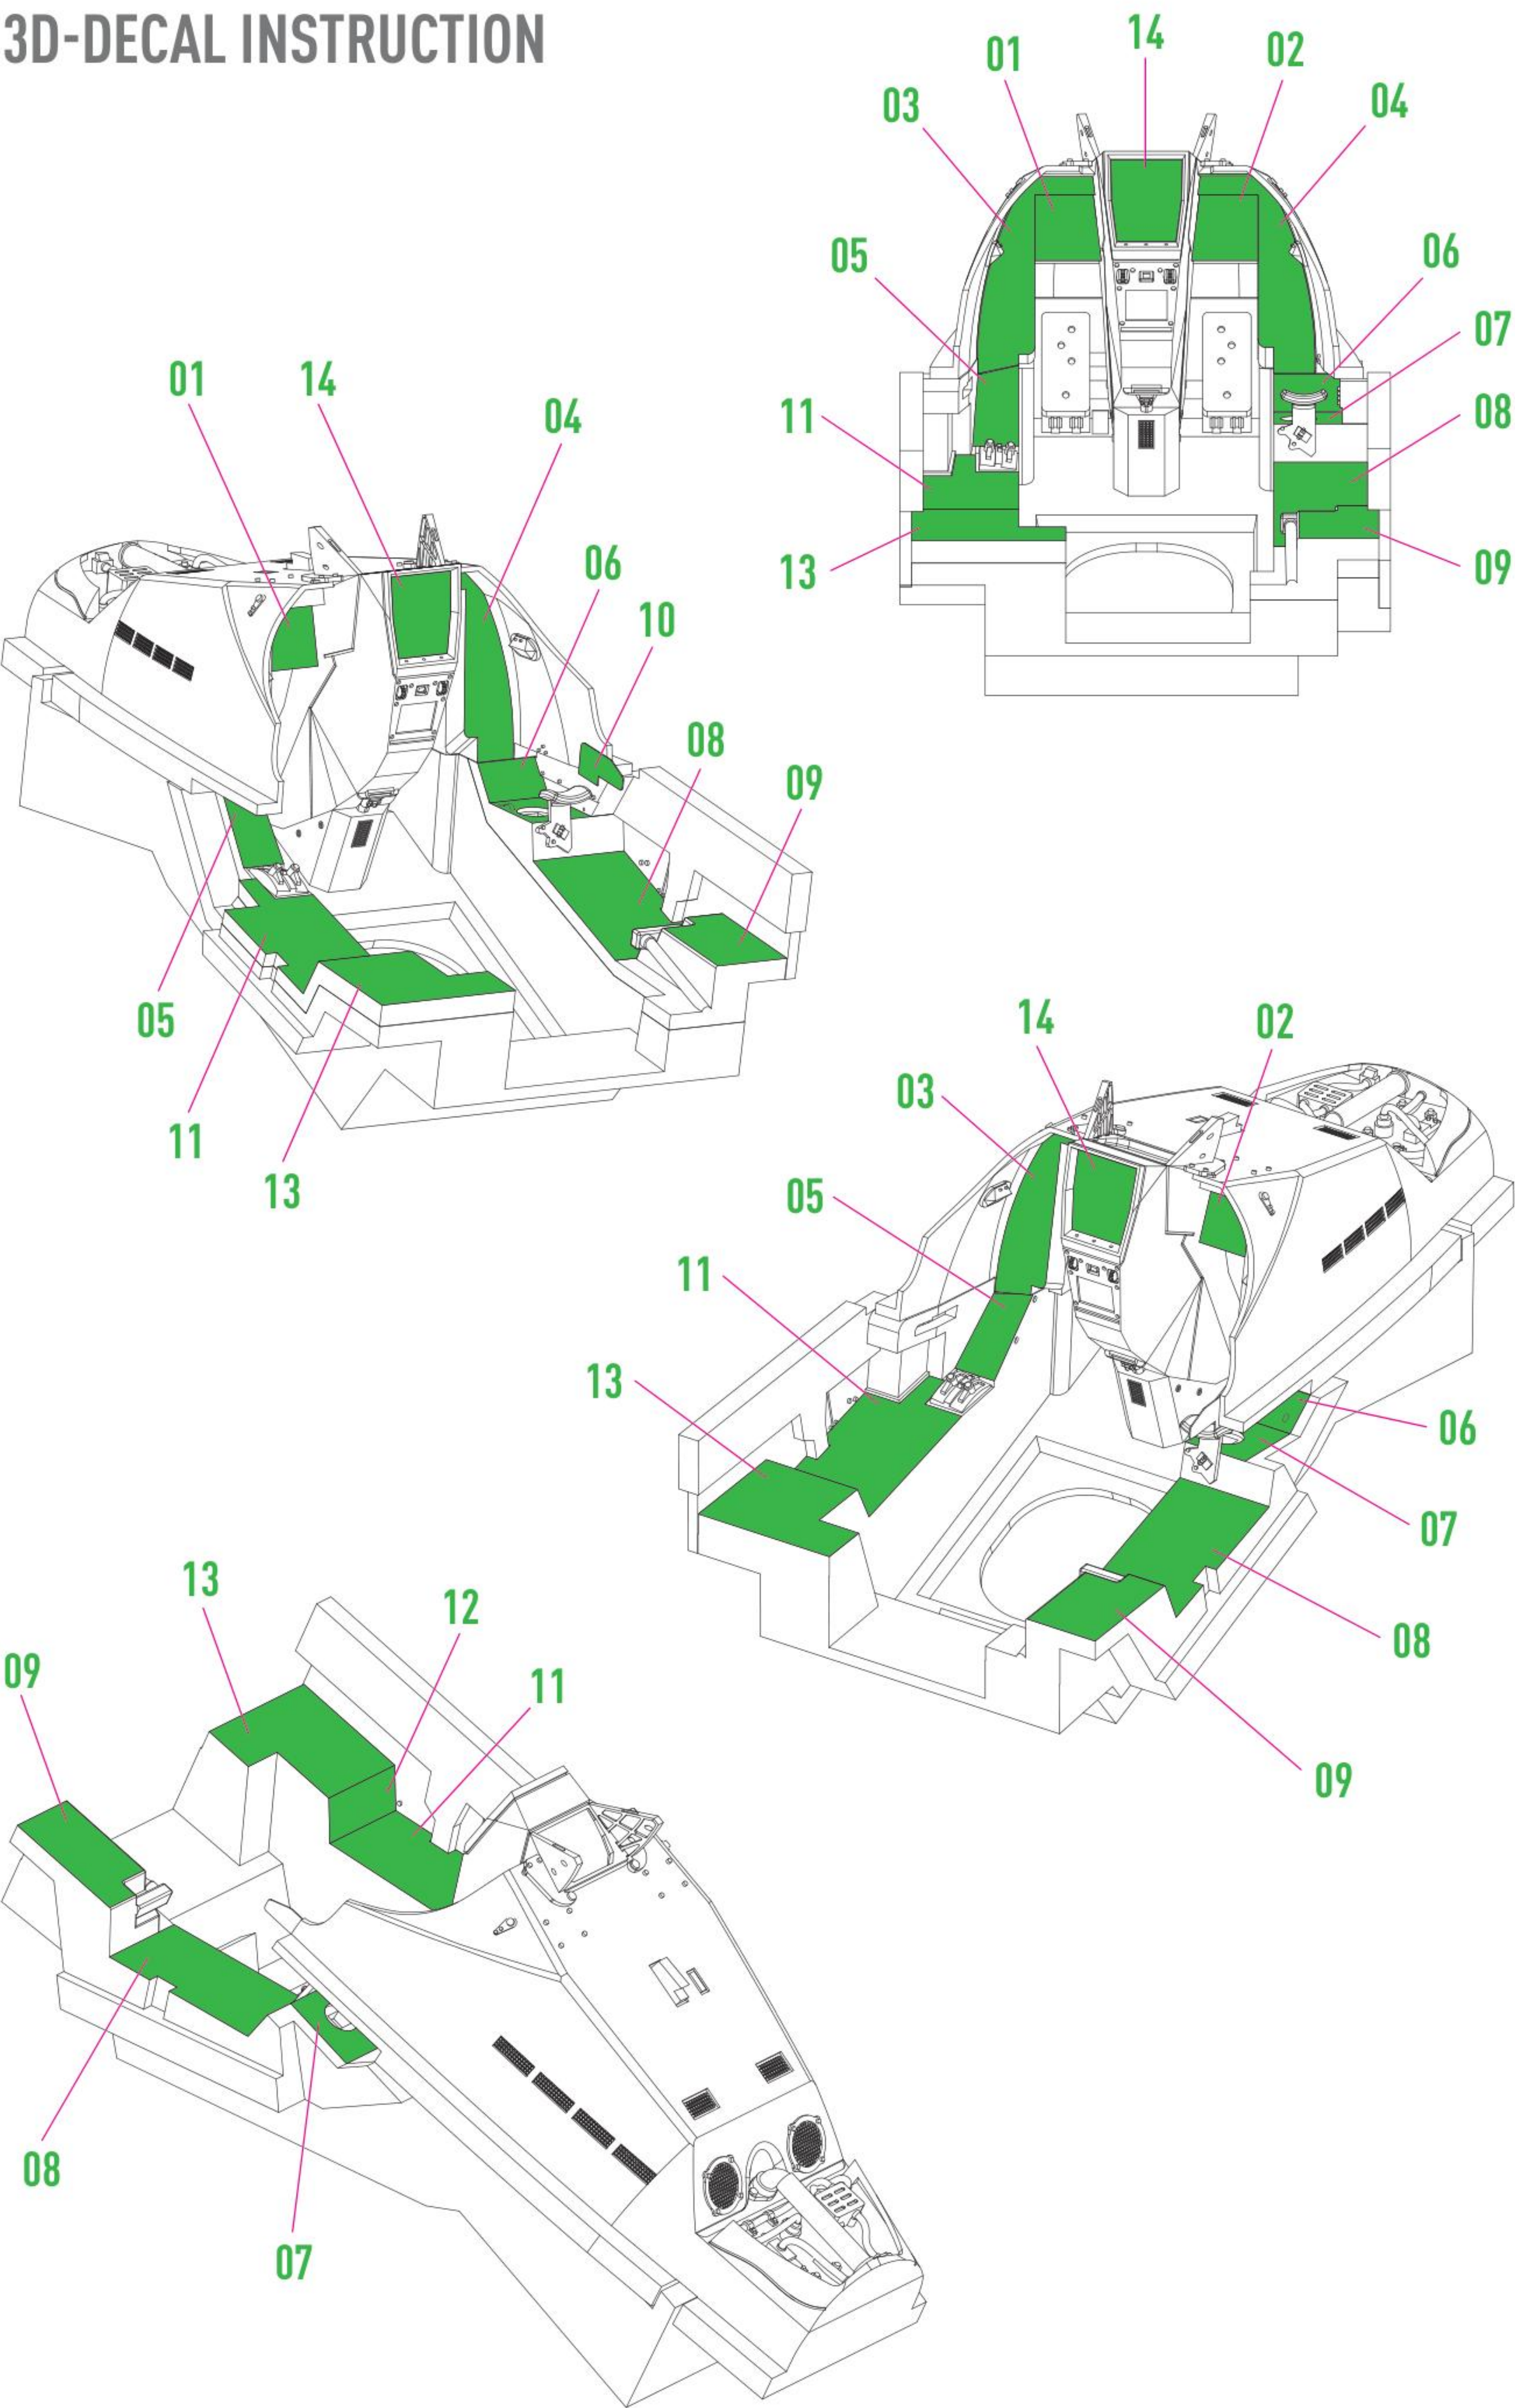

DECAL INSTRUCTION

