



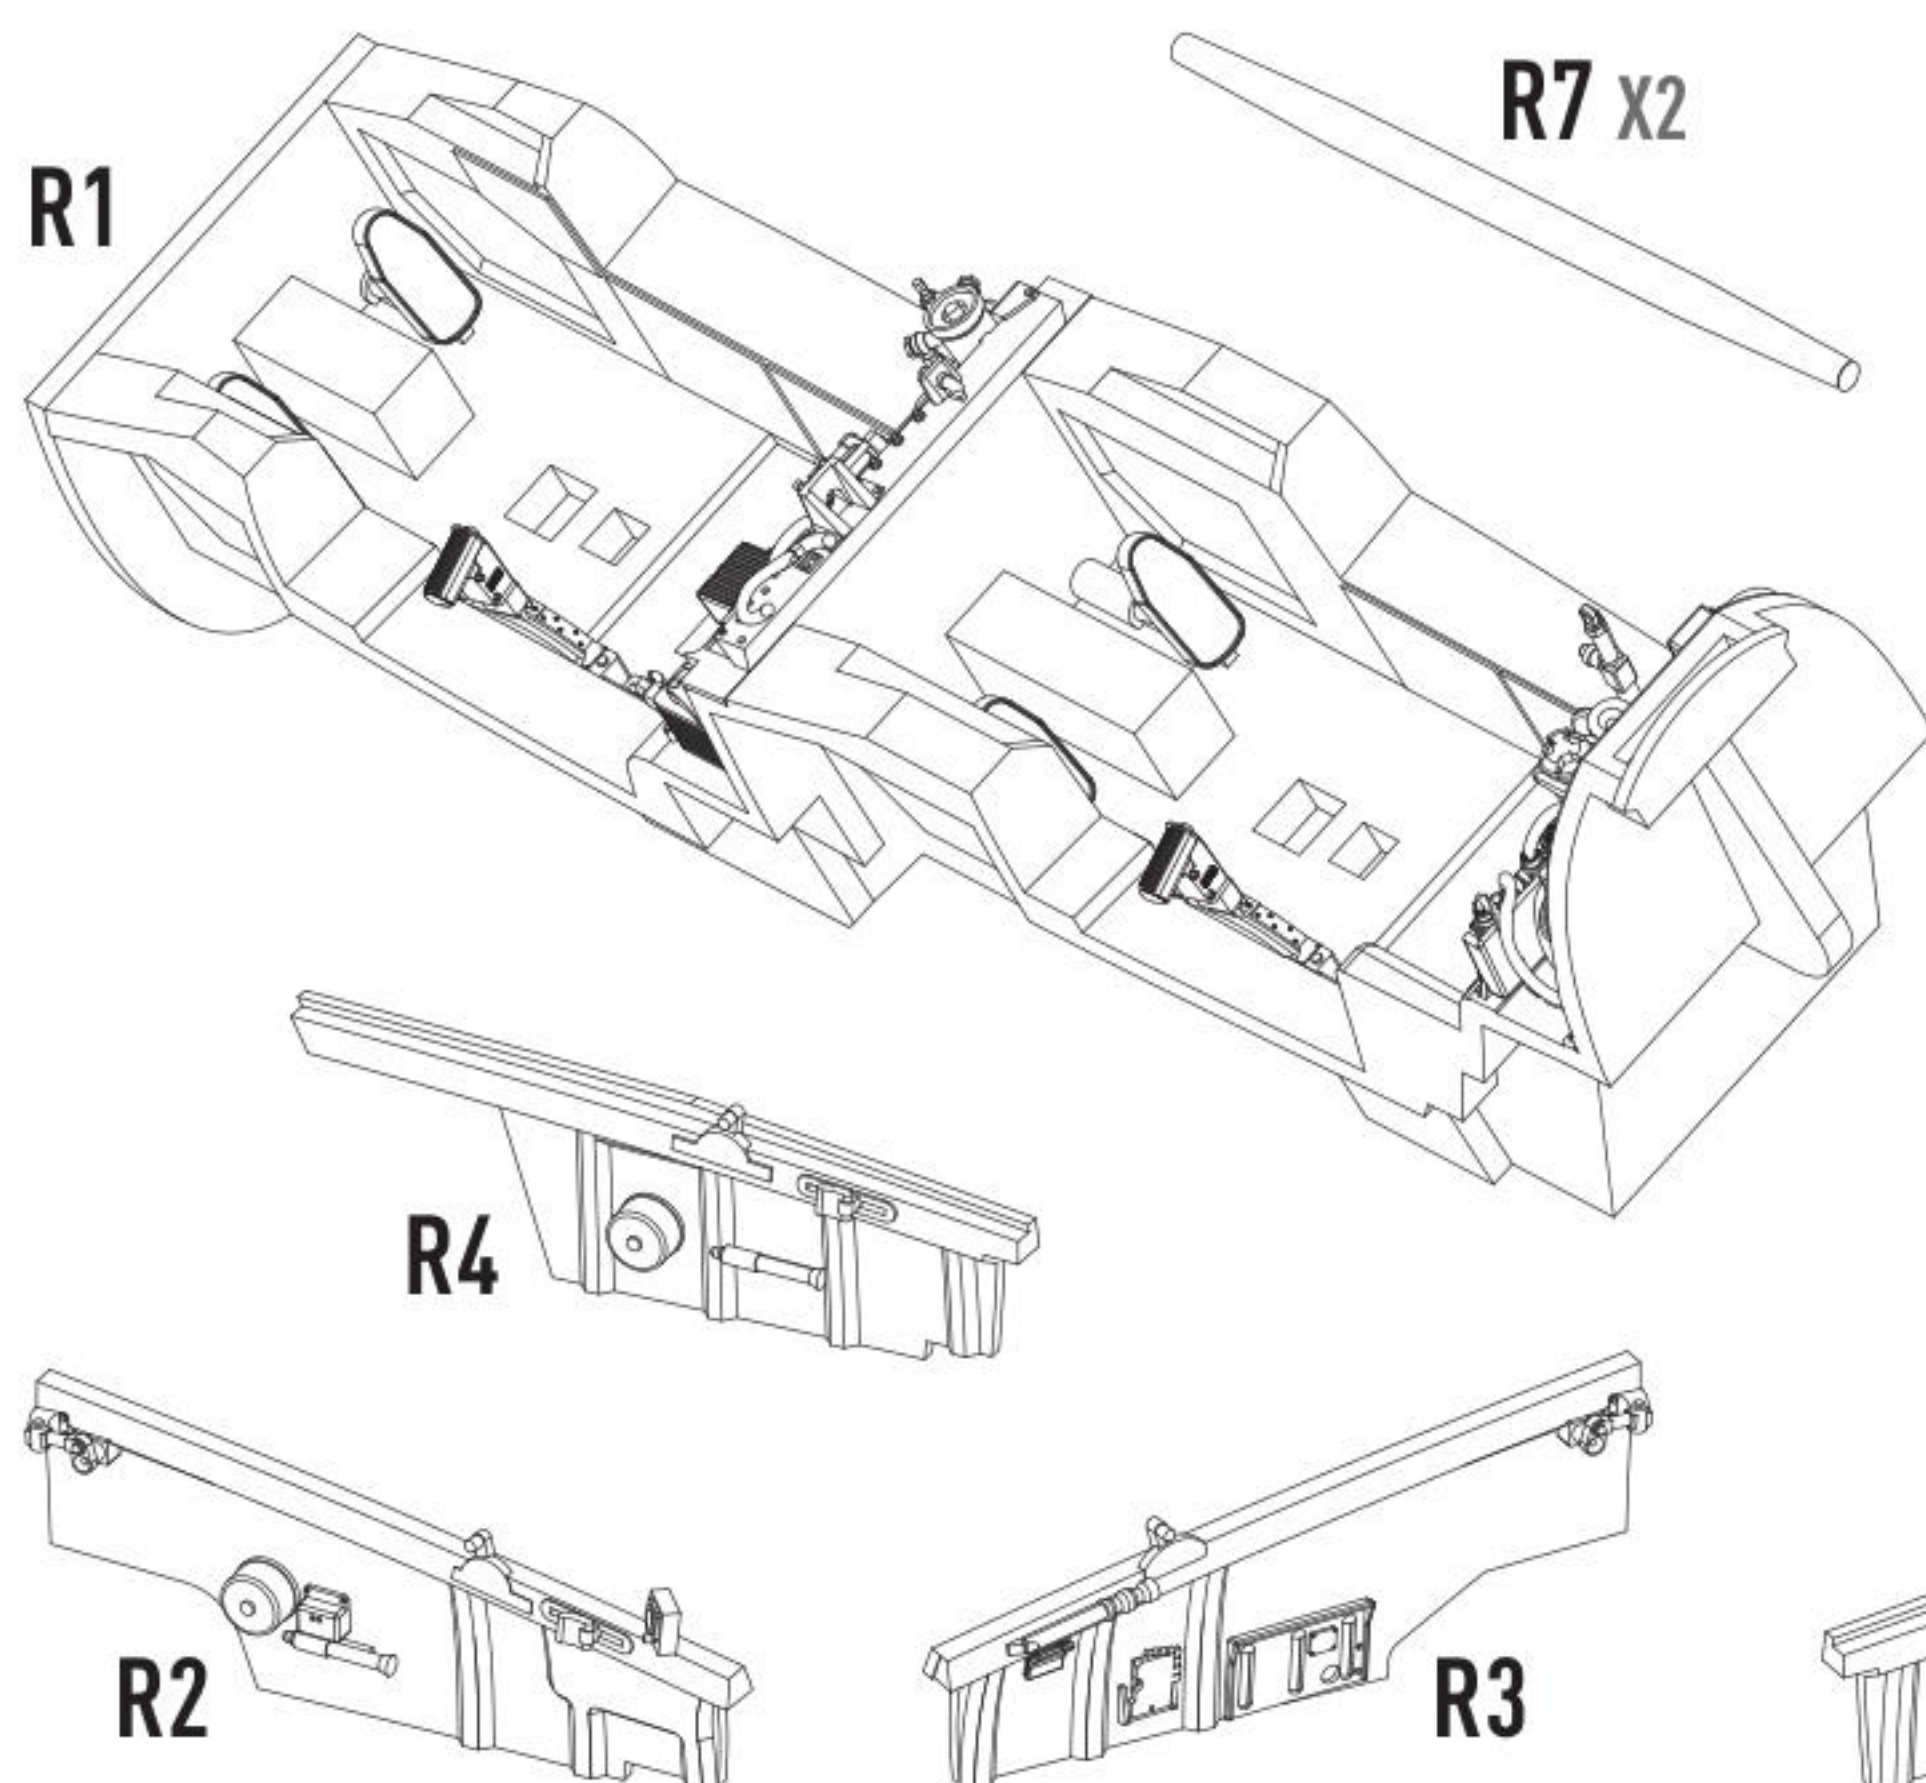


USE A SAW TO REMOVE SUPPORTS
FROM 3D PRINTED PARTS

DETAILS AFTER REMOVAL FROM SUPPORTS

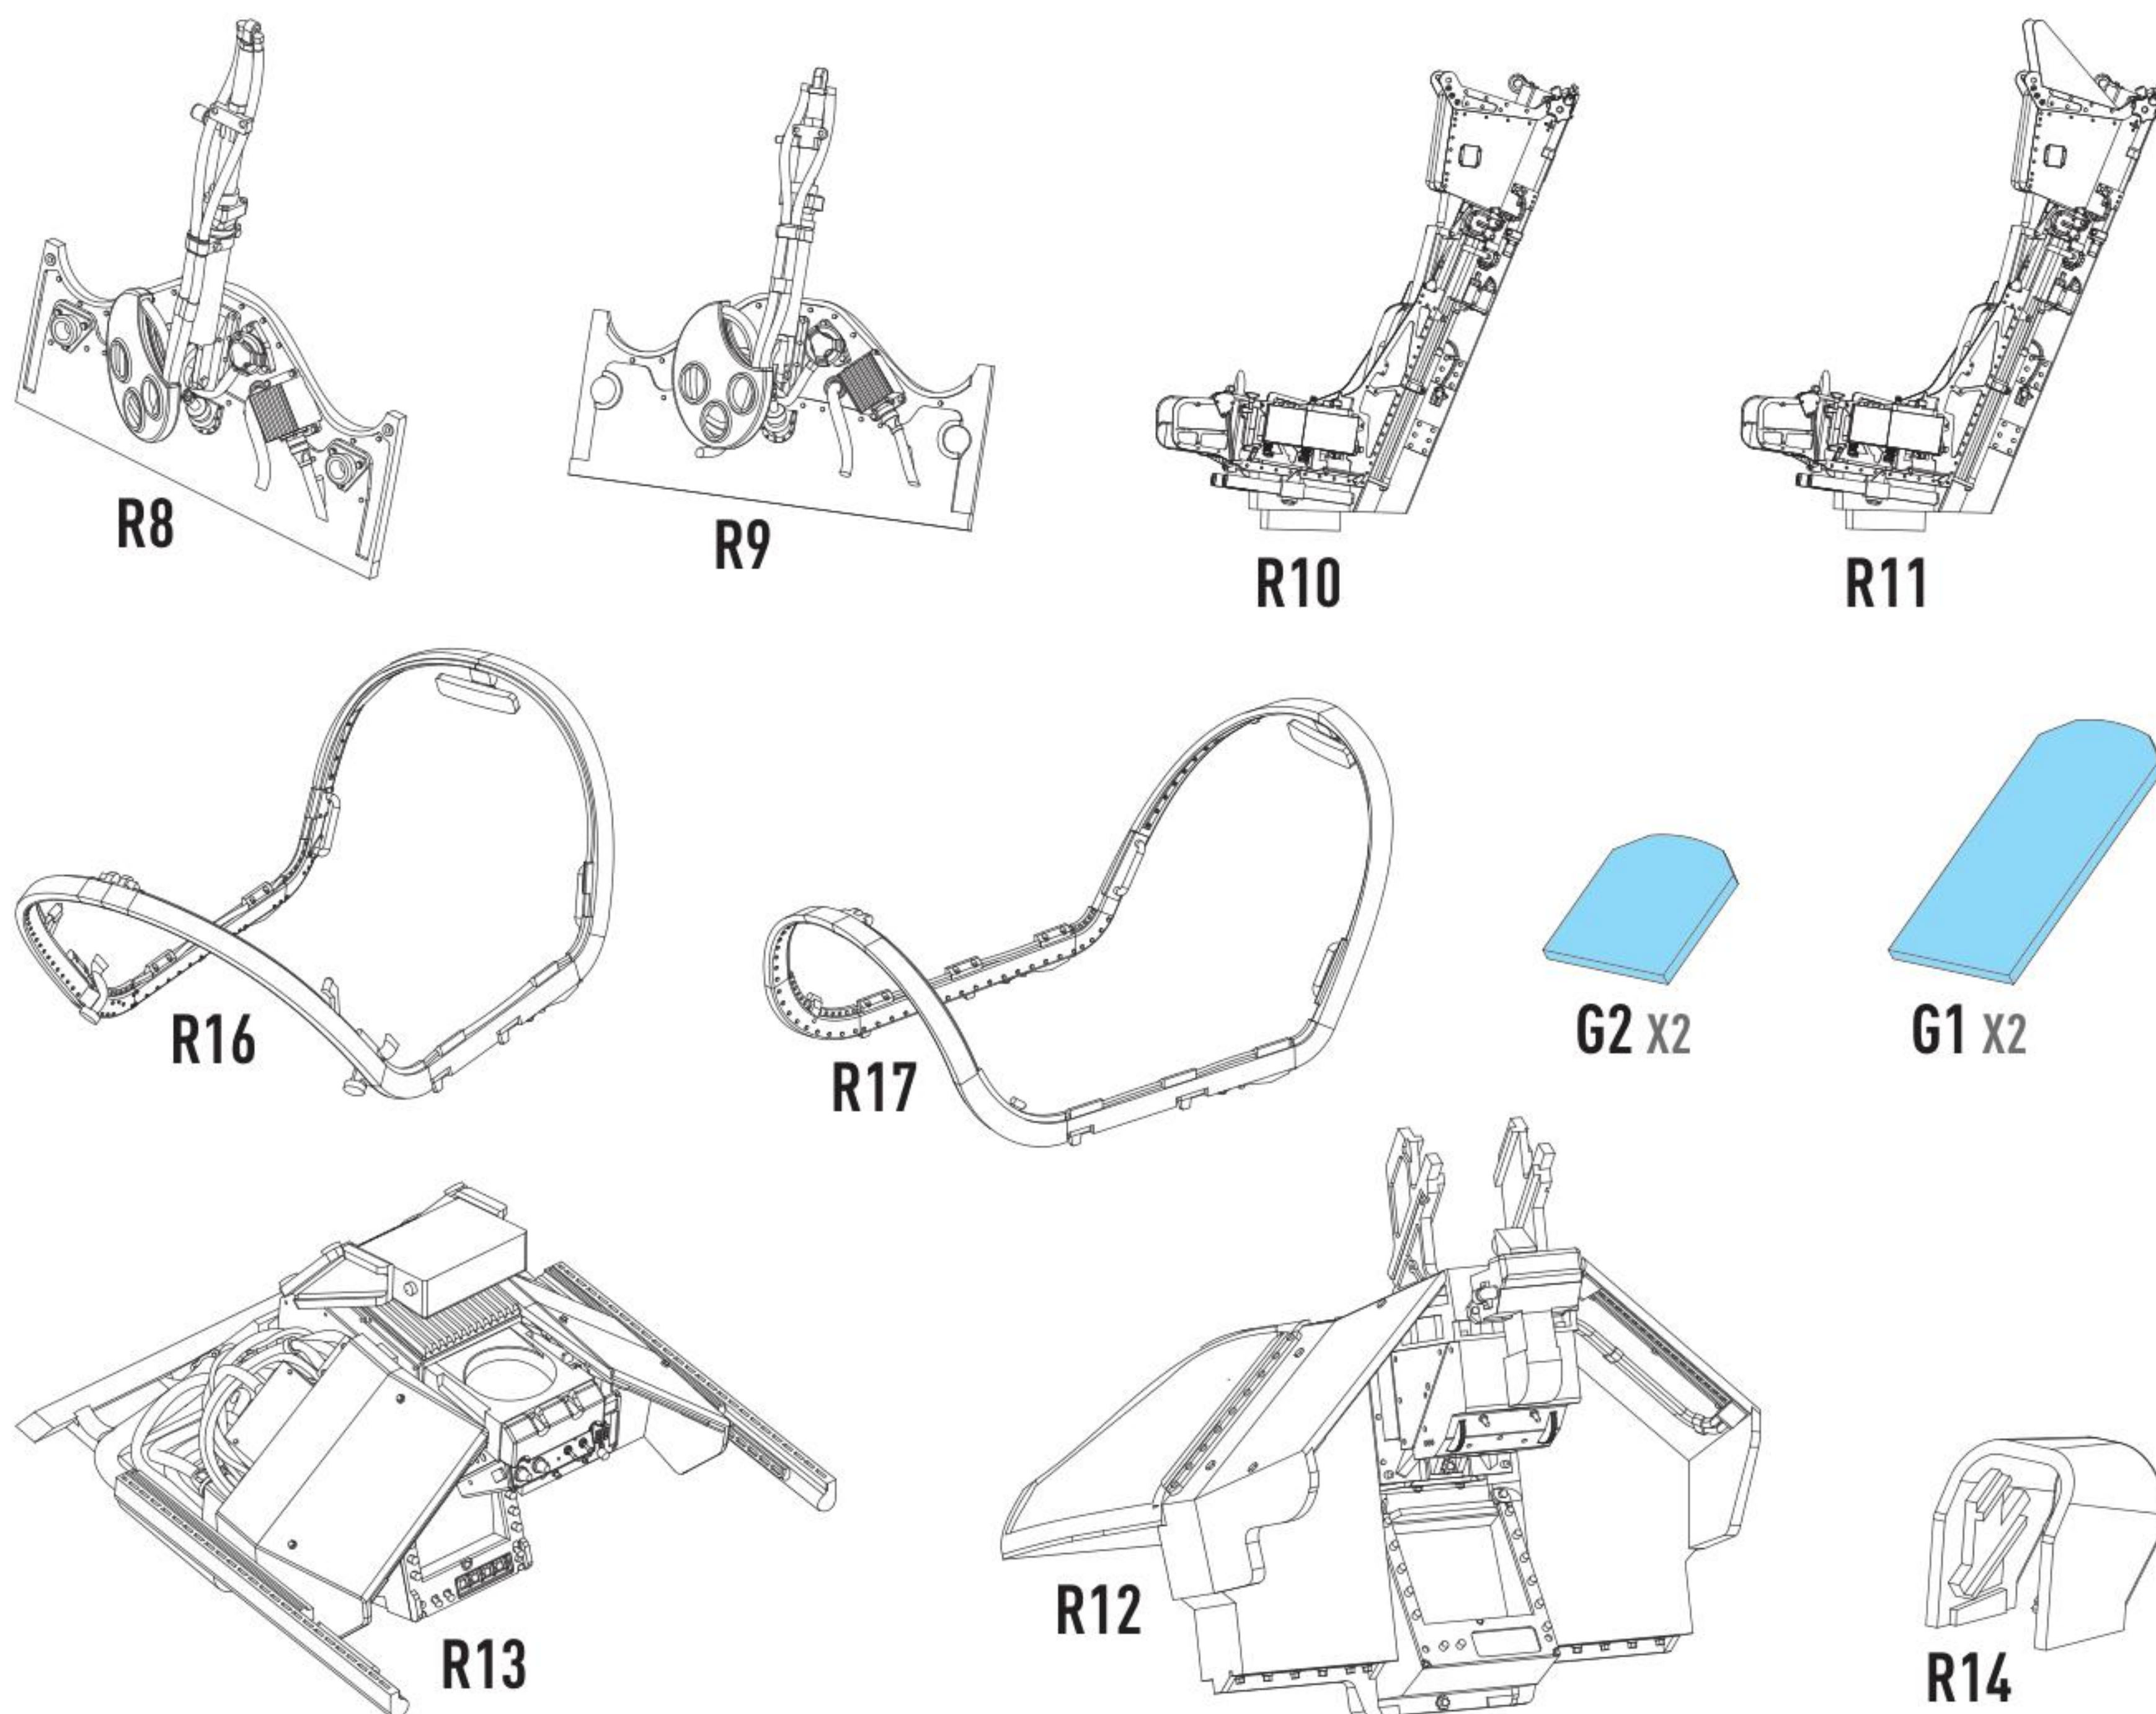

3D-DECAL INSTRUCTION

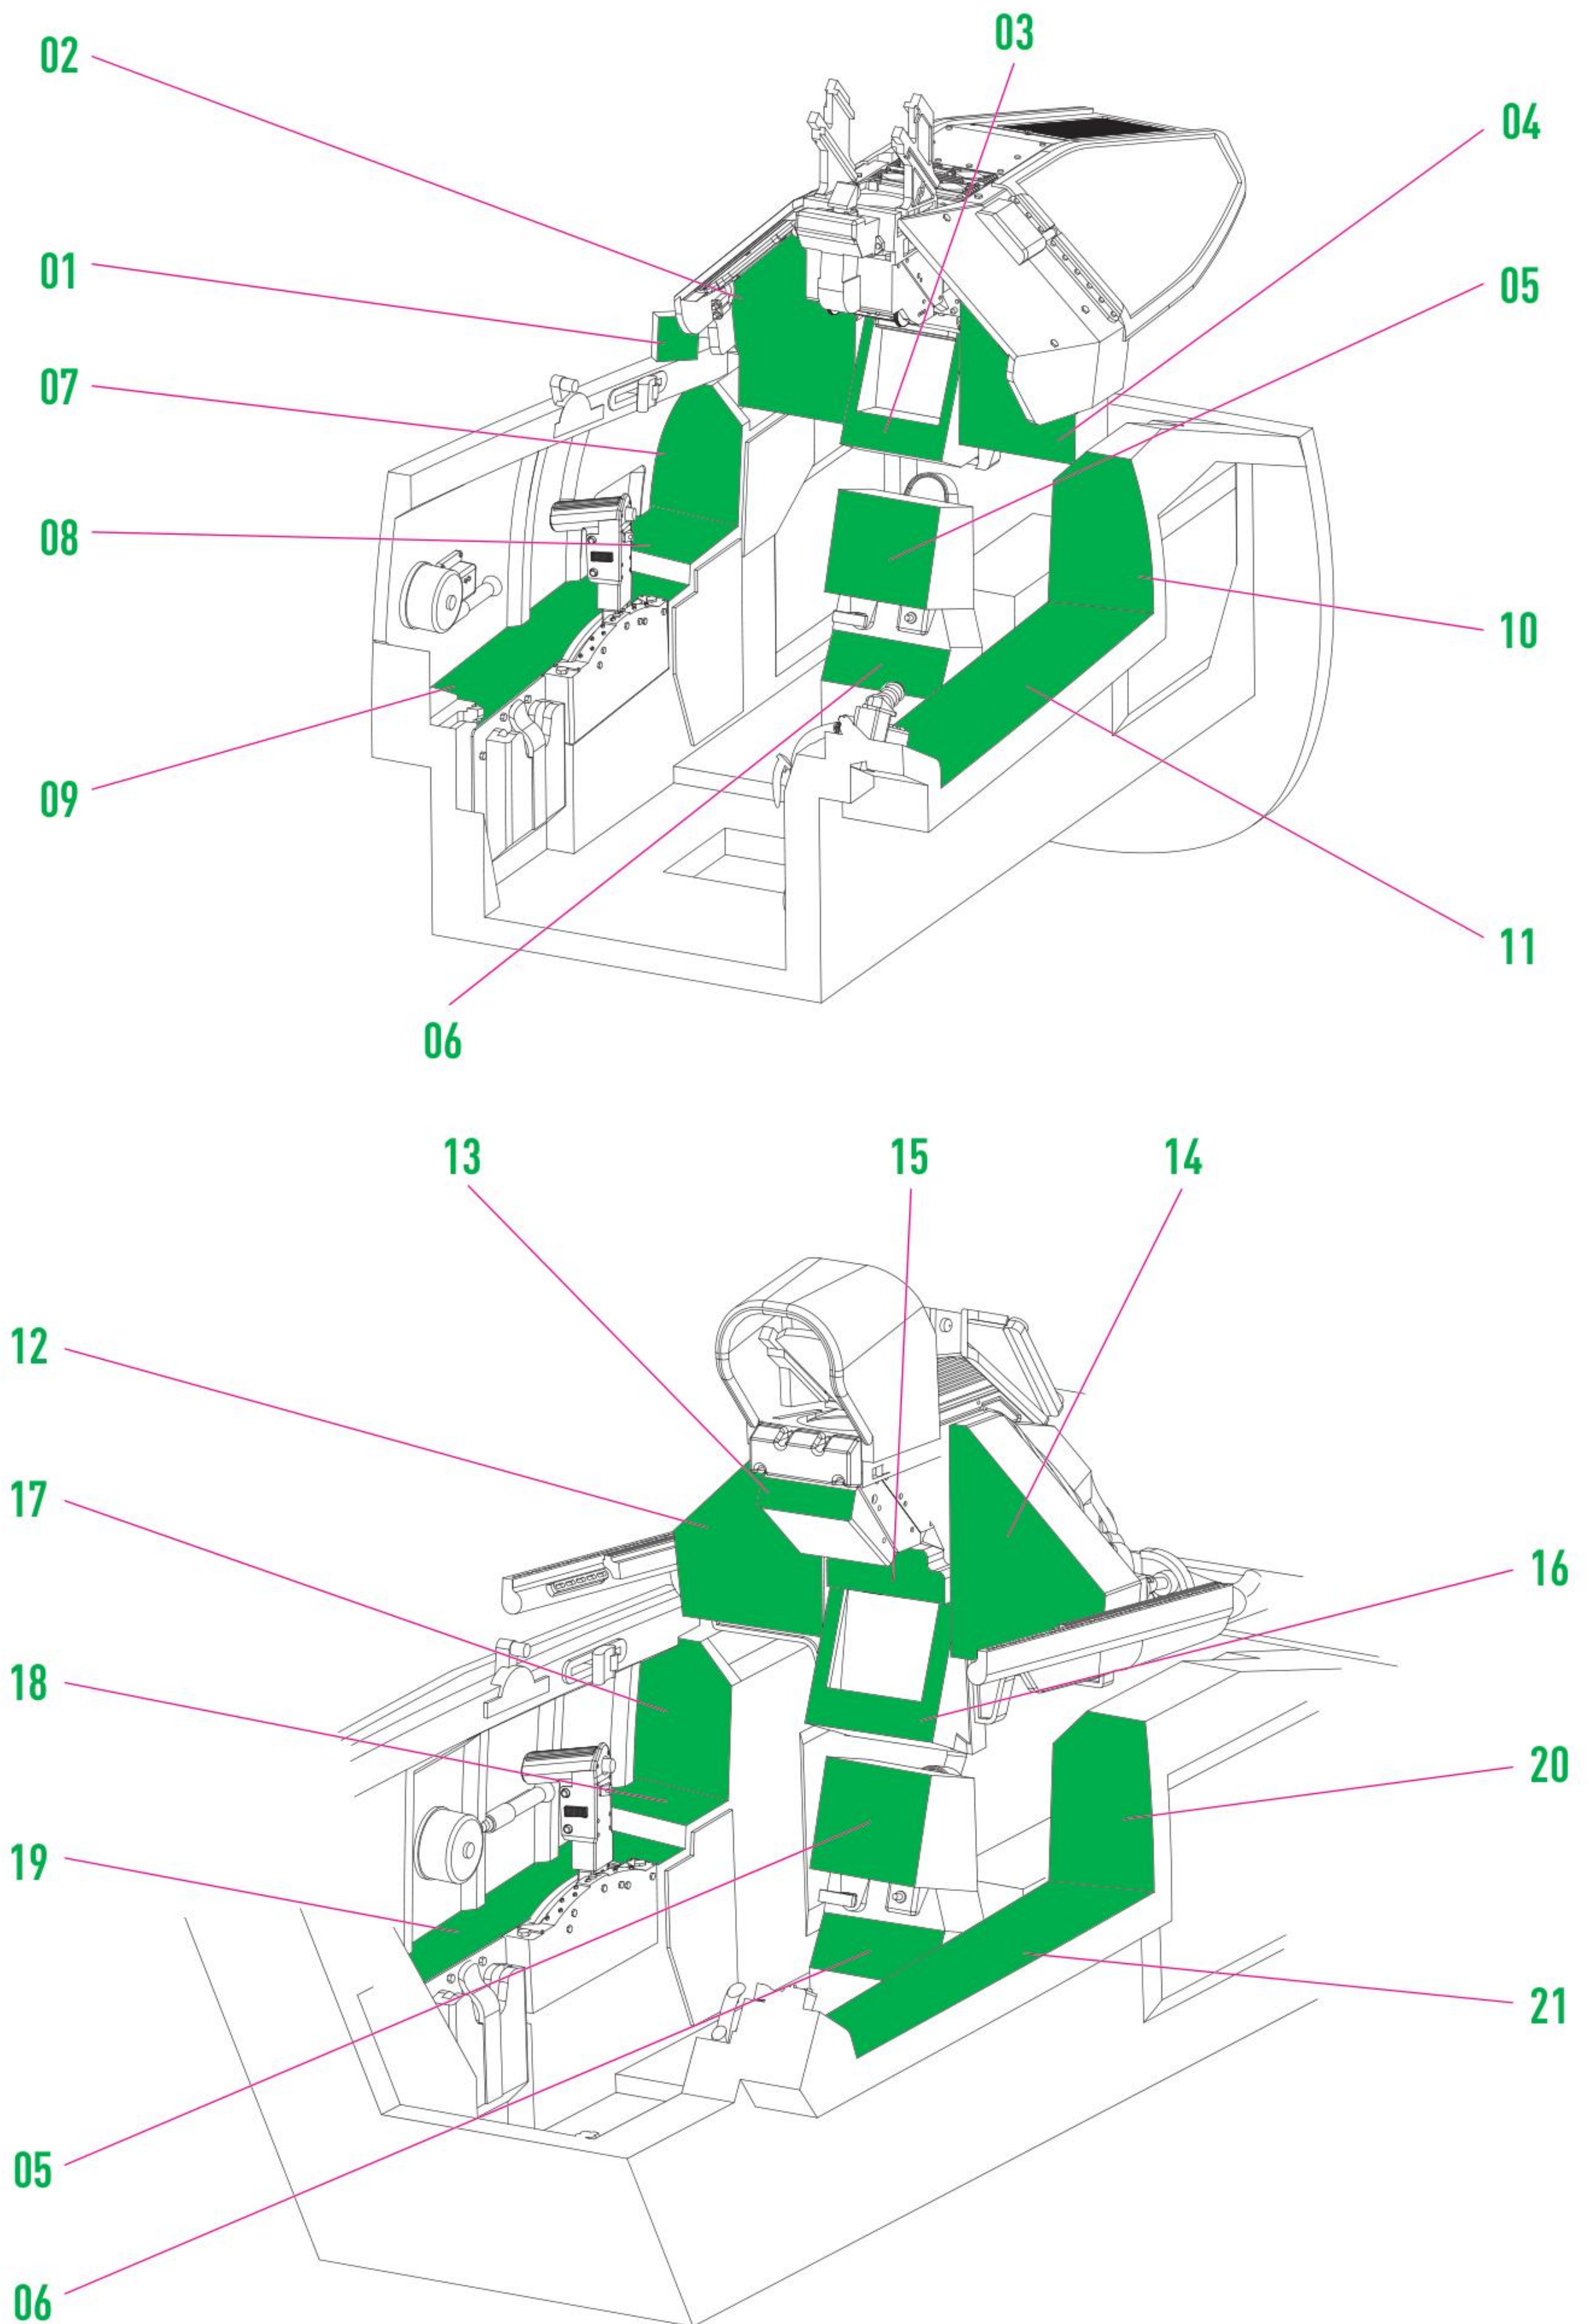



general Issues: info@reskit.com.ua / claim resolution: claims@reskit.com.ua

RESKIT-MODELS.COM


fb.com/reskit.official

instagram.com/reskit_official

youtube.com/@reskit-usmd

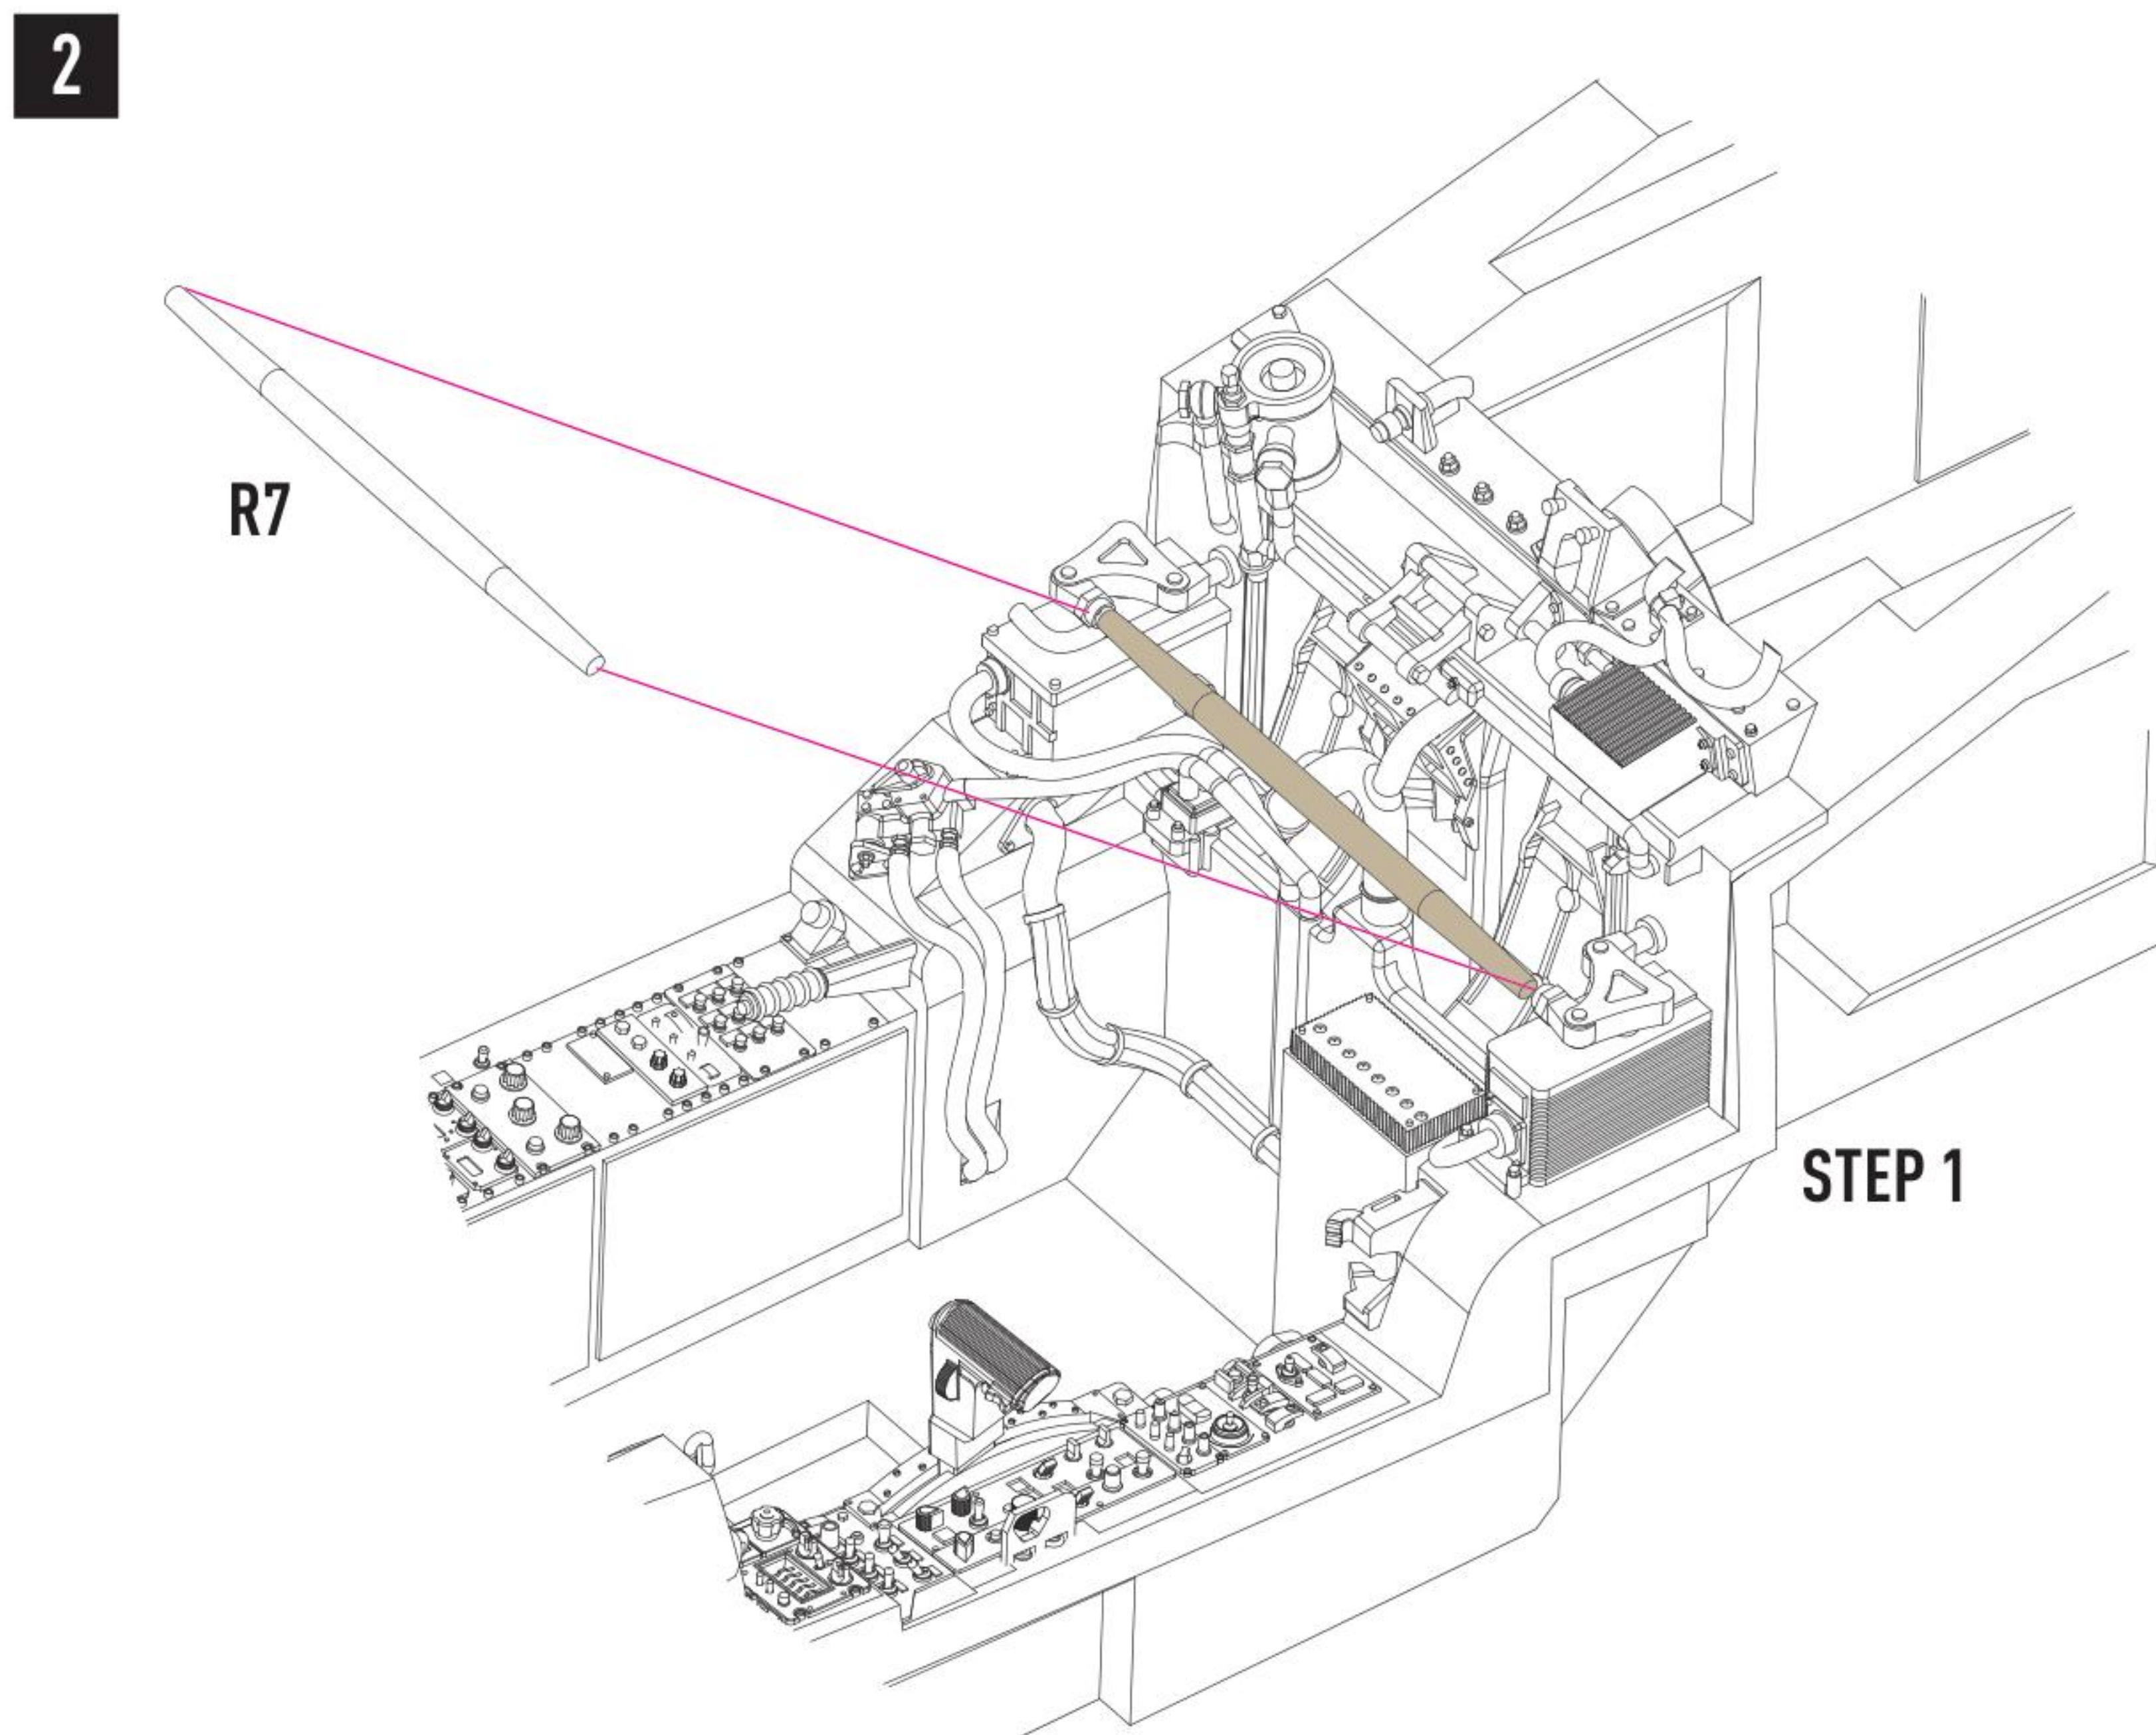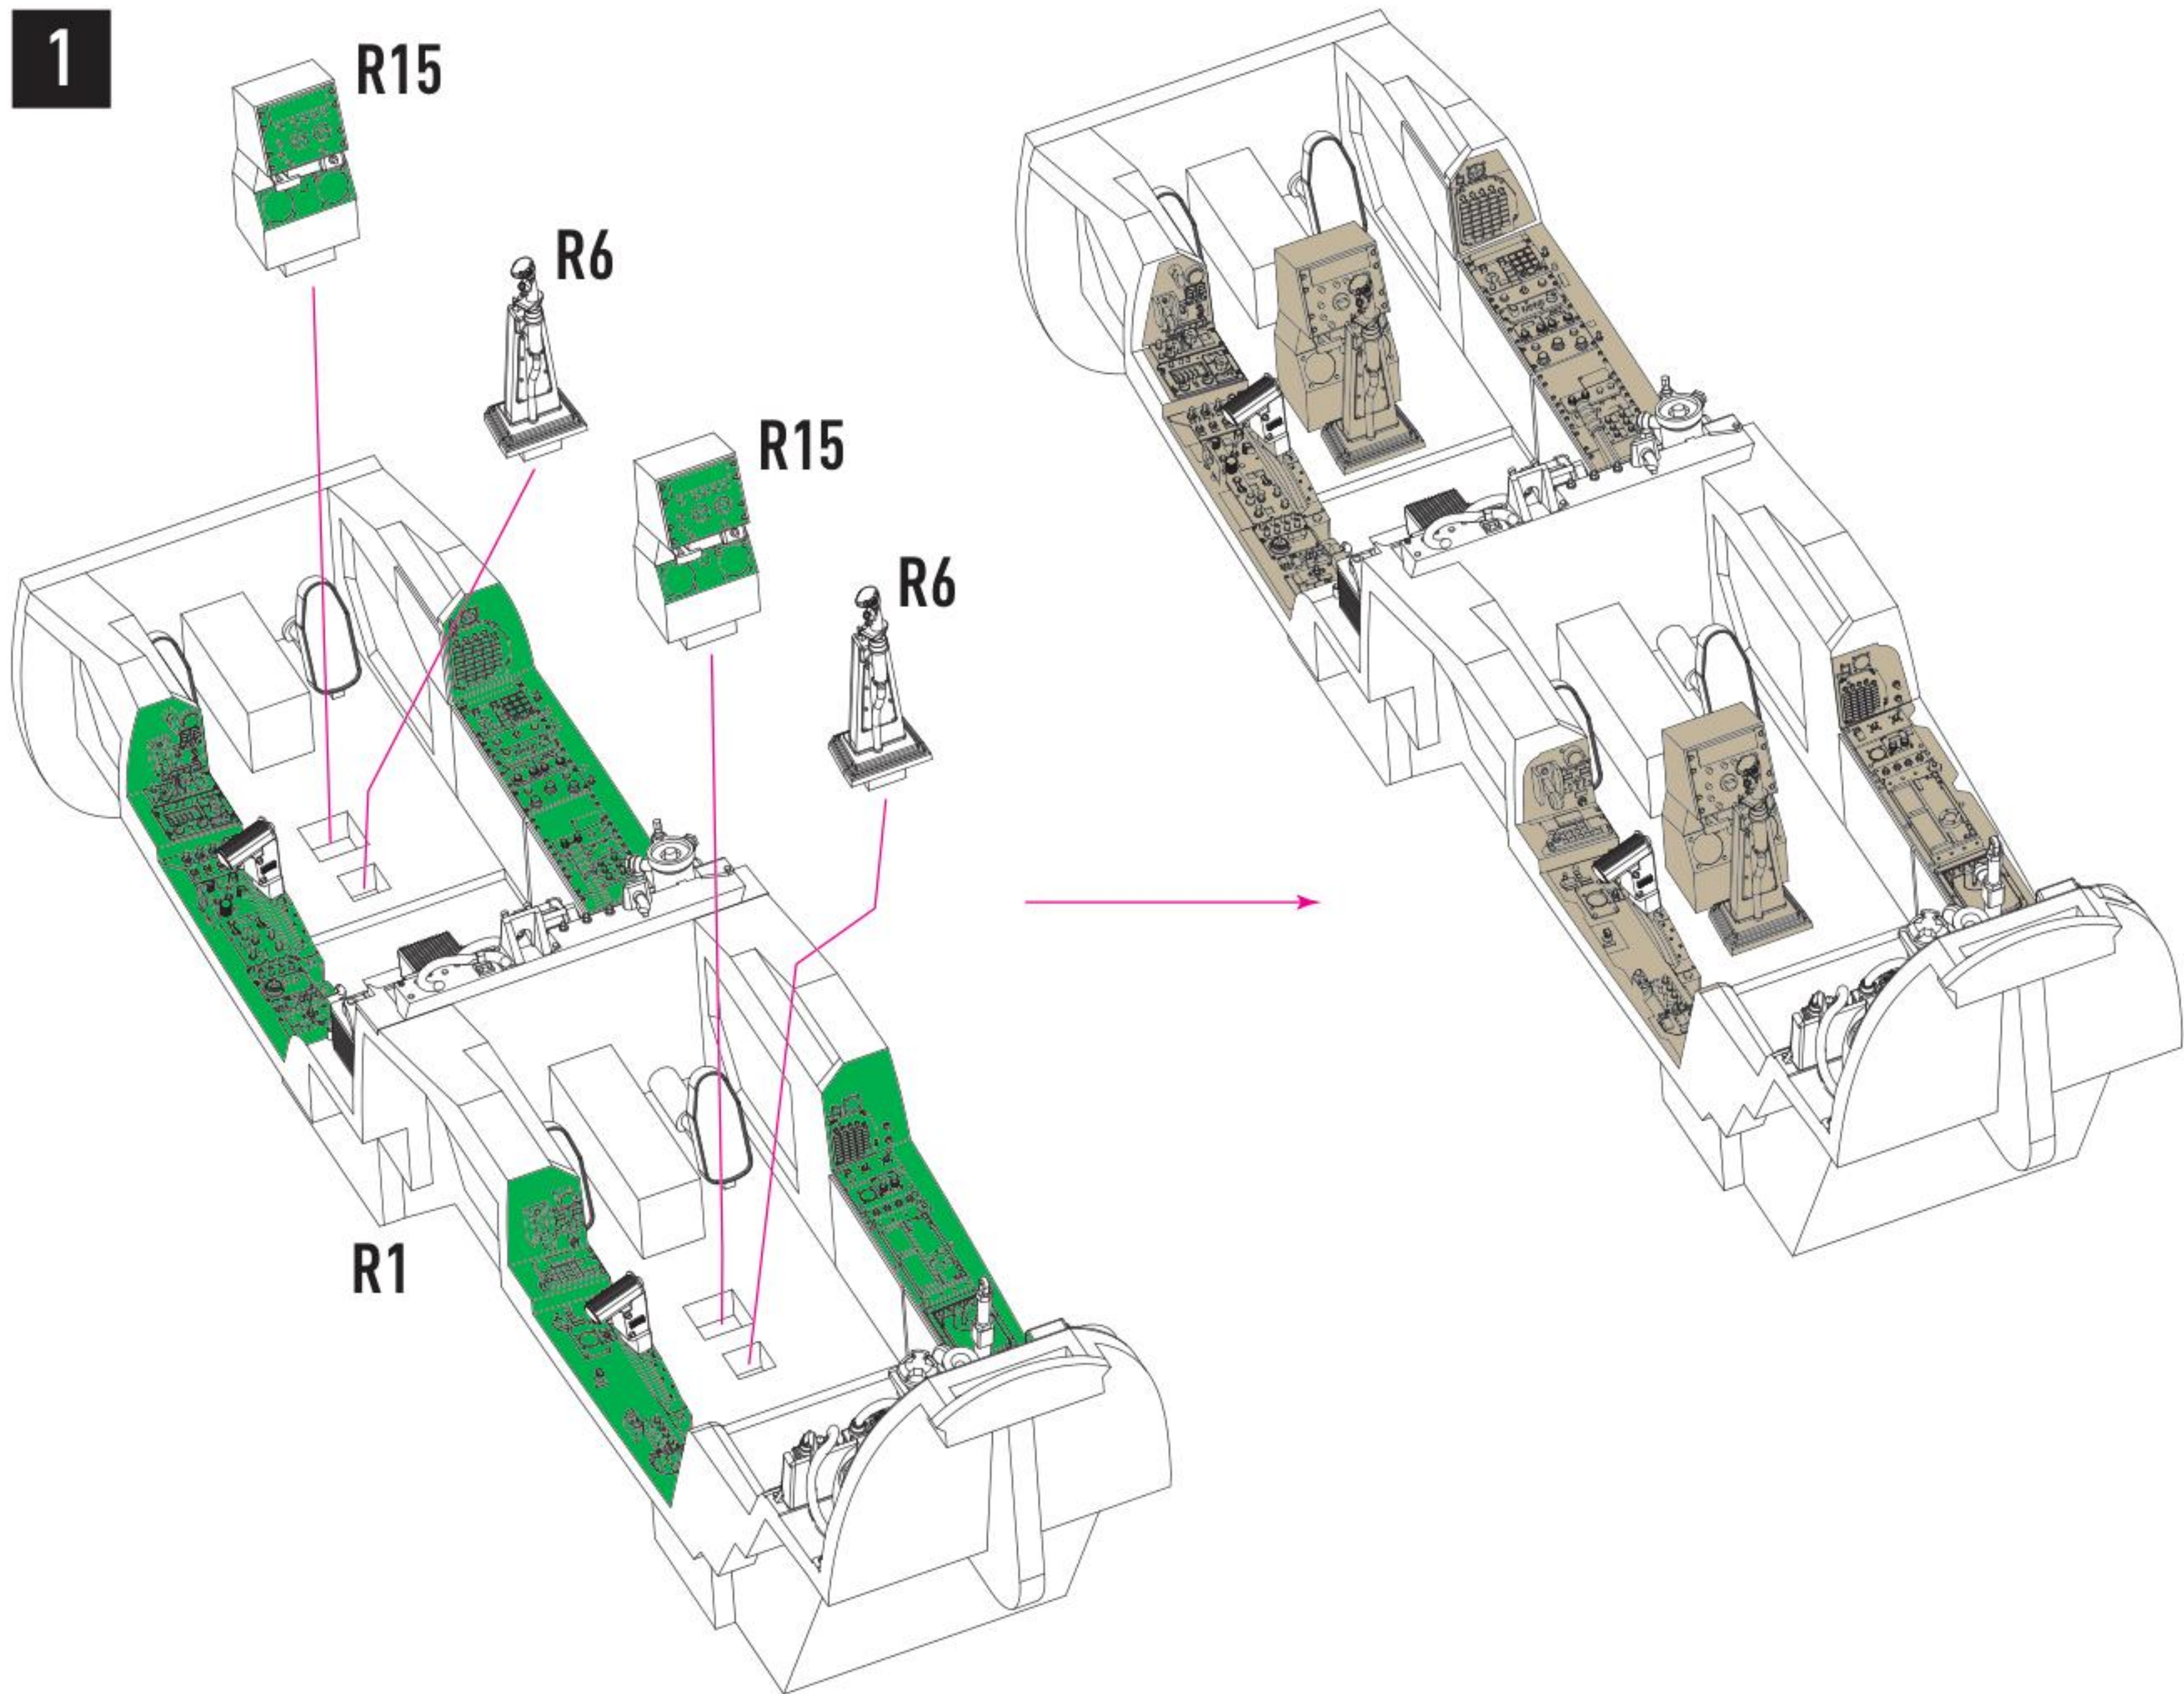


3

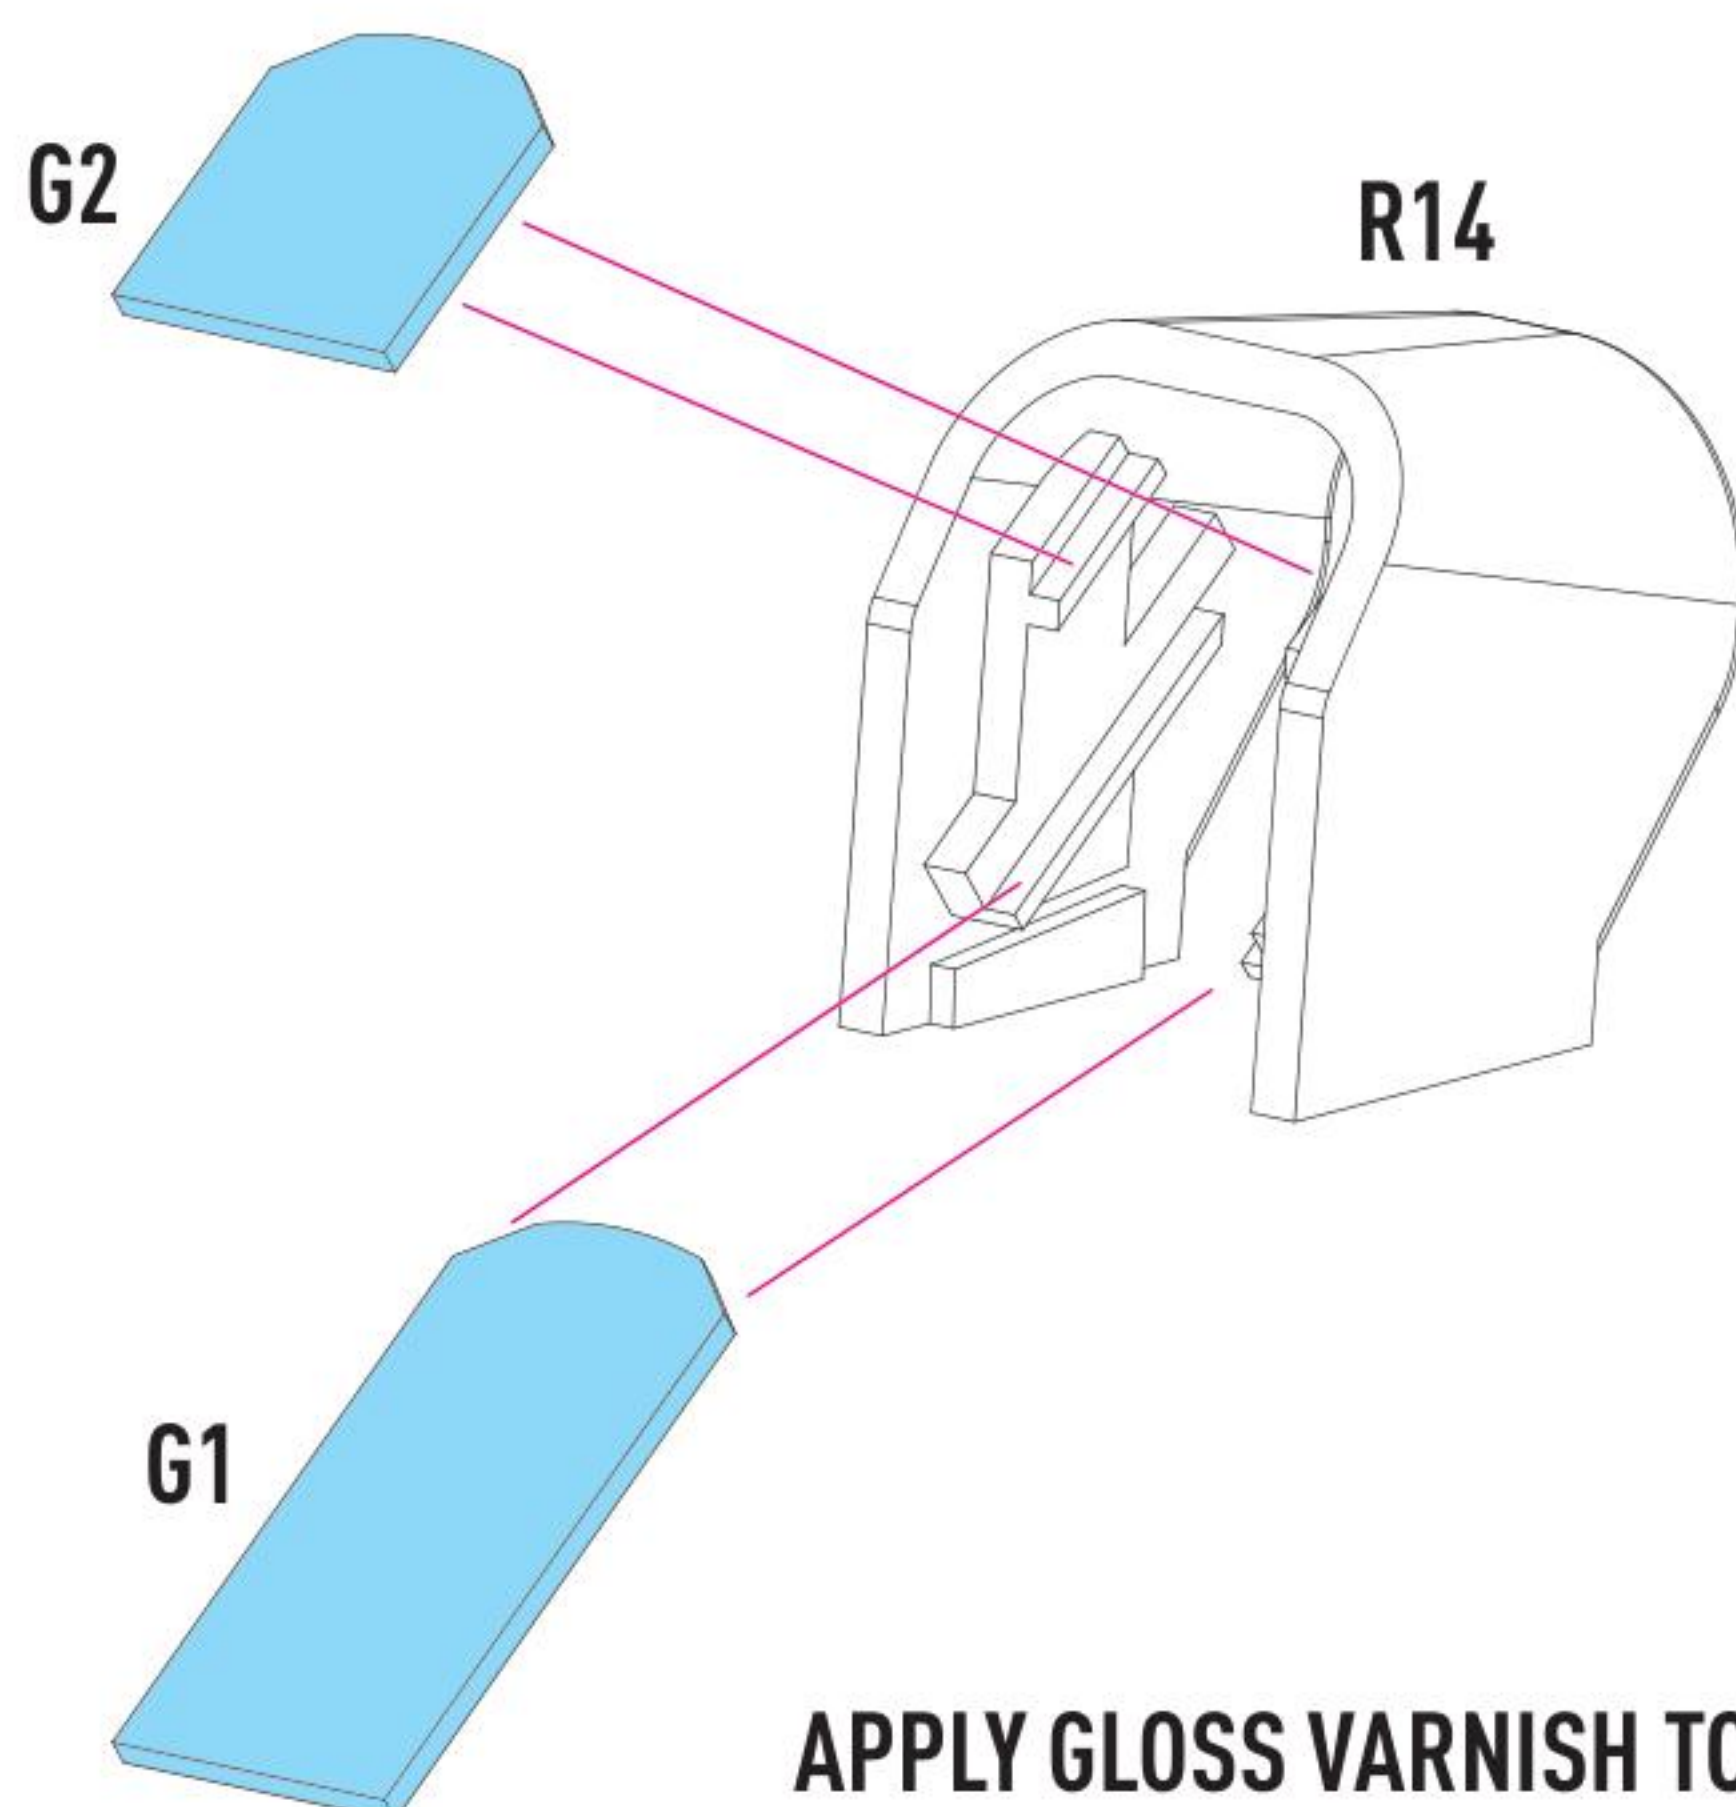


**APPLY GLOSS VARNISH TO ALL
TRANSPARENT PARTS BEFORE INSTALLATION**


4

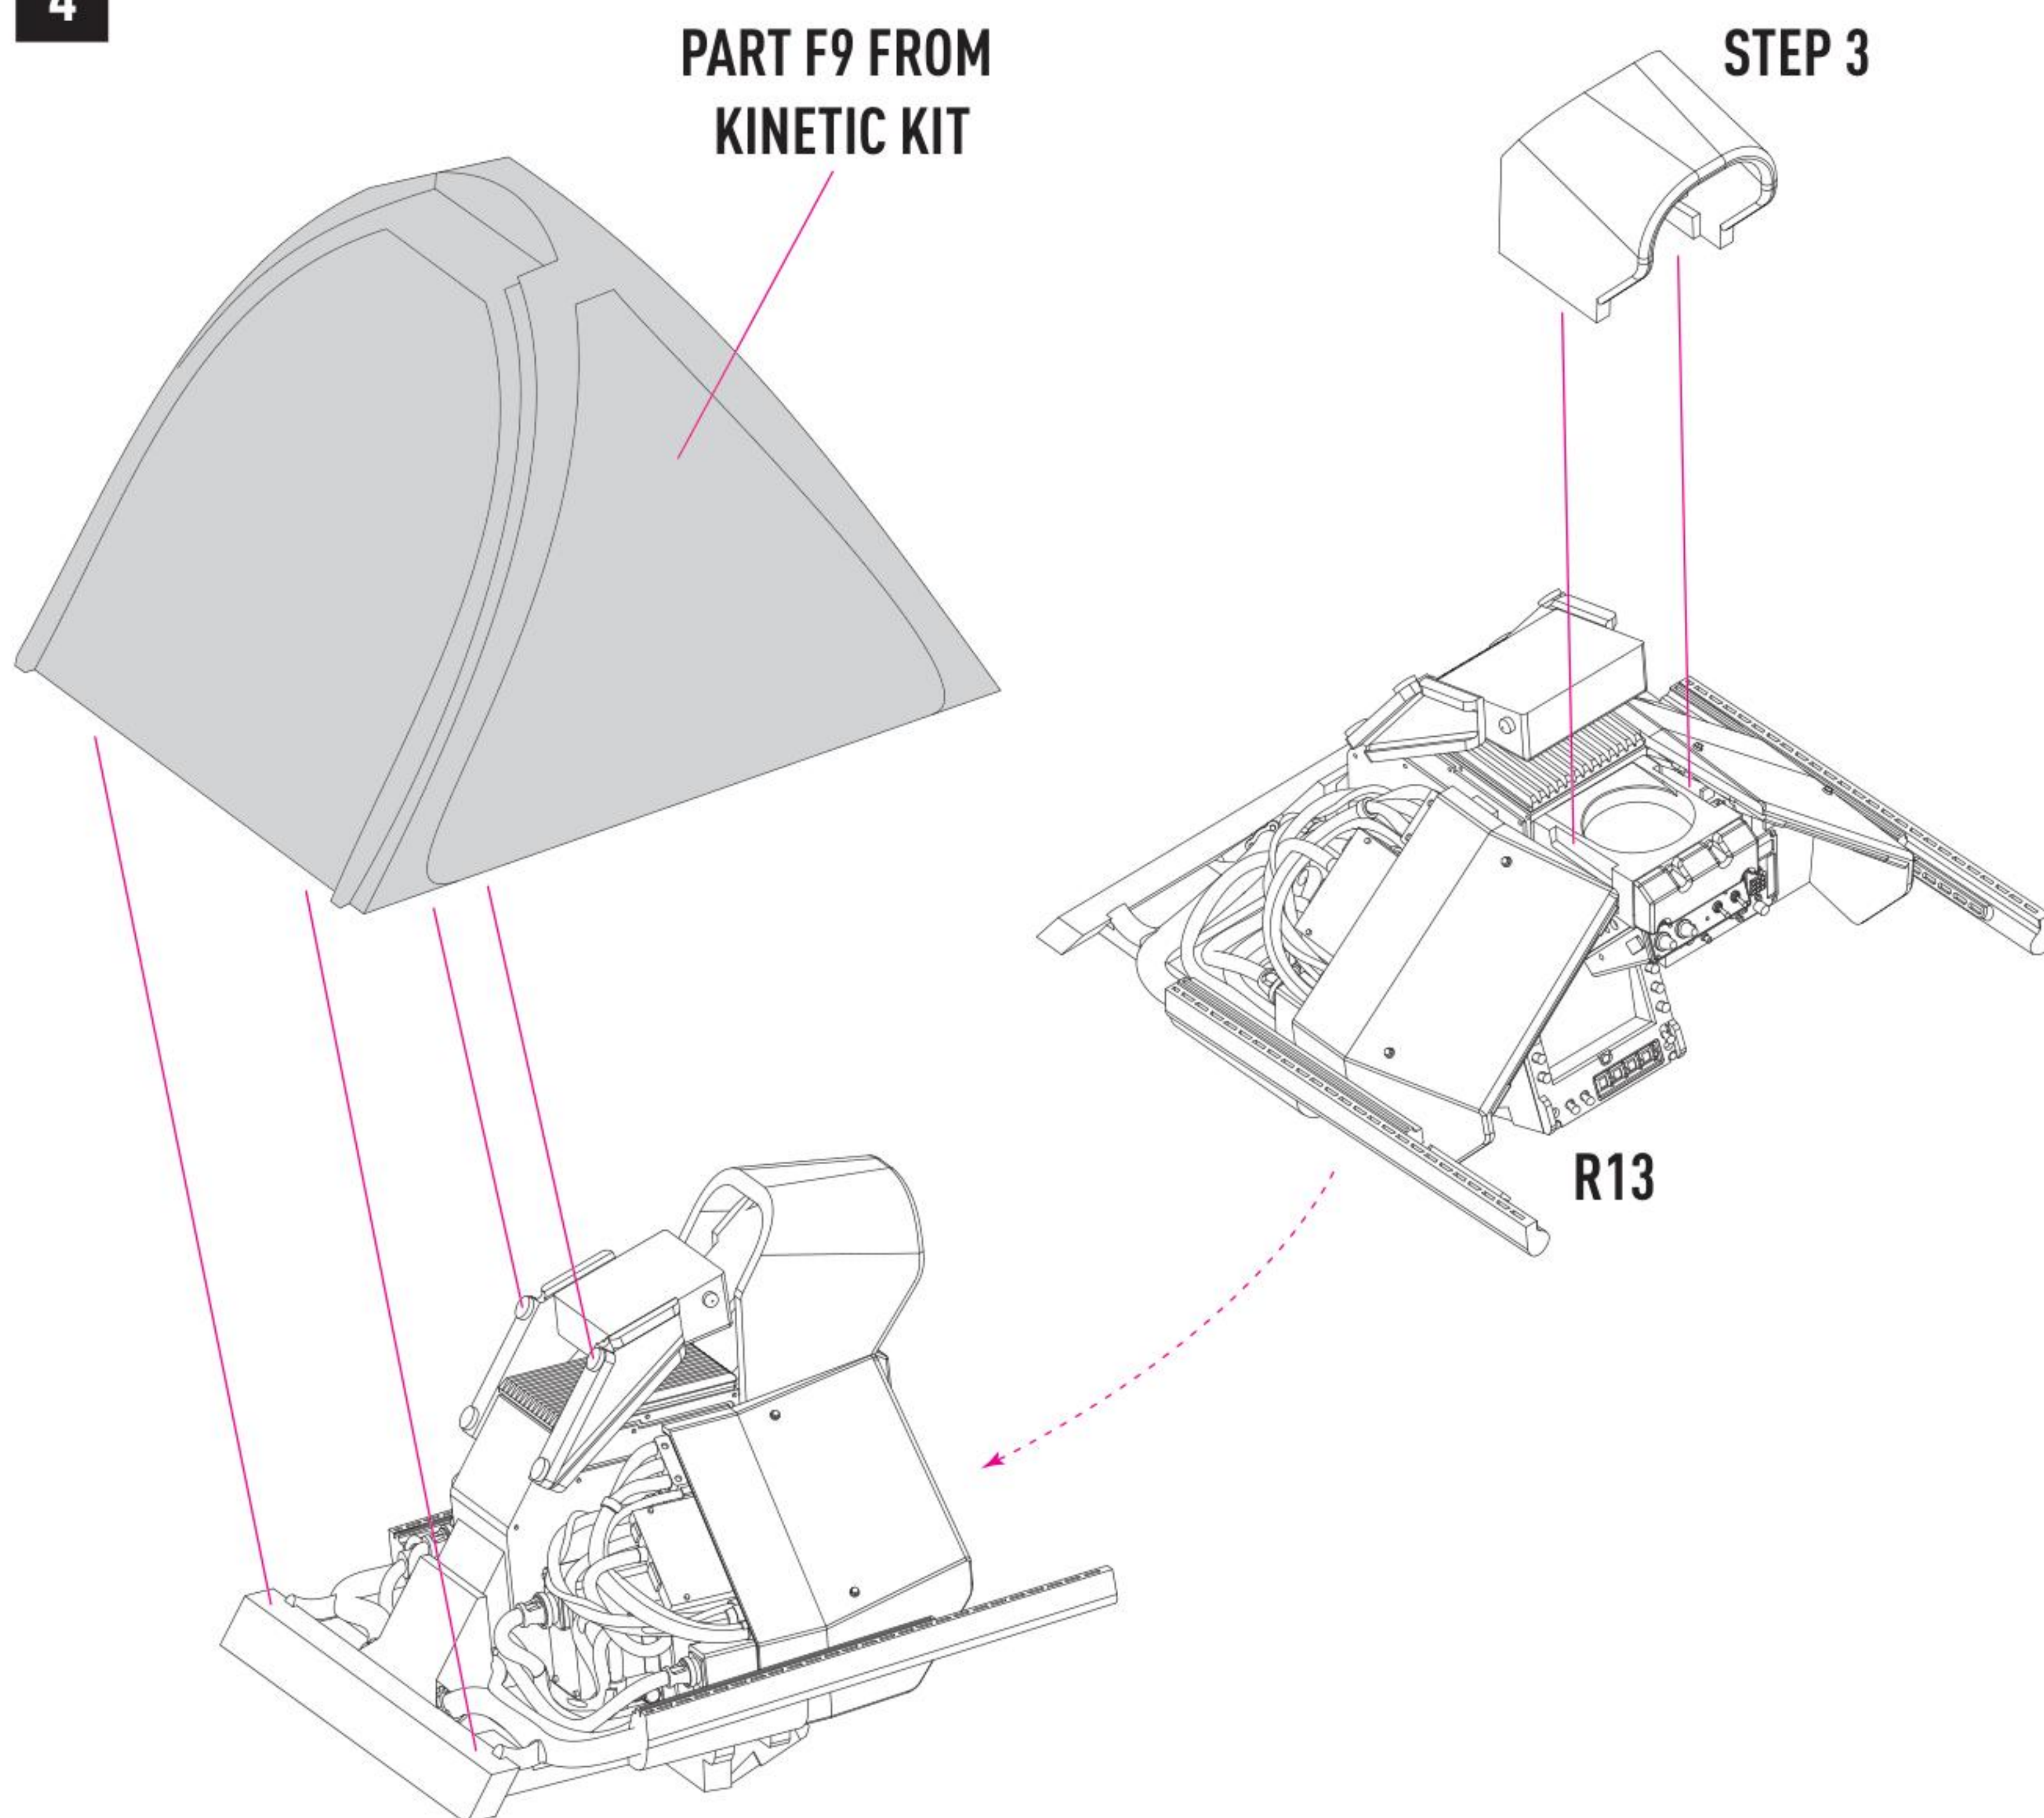


5

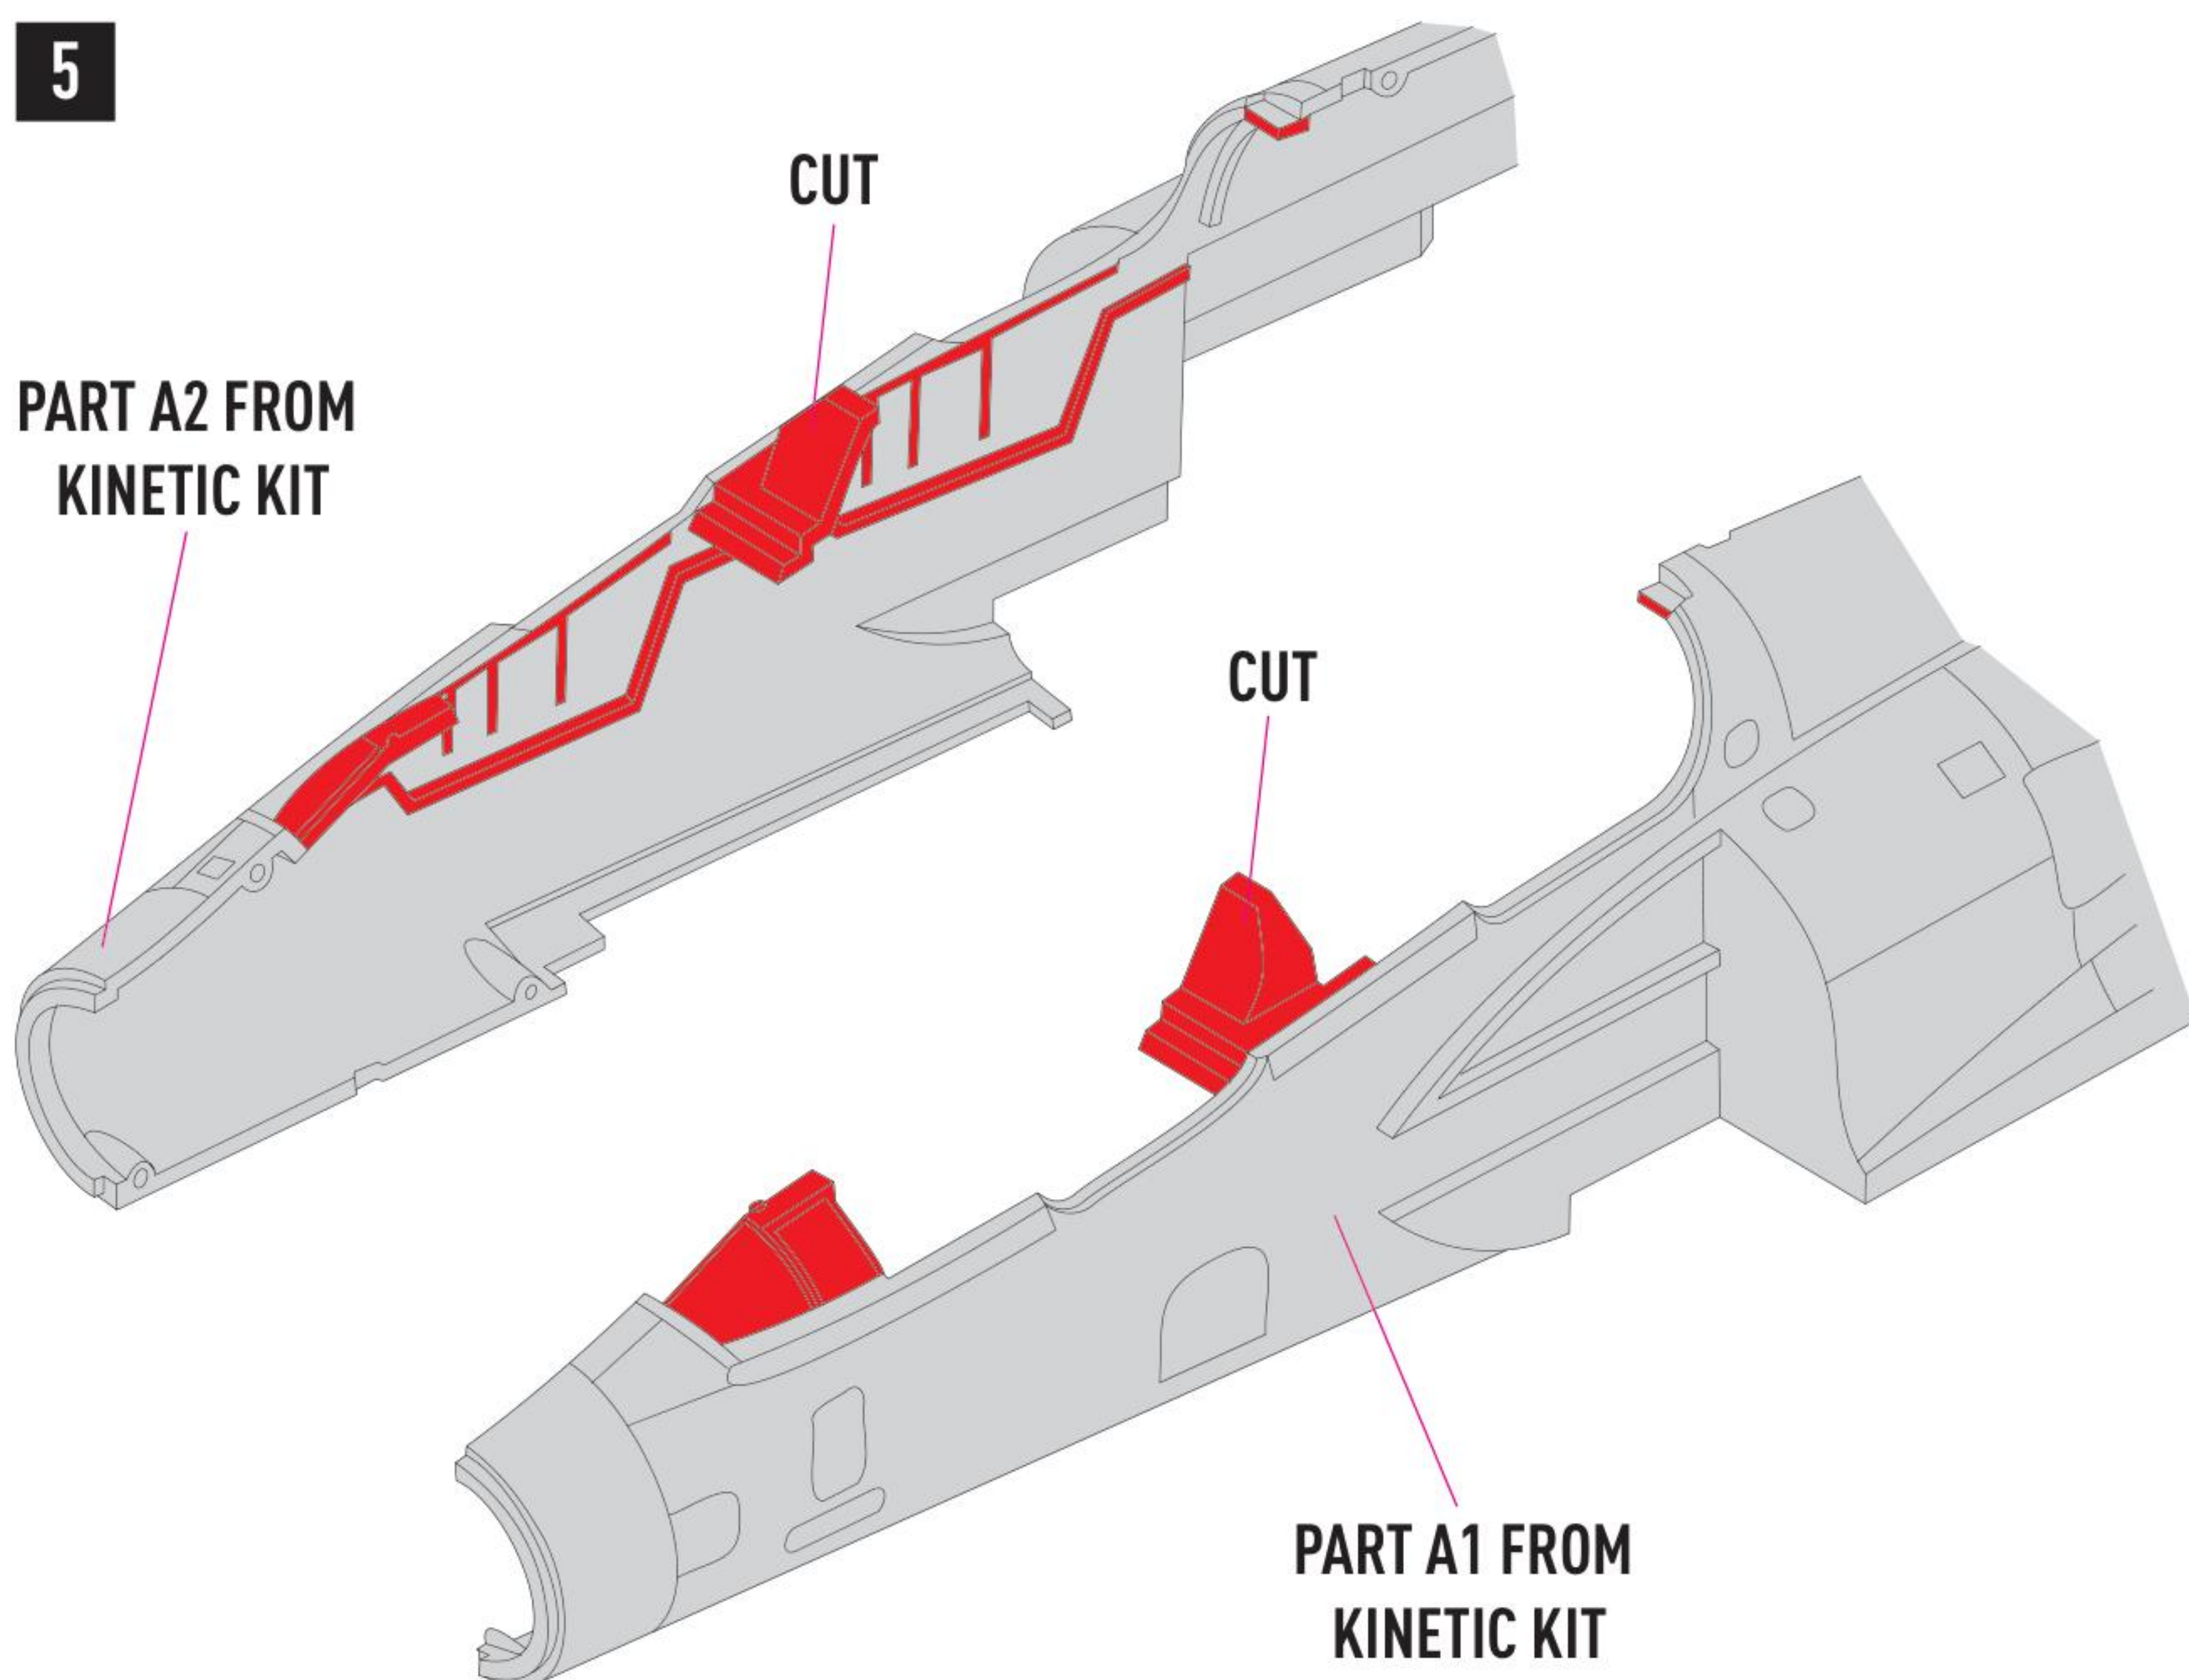


6

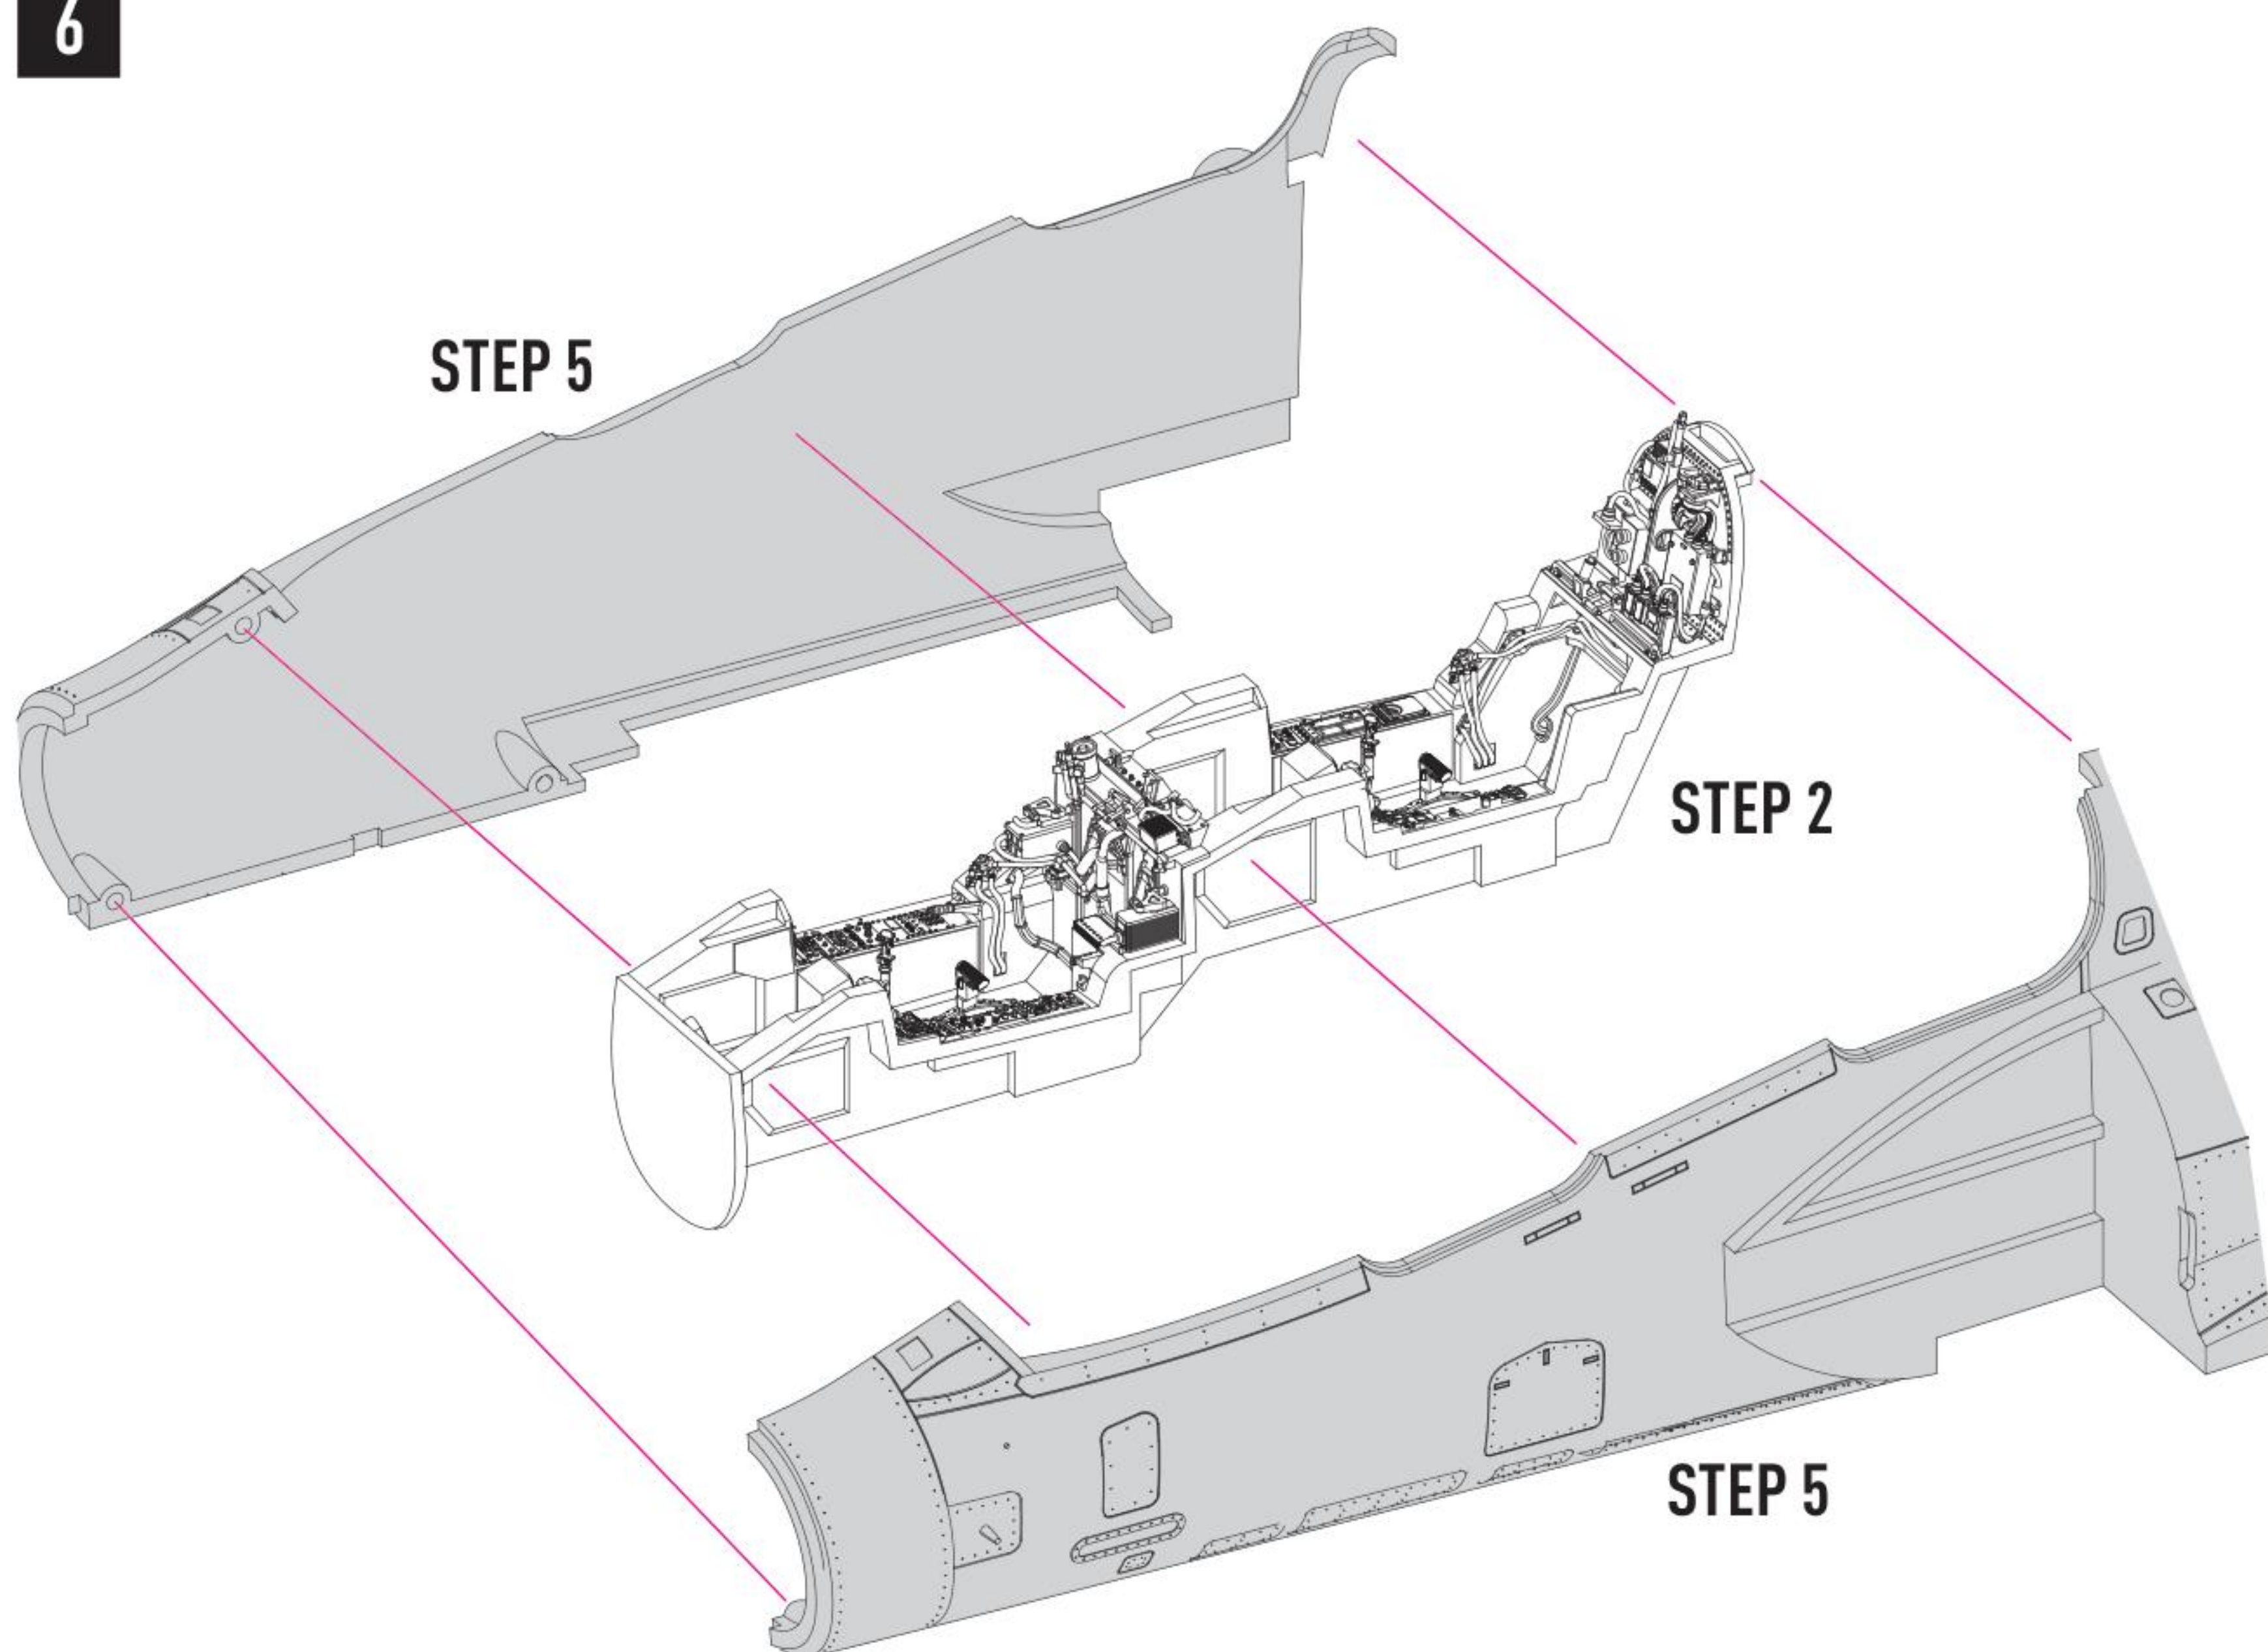


7 RIGHT SIDE

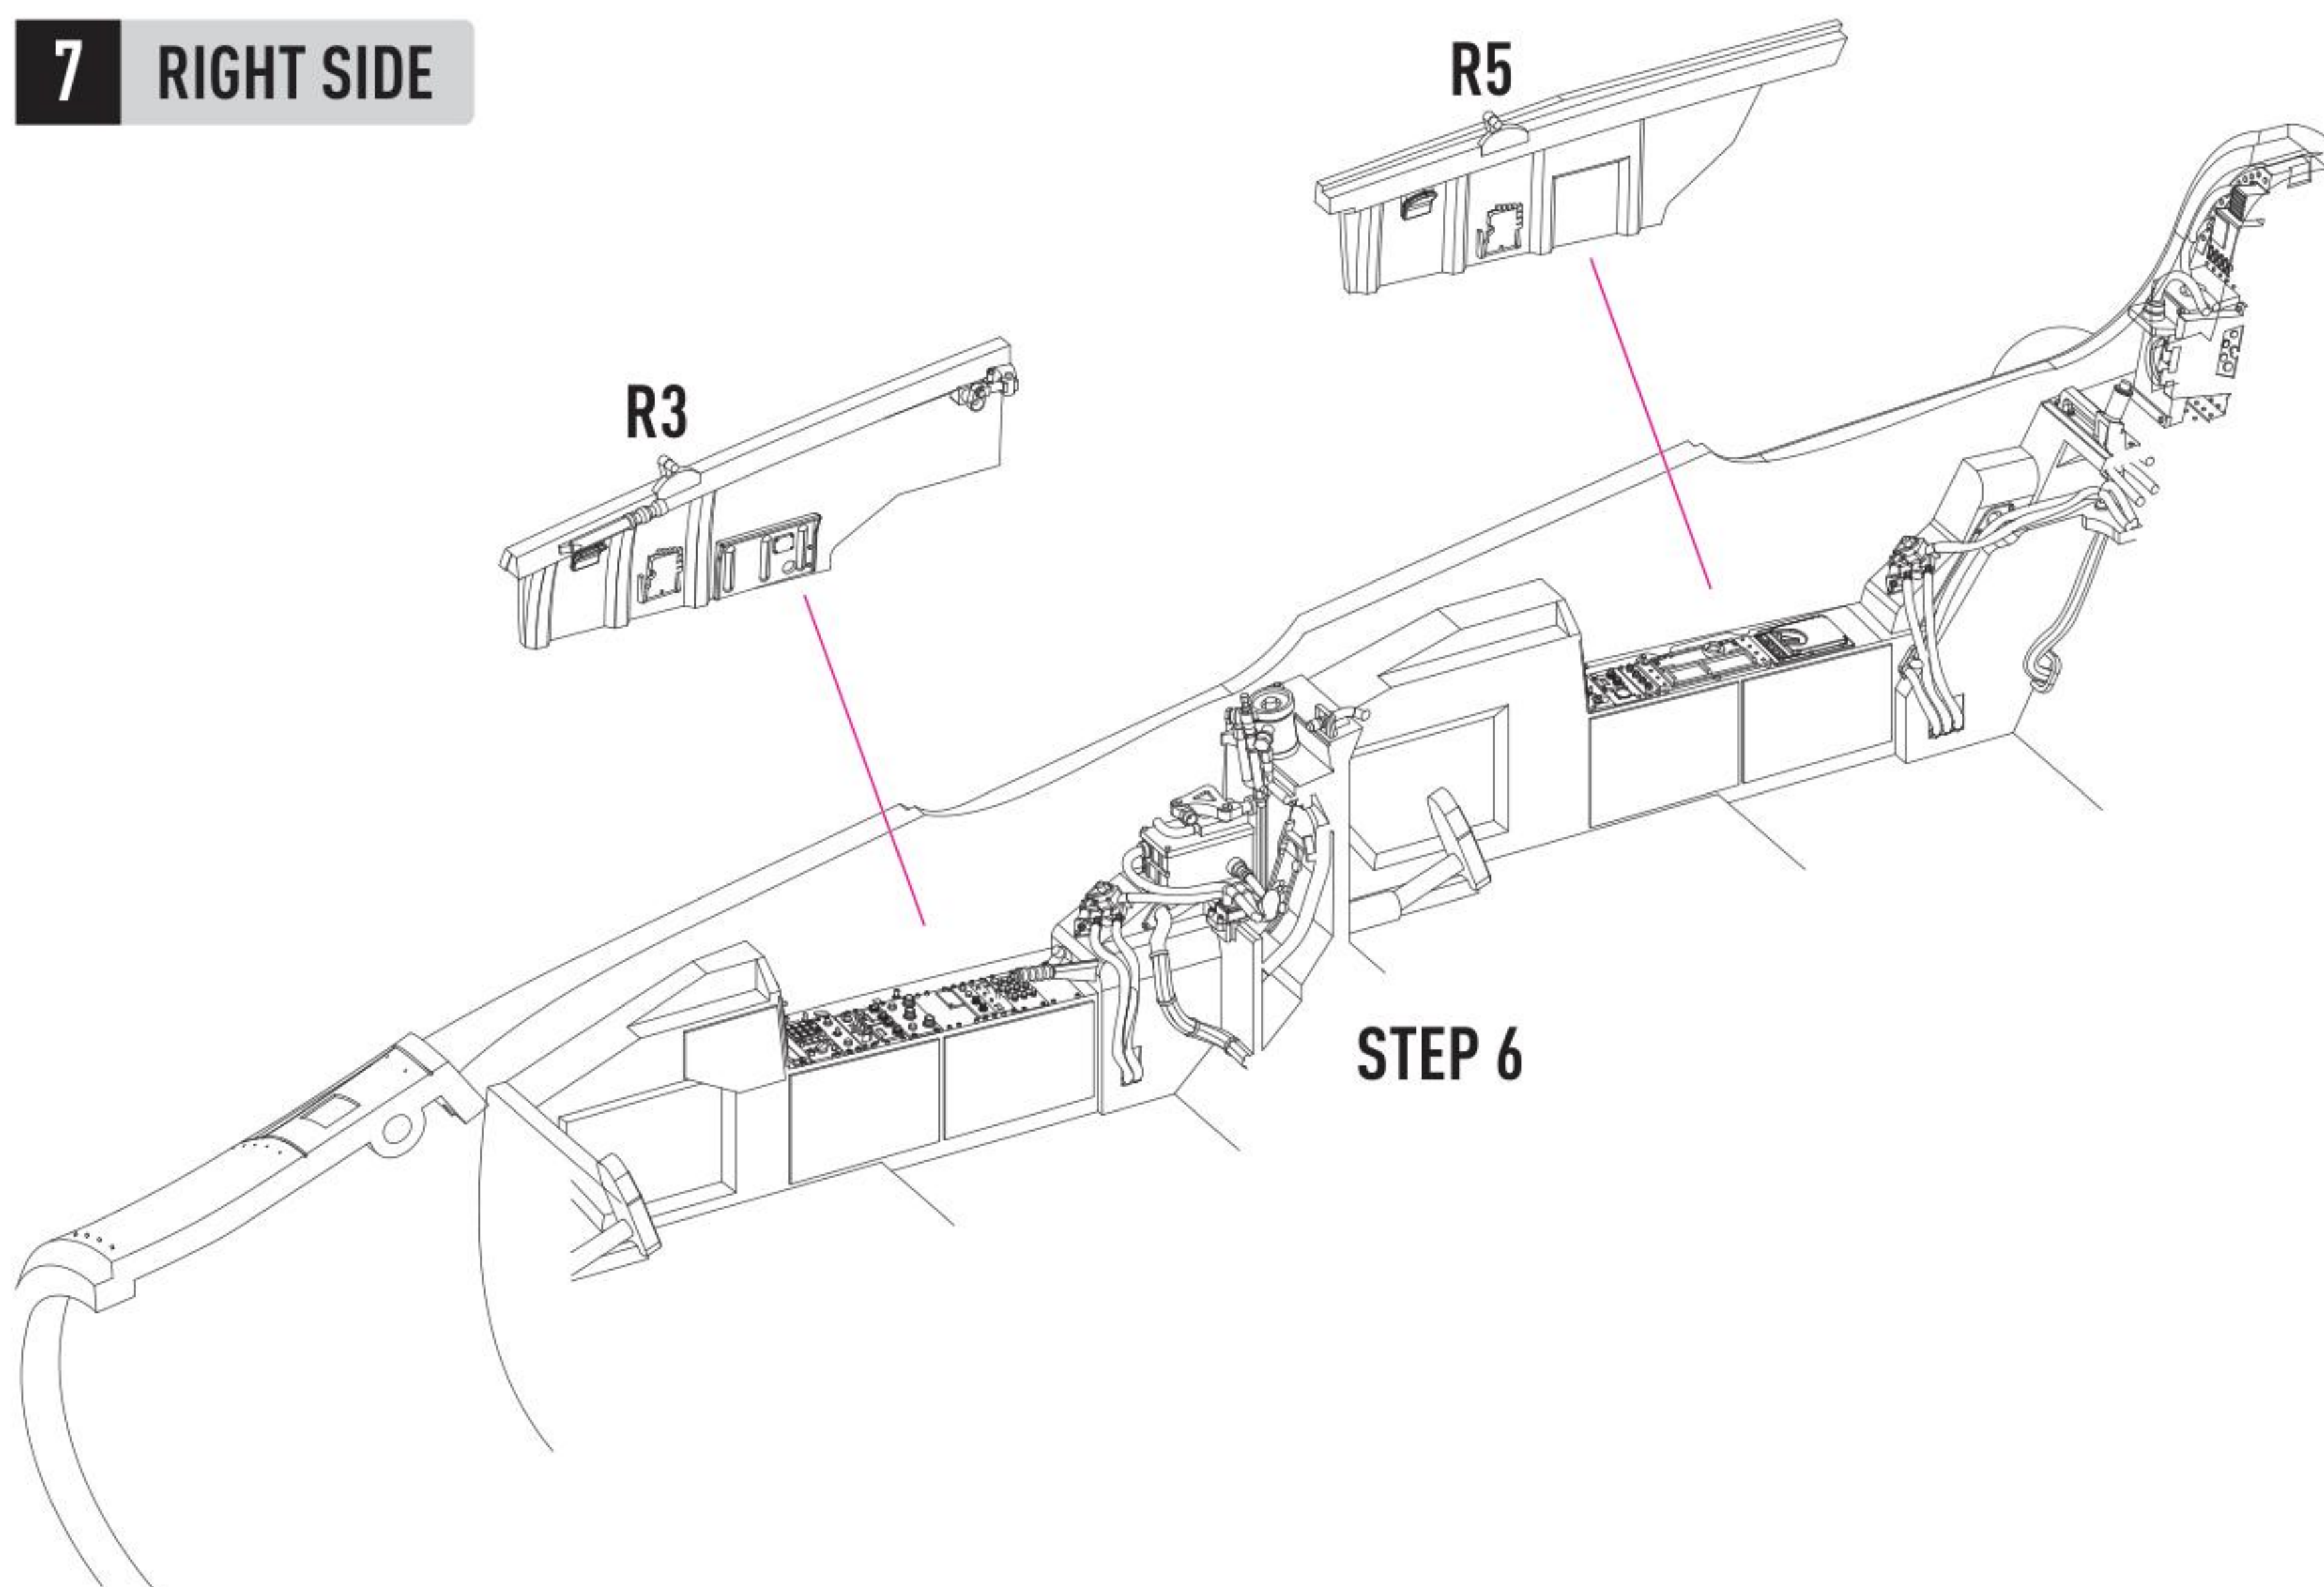


8 LEFT SIDE

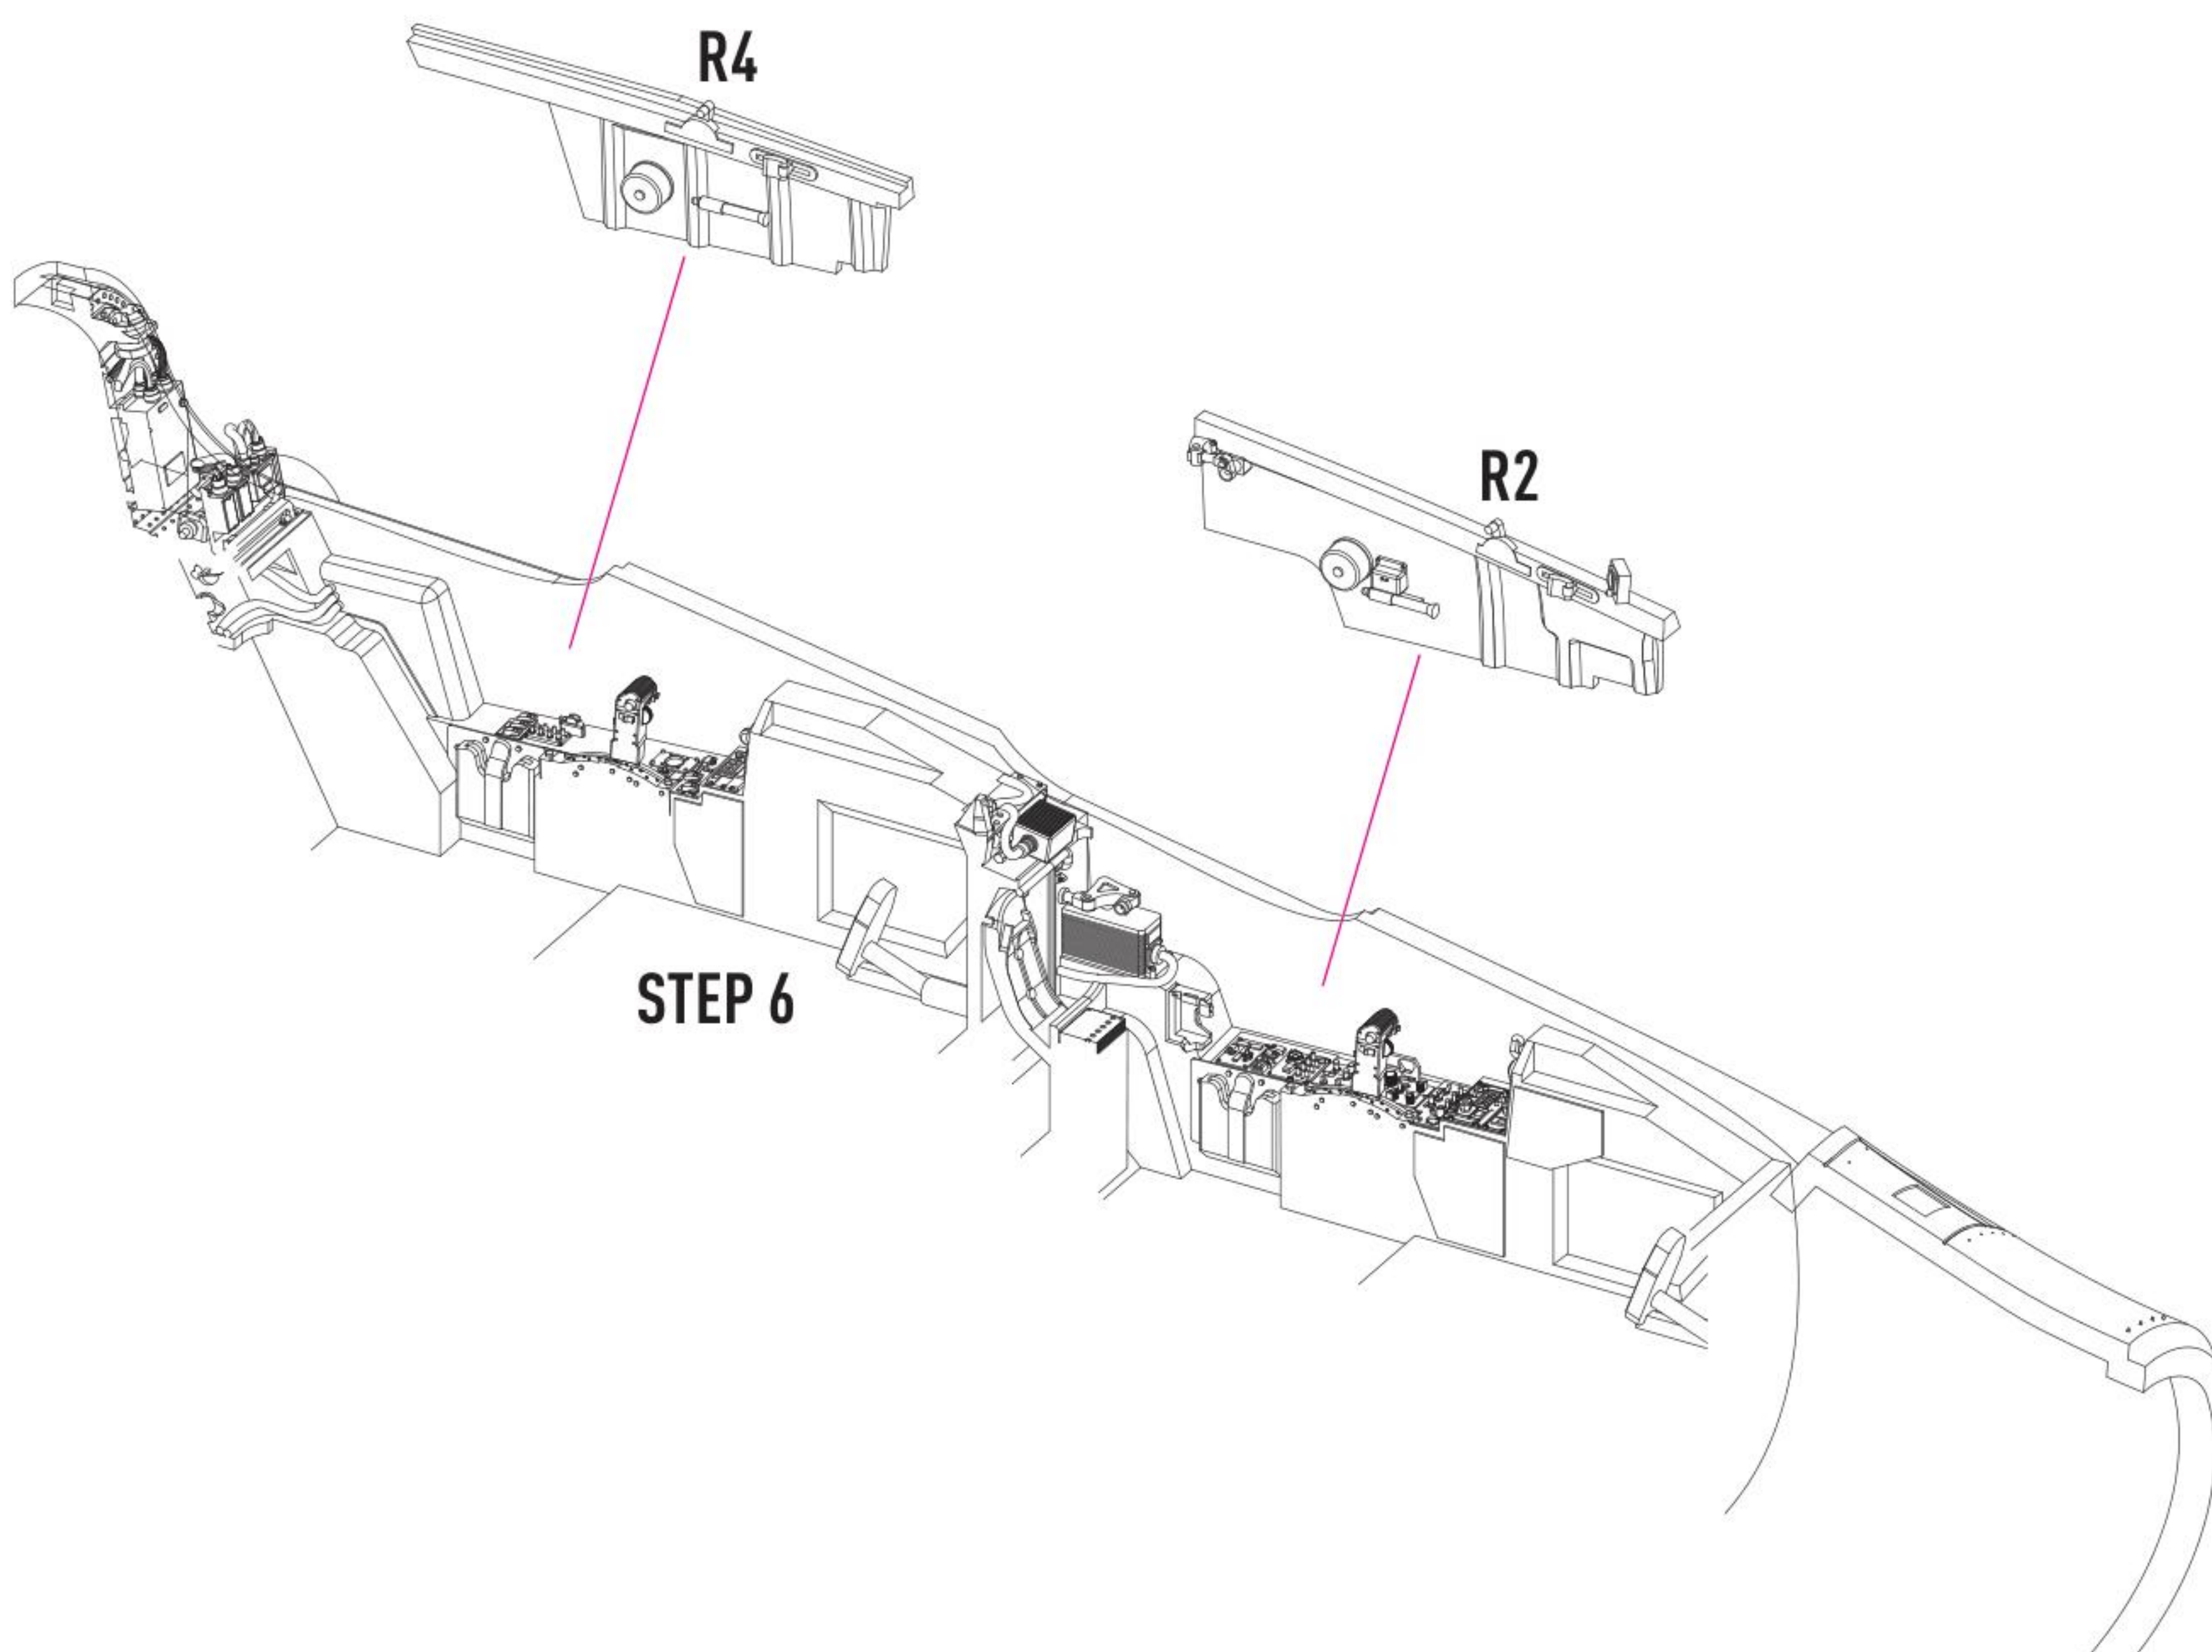


9

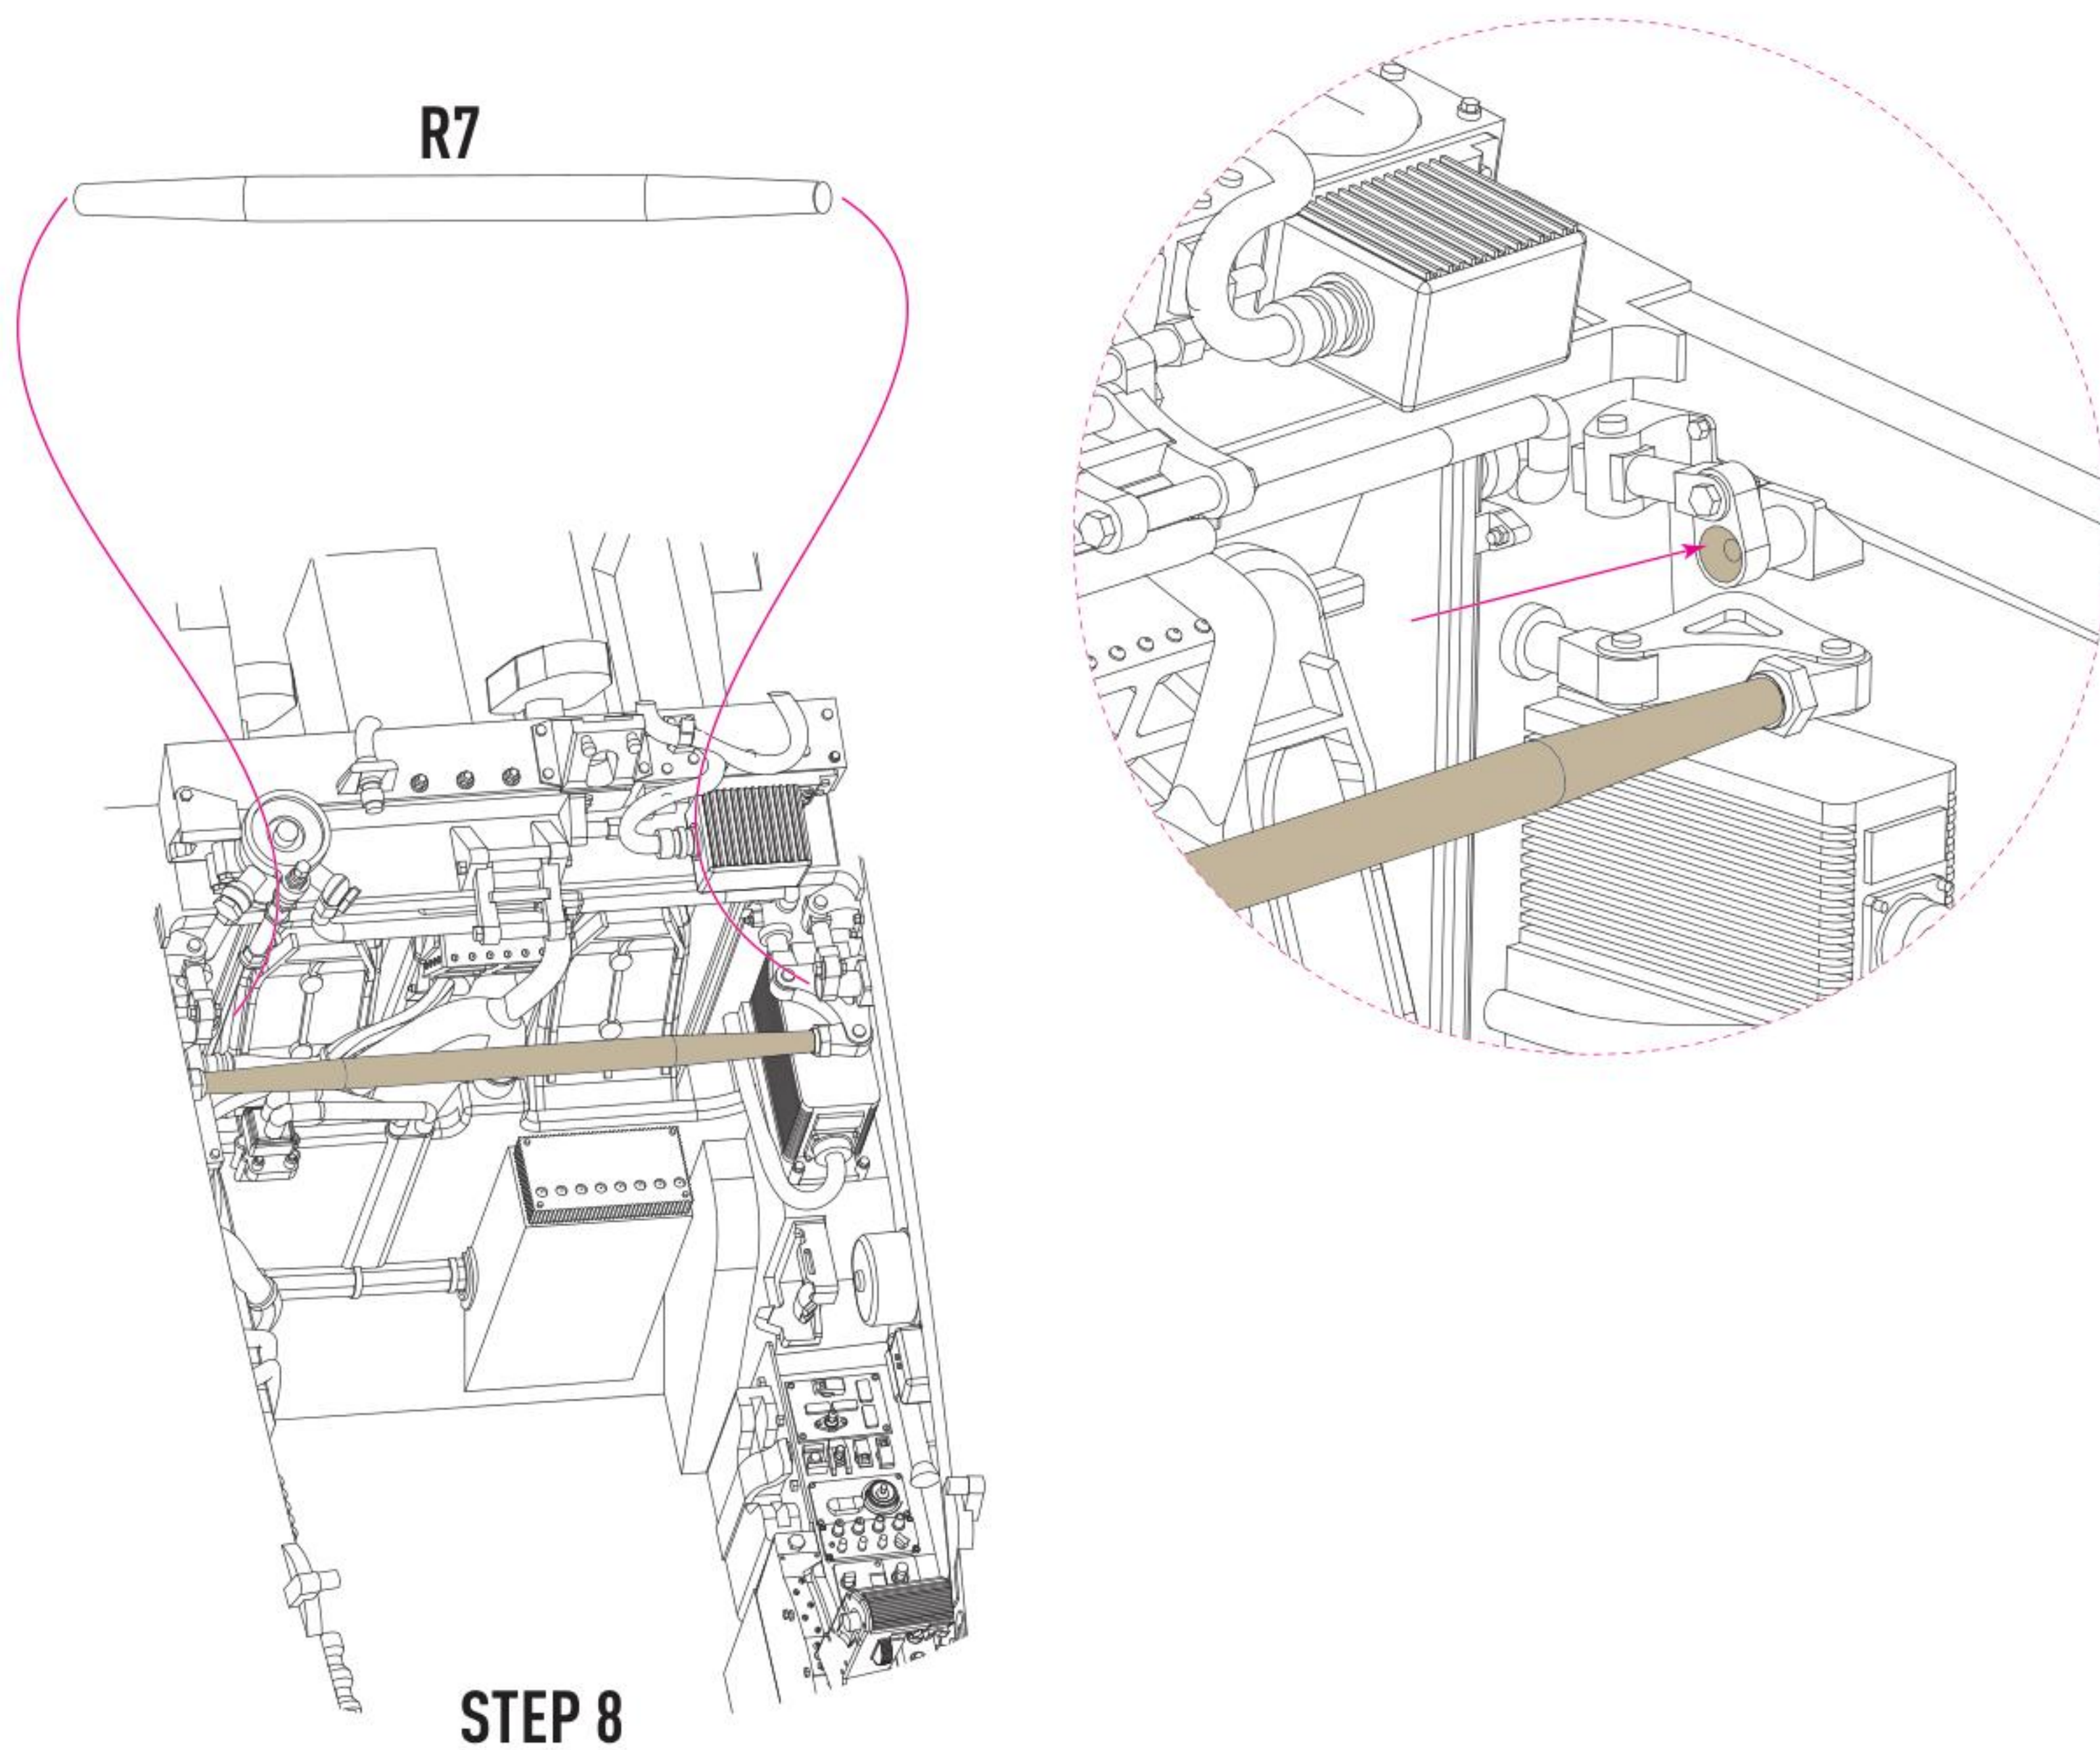


10

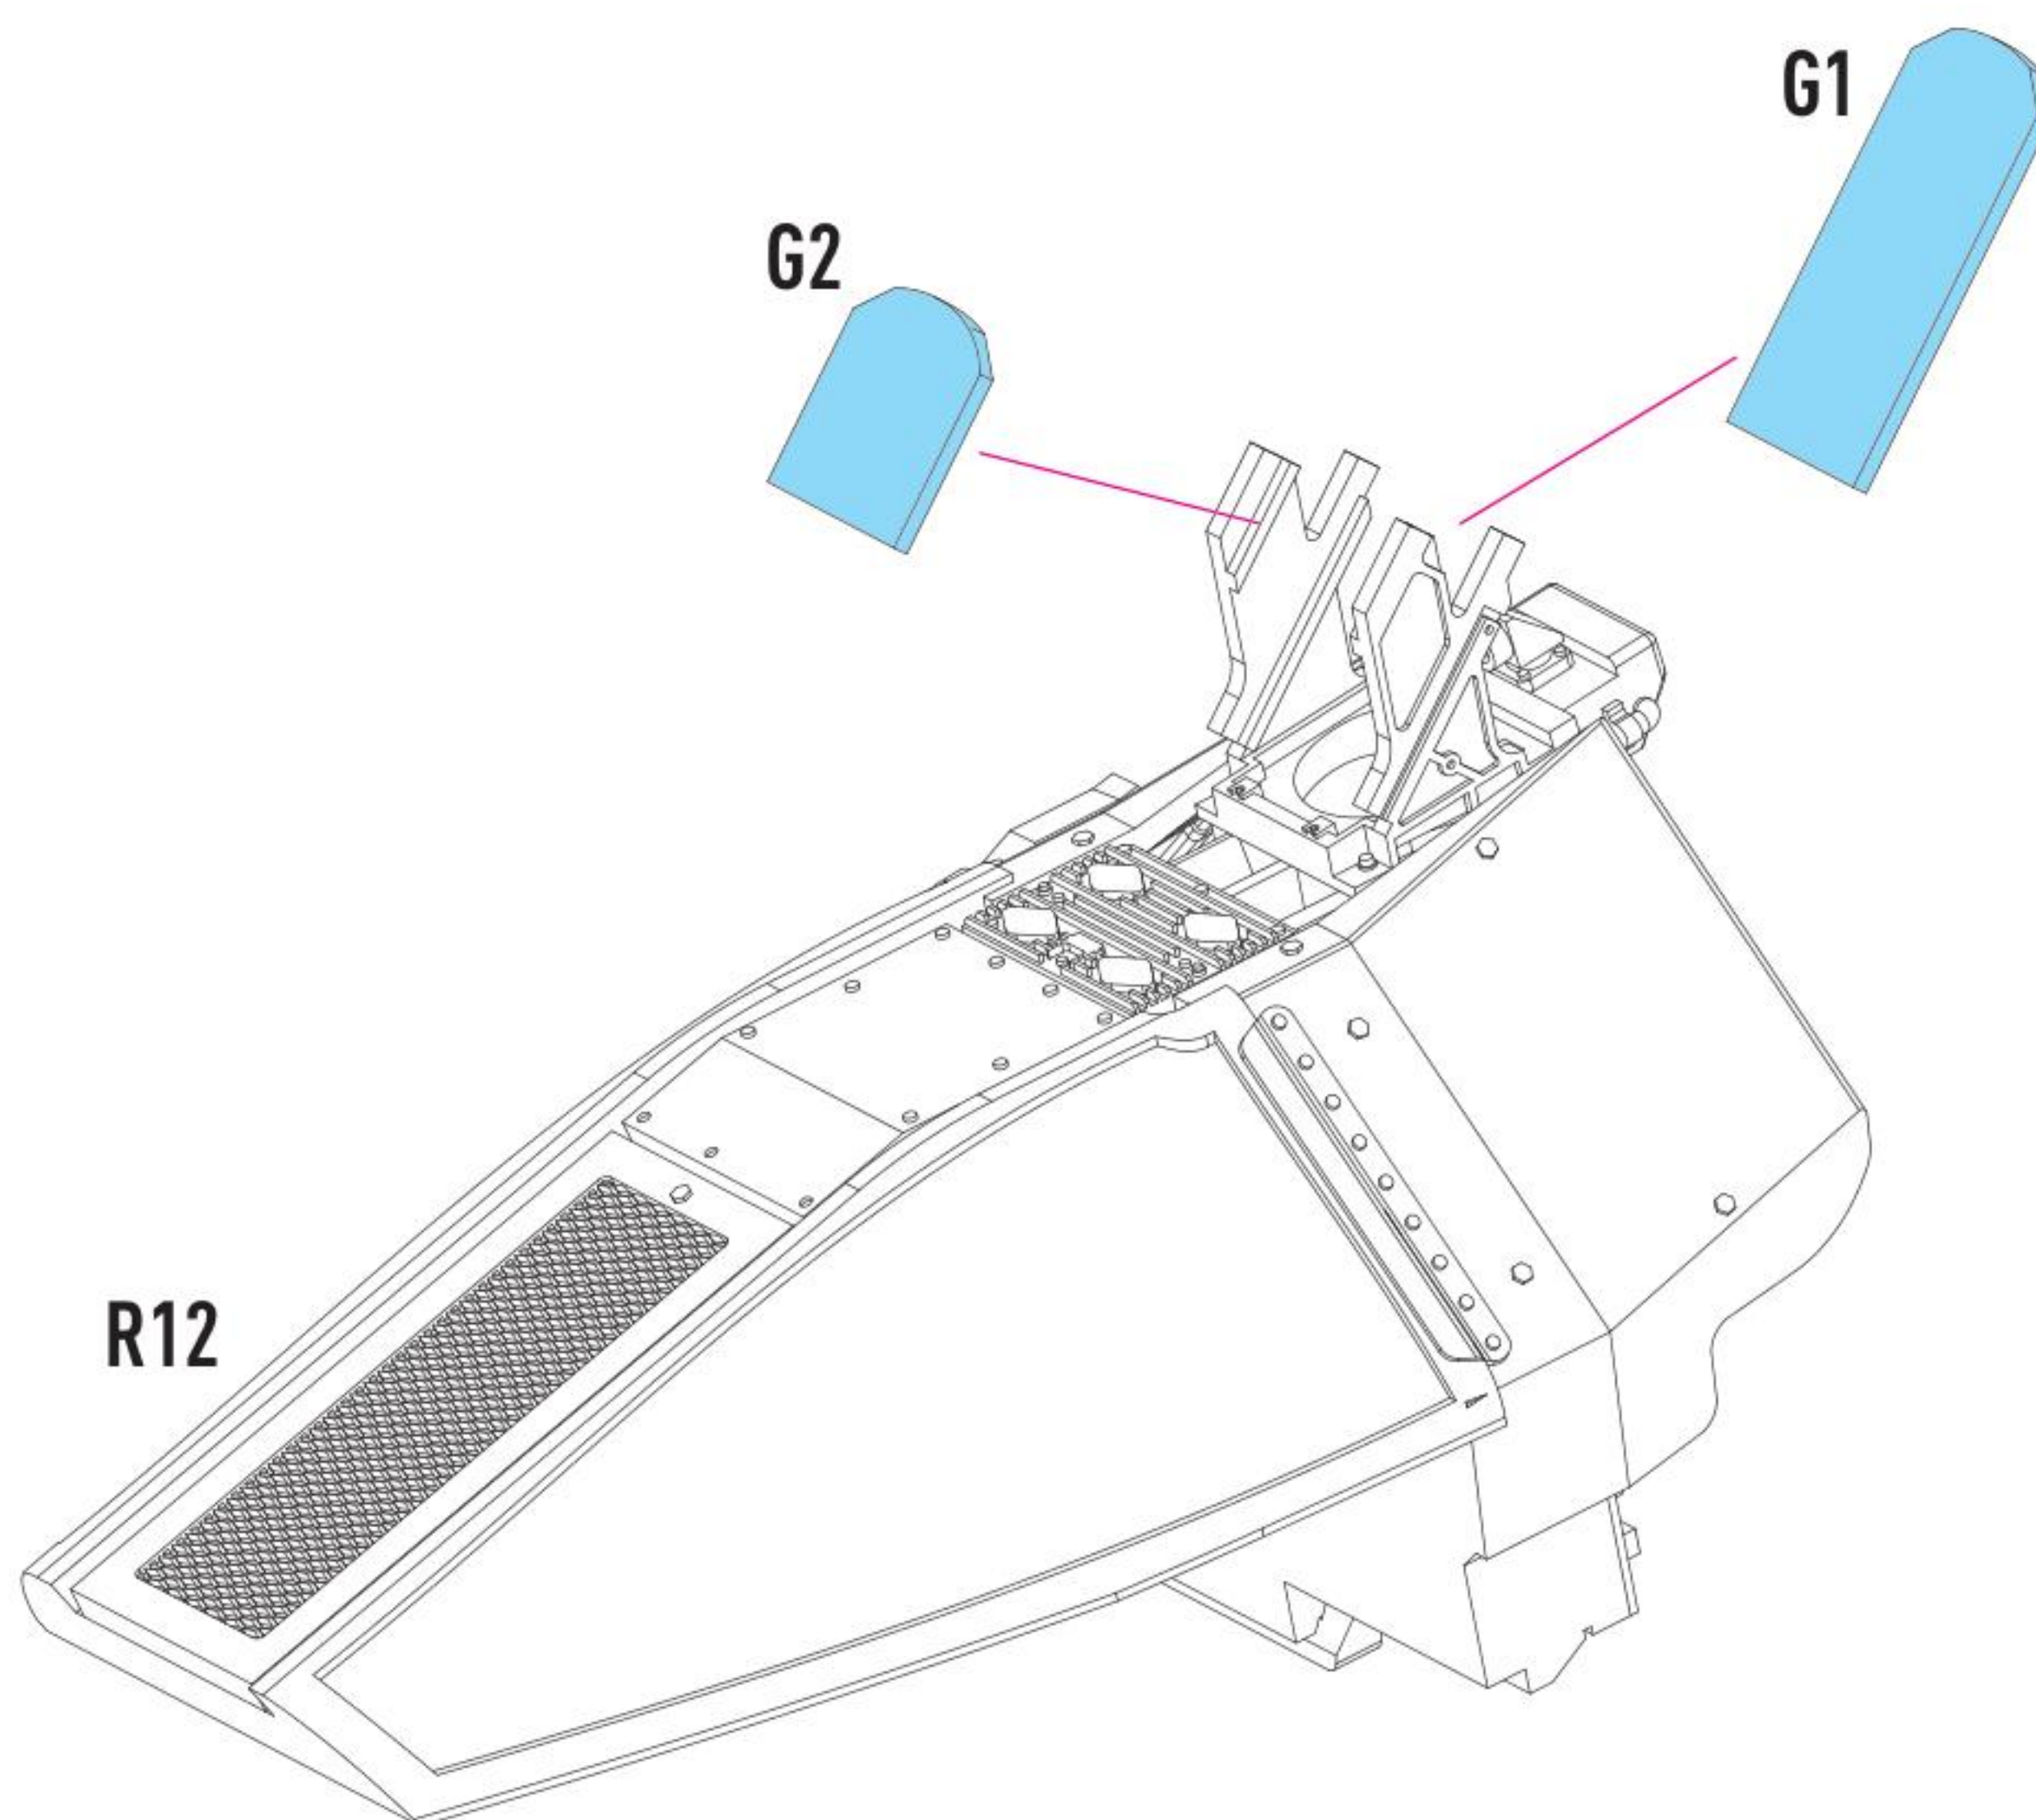


11

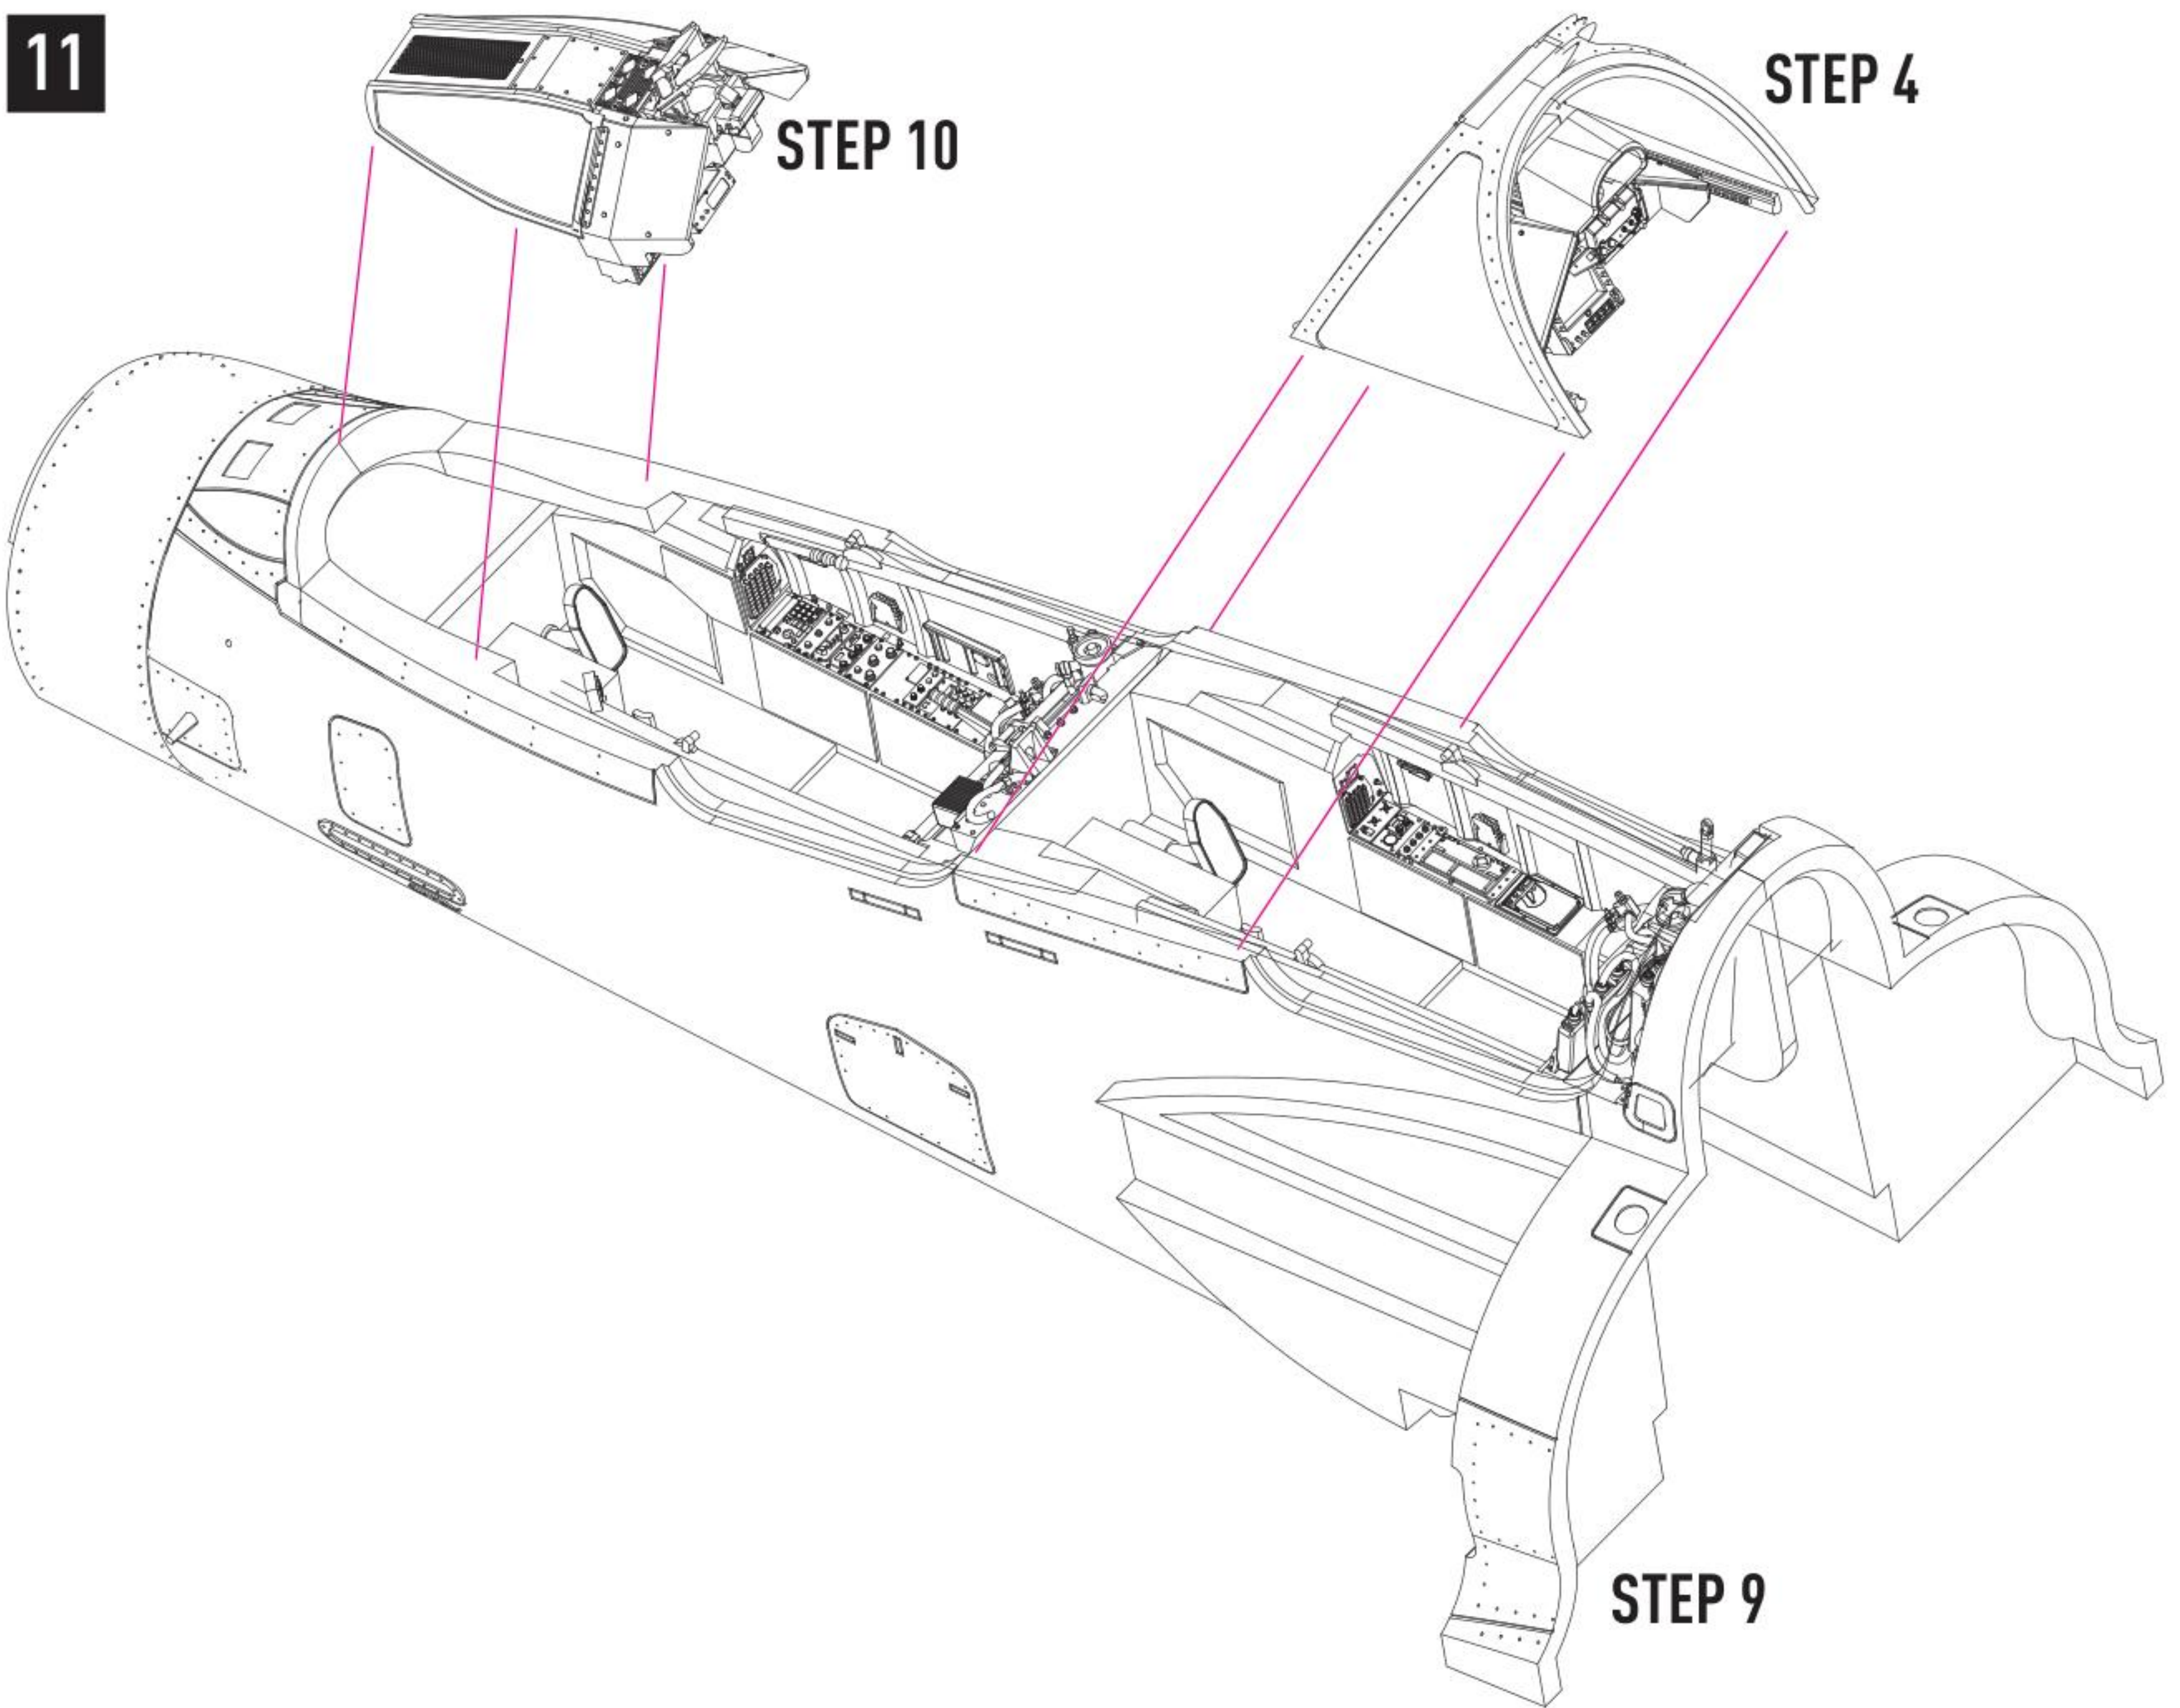


12


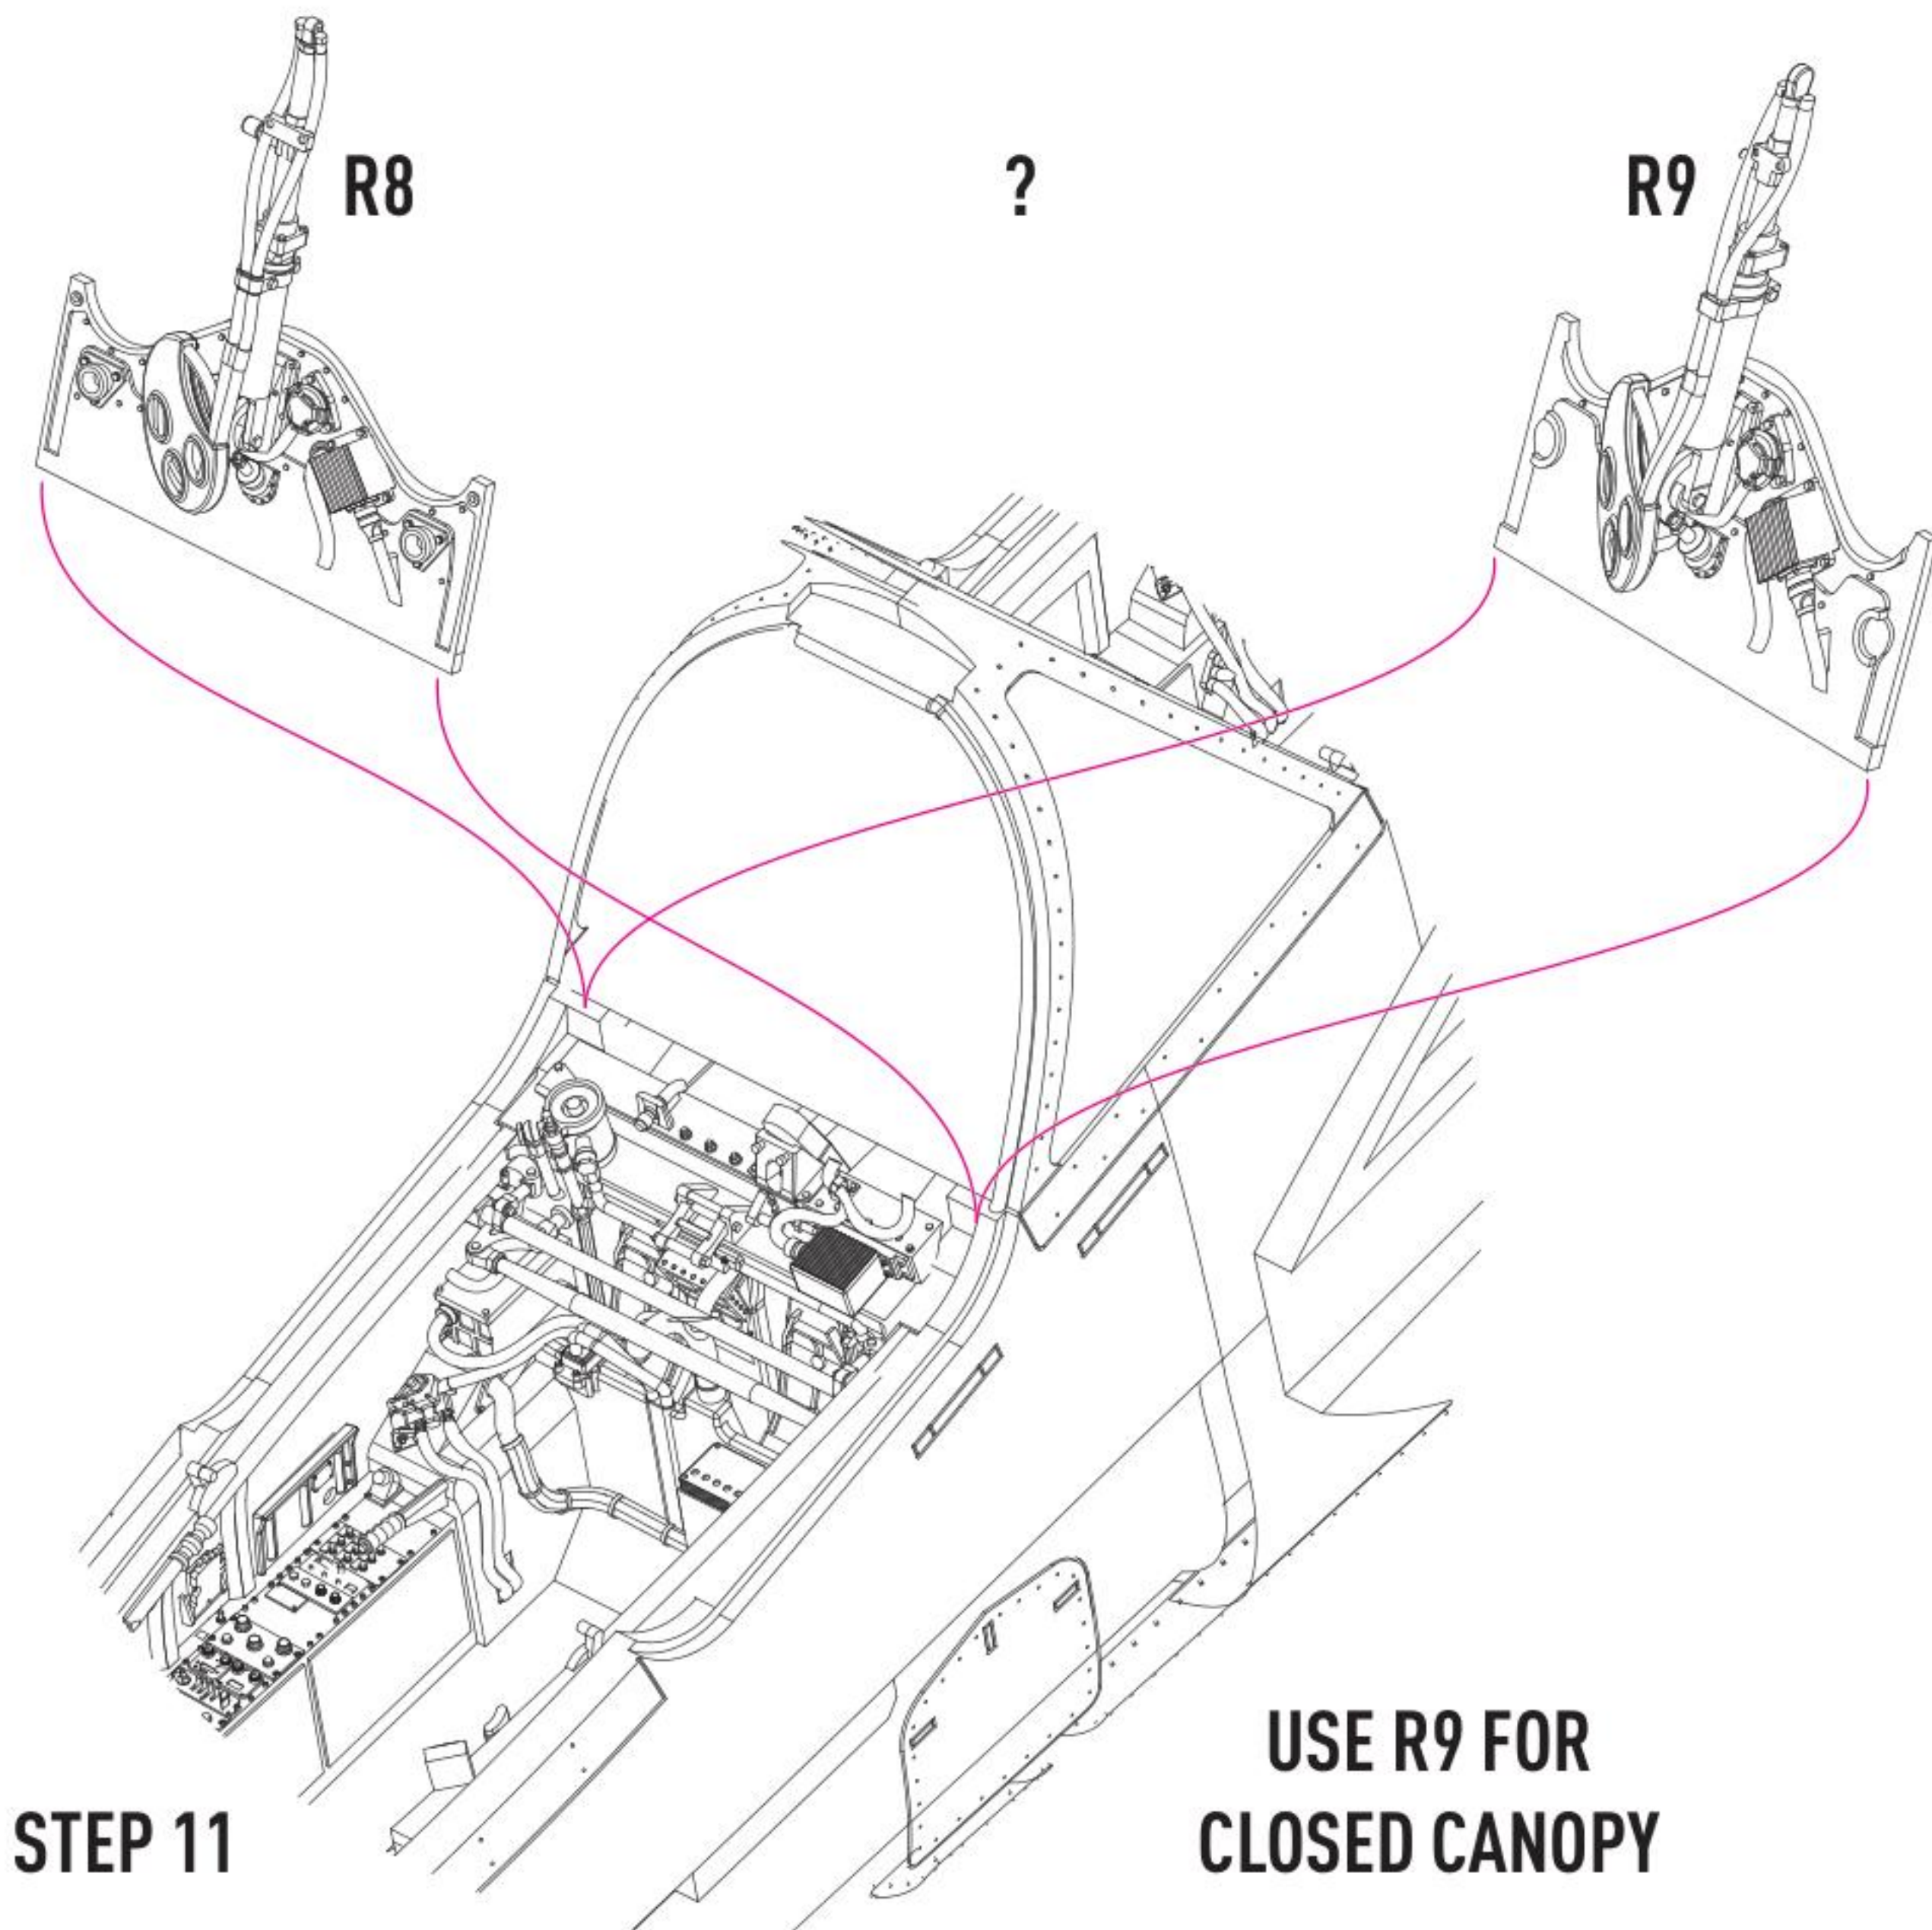


13

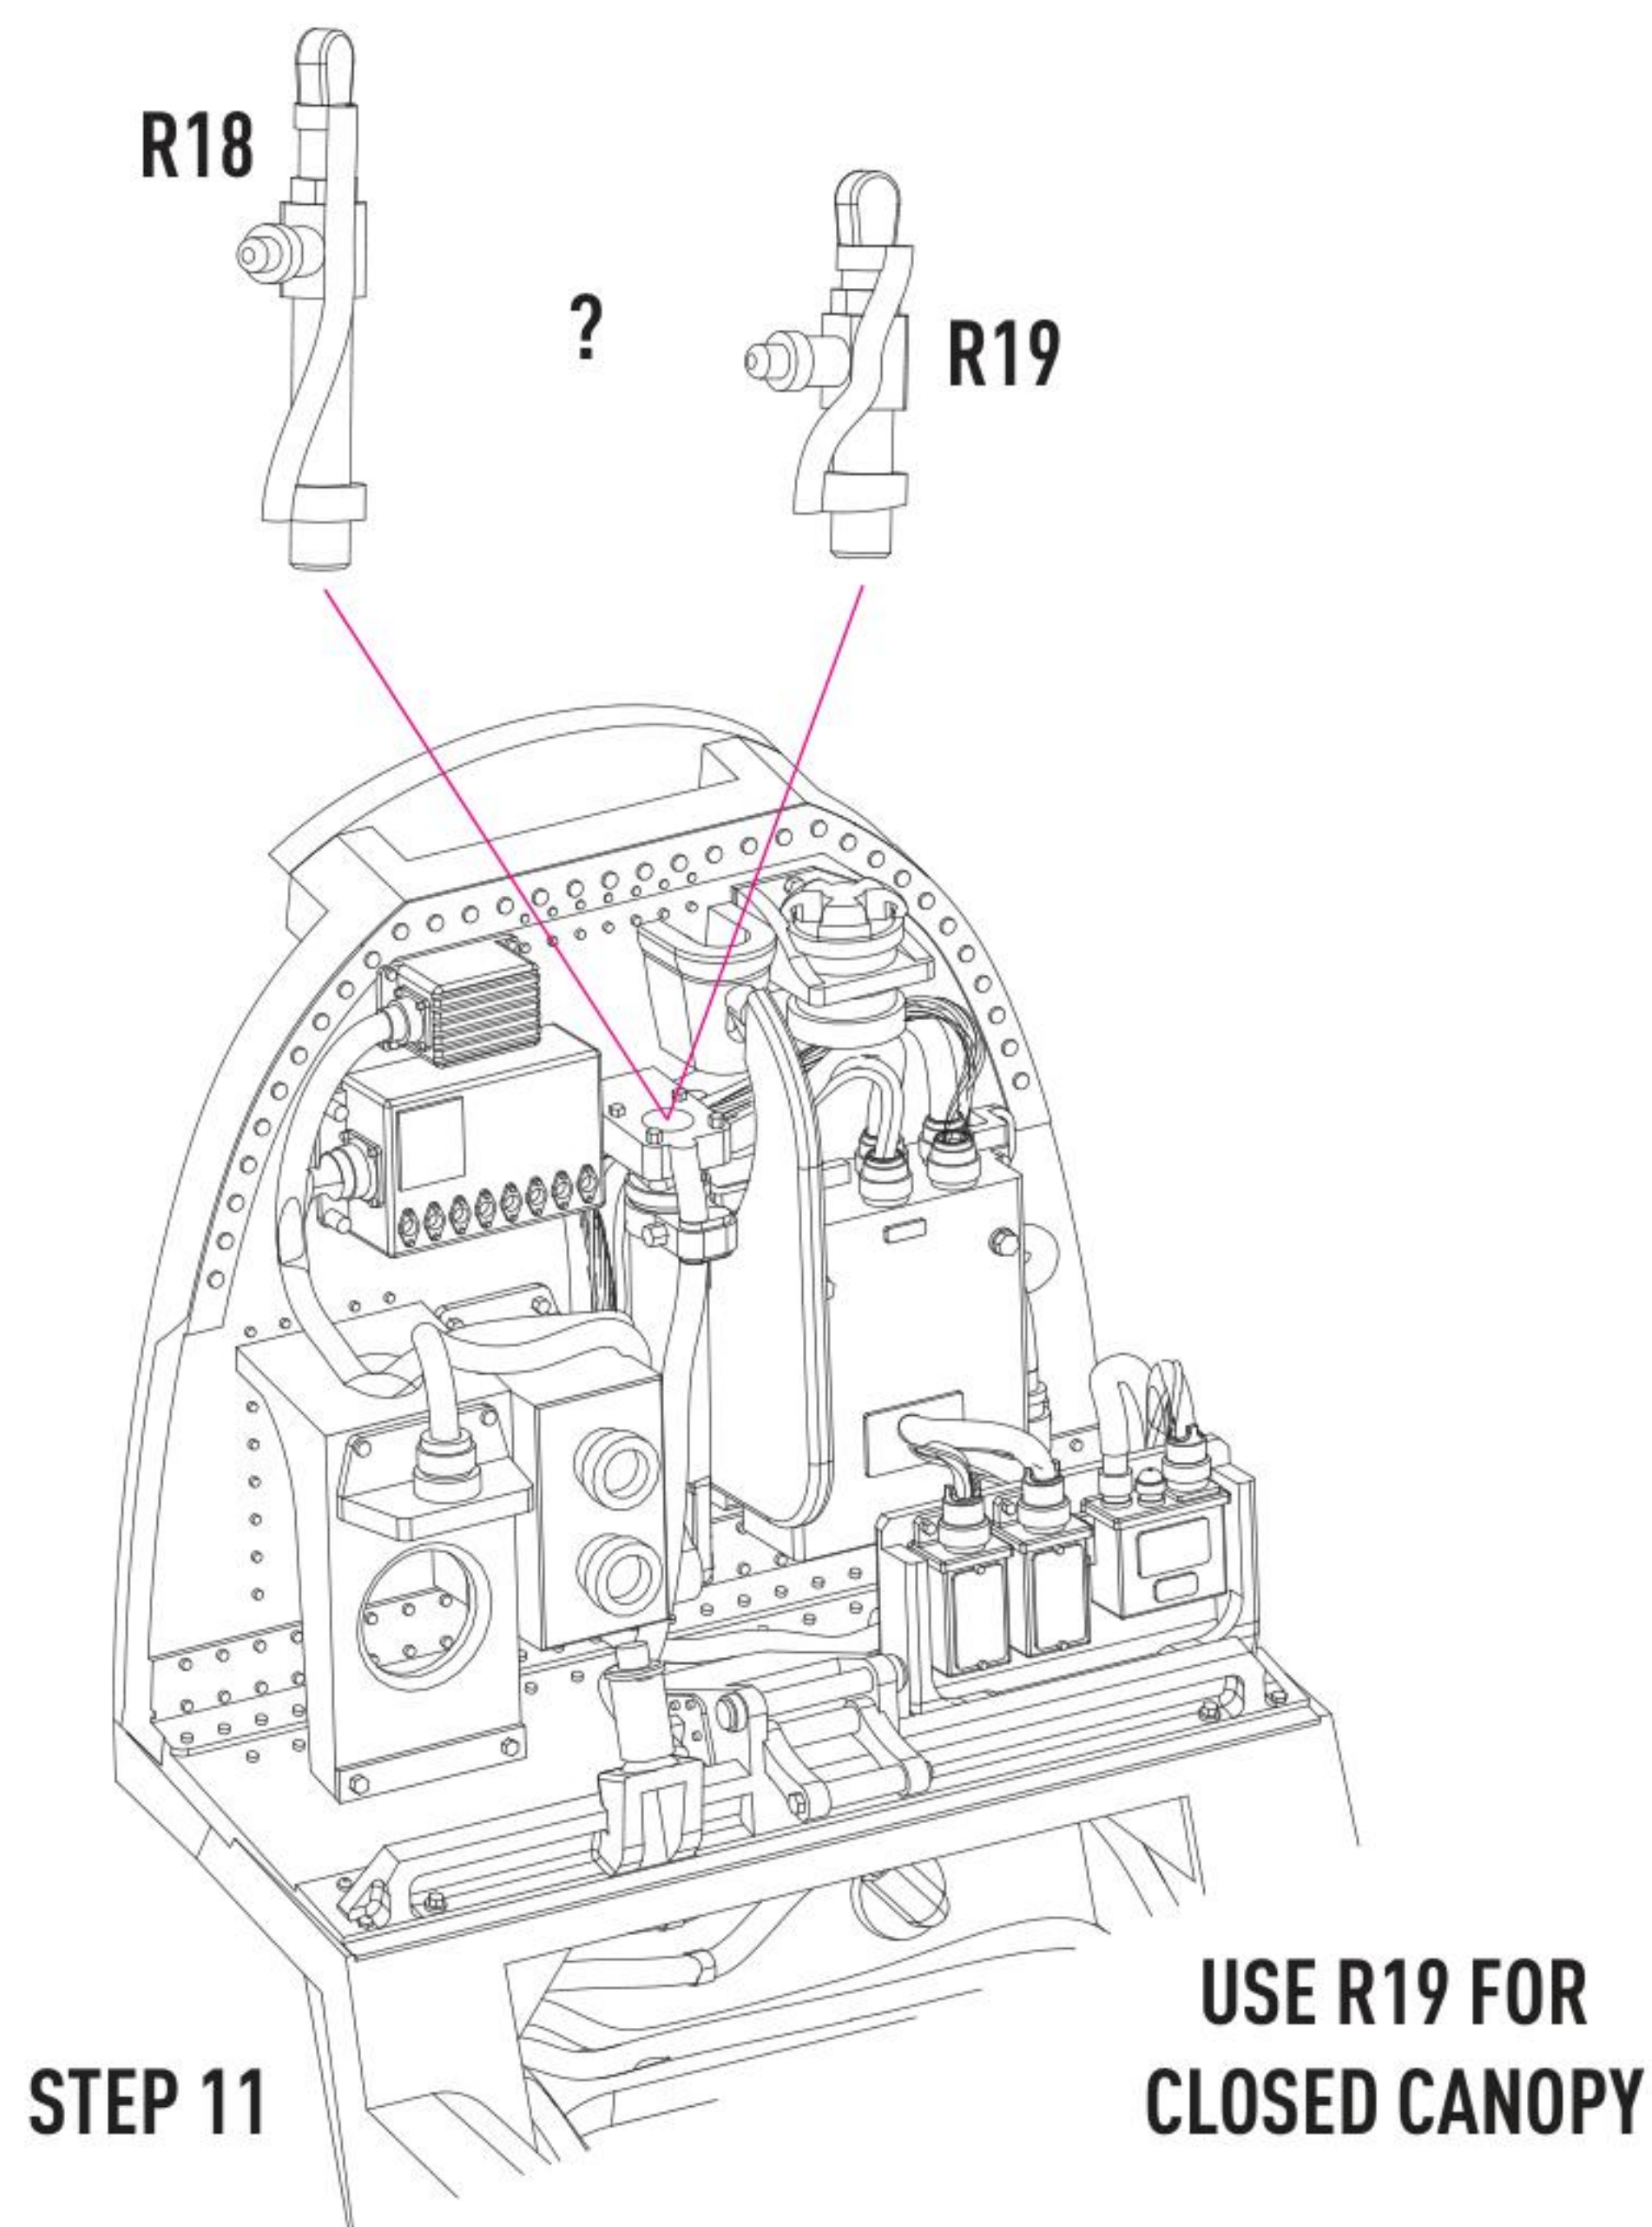


14

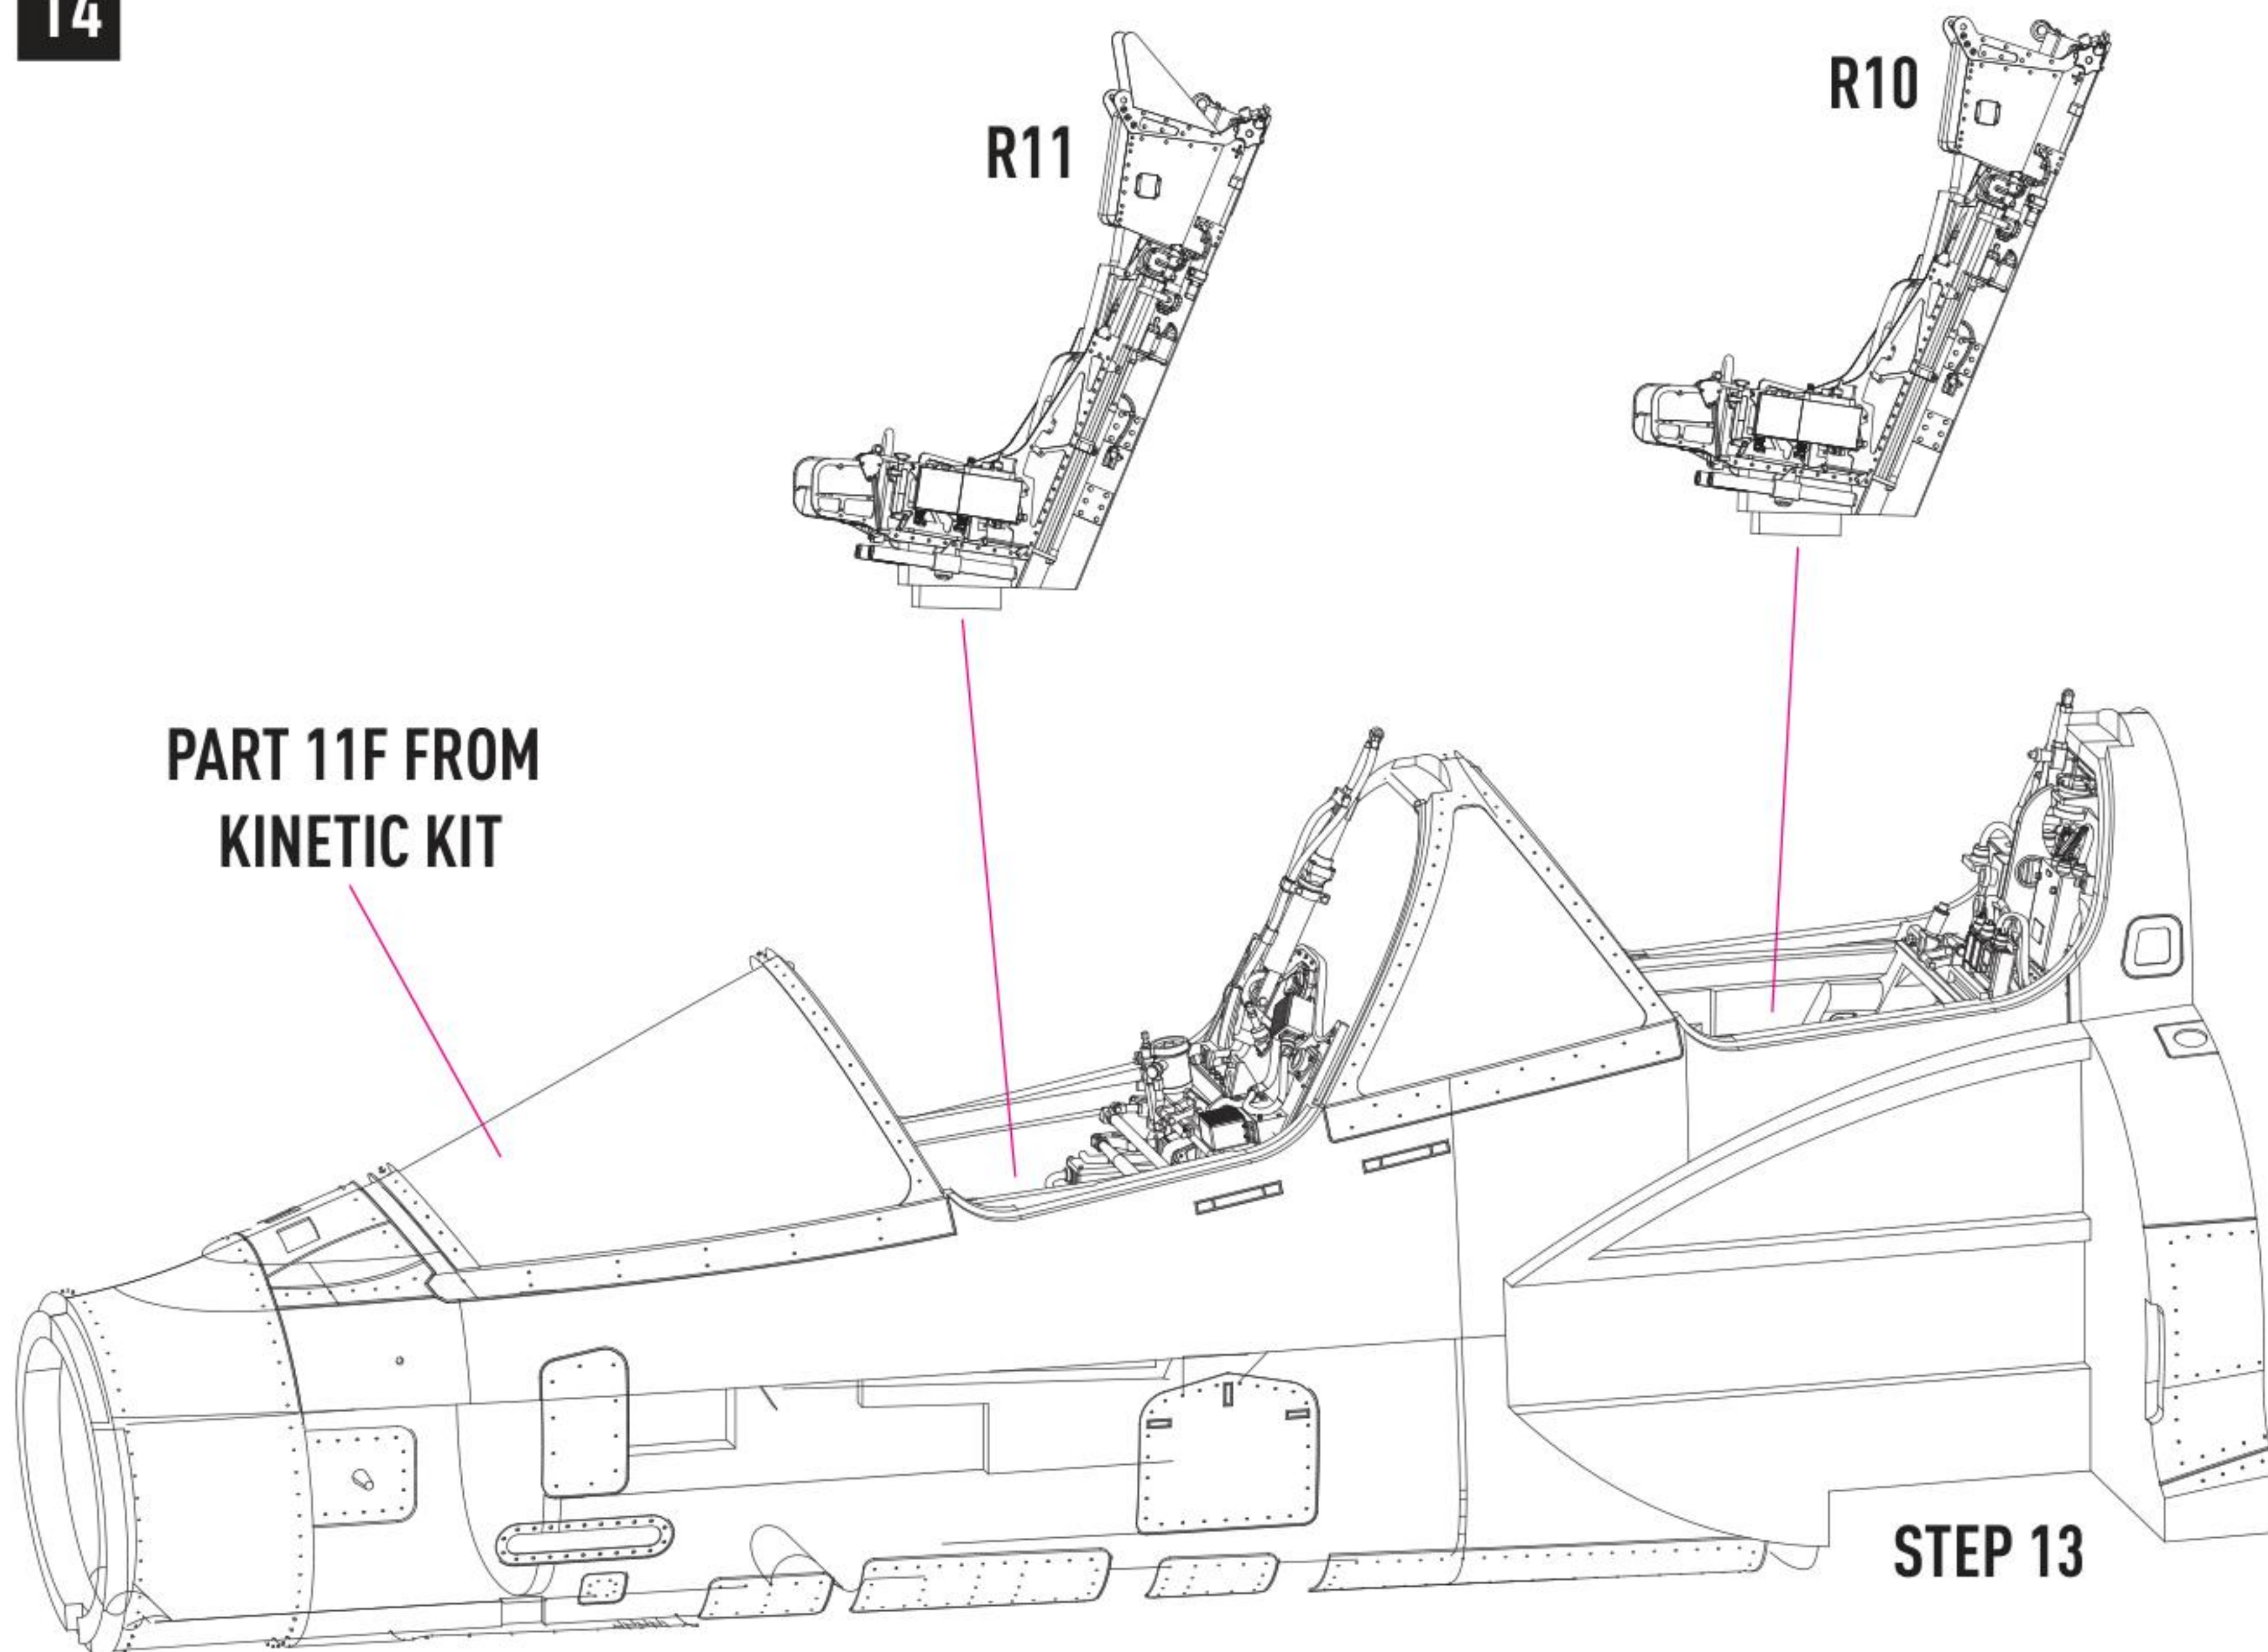


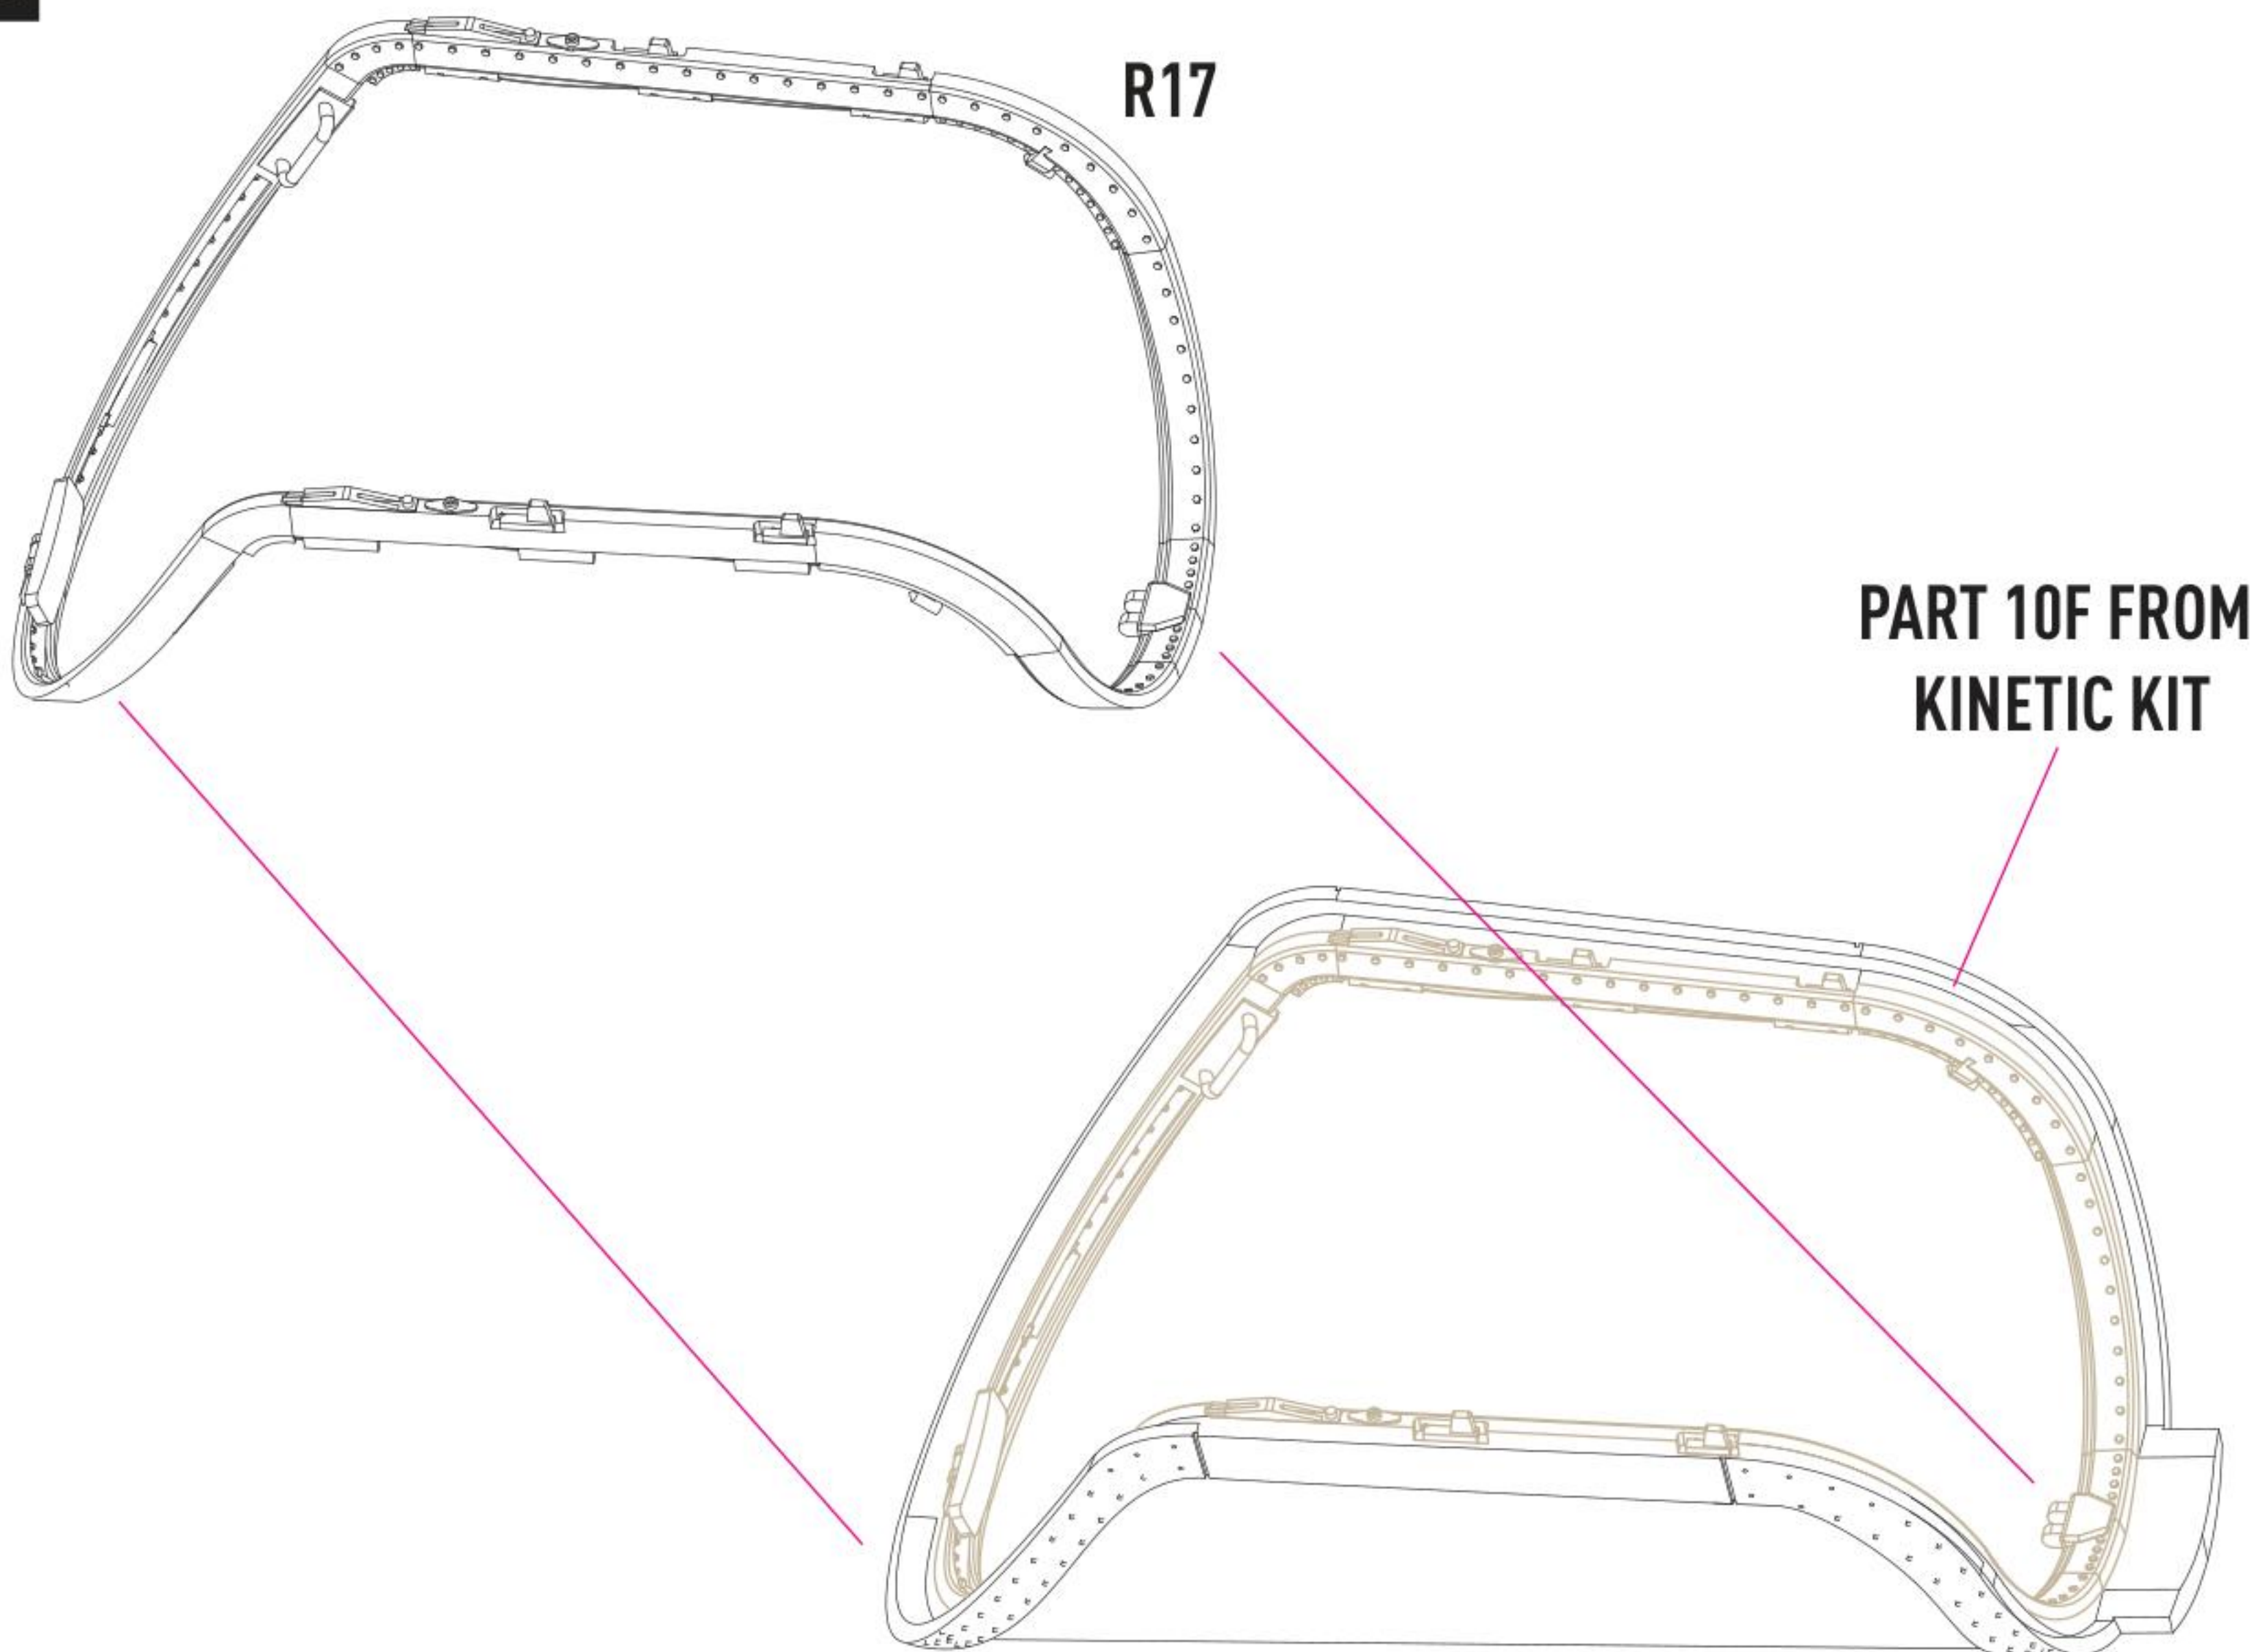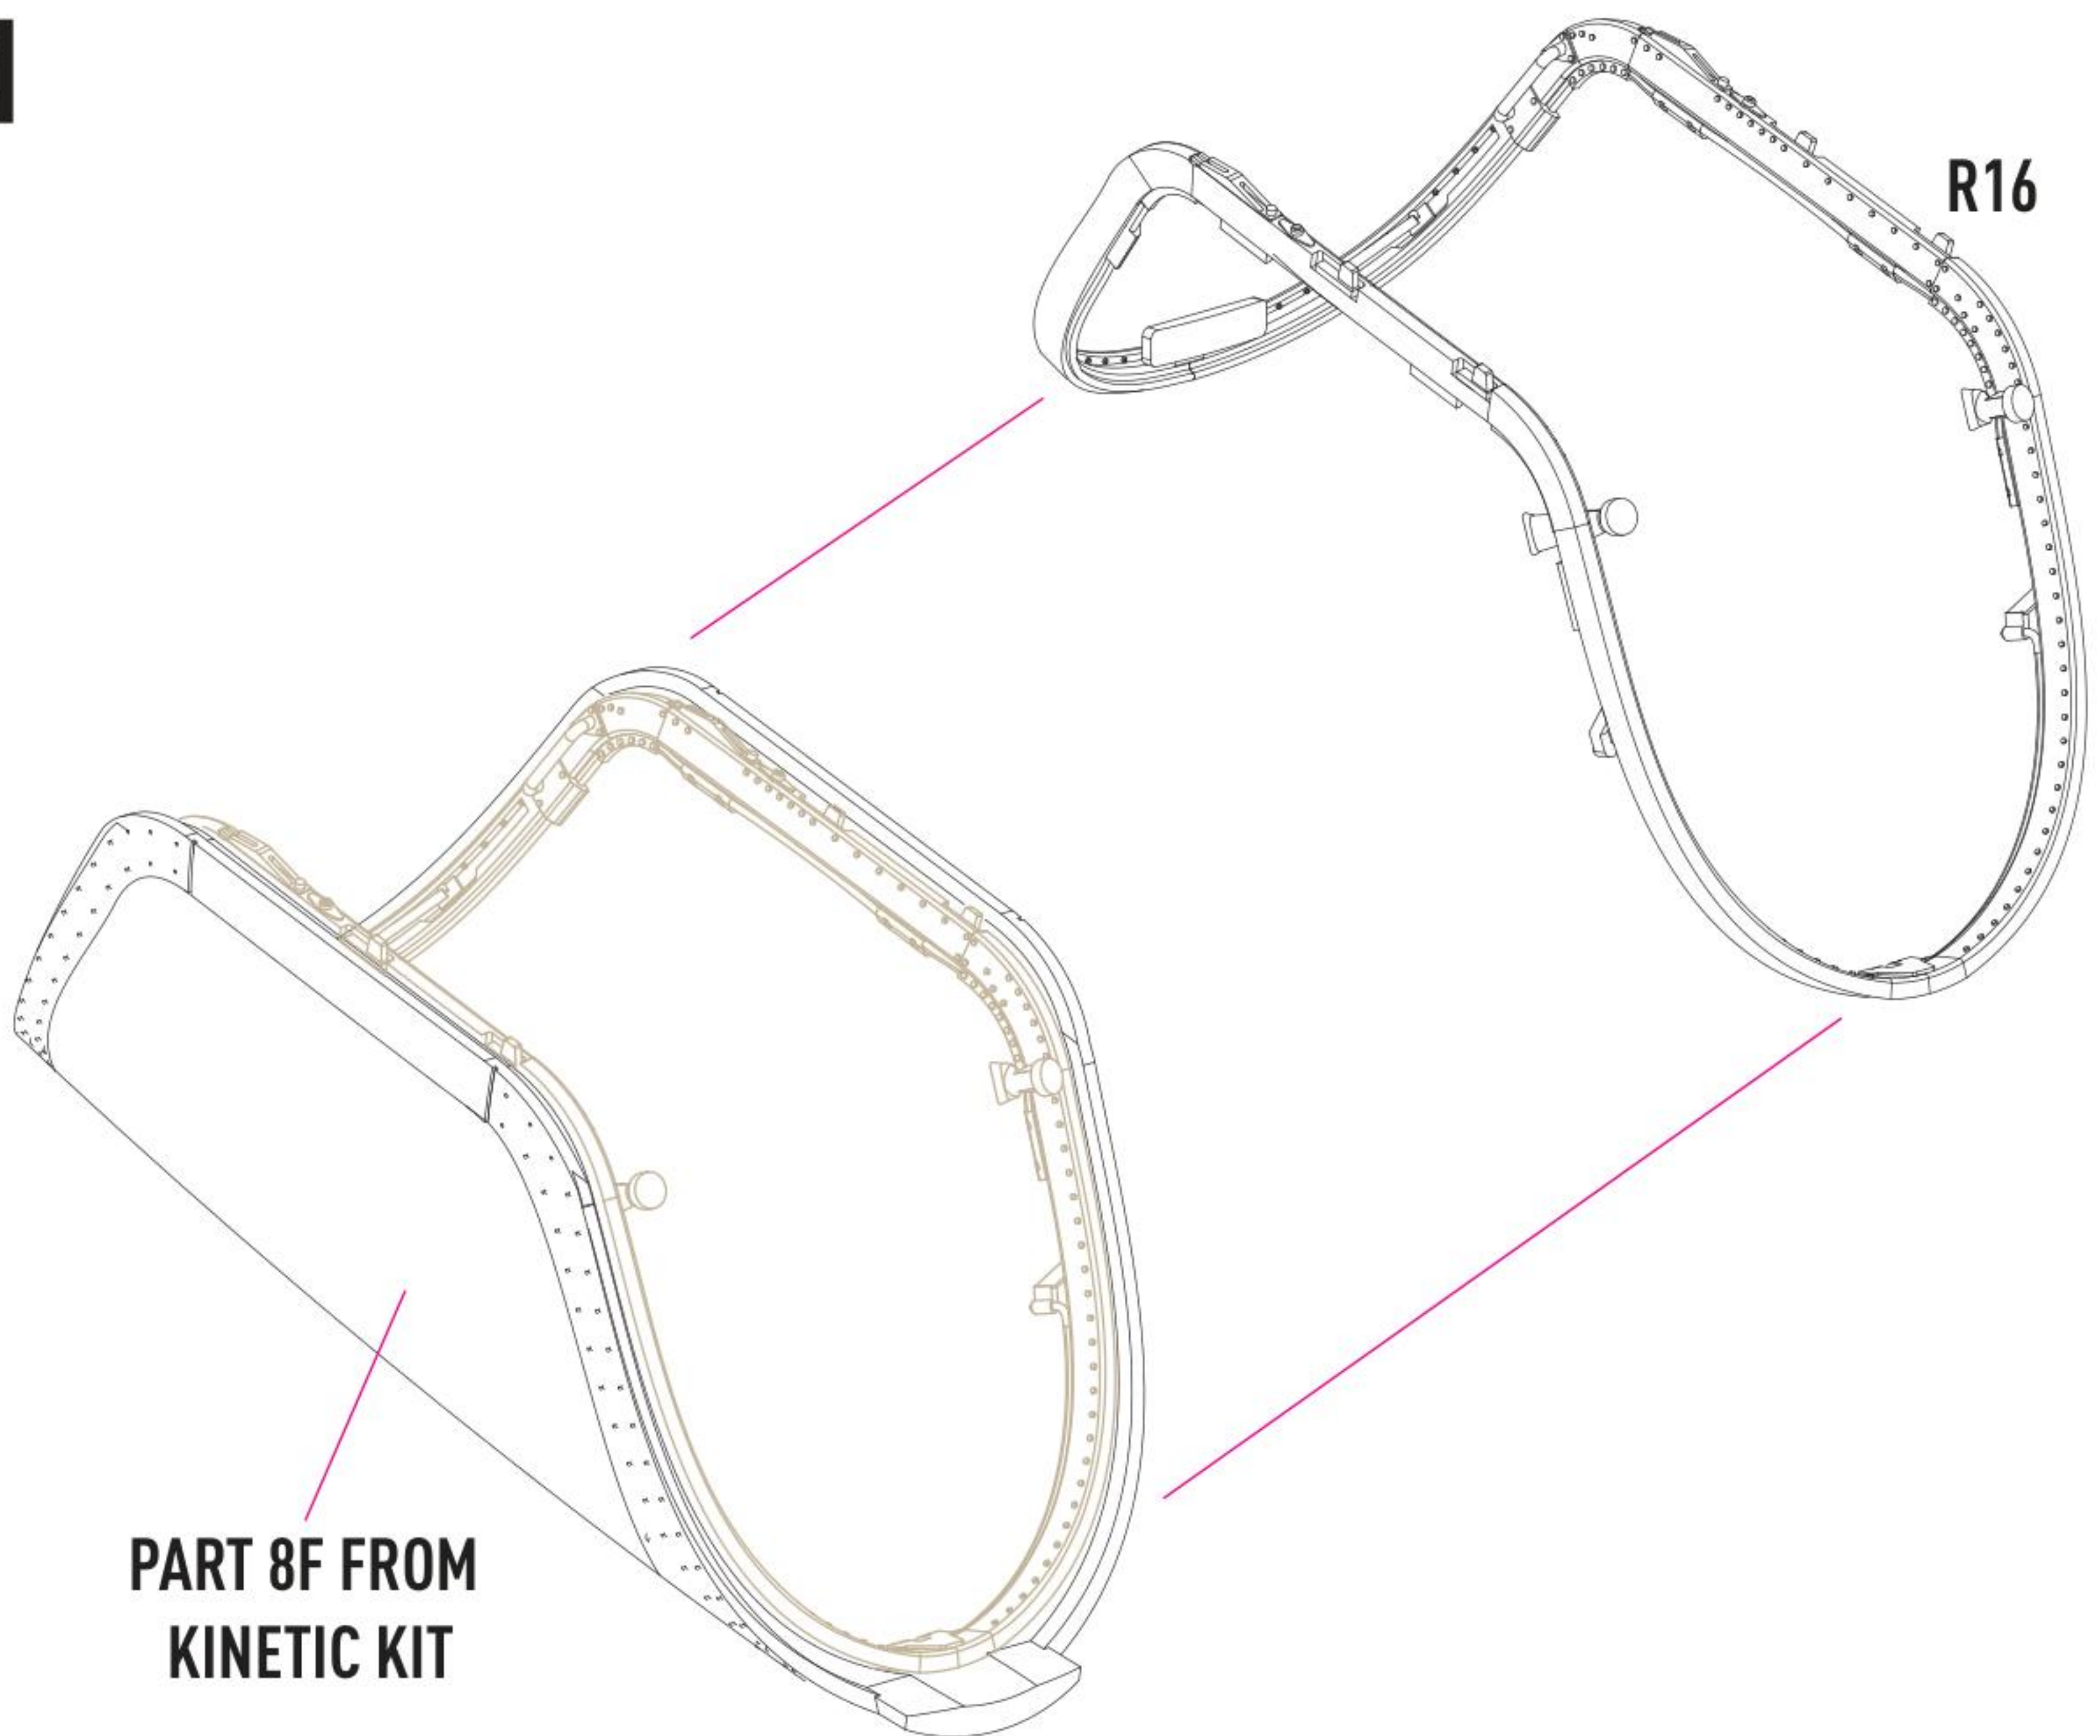



17 OPEN CANOPY

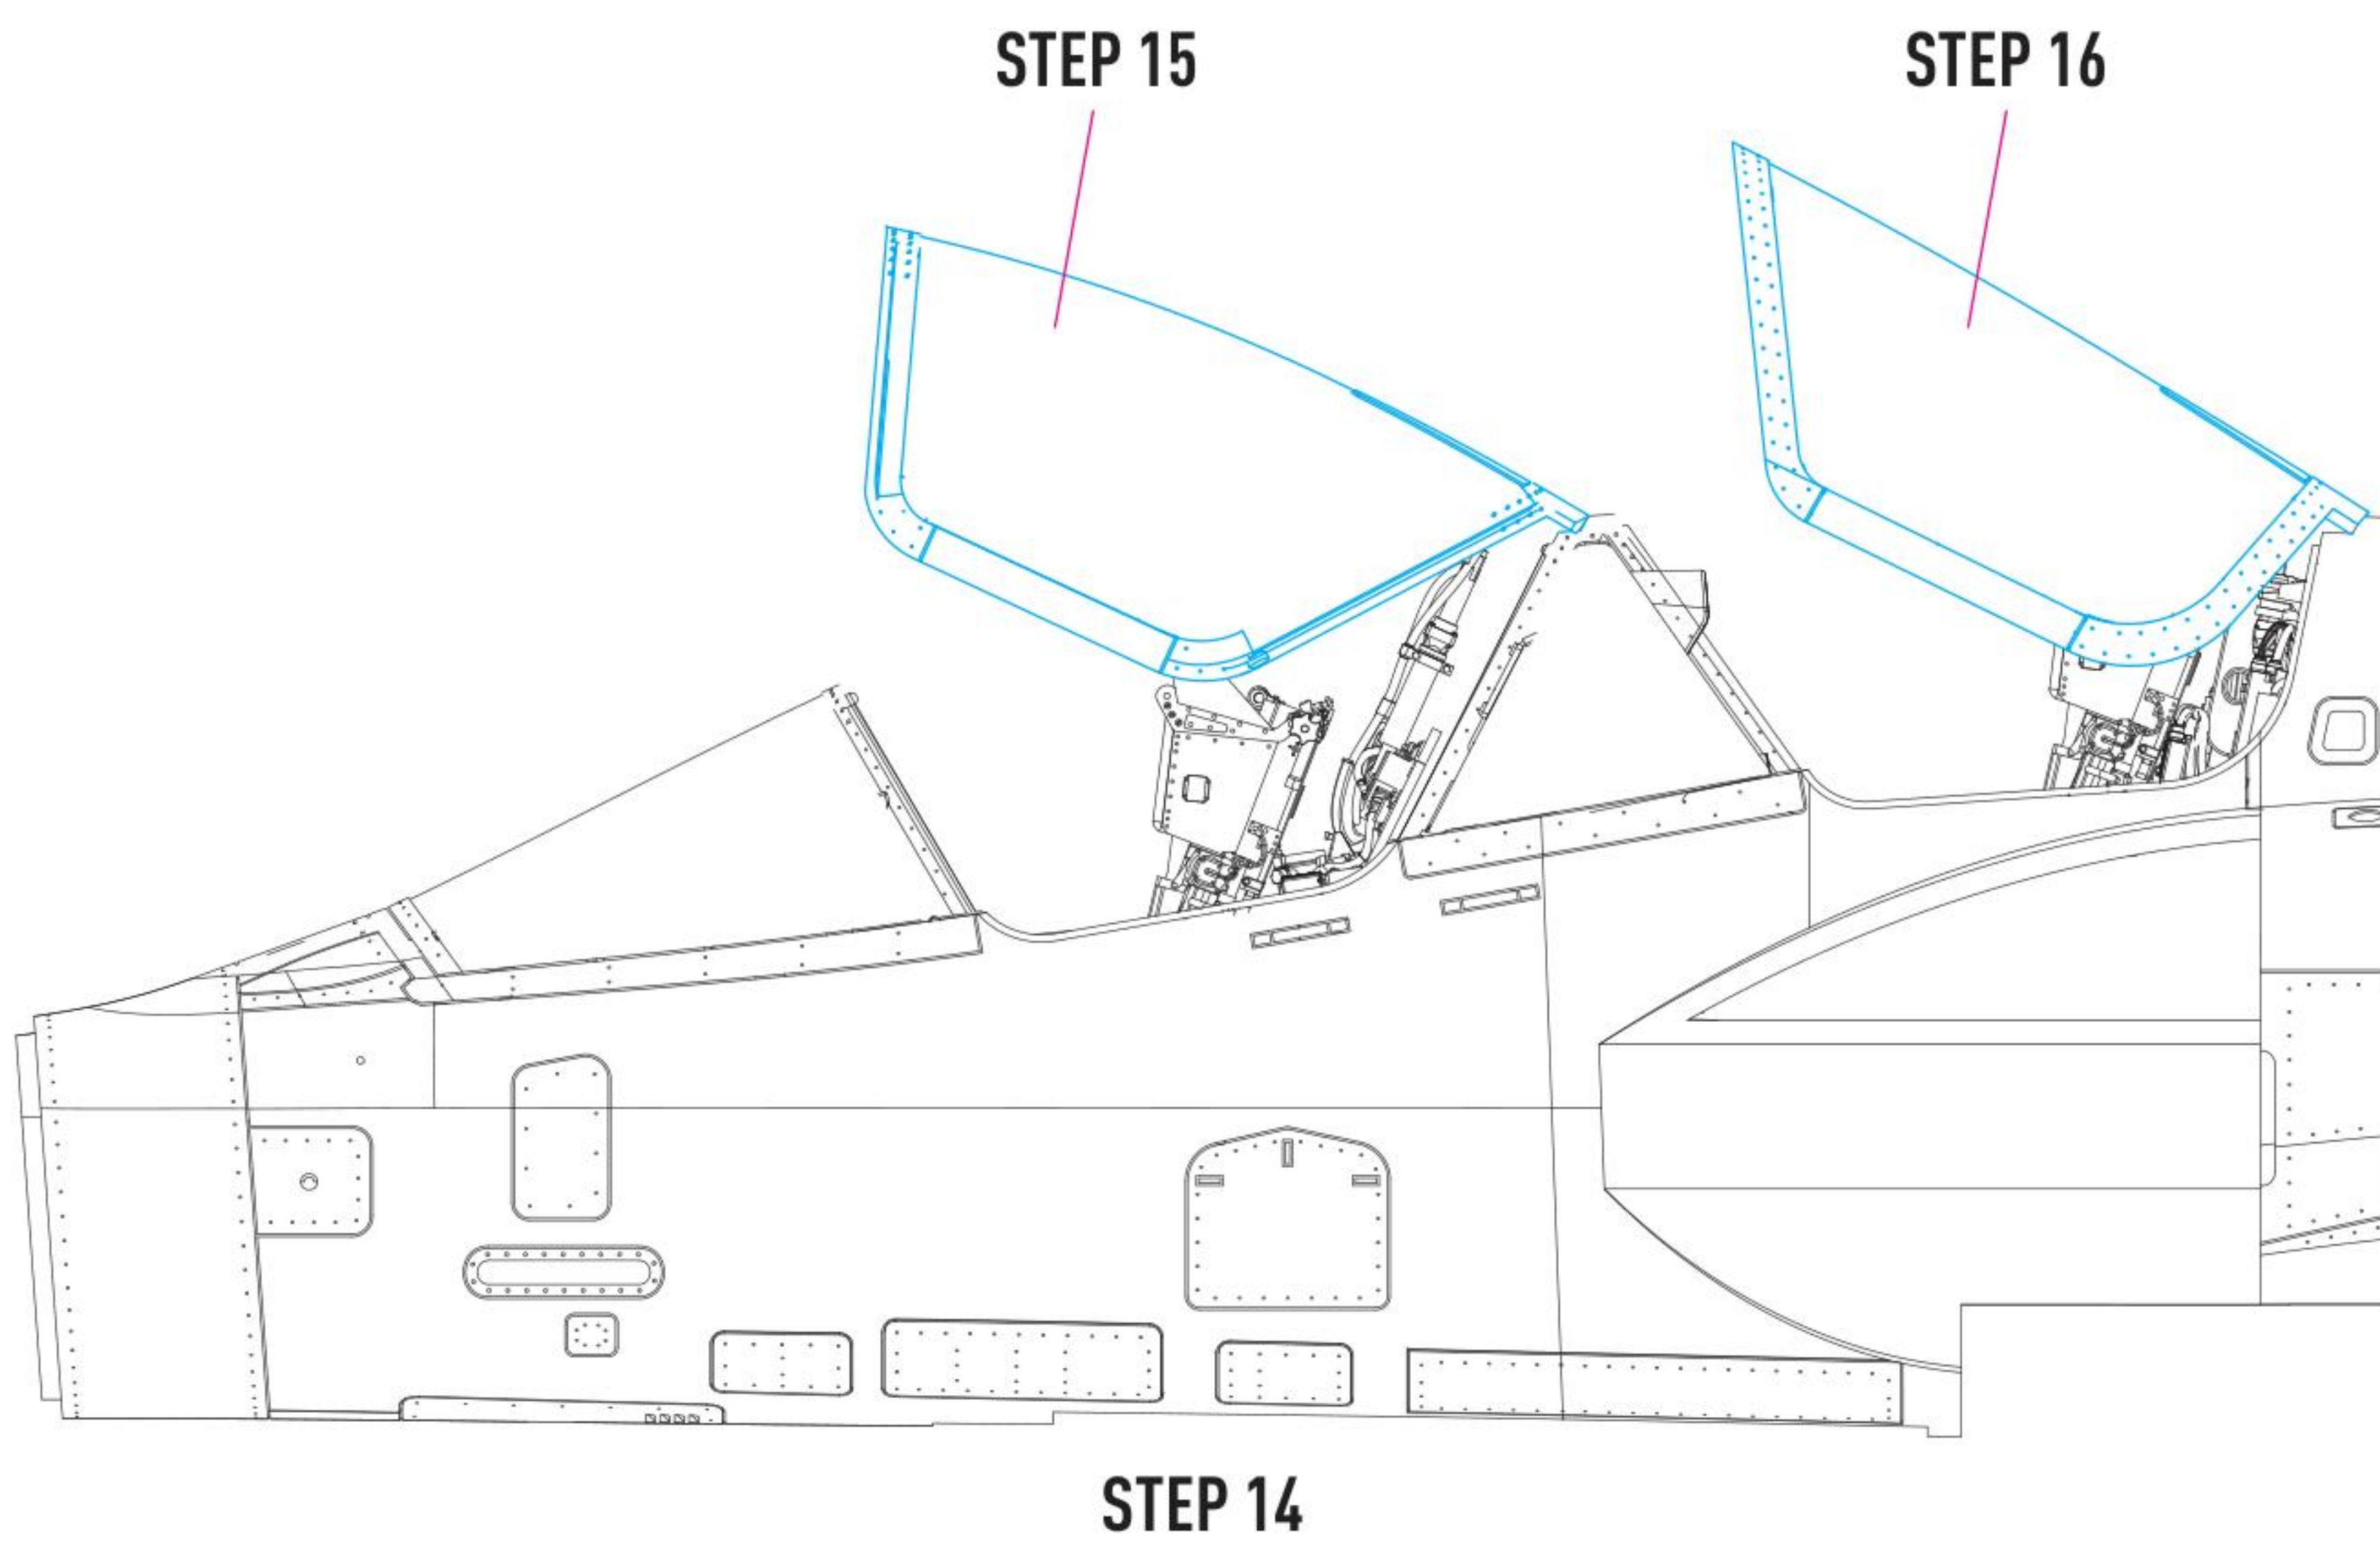

18 CLOSED CANOPY

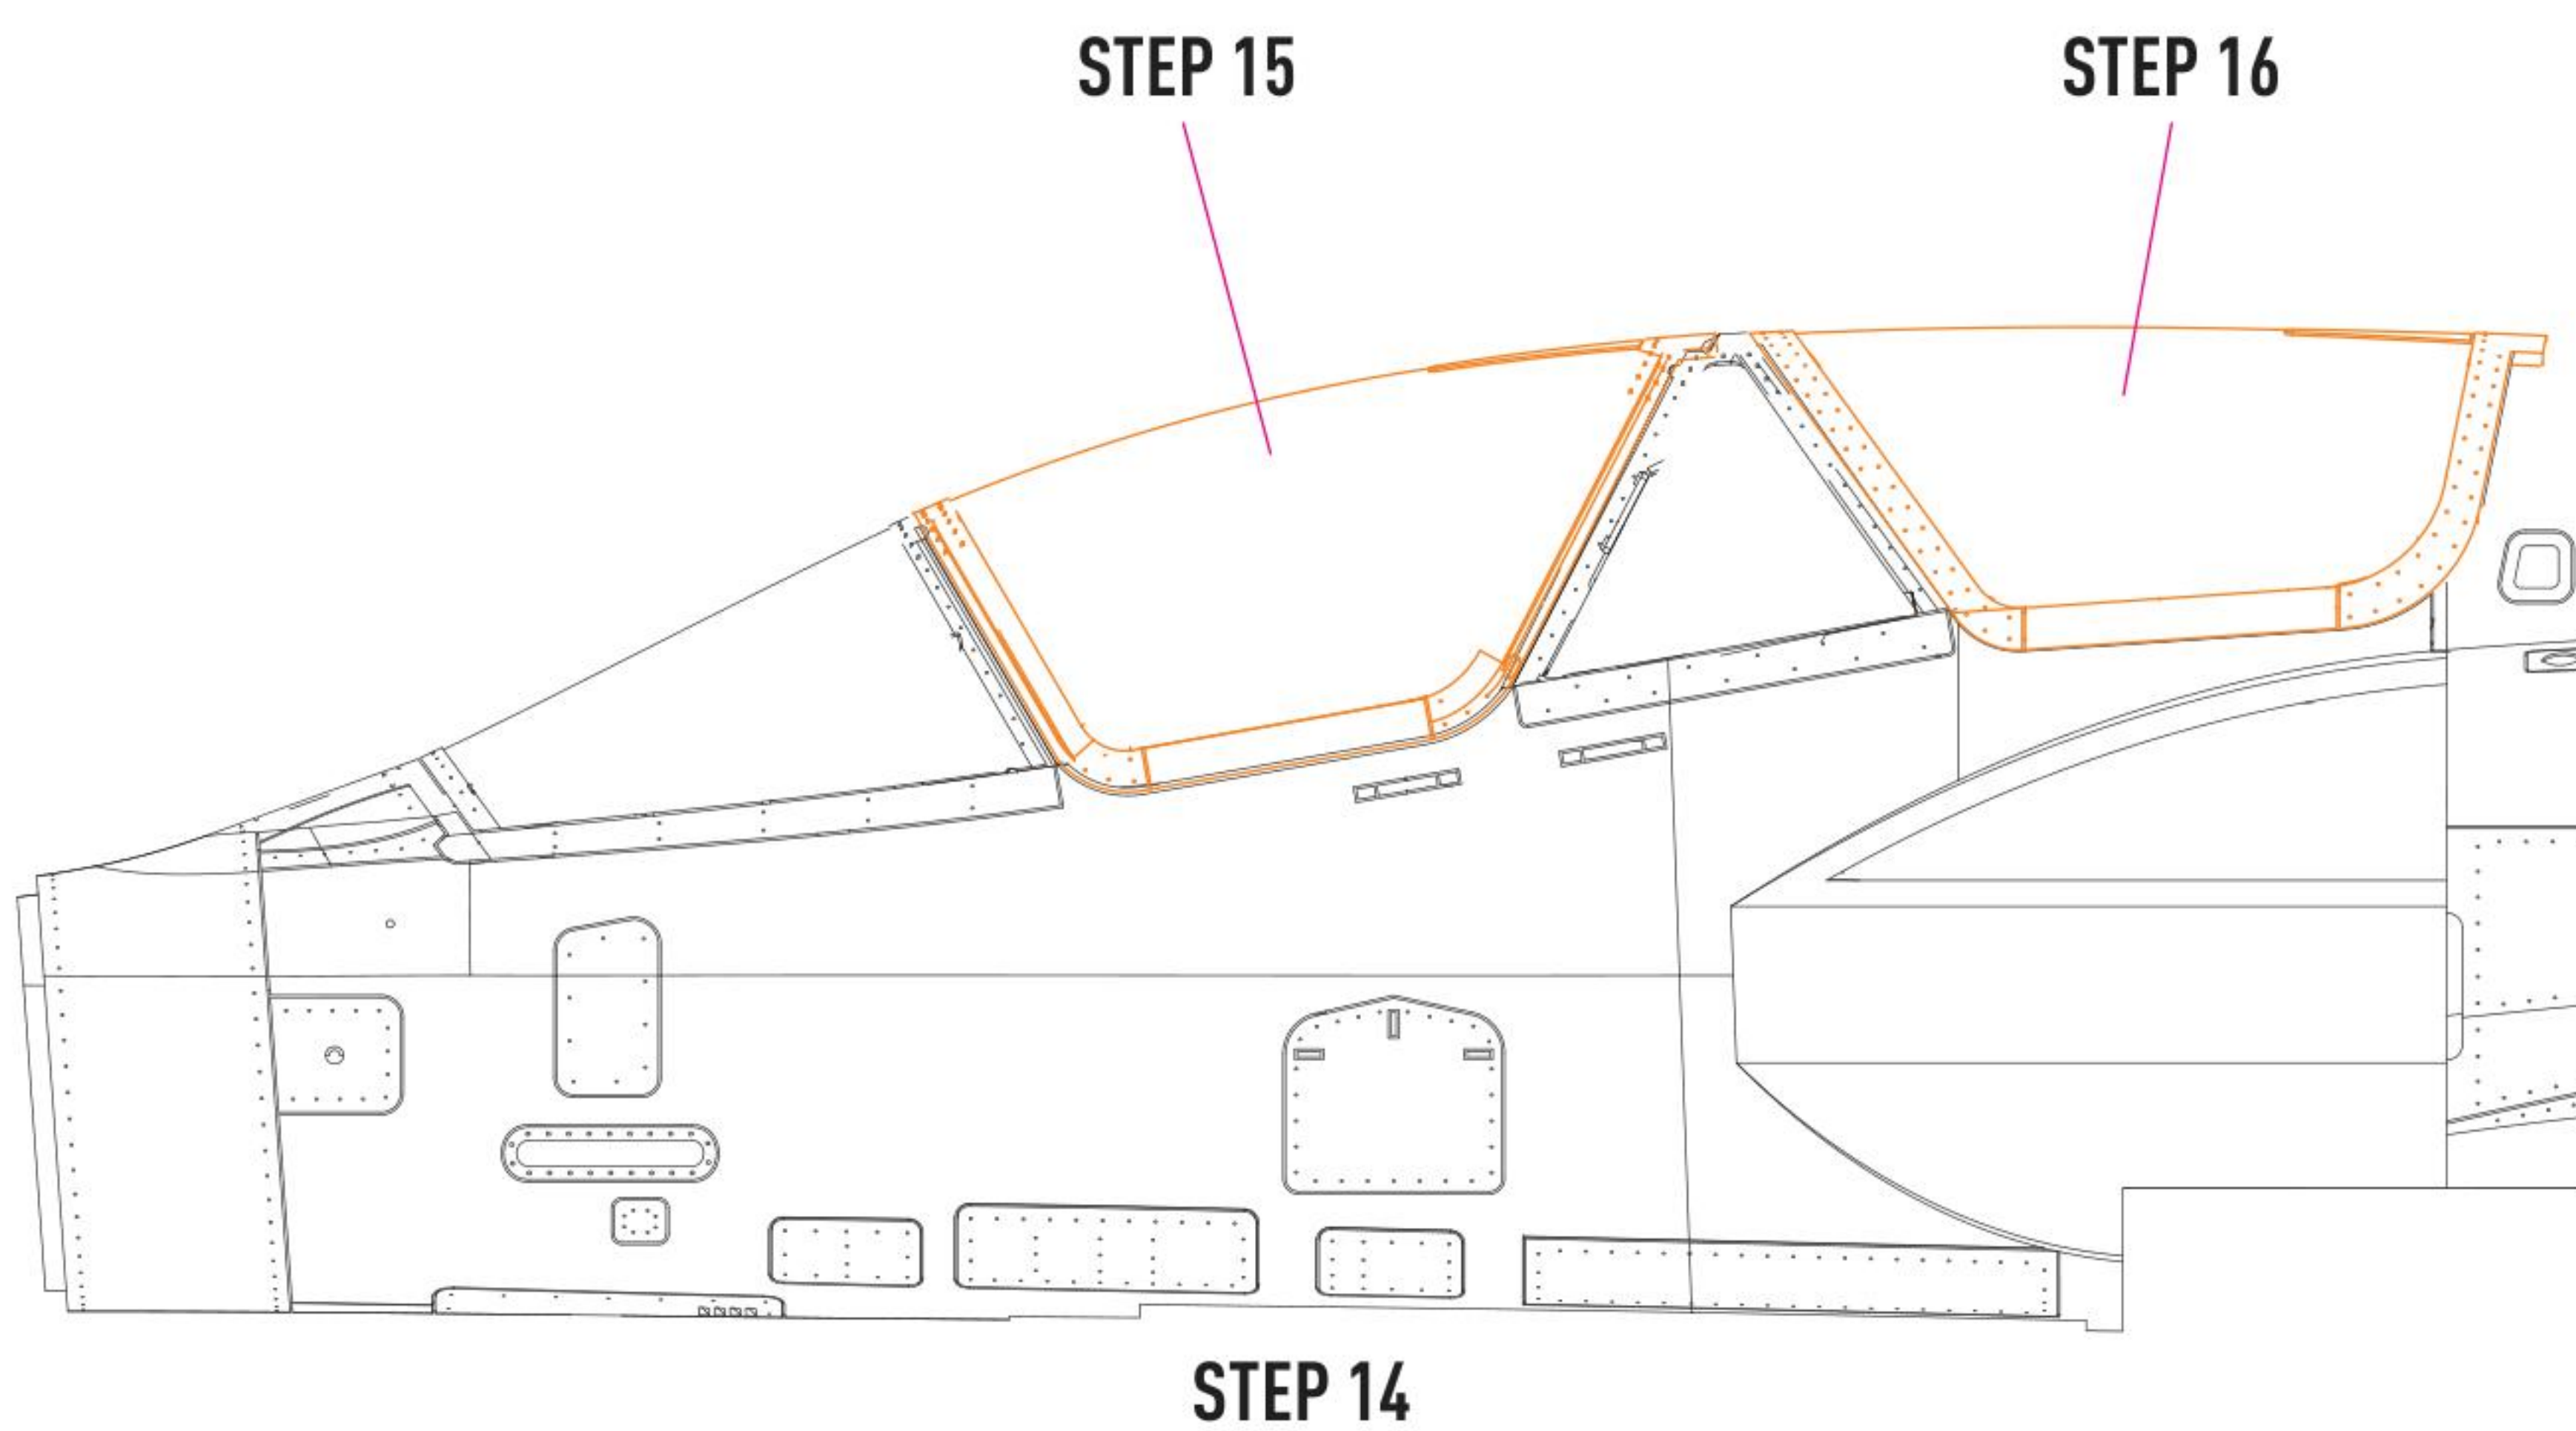

DECAL INSTRUCTION

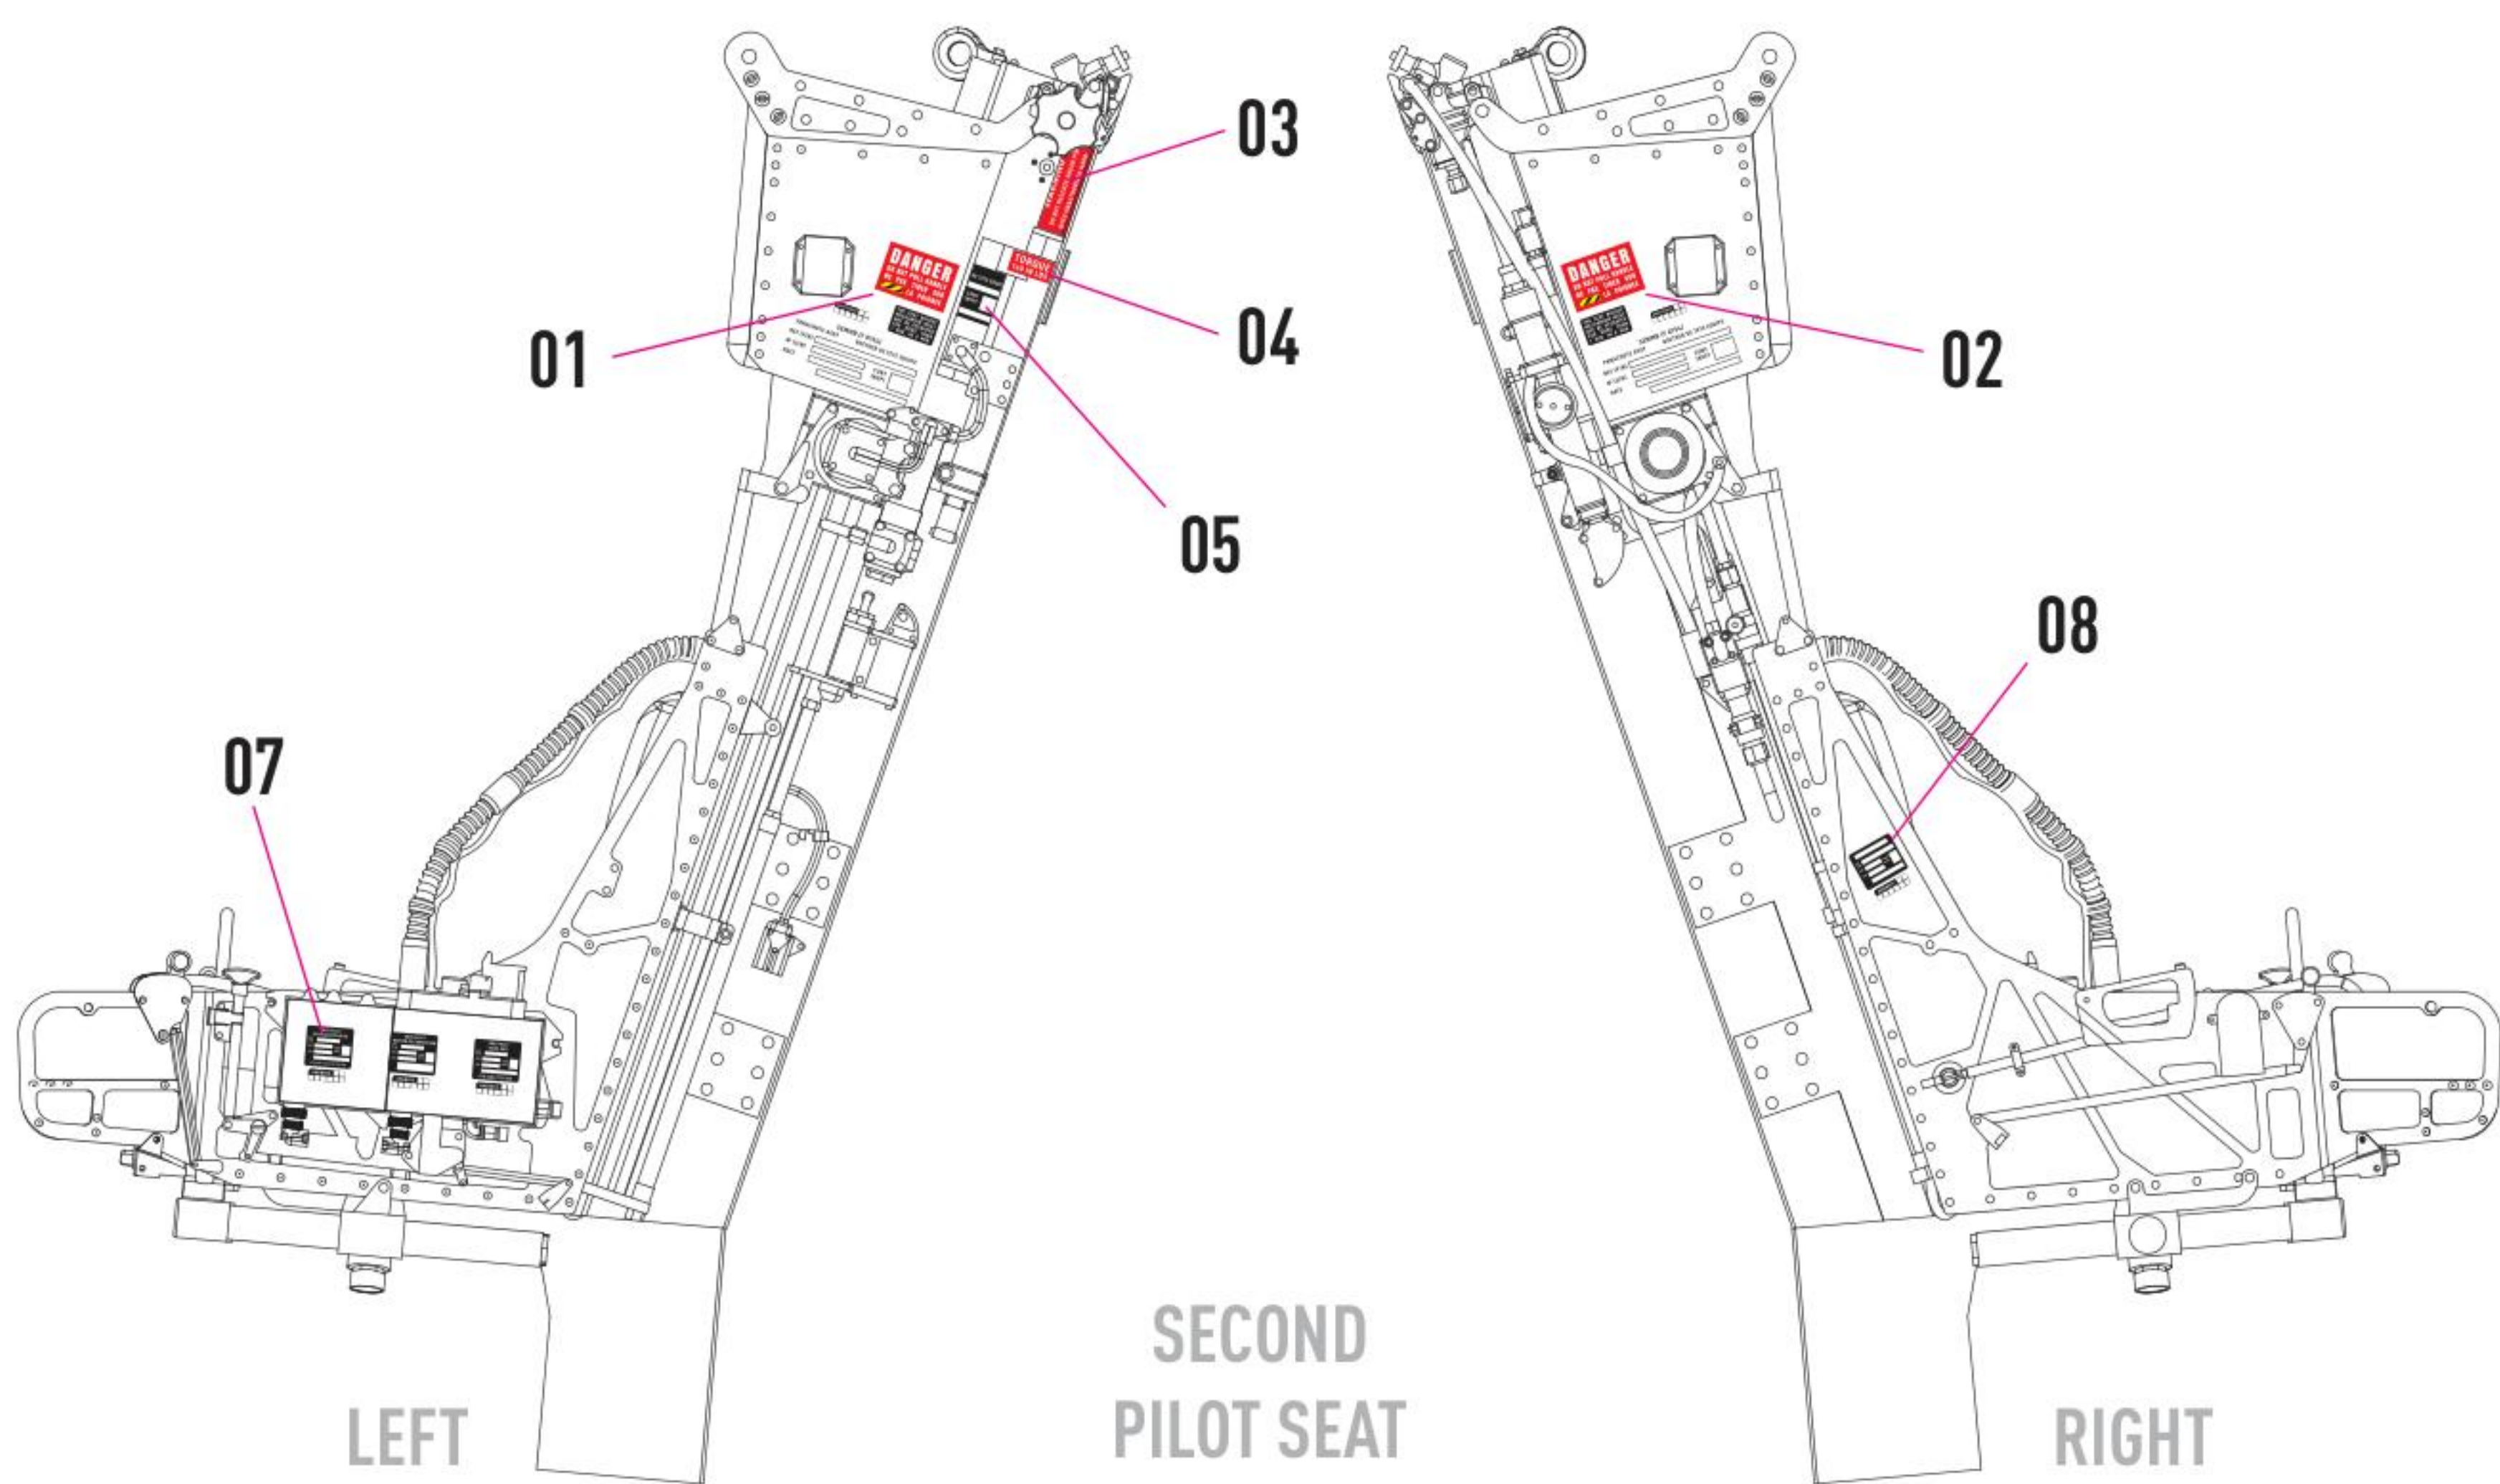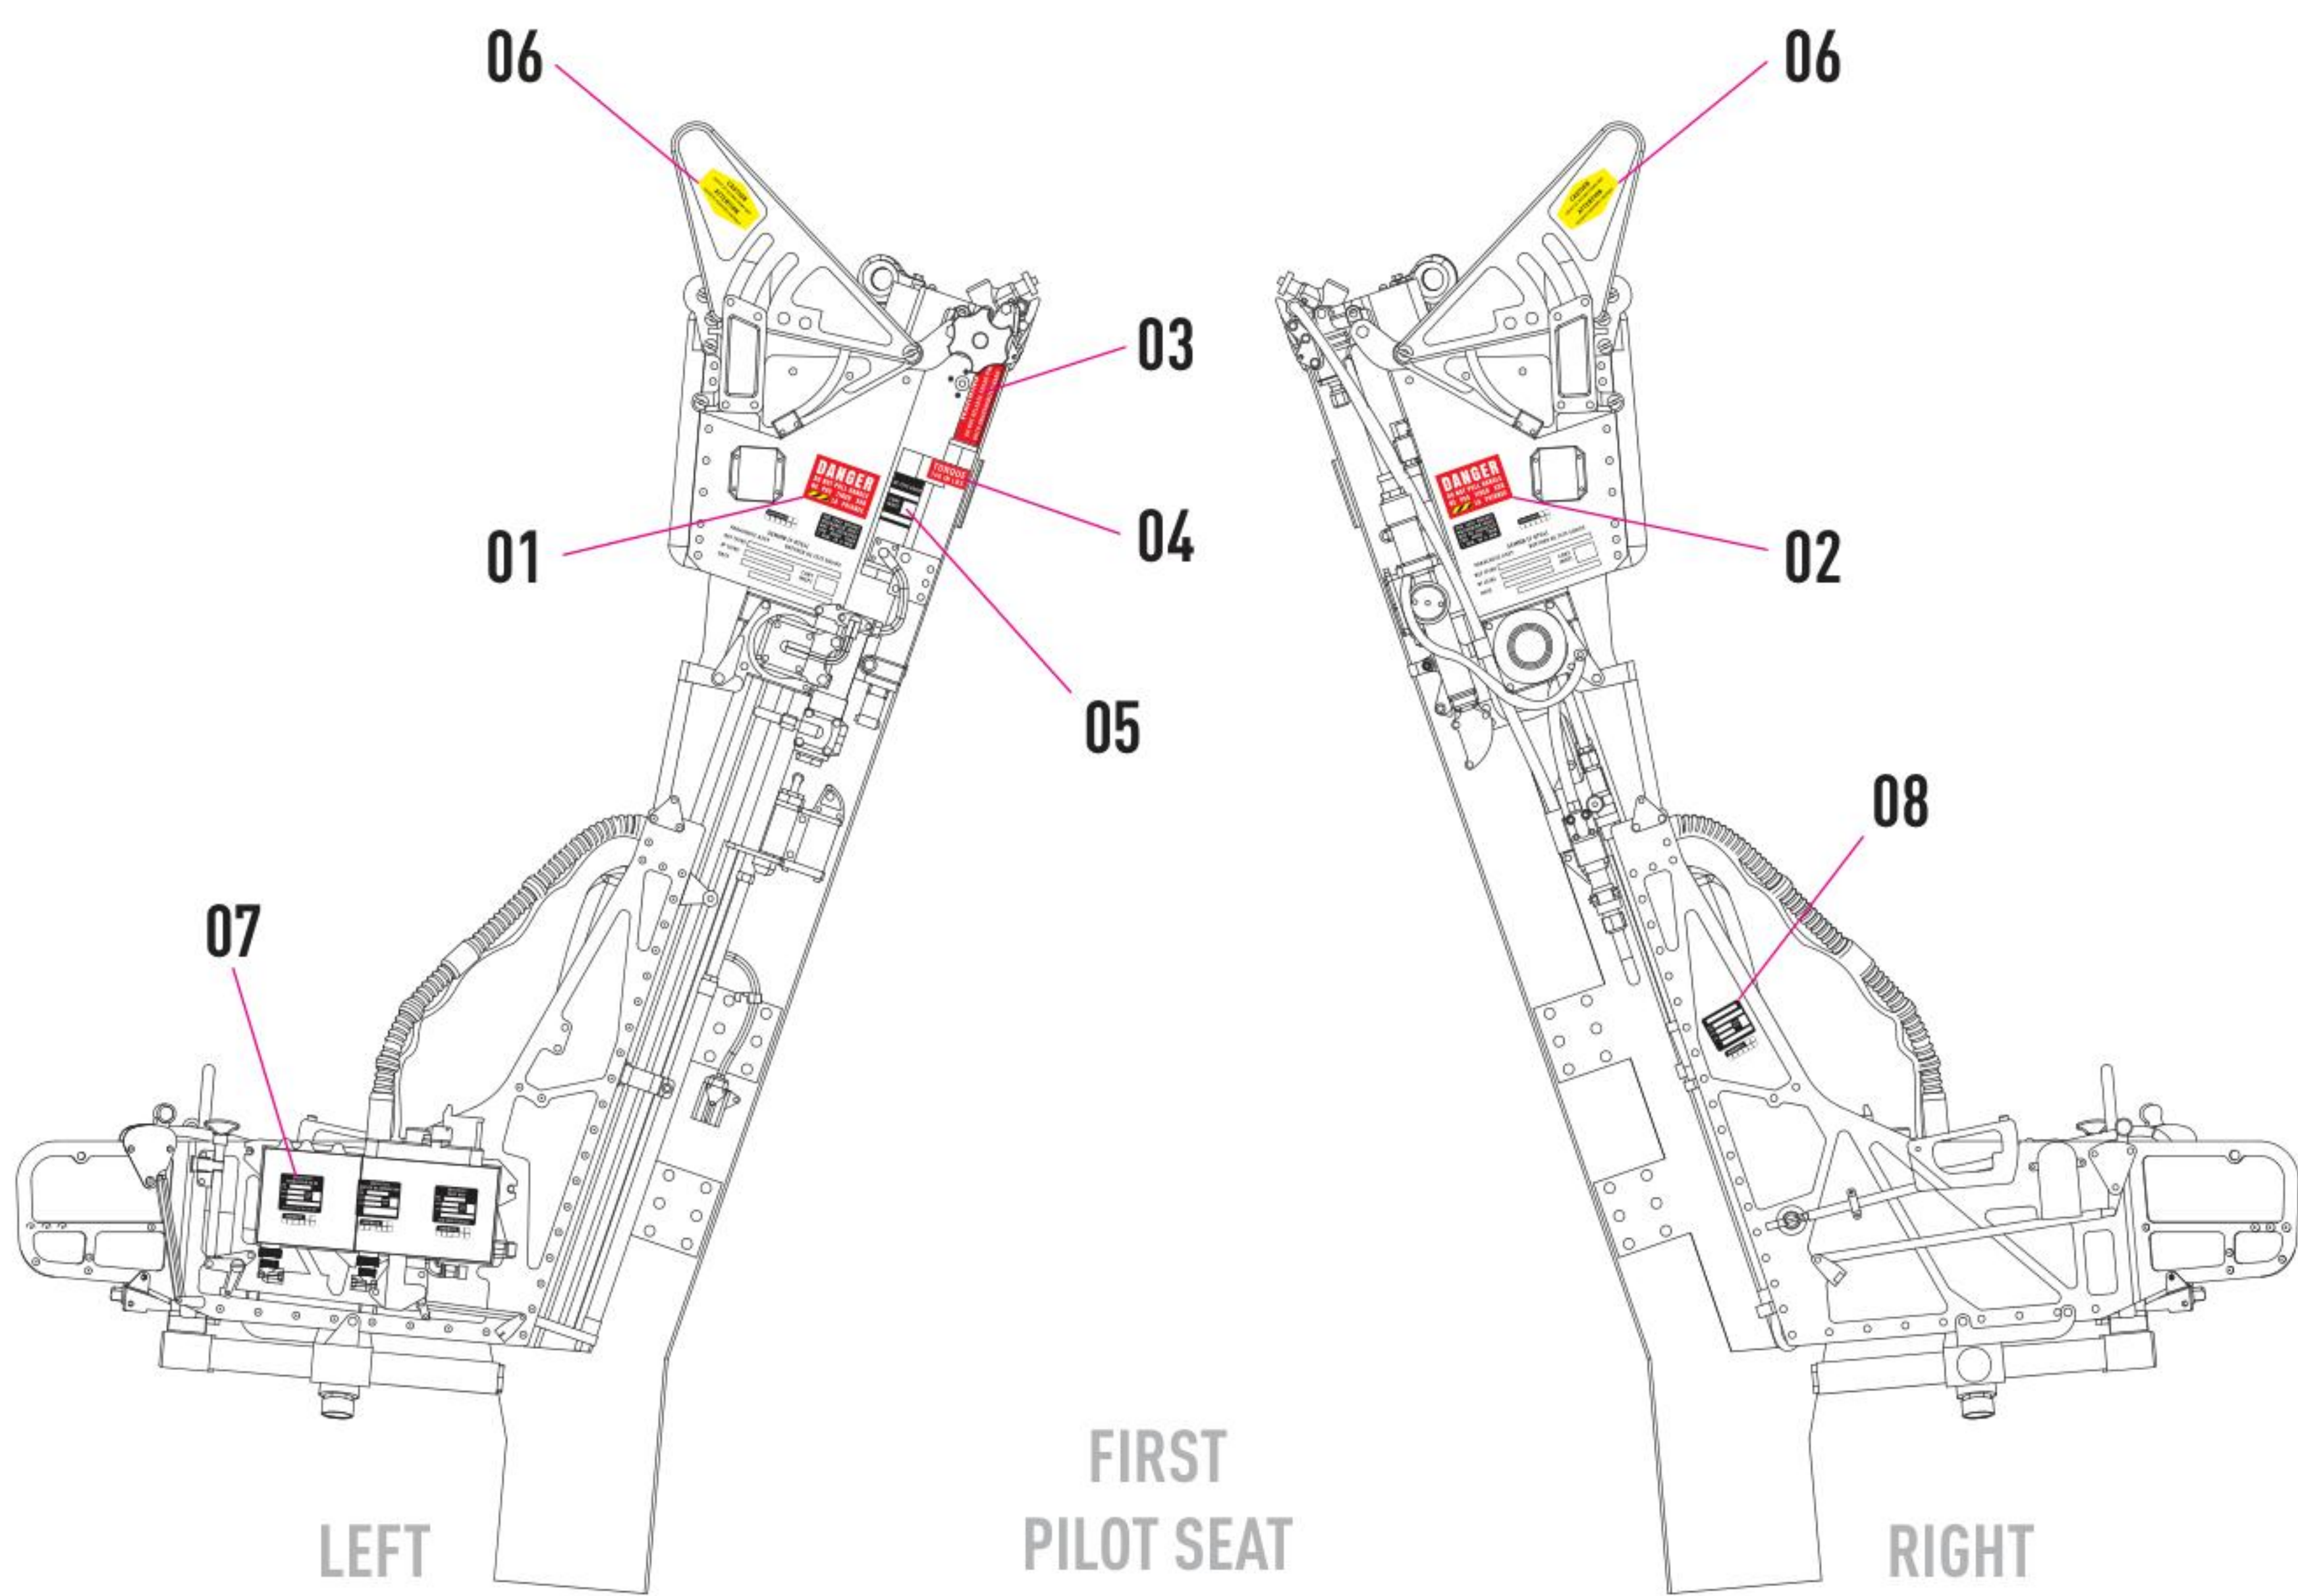

general Issues: info@reskit.com.ua / claim resolution: claims@reskit.com.ua

RESKIT-MODELS.COM

[fb.com/reskit.official](https://www.facebook.com/reskit.official)

[instagram.com/reskit_official](https://www.instagram.com/reskit_official)

[youtube.com/@reskit-usmd](https://www.youtube.com/@reskit-usmd)