

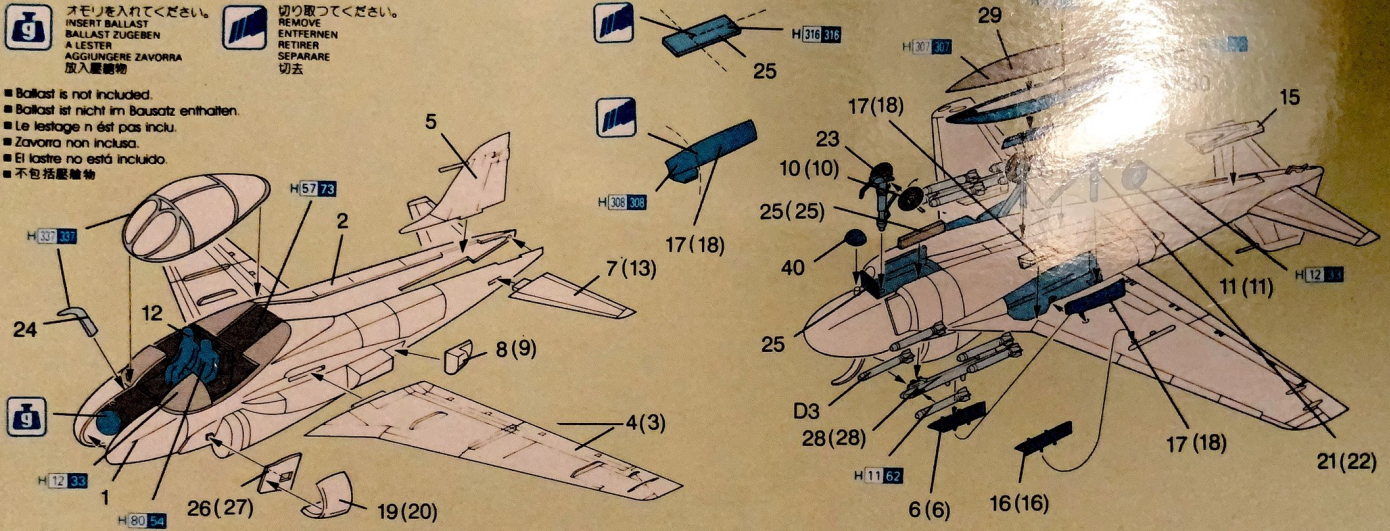


A-6E INTRUDER

ASSEMBLY INSTRUCTION

-  オモリを入れてください。
 INSERT BALLAST
 A L'ESTER
 AGGIUNGERE ZAVORRA
 放入重錘物
-  切り取ってください。
 REMOVE
 ENTFERNEN
 RETIRER
 SEPARARE
 切去

- Ballast is not included.
- Ballast ist nicht im Bausatz enthalten.
- Le lestage n'est pas inclu.
- Zavorra non inclusa.
- El lastre no está incluido.
- 不包括重錘物






MARKING AND PAINTING

Correct Method for Applying Decals

- Clean model surface with wet cloth.
- Cut each design out of decal sheet and dip them in warm water for 20 seconds.
- Check with finger tip if design is loose on base paper. If so, place it on proper position on model and slide off base paper leaving design on model.
- Move design to exact position with wet finger tip, and push out excess water and air bubbles under decal with soft cotton cloth.
- When decals get dry, wipe off with wet cloth excess glue left around decals.

貼上水印標貼的正確方法：

將各標貼從紙上切出，浸入溫水中，約20秒，再放到模型表面正確位置上，將底紙移去，用柔軟的布擦乾，標貼即完成。

 GUNZE SANGYO AQUEOUS HOBBY COLOUR
 GUNZE SANGYO MR. COLOUR
 ITALERI PAINT NO

H 11 62	FLAT WHITE	1788	H 80 54	KHAKI GREEN	1716
H 12 33	FLAT BLACK	1749	H 307 307	GRAY FS36320	1741
H 57 73	AIRCRAFT GRAY	1740	H 308 308	LIGHT GRAY FS36375	1728
H 60 16	UA GREEN	1764	H 316 316	WHITE FS 17875	1745
H 76 61	BURNT IRON	1406	H 337 337	GRAYISH BLUE FS 35327	1740

