


Fenders for PzKpfw.IV Ausf F1-H For DML Smart PzKpfw.IV use only!

	切除阴影部分 Cut away		安装箭头 Install arrow		注解一 Note 1
	弧度弯折 Bend		弯折箭头 Fold arrow		根据喜好选择安装 Optional
	钻孔 Make a hole	00	蚀刻片零件标号 Number of PE parts		制作所示若干组 Make some pcs
	另一侧相同制作 Repeat opposite side	00	原套件零件标号 Number of original parts		使用圆棒制作 Use ABS rod


RECOMMENDED TOOLS
推荐使用工具




1/35 MILITARY MINIATURE VEHICLE PE UPGRADE SERIES NO.145 PEUPDATE For DML

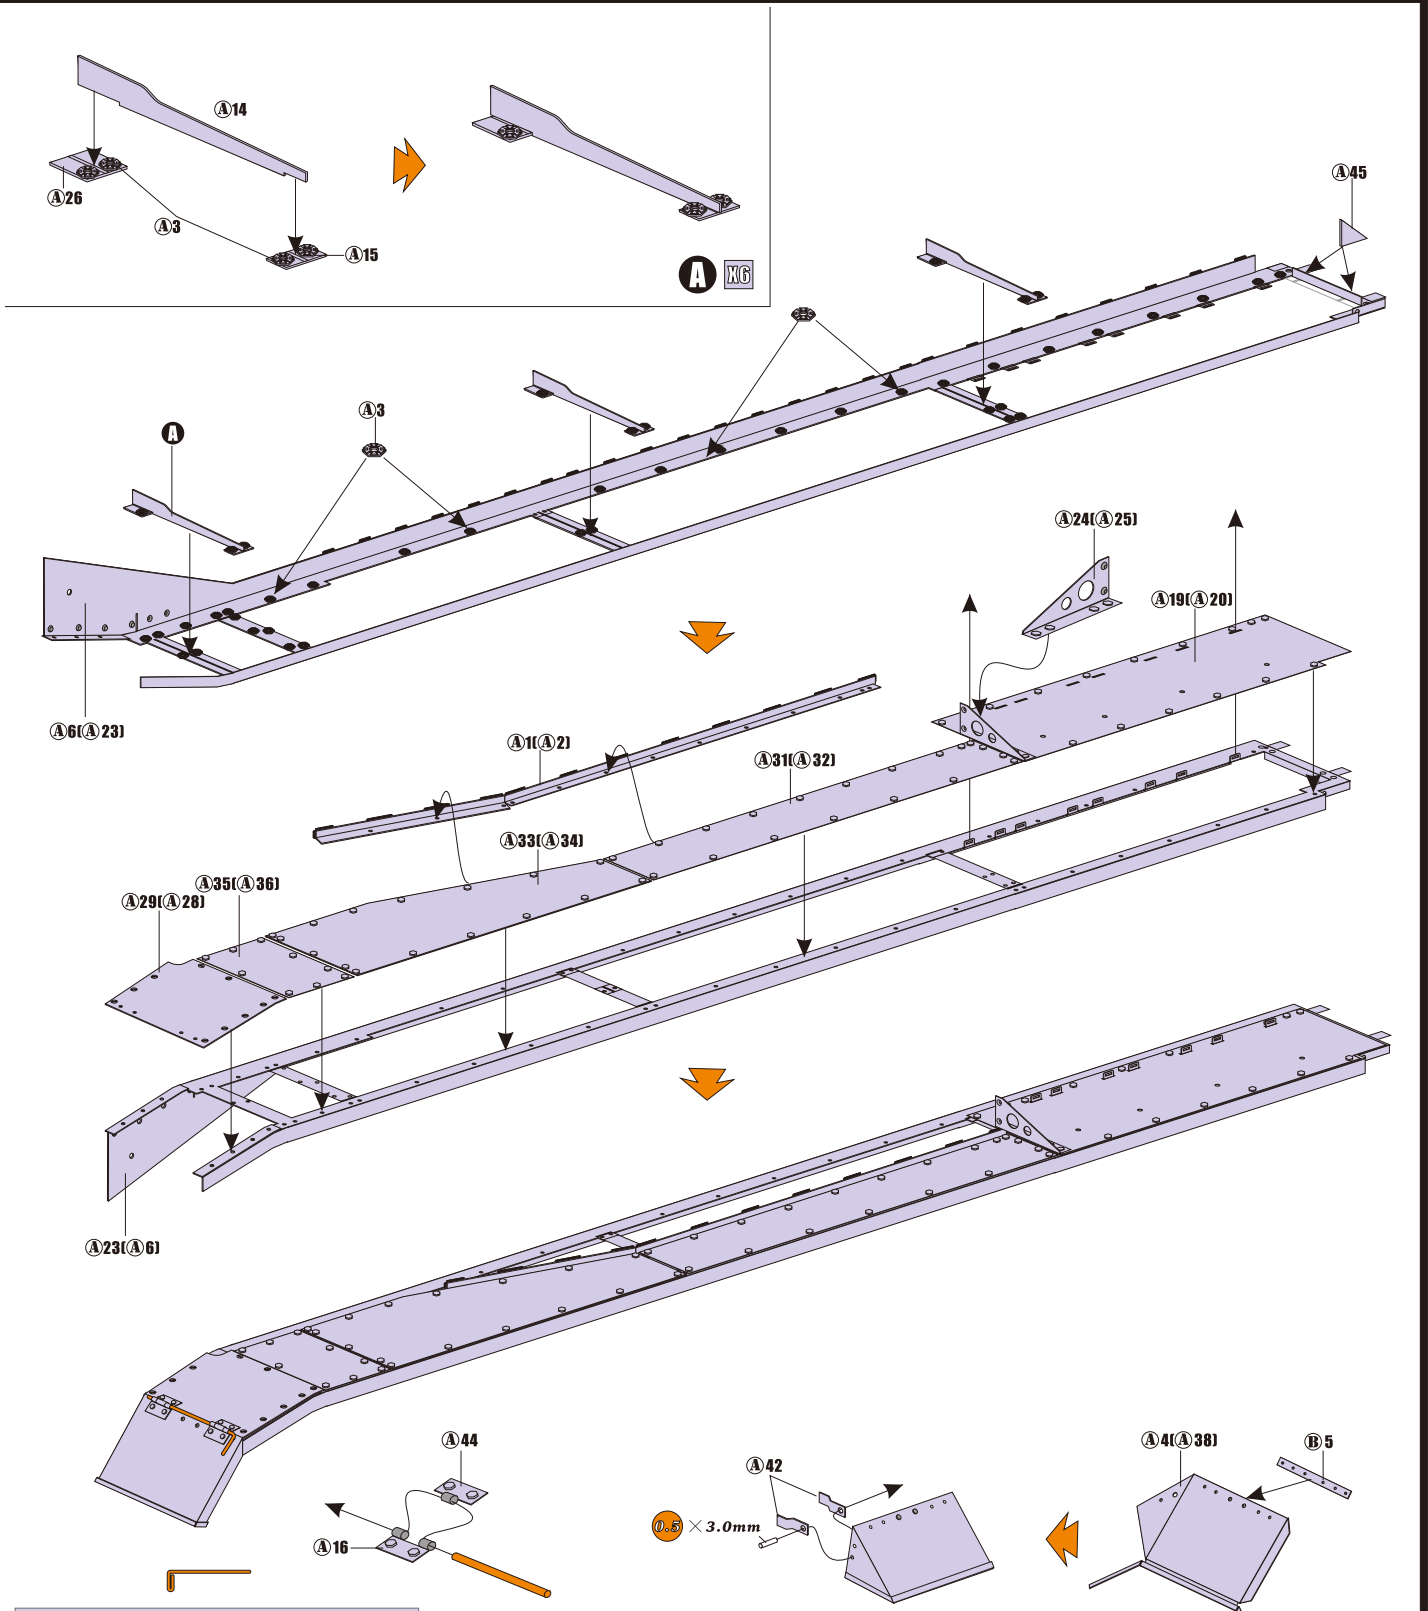


Make of 0.4mm copper wire like this shape by yourself
照此形状用0.4mm铜丝自制




B

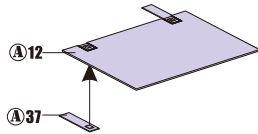




C

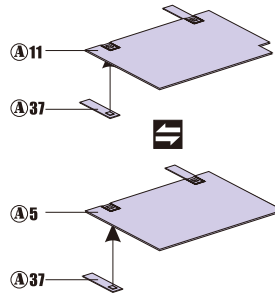



D

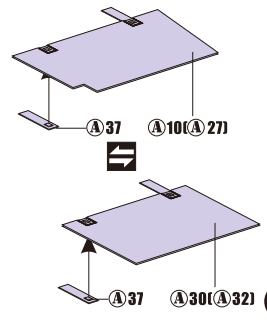


E

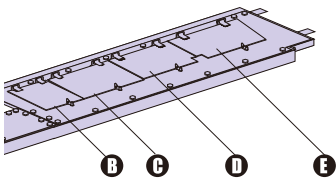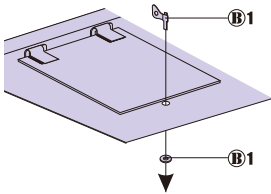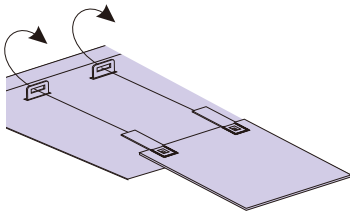

使用1mm胶版自制
Make of 1mm plastic board

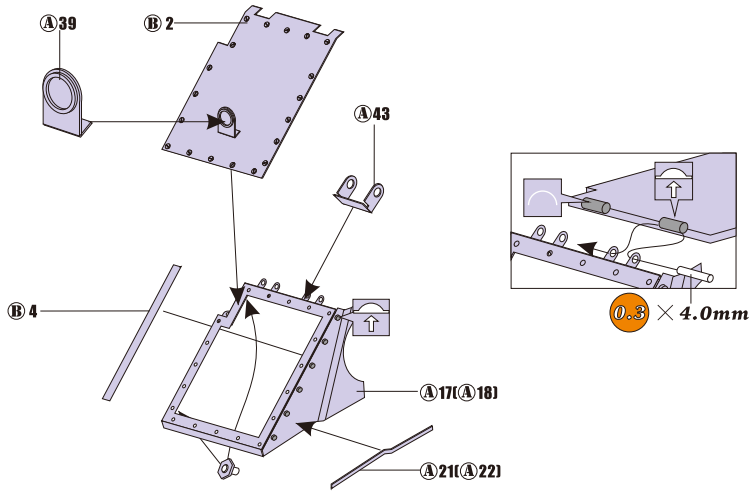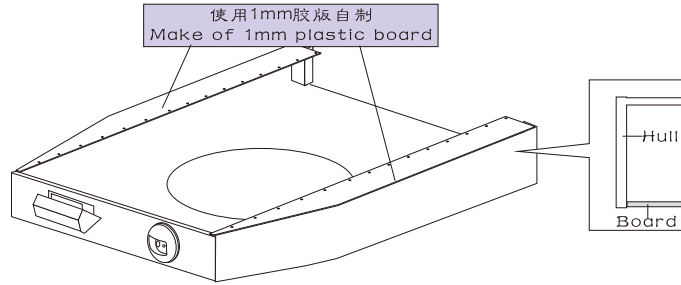

F

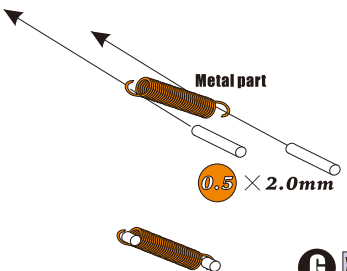

G

