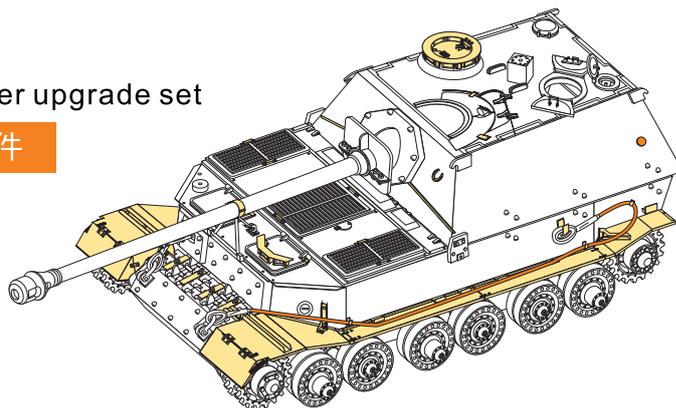1/35 MILITARY MINIATURE VEHICLE UPGRADE SERIES PE 351084
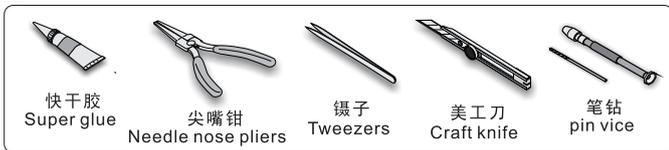
WWII German Sd.Kfz.184 Elefant Tank destoryer upgrade set

二战德军Sd.Kfz.184 象式坦克歼击车改造件

[For ZVEZDA 3659]

■ 推荐使用工具 RECOMMENDED TOOLS

快干胶 Super glue	尖嘴钳 Needle nose pliers	镊子 Tweezers	美工刀 Craft knife	笔钻 pin vice

↑ 安装 install	↰ 折叠 bend	**A1** 改造件零件编号 PE/resin part number	**B12** 原零件编号 kit part number	**C22** 被替换的原零件编号 replaced kit part number	✂ 切除 remove

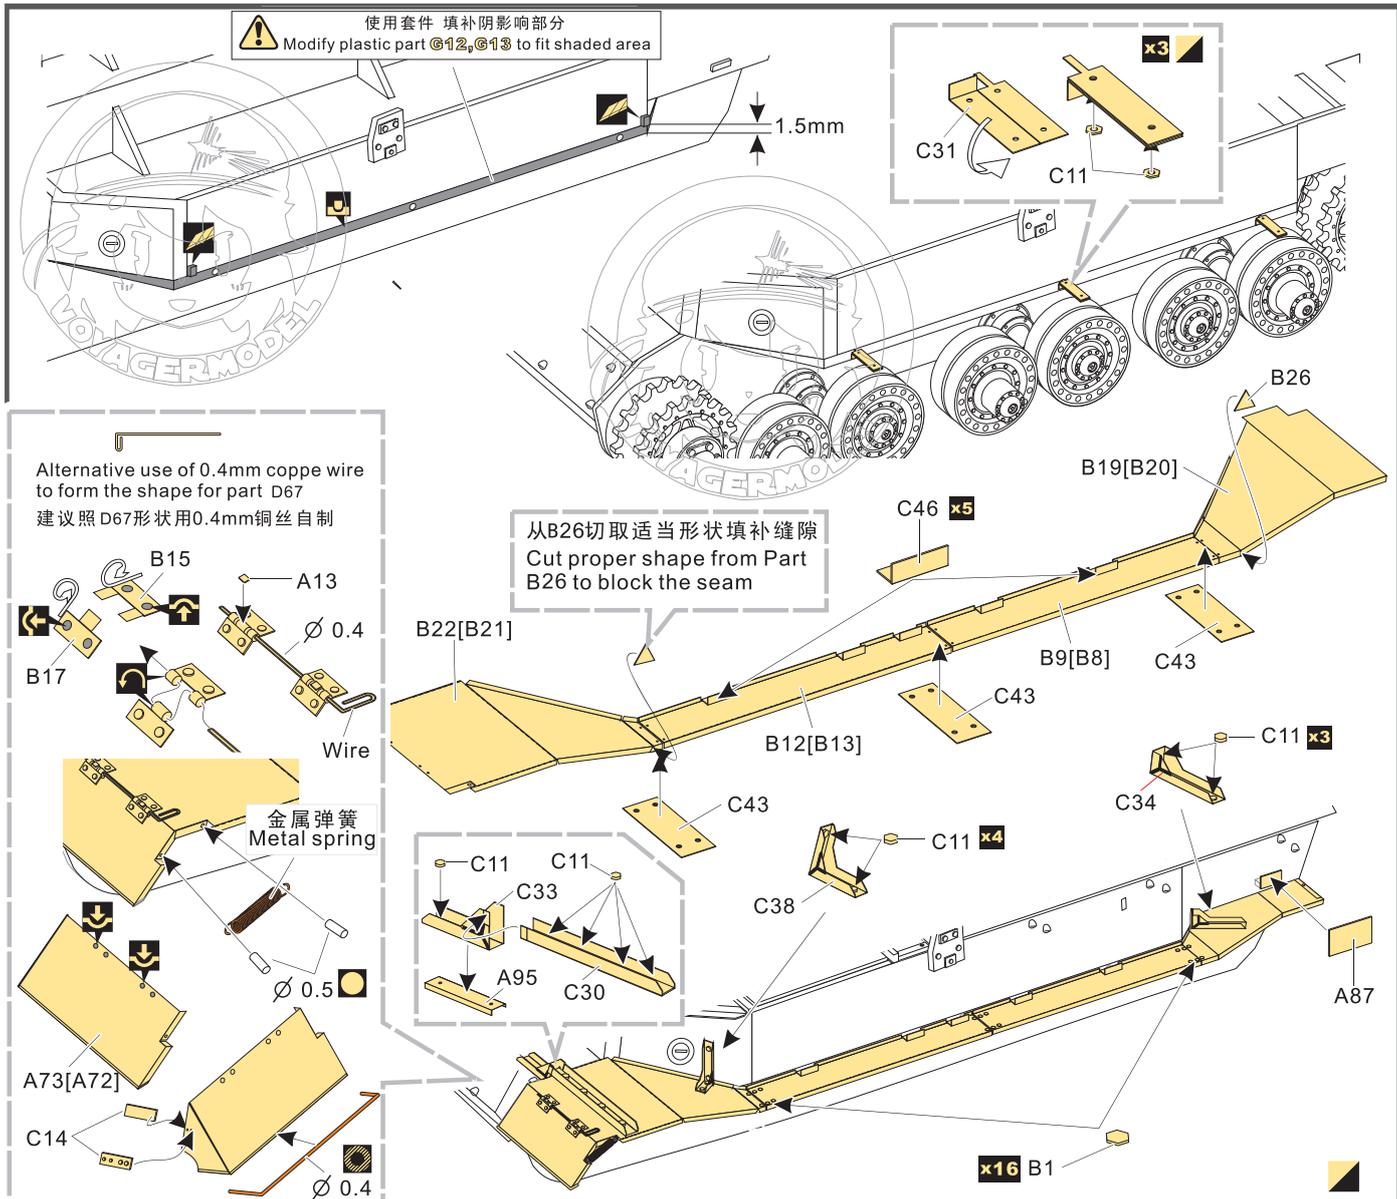| 弧度卷曲 radial bending	**x2** 制作若干组 multiple assembly	另一侧相同制作 repeat on opposite side	选择安装 alternative	钻孔 drill	填补 fill

↓ 用尖端在凹槽处冲压
use penpoint to press on the dent

蚀刻片零件内侧面向上
PE part inboard side turn up
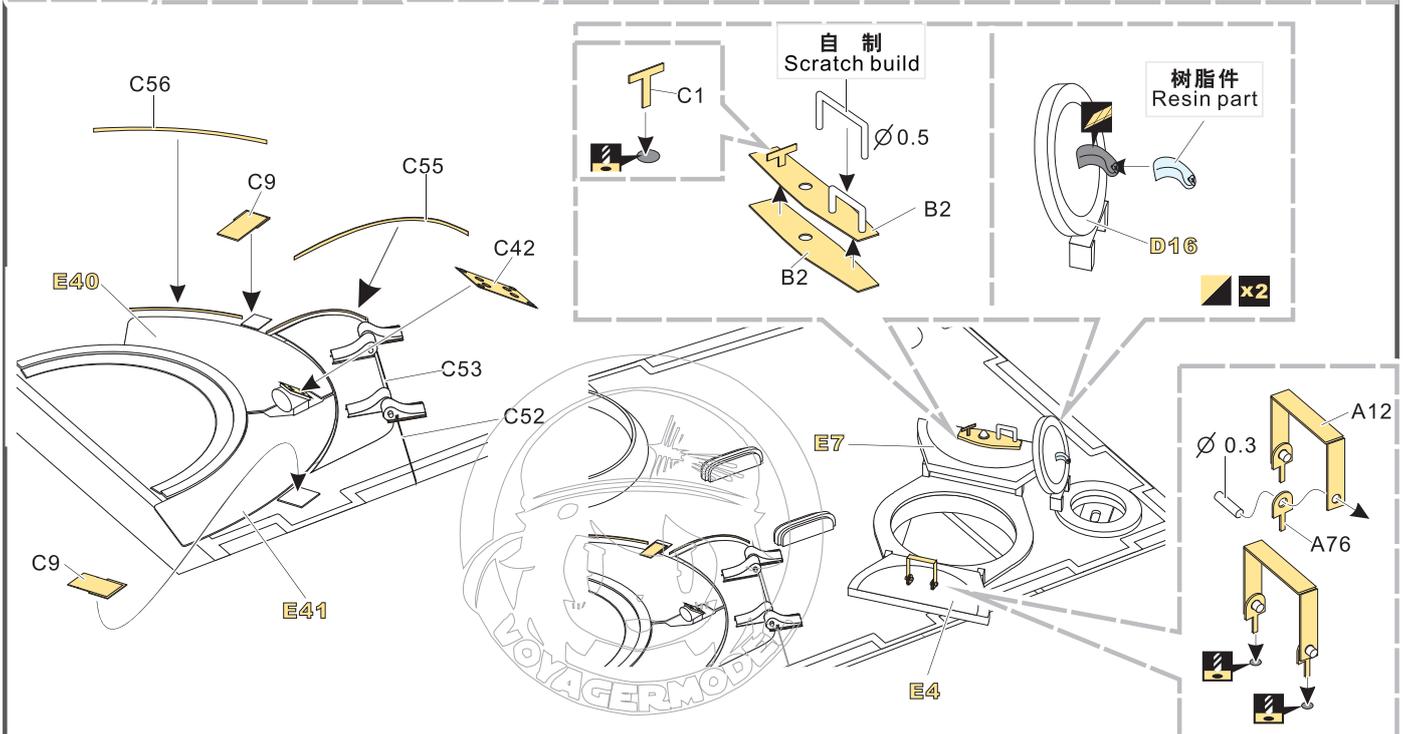
圆珠笔
Ballpen

用笔尖在凹槽处刮
Use penpoint scratch on the flute

使用套件 填补阴影响部分
⚠ Modify plastic part **G12**,**G13** to fit shaded area

1.5mm

x3

C31

C11

B26

B19[B20]

C46 **x5**

B22[B21]

从B26切取适当形状填补缝隙
Cut proper shape from Part B26 to block the seam

B9[B8]

C43

C43

B12[B13]

C43

C11 **x3**

C34

C11 **x4**

C38

Alternative use of 0.4mm coppe wire
to form the shape for part D67
建议照D67形状用0.4mm铜丝自制

B15

A13

B17

∅ 0.4

Wire

金属弹簧
Metal spring

∅ 0.5

C11 C11

C33

A95 C30

A73[A72]

C14

∅ 0.4

A87

x16 B1

1/35 MILITARY MINIATURE VEHICLE UPGRADE SERIES PE 351084

L2

A5
C22
Ø 0.5
A51
Ø 0.5

自 制
Scratch build

⬛ 1.0mmx20mm

A54
A54

C17
A88
Ø 0.5

C12

C45 x3

Ø 0.5
C17
A88

L1

A7
透明胶板
clear plastic sheet
x3
A21

⬛ 1.0mmx20mm
A5

A6
C22
A51

自 制
Scratch build

A54
A54

C5 C6
C60 C7

C12

C68
Ø 0.5
C64
C68

Ø 0.3
C32
Ø 0.3
C66
Ø 0.5

E14,E15
A65

C10

x2

A52
x6

A74

L20,L11,L15 x6

Ø 0.5
C4
C54
H2

C4
C57
x2

Ø 0.5
C4
B4 B3
H2
C4
C57
x2
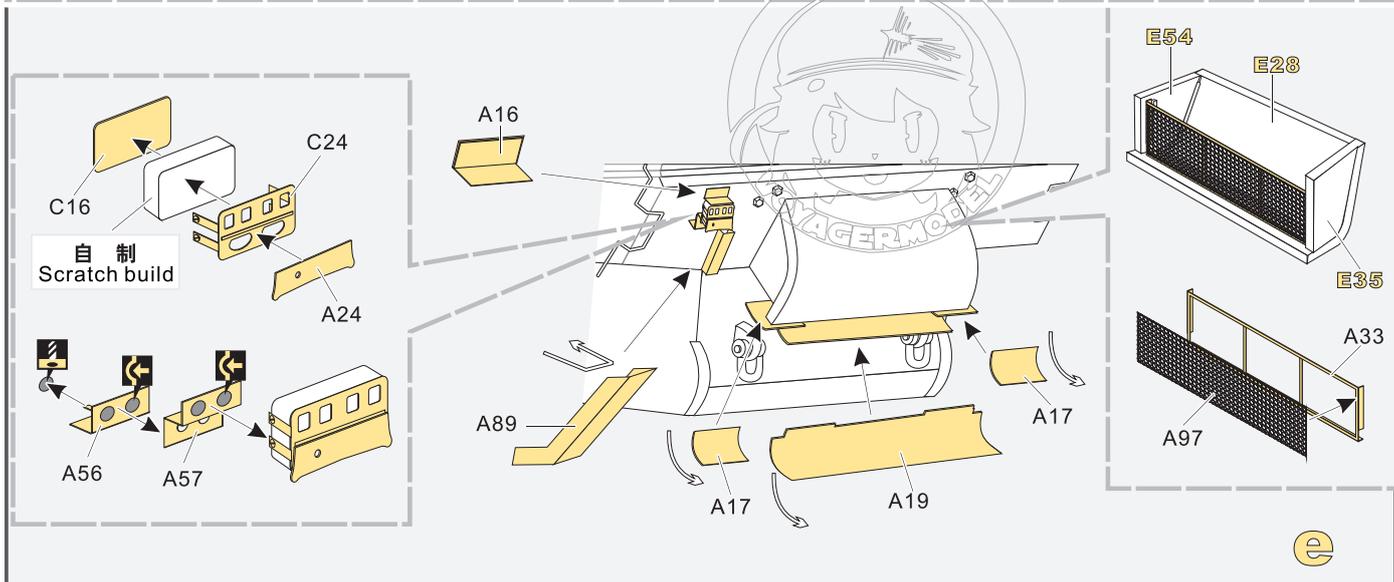
1/35 MILITARY MINIATURE VEHICLE UPGRADE SERIES PE 351084

a

树脂件
Resin part

A12
C20
C23

∅ 0.5
C10
C27
C10
B1

∅ 0.5

B1

∅ 0.5
A3[A2]
A58
A3
A2
B1

反面
Backside

自制
Scratch build
A44

A47
A48
∅ 0.3

A46
A45
∅ 0.3
A22

正面
Frontside

b

A1
x8

A41 A53

TOP
C13

C13
TOP

B6

A41 A37

x6

C13
A4
x7

B1
C26

a

B7 x7

C55
x4

C48

自制
Scratch build
∅ 1.0
C85
A77

C56
C9
C55
C42
E40
C53
C52
E41
C9

C1

自制
Scratch build
∅ 0.5
B2
B2

树脂件
Resin part

D16

x2

E7
E4

A12
∅ 0.3
A76

1/35 MILITARY MINIATURE VEHICLE UPGRADE SERIES PE 351084

金属件
Metal part

C41
C2
B18
C35

x4 C

A8
A75

x4 d

b
c

C51
A18
C51
C8

C1
E57
c
c

C44
L19
C47
C47

C69
C63
d
d

C16
C24
A24
自 制
Scratch build
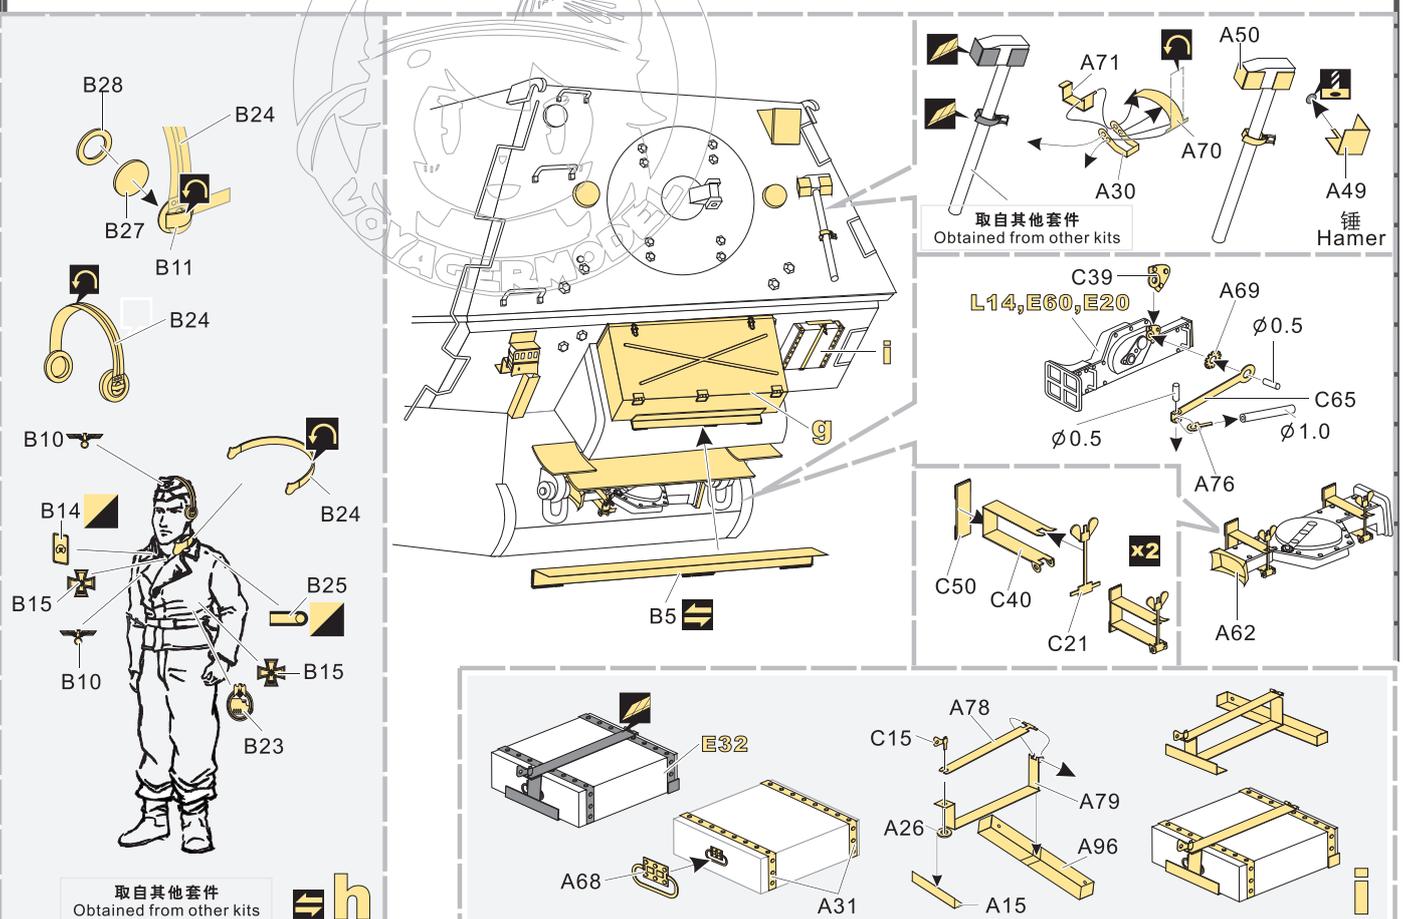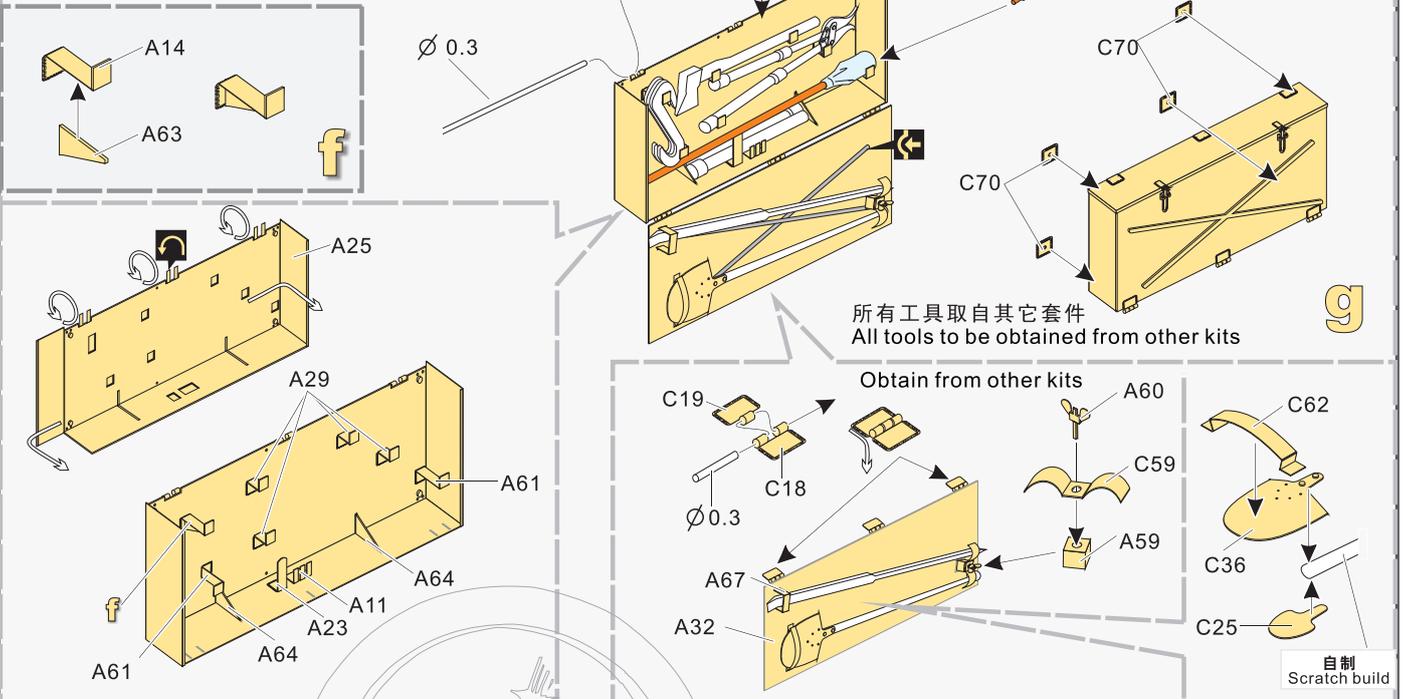A56
A57

A16
A89
A17
A17
A19

E54
E28
E35
A33
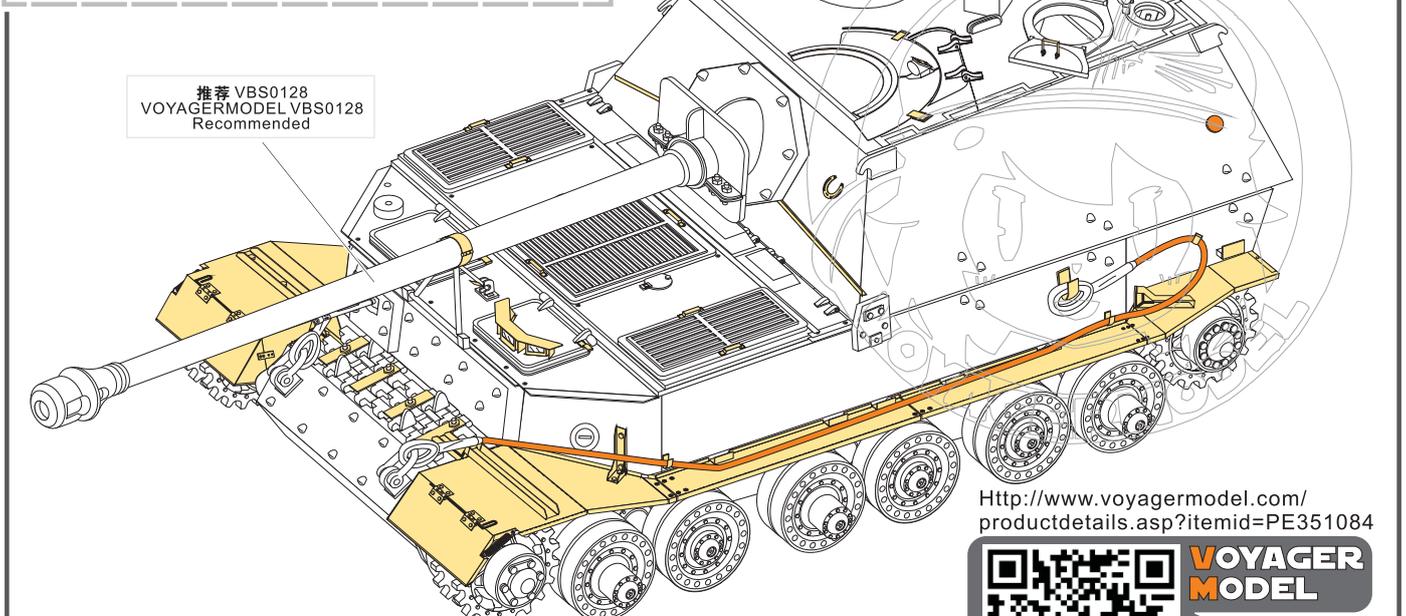A97

e

1/35 MILITARY MINIATURE VEHICLE UPGRADE SERIES PE 351084

Recommended item	
Pe351085	
PEA 156	WWII German Elefant/Ferdinant/ Sturmtiger/Tiger (P) Large Conical Bolts
VBS 0128	WWII German Elefant/Ferdinand Barrel w/Mantlet

A14

A63

f

A99

A66

⌀ 0.3

金属件
Metal part

树脂件
Resin part

C70

C70

g

所有工具取自其它套件
All tools to be obtained from other kits

A25

A29

A61

A11
A23
A61
A64
A64

f

Obtain from other kits

C19

C18

⌀ 0.3

A60

C59

A59

A67

A32

C62

C36

C25

自制
Scratch build

B28

B24

B27

B11

B24

B10

B14

B15

B10

B25

B15

B23

取自其他套件
Obtained from other kits

h

A71

A50

A30

A70

A49

取自其他套件
Obtained from other kits

锤
Hamer

C39

L14, E60, E20

A69

⌀ 0.5

C65

⌀ 0.5

⌀ 1.0

A76

C50

C40

×2

C21

A62

g

B5

E32

A78

C15

A79

A26

A96

A68

A31
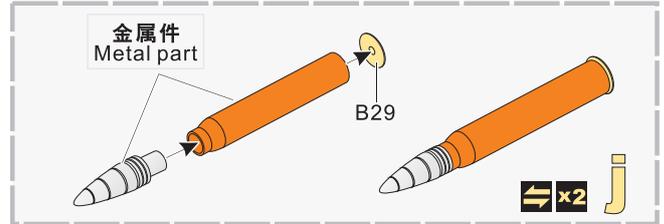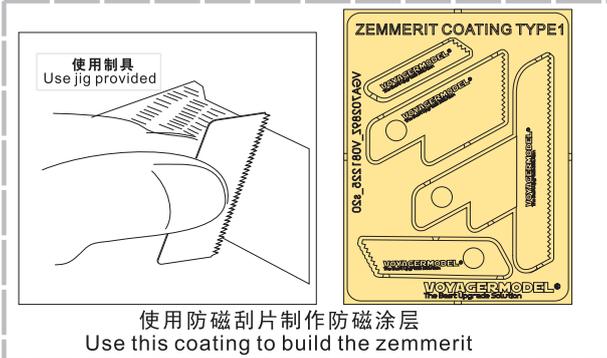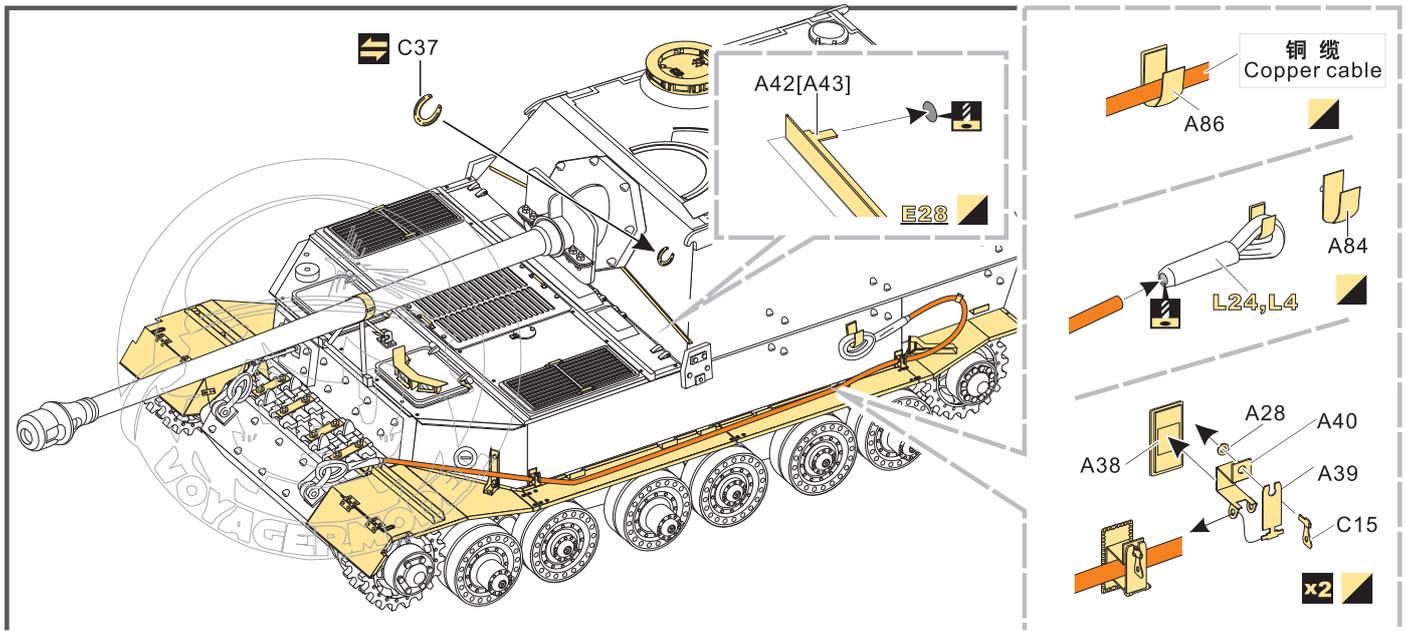
A15

i

1/35 MILITARY MINIATURE VEHICLE UPGRADE SERIES PE 351084

C37

A42[A43]

E28

铜 缆
Copper cable

A86

A84

L24,L4

A38

A28   A40

A39

C15

x2

使用制具
Use jig provided

ZEMMERIT COATING TYPE1

VOYAGER PE 351084 350

使用防磁刮片制作防磁涂层
Use this coating to build the zemmerit

金属件
Metal part

B29

x2

推荐 VBS0128
VOYAGERMODEL VBS0128
Recommended

Http://www.voyagermodel.com/
productdetails.asp?itemid=PE351084

Recommended item	
PE 35848	WWII German Panzerkampfwagen VI (P) No.003 Ver 2.0
PE 35932	WWII German Panzerkampfwagen VI (P)
PE 35427	WWII German KINGTIGER VK.45.02(P)H/V 2IN1
PE 35291	WWII German Sd.Kfz.184 Ferdinand
PE 35290	WWII German Sd.Kfz.184 Elefant
PE 35520	WWII German Sd.Kfz.184 Elefant Tank destoryer
PE 35059	WWII German Bergepanzer Tiger(P)

VOYAGERMODEL®
The Best Upgrade Solution
无 微 不 至   极 尽 享 受

更多PE351084样品照片参考请扫一扫
MORE PICTUER OF PE 351084
REFERENCE SCAN HERE