



A Humbrol 56 MM 1781	B Humbrol 127 MM 1728 FS 36375	C Humbrol 129 MM 1730 FS 36440	D Humbrol 126 MM 1725 FS 36270	E Humbrol 156 MM 2035 FS 36173	F Humbrol 65 MM 2033 FS 35414	G Humbrol 47 MM 1508 FS 35450	H Humbrol 48 FS 35187
I Humbrol 86 MM 1591 FS 34102	J Humbrol 150 MM 1714 FS 34127	K Humbrol 3 (88) FS 14062	L Humbrol 117 MM 1713 FS 34102	M Humbrol 105 MM 1712 FS 34097	N Humbrol 149 MM 1764 FS 34092	O Humbrol 30 MM 2027 FS 34096	P Humbrol 116 MM 1710 FS 34079
Q Humbrol 83 MM 1706 FS 33531	R Humbrol 118 MM 1742 FS 30219	S Humbrol 10 MM 1540 FS 3018	T Humbrol 60 MM 1550 FS 31350	U Humbrol 34 MM 1768 FS 37875	V Humbrol 33 MM 1749 FS 37038		

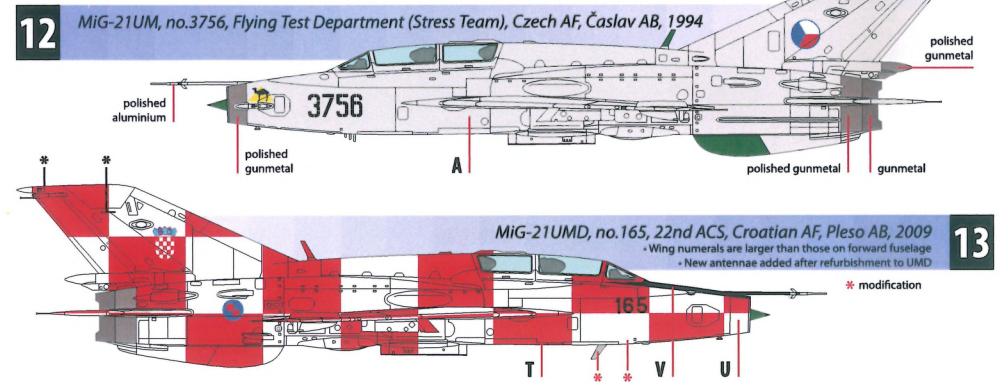

©2012 LiftHere!Decals Contact e-mail: lifthereserbia@gmail.com Web site: <http://lifthereserbia.wordpress.com>


global mongols II

YUGOSLAVIA, ROMANIA, CAMBODIA, FINLAND, CUBA, CZECHOSLOVAKIA...

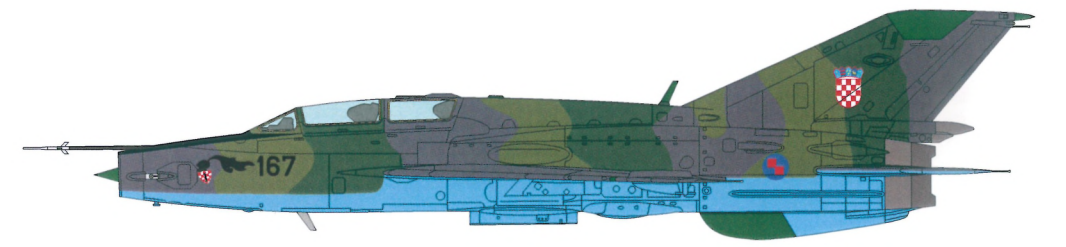


903-LH
SPECIAL
LIMITED
1/72
EDITION


01 MiG-21UM, no.16173, 83rd FS, FR Yugoslavia AF, Slatina AB, 1996

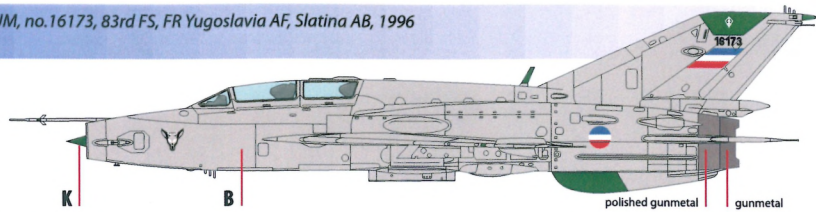


02 MiG-21UM, no.16174, 204th FS, Serbian-Montenegrin AF, Batajnica AB, 2005

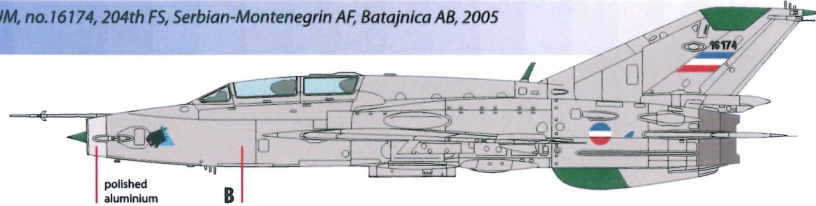

03 MiG-21UM, no.177, 91st BdeV, Romanian AF, Borcea-Fetesti AB, 1994

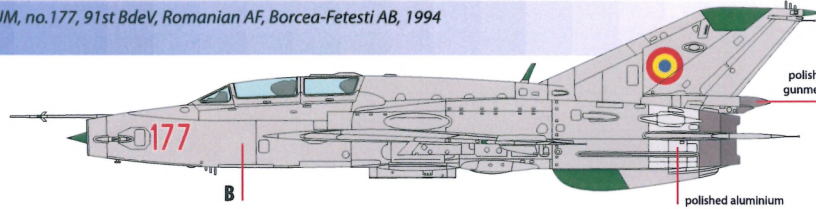


04 MiG-21UM, no.7114, Royal Cambodian AF, Unit 701, Phnom Penh Pochentong AB, 2000

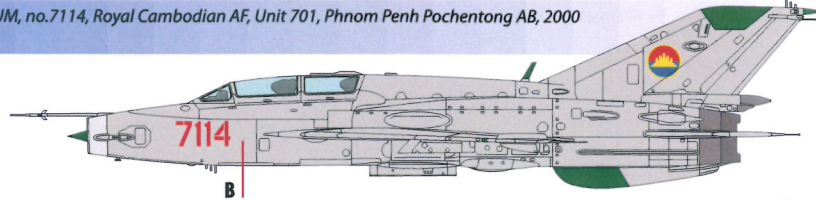


05 MiG-21UM, no.MK-126, HavLLv 31, Finnish AF, Kuopio-Rissala AB, 1995

* modification

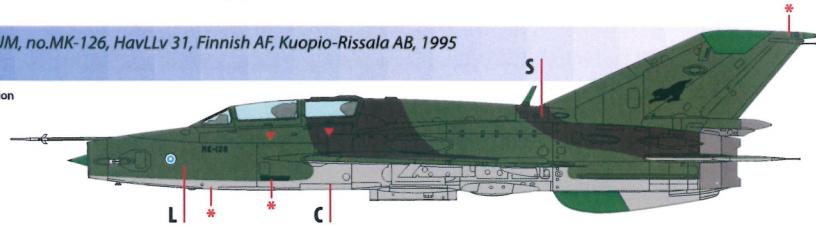


06 MiG-21UM, no.MK-105, HavLLv 31, Finnish AF, experimental grey scheme, 1991


* modification

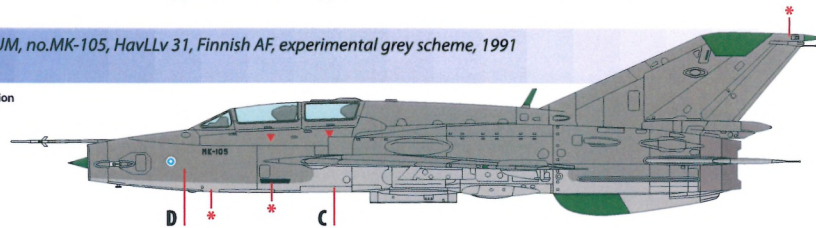

07 MiG-21US, no.502, Cuban AF, preserved in Cuban Air Museum, Havana, 2009

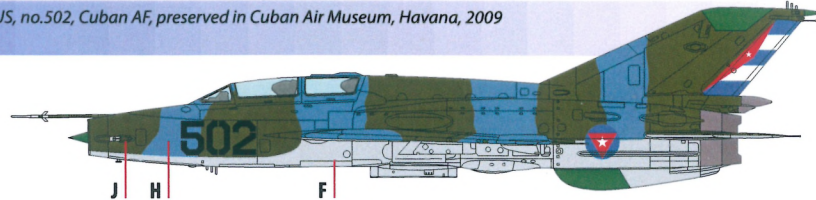


08 MiG-21UM, no.5026, 9th FS, Czechoslovak AF, Bechyne AB, 1990

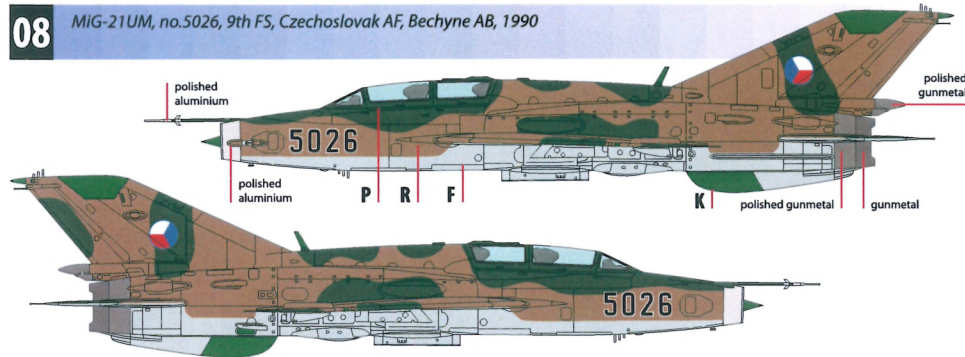


09 MiG-21UM, no.23+85 (former GDR AF no.213, JG 3, TAFS 87), German Luftwaffe, 1991

* modification

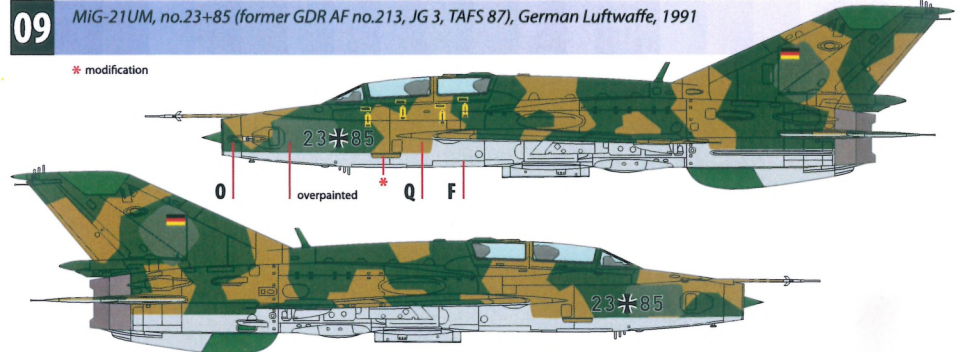


10 MiG-21UM, no.160, 21st FAS, Croatian AF, Pleso AB, late 1990's

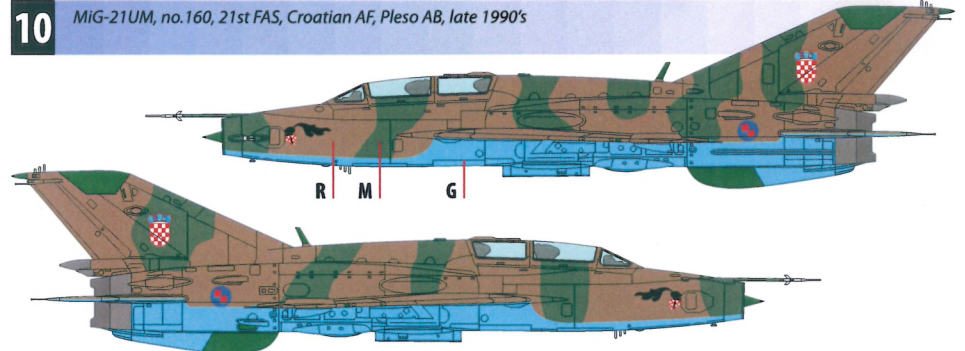


11 MiG-21UMD, no.167, 22nd ACS, Croatian AF, Pleso AB, 2009

* modification

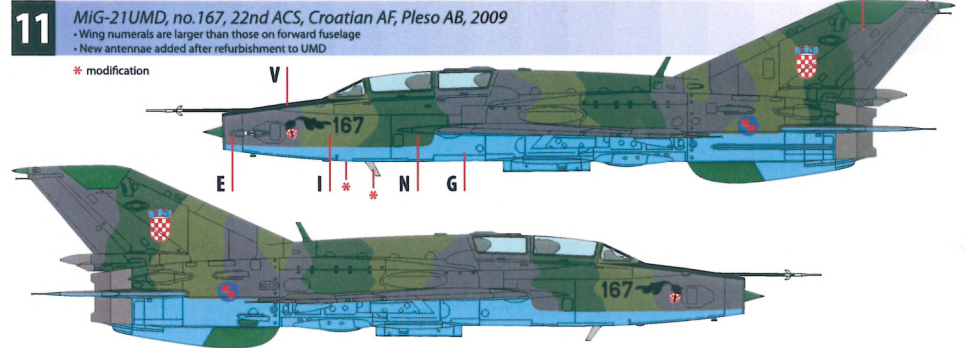

• Apply decals only on smooth and glossy surfaces. • Carefully cut the decal that you need from the sheet. • Dip in clean water for about 10s. • After that lay it over absorbent paper towel for 30s. • Apply the setting solution to the desired area. • Slide the decal from the paper using a soft paintbrush. • After 5min apply the solvent solution and wait overnight. • Wash the kit and later apply the final coat.

• The undercarriage legs and interior are unpainted. • Cockpit interior is blue-green (FS 35229). • The fitting on canopies, between glass and frame, is yellow putty. • Additional fuel tanks are natural metal.



Lift Here!