

Grumman Martlet II (F4F-4)



Grumman Martlet II (F4F-4)





- 1. Apply gloss cote to model suface
- 2. Cut out the needed detail from the sheet.
- 3. Submerge the decal completely in lukewarm water for 10 sec.
- 4. Put the wet decal on-plotting base and allow it soften completely.
- 5. Place the decal together with the base paper on the model. We recommended use decal solutions(Setter, Softer)Keep paper by tweezers and remove decal carefuly to model surface. In case that the decal was placed incorrectly, add water with a brush on the border of the decal.
- 6. If the decal is located on the right place, press it with a soft cloth to eliminate all water and air bubbles.
- 7. Allow the decal dry well.




Czech Republic


http://www.roposmodels.cz http://www.mn-modelar.cz Email:roposmodels@gmail.cz

Martlet II in the service of the Royal Navy


Grumman Martlet II, AJ122, red B, 881st Squadron, Macknnon Road, East Africa, early 1943

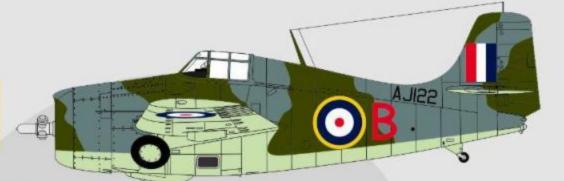


Grumman Martlet II, AJ 128, white D, 881st Squadron, HMS Ilustrious, 1943

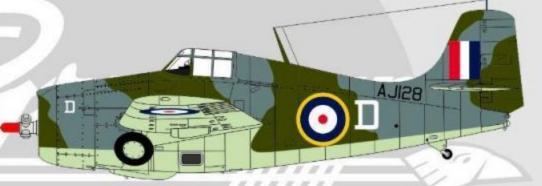

Grumman Martlet II, AJ104, white P, 888th Squadron, HMS Formidable, Indian Ocean, 1942

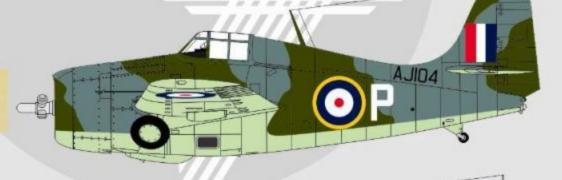

Grumman Martlet II, AJ132, red B-A, 881st Squadron, Macknnon Road, East Africa, late 1942

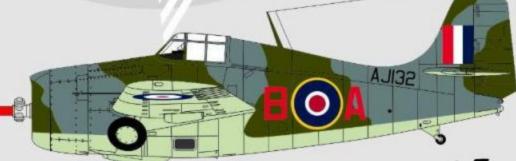

part S

Limited series only 200 pcs!

1/48

MNFD L48038

