




QD32227
1/32 MiG-29UB
INTERIOR 3D DECAL

(for Trumpeter kit)




! The easy way to make a thin scratchbuilt base for 3D Decals, if needed

1. Cut out the part. Allow margins around the part
2. Apply CA glue to the underside of the decal
3. Carefully cut out around the edges

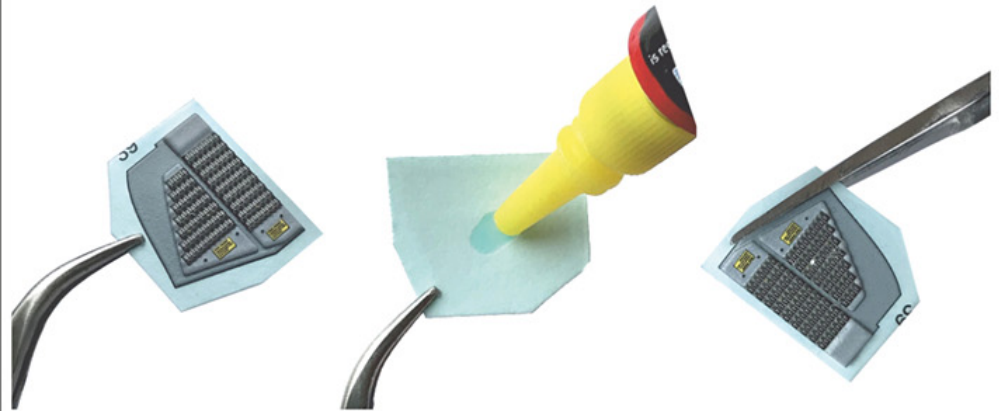

A00 - kit part #

* - remove relief from kit part first

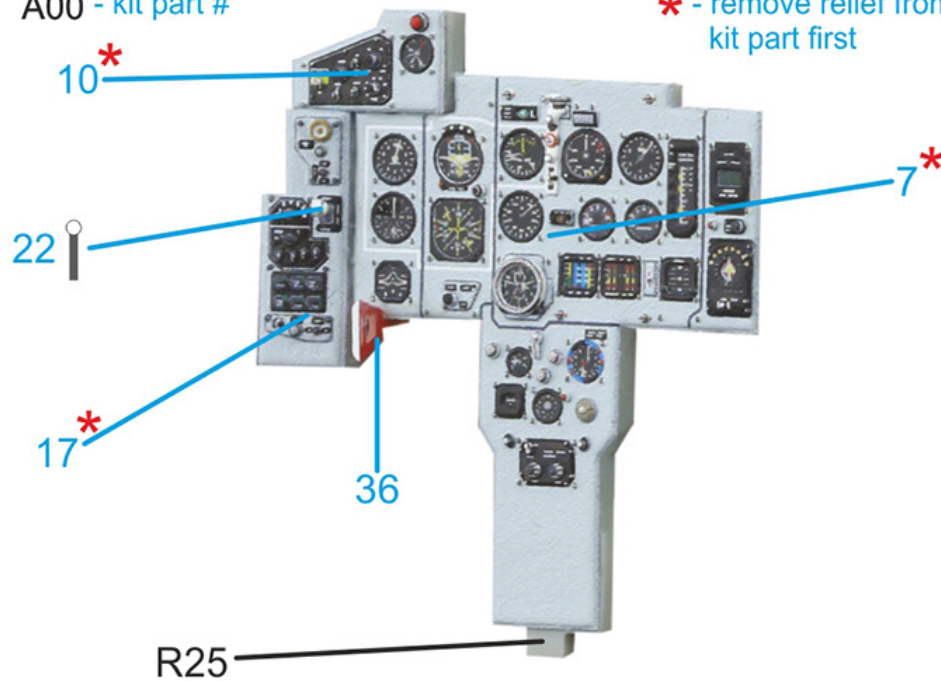

A00 - kit part #

* - remove relief from kit part first

