



QD+48480
1/48 Su-17M4/Su-22M4
INTERIOR 3D DECAL

(for Hobby Boss kit)




! The easy way to make a thin scratchbuilt base for 3D Decals, if needed

1. Cut out the part.
Allow margins
around the part

2. Apply CA glue to
the underside of
the decal


3. Carefully cut out
around the edges

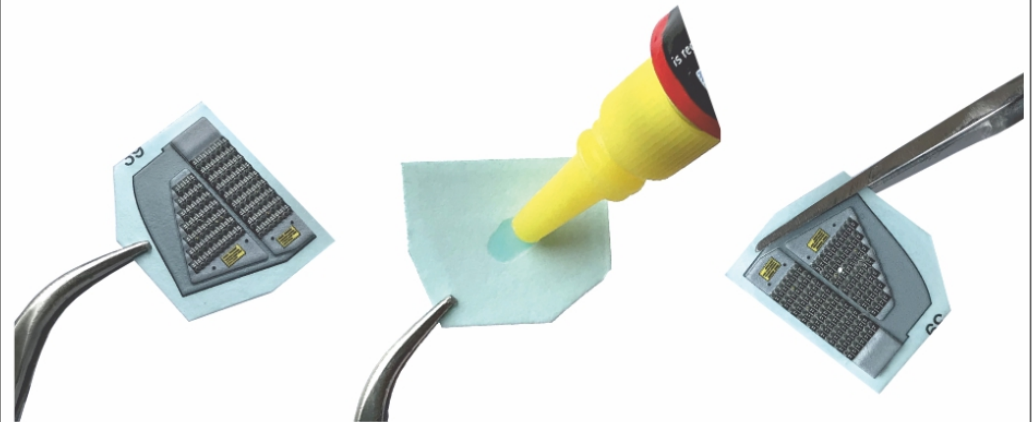

A00 - kit part #


* - scratchbuild bases needed

* - remove relief from
kit part first

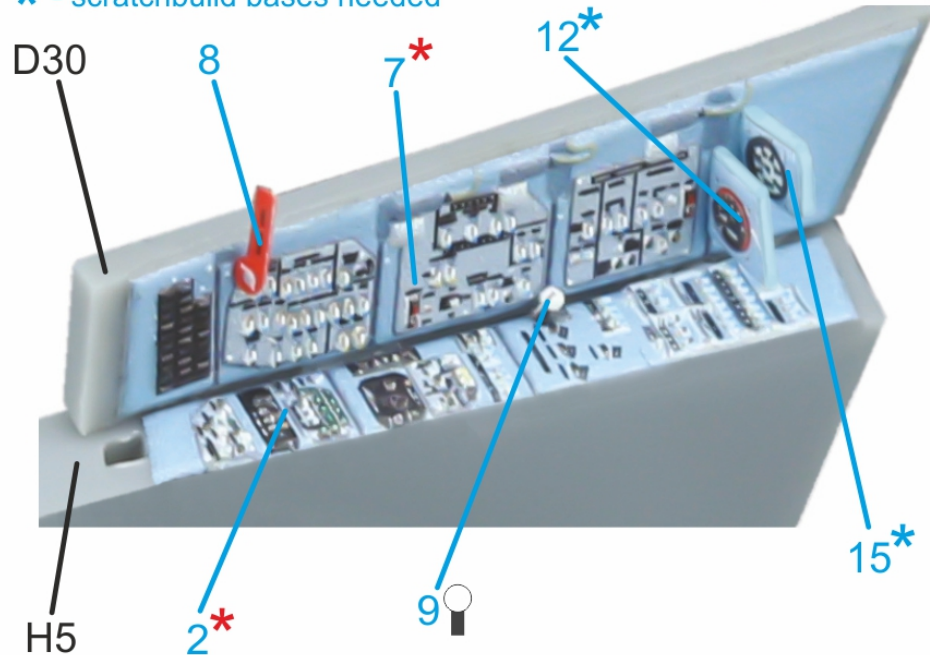


A00 - kit part #

* - remove relief from
kit part first

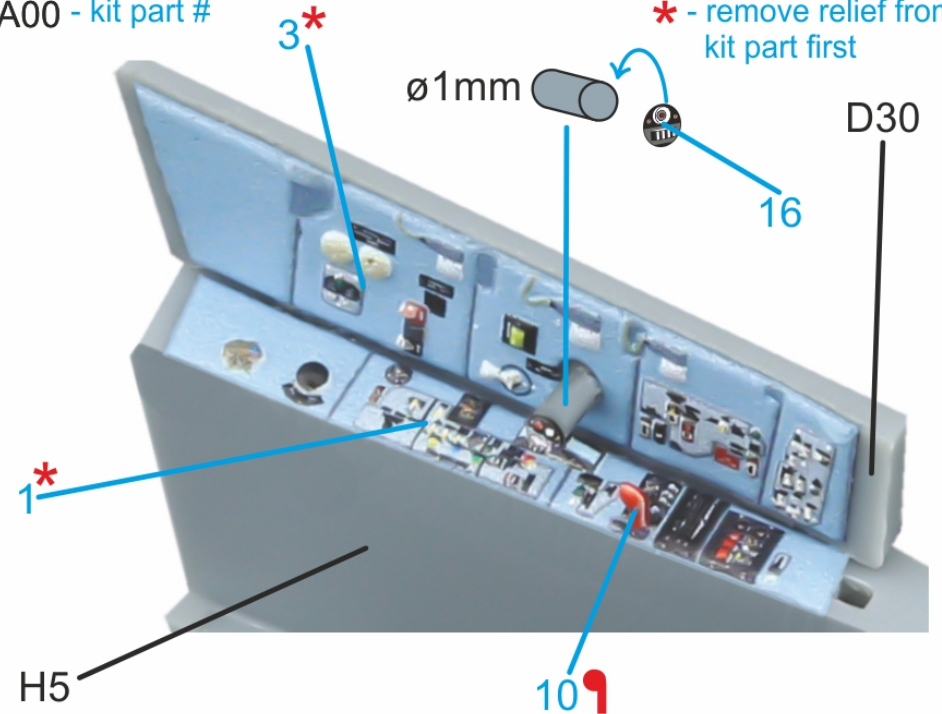

A00 - kit part #


* - remove relief from kit part first

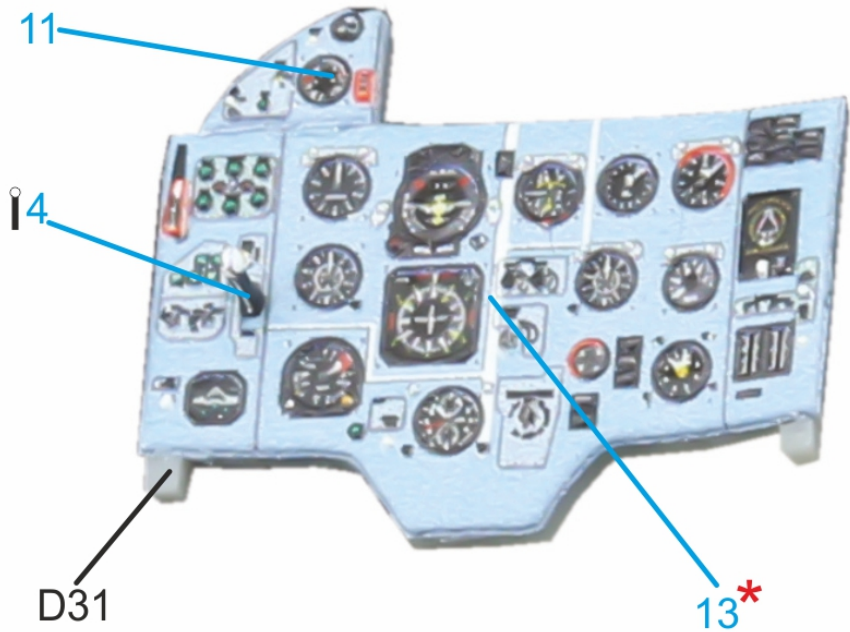


A00 - kit part #

* - scratchbuild bases needed
D2+E6+E15


14(Fill) * - remove relief from kit part first

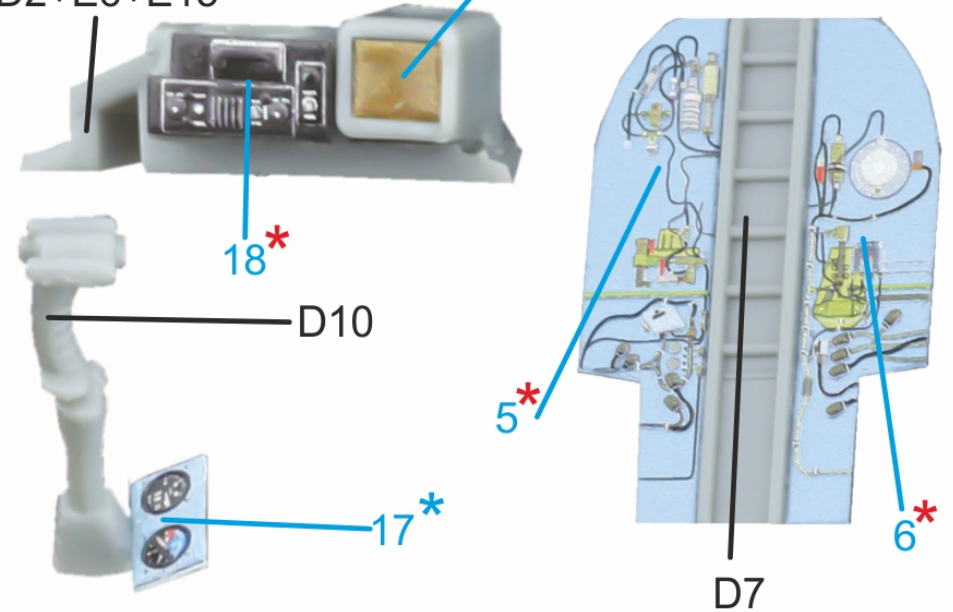

A - 3D-напечатанная деталь

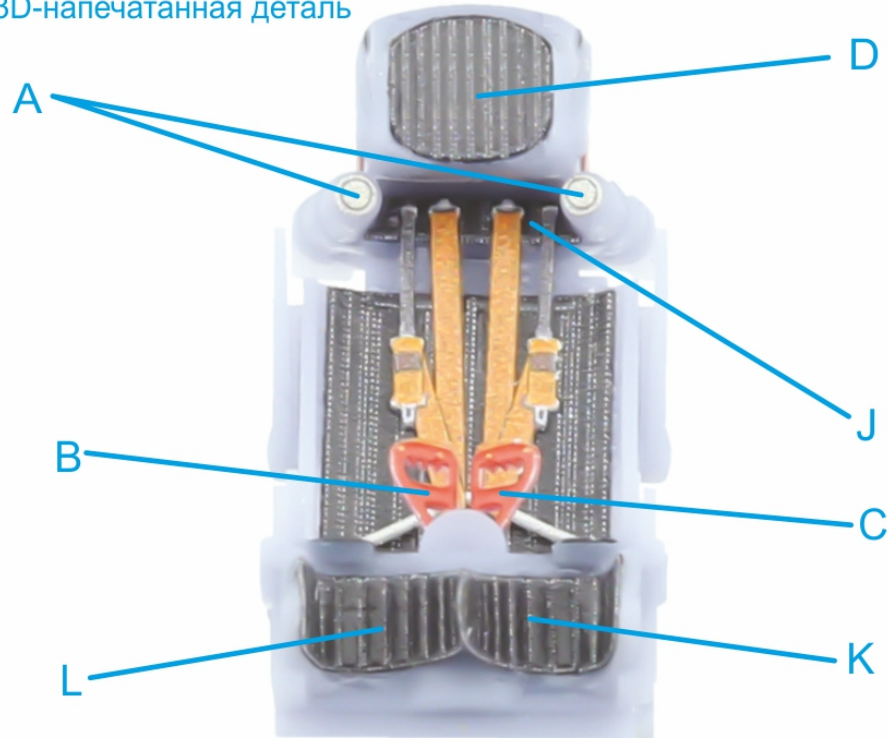

* - repeat at the opposite side

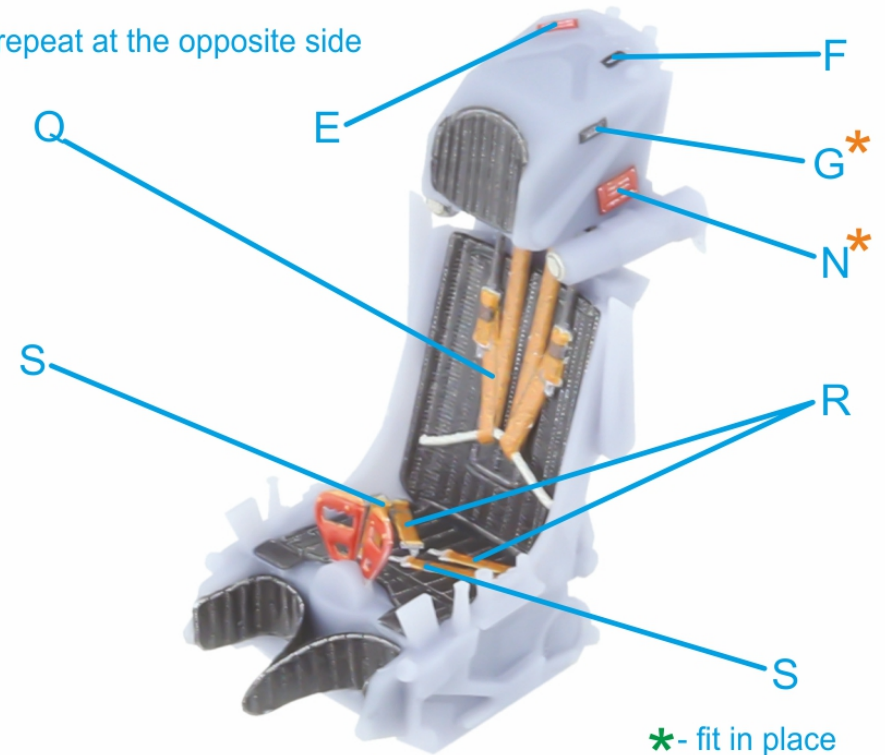

* - fit in place