

**Revell**  
*Authentic Kit*



# “Facts about the SAAB DRAKEN J 35 FIGHTER”

This aircraft is a single seat fighter capable of supersonic speeds. Having a “double-delta” wing configuration, it stands apart from any other delta wing aircraft in the world.

It is powered by Rolls-Royce Avon turbojets built under licence in Sweden by Svenska Flygmotor A.B., fitted with Swedish designed afterburners giving a total thrust of about 15,800 lb. This gives a maximum speed of the order of Mach. 1.88 (1,188 m.p.h. above 36,000 feet).

It has a wing span of 30.8 ft. and an overall length of 46.5 ft.

It is completely radar equipped and has a pair of 30 mm Aden cannons mounted in the wings. In its role as an interceptor these guns will be supplemented by a pair of air-to-air missiles or unguided air-to-air rockets.

Weighing between 17,900 lb. and 20,150 lb according to the armament carried, the Draken has an initial climb rate of the order of 39,000 ft. per minute. It also has excellent low speed performance which means that only moderate runway lengths are required.

Except for a few accessories, the entire aircraft is of Swedish manufacture. It does credit to Sweden’s relatively small aircraft industry.

The decals in the kit are authentic Swedish Airforce Squadron markings. This aircraft is now in service.

CUT HERE

PLEASE FILL IN COUPON BELOW IN INK

## PARTS LIST FOR YOUR SAAB J 35 DRAKEN

FROM: **Revell** (GB) LTD. **CRANBORNE ROAD, POTTERS BAR, HERTS.**

To: \_\_\_\_\_

NAME \_\_\_\_\_

ADDRESS \_\_\_\_\_

- |                        |                                   |                                 |
|------------------------|-----------------------------------|---------------------------------|
| 1. FUSELAGE TOP        | 11. REAR CANOPY                   | 19. LEFT INBOARD DOOR           |
| 2. FUSELAGE BOTTOM     | 12. LEFT ENGINE INTAKE CAP        | 20. RIGHT INBOARD DOOR          |
| 3. EXHAUST CAP         | 13. RIGHT ENGINE INTAKE CAP       | 21. LEFT OUTBOARD DOOR          |
| 4. NOSE CONE           | 14. MAIN LANDING WHEELS (2)       | 22. RIGHT OUTBOARD DOOR         |
| 5. VERTICAL STABILISER | 15. LEFT MAIN LANDING GEAR STRUT  | 23. NOSE LANDING WHEEL          |
| 6. DORSAL FIN          | 16. LEFT MAIN LANDING GEAR        | 24. NOSE LANDING GEAR           |
| 7. PILOT'S SEAT        | 17. RIGHT MAIN LANDING GEAR STRUT | 25. NOSE LANDING GEAR DOORS (2) |
| 8. LEFT WING           | 18. RIGHT MAIN LANDING GEAR       | 26. DECALS                      |
| 9. RIGHT WING          |                                   |                                 |
| 10. FORWARD CANOPY     |                                   |                                 |

SHOULD ANY PARTS BE MISSING, CIRCLE MISSING PARTS AND SEND IN PARTS LIST AND COUPON TO: DEPT. X, REVELL, (GREAT BRITAIN) LTD., CRANBORNE ROAD, POTTERS BAR, HERTS.




**IMPORTANT !  
READ  
THIS  
FIRST :**



1. **NOTE:** Do not let cement touch your eyes or clothing. This kit is molded of Styrene Plastic. Use only REVELL TYPE S CEMENT.
2. Apply cement to *only* those surfaces where parts join. Use sparingly, since any excess cement may run and damage the details on your model.
3. All parts are numbered for easy identification, or the numbers are engraved on the bar next to each part. Break each part from its bar only when that part is to be used.
4. For the best fit, carefully trim any excess plastic from parts before assembling.
5. If you wish, paint all parts where indicated and allow them to dry before assembling. USE ONLY REVELL PAINT-SET ENAMEL COLOURS.
6. The directions for applying Decals are on the back of the Decal Sheet. Use a small brush to wet your model and help place the Decals into position.
7. **NOW CAREFULLY FOLLOW THESE NUMBERED STEPS FOR EASE IN BUILDING YOUR MODEL.**

**1**

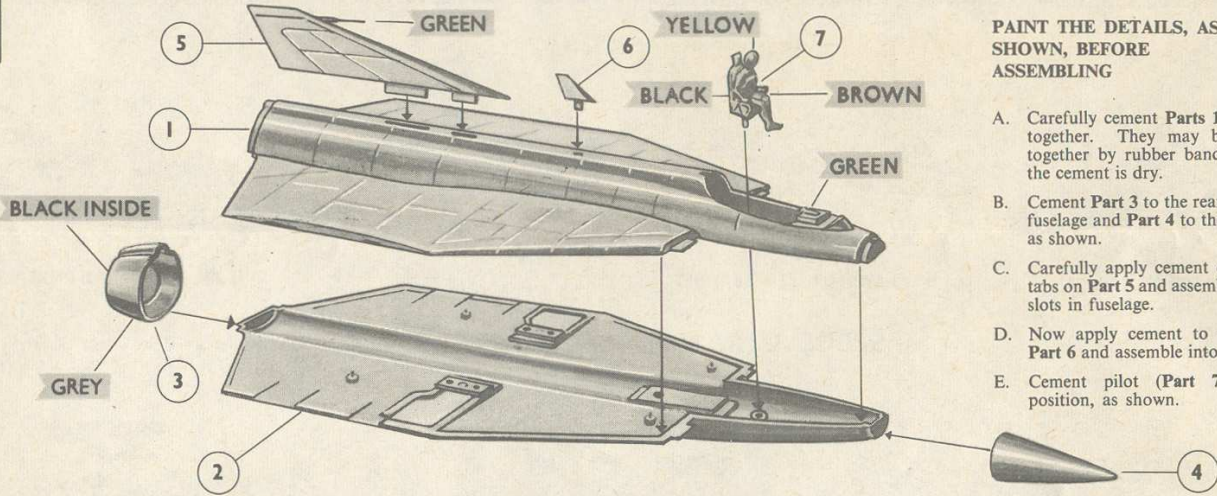


**PAINT THE DETAILS, AS SHOWN, BEFORE ASSEMBLING**

- A. Carefully cement **Parts 1 and 2** together. They may be held together by rubber bands until the cement is dry.
- B. Cement **Part 3** to the rear of the fuselage and **Part 4** to the front, as shown.
- C. Carefully apply cement only to tabs on **Part 5** and assemble into slots in fuselage.
- D. Now apply cement to tab on **Part 6** and assemble into slot.
- E. Cement pilot (**Part 7**) into position, as shown.

**2**


**PAINT THE DETAILS, AS SHOWN, BEFORE ASSEMBLING**

- A. Apply cement to tabs on **Parts 8 and 9** and assemble into slots in fuselage.
- B. Carefully apply cement to the edges of **Parts 10 and 11** and assemble to the fuselage. **DO NOT ALLOW CEMENT TO RUN ON TO THE CLEAR SURFACES.** Now paint the canopy frame detail black using a fine brush.
- C. Cement **Parts 12 and 13** into place, as shown.
- D. Apply decals to stabiliser, top surfaces and fuselage sides, as shown.

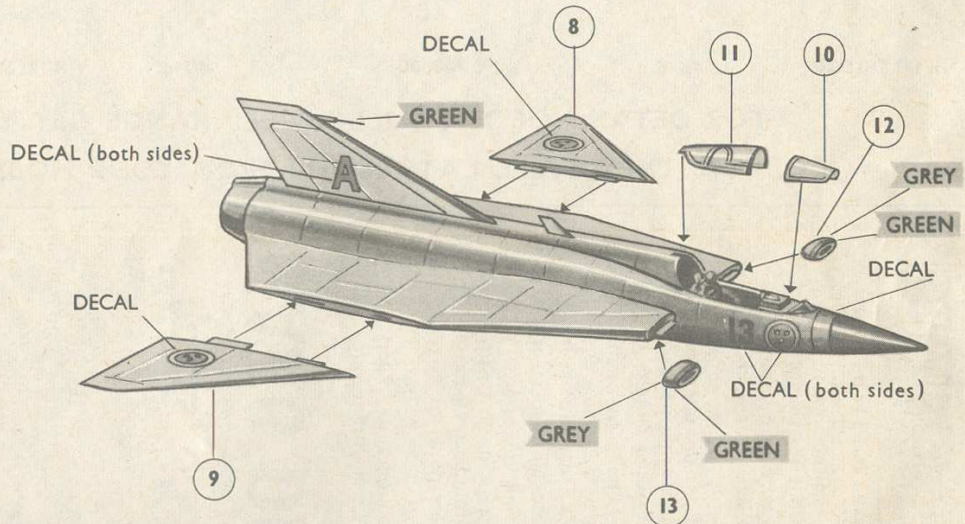

**3**

**PAINT THE DETAILS, AS SHOWN, BEFORE ASSEMBLING**

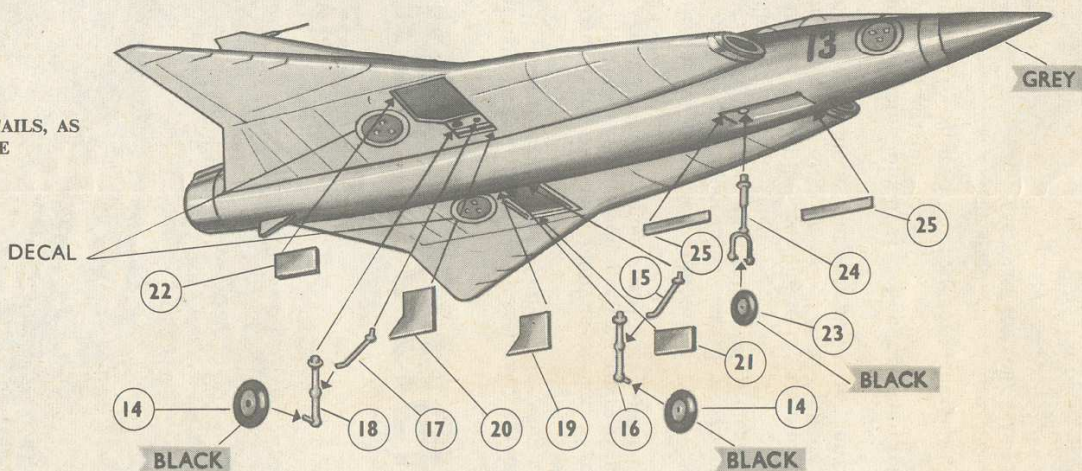

- A. Snap a wheel (**Part 14**) on to axle of **Part 16** and cement **Part 15** into position. Then cement this assembly into holes in left landing gear recess, as shown.
- B. Now snap a wheel (**Part 14**) on to axle of **Part 18** and cement **Part 17** into position. Then cement this assembly into holes in right landing gear recess, as shown.
- C. Cement **Parts 19 and 20** to the inboard edges of the main landing gear recesses. Then cement **Parts 21 and 22** to the outboard edges.

- D. Snap **Part 23** into **Part 24**. Then cement this assembly into hole in forward landing gear recess.
- E. Apply decals to inboard undersurfaces, as shown.


**Note:** If you want to assemble your model in the **WHEELS-UP** position do not use **Parts 14, 15, 16, 17, 18, 23 and 24**. Cement all the doors in the closed position.




# CHOOSE THE REVELL MODEL YOU WANT TO BUILD NEXT



**H-301**  
MIGHTY BATTLESHIP, U.S.S. MISSOURI  
16/11

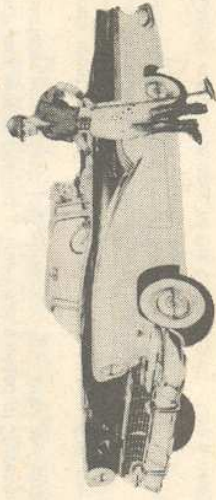


**H-1202**  
DASHING CONVERTIBLE, FORD FAIRLANE  
8/11

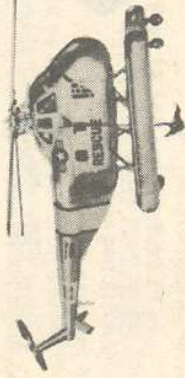


**H-227**  
AIR-SEA RESCUE HELICOPTER  
8/6



**H-215**  
SUPERSONIC REPUBLIC THUNDERSTREAK  
6/9

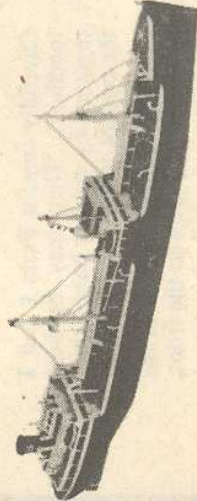

**H-322** STANDARD OIL TANKER  
15/-

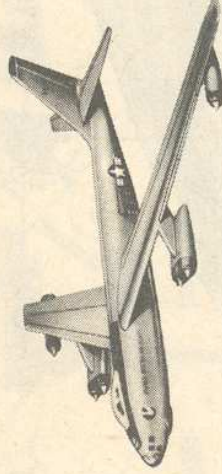


**H-206** ATOM-BOMBER STRATOJET  
8/6




**H-304** PATROL TORPEDO BOAT  
8/6

## SPECIAL RANGE OF FIGHTERS

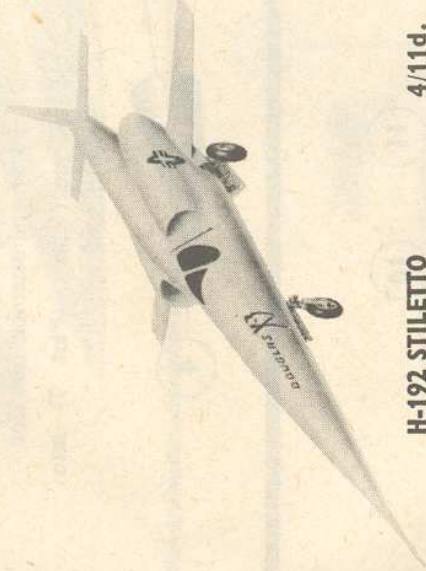

**H-192** STILETTO  
4/11d.

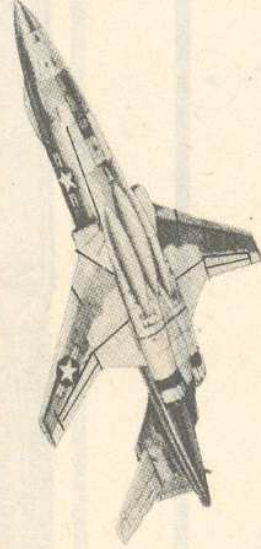

**H-190** VOODOO  
4/11d.



**H-191** SCORPION  
4/11d.

FOR DETAILS OF THE FULL REVELL RANGE GET YOUR  
COPY OF THE REVELL CATALOGUE FROM YOUR HOBBY SHOP