1/35 Scale **ITEM No.:82434**

ZLC 2000 Airborne IFV

ZLC2000 空挺步兵戦闘車　ZLC2000型伞兵战车

PLEASE READ BEFORE OPERATION!

* Tools recommended as below: (Not included)
  Adhesives; Paints; Side Cutters; Sharp Edged Pliers; Modeling Knife; Modeling File; Nippers; Drill; Scissors; Sand Paper; Soft Cloth; Cyanoacrylate Glue.
* Make sure to read this instruction listed below before assembling.
* The kit contains the small parts, they can be dangerous if swallowed by mistake, so keep them away from reach of children.
* Cut the all parts off carefully and remove the waste parts into the garbage can.
* More caution and care should be needed for cutting and handling the photo etched parts.
* Make attention that some parts should be attached the decal when assembled.
* During assembling, please tear up and throw away the plastic bags, or may cause the dangerous if wearing over head by children's mistake.
* When using the adhesives and paints, please do not use them in the closed room or near the fire, also must be very careful to protect your eyes,face and clothes.
* Adult supervised when assembled by children under 14 years old.

装配前请仔细阅读:

* 推荐使用的模型工具(请自备):
  专用模型胶水，专用模型油漆，水口剪刀，长咀钳，刀片，锉刀，镊子钳，钻，剪刀，软布，砂纸,瞬间快干胶等。
* 用水口剪刀或刀片小心切下所有塑胶零件和蚀刻片零件，不要遗失小零件。
* 切取蚀刻片时应特别注意防止利边划伤手指。
* 用模型锉刀小心锉平所有零件表面的注射浇口。
* 用适量的强力快干胶水粘合蚀刻片零件和金属轴，切忌过量，否则可能导致可动零件被粘住。
* 注意某些零件表面需在装配时同步贴上水贴纸。
* 制作时应远离幼儿并将包装袋及时收妥，谨防小孩玩耍而引起意外。

Using CA super glue
使用强力胶

weight
配重

make hole
钻孔

cut / remove
切除

option
选择

no cement
不涂胶水

decal
贴纸

bend
弯曲

repair
填补

The method to apply the decals

1.Cut off the decal from the decal paper and put it into the warm water 40℃ for 10 seconds.
2.Take the decal from the water and put it on a piece of clean cloth.
3.Remove the decal slowly from the paper to the targeted location by a wet finger.
4.Use a piece of dry and soft cloth to press it gently on the decal until it getting dry and no bubble existing.

水贴纸的使用方法:

一.把相关的印花从水贴纸上剪下，放入40℃左右的温水中浸10秒。
二.然后将印花放在干净的布上。
三.拿上印花纸板，手指蘸水将印花移到适当的位置。
四.用软干布轻压印花直至水干，气泡消失。

STEP 1

《负重轮》
Road wheel

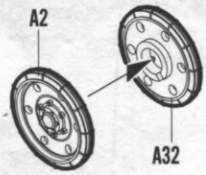

制作10组
Make ten

《托带轮》
Support wheel

制作6组
Make six

《主动轮》
Driver sprocket

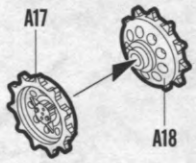

制作2组
Make two

《诱导轮》
Idler wheel

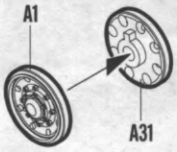

制作2组
Make two

STEP 2

行军状态
Action

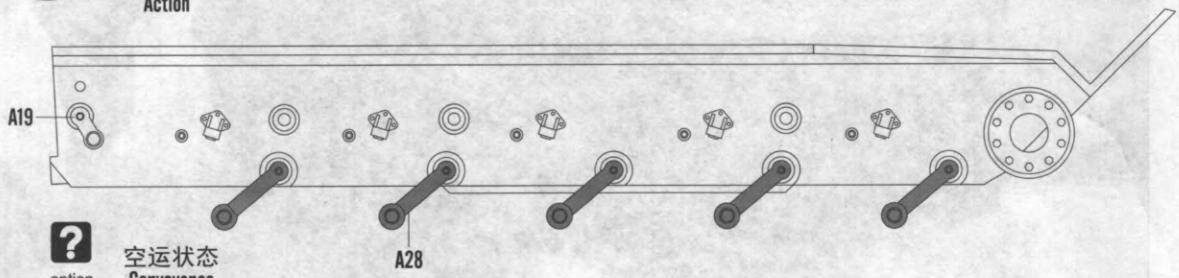

option
选择

空运状态
Conveyance

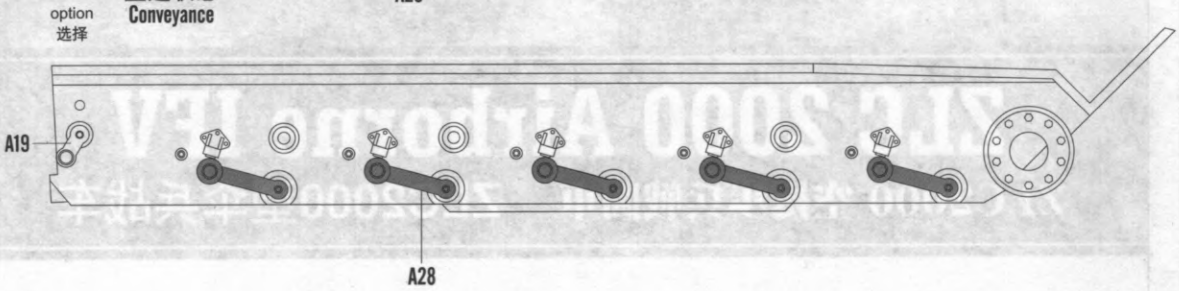

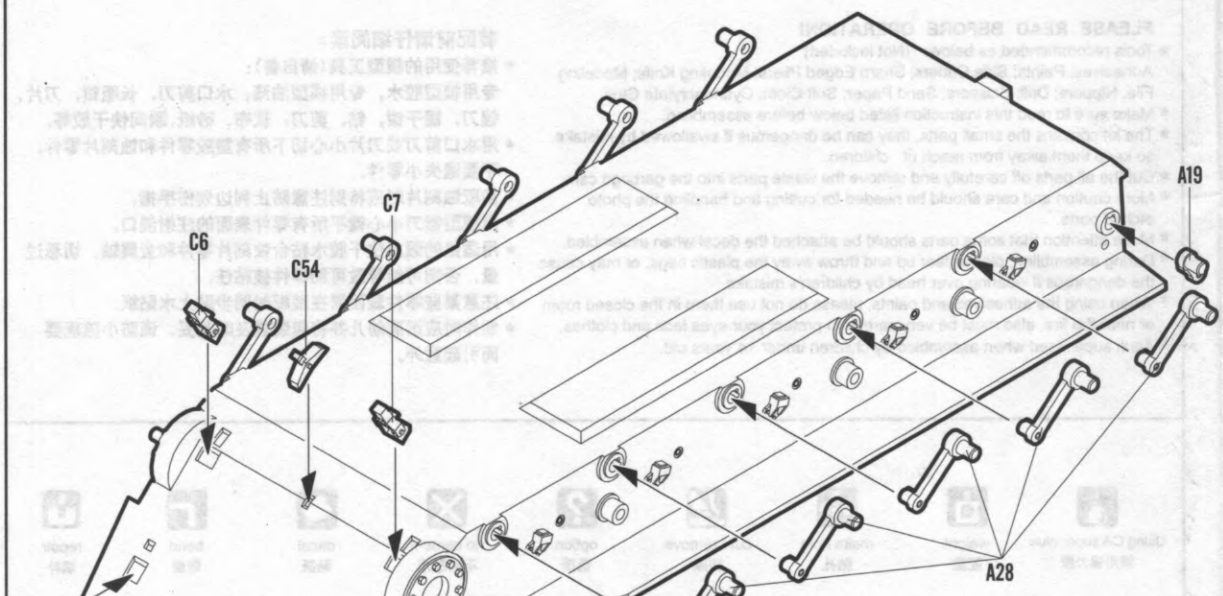

对侧相同
Both sides

STEP 3

水平
Horizontal

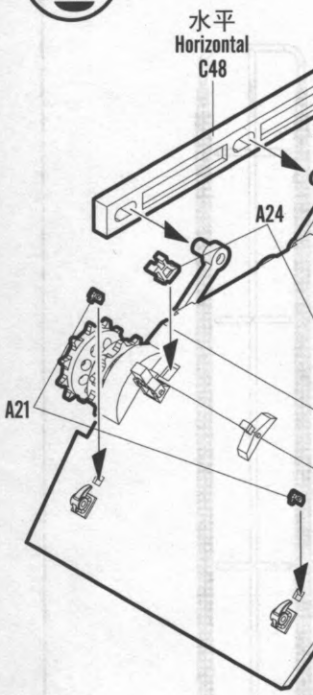

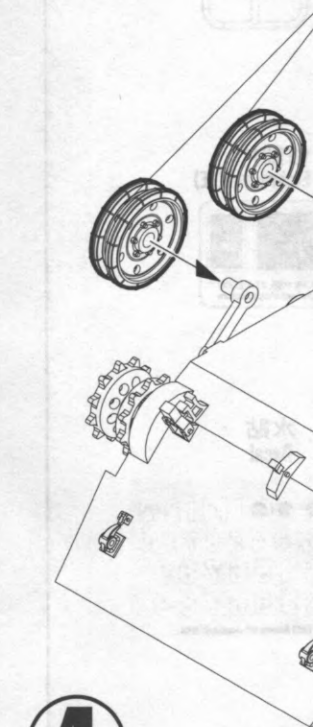

STEP 4

履带连接
Track construction

履带可用塑料
履带可用模型
若履带断裂，
The tracks in this k
The tracks can be
If track is broken s

STEP 3

水平
Horizontal
C48

A24

A21

《诱导轮》
Idler wheel

《托带轮》
Support wheel

《主动轮》
Driver sprocket

对侧相同
Both sides

《负重轮》
Road wheel

《负重轮》
Road wheel

STEP 4

履带连接
Track construction

履带可用塑料胶水粘合
履带可用模型油漆喷涂
若履带断裂，用细线固定
The tracks in this kit can be glued using plastic cement.
The tracks can be painted using plastic paints.
If track is broken strennng with staples or thread.

制作2组
Make two

STEP 5

B4

B6

C18

STEP 6

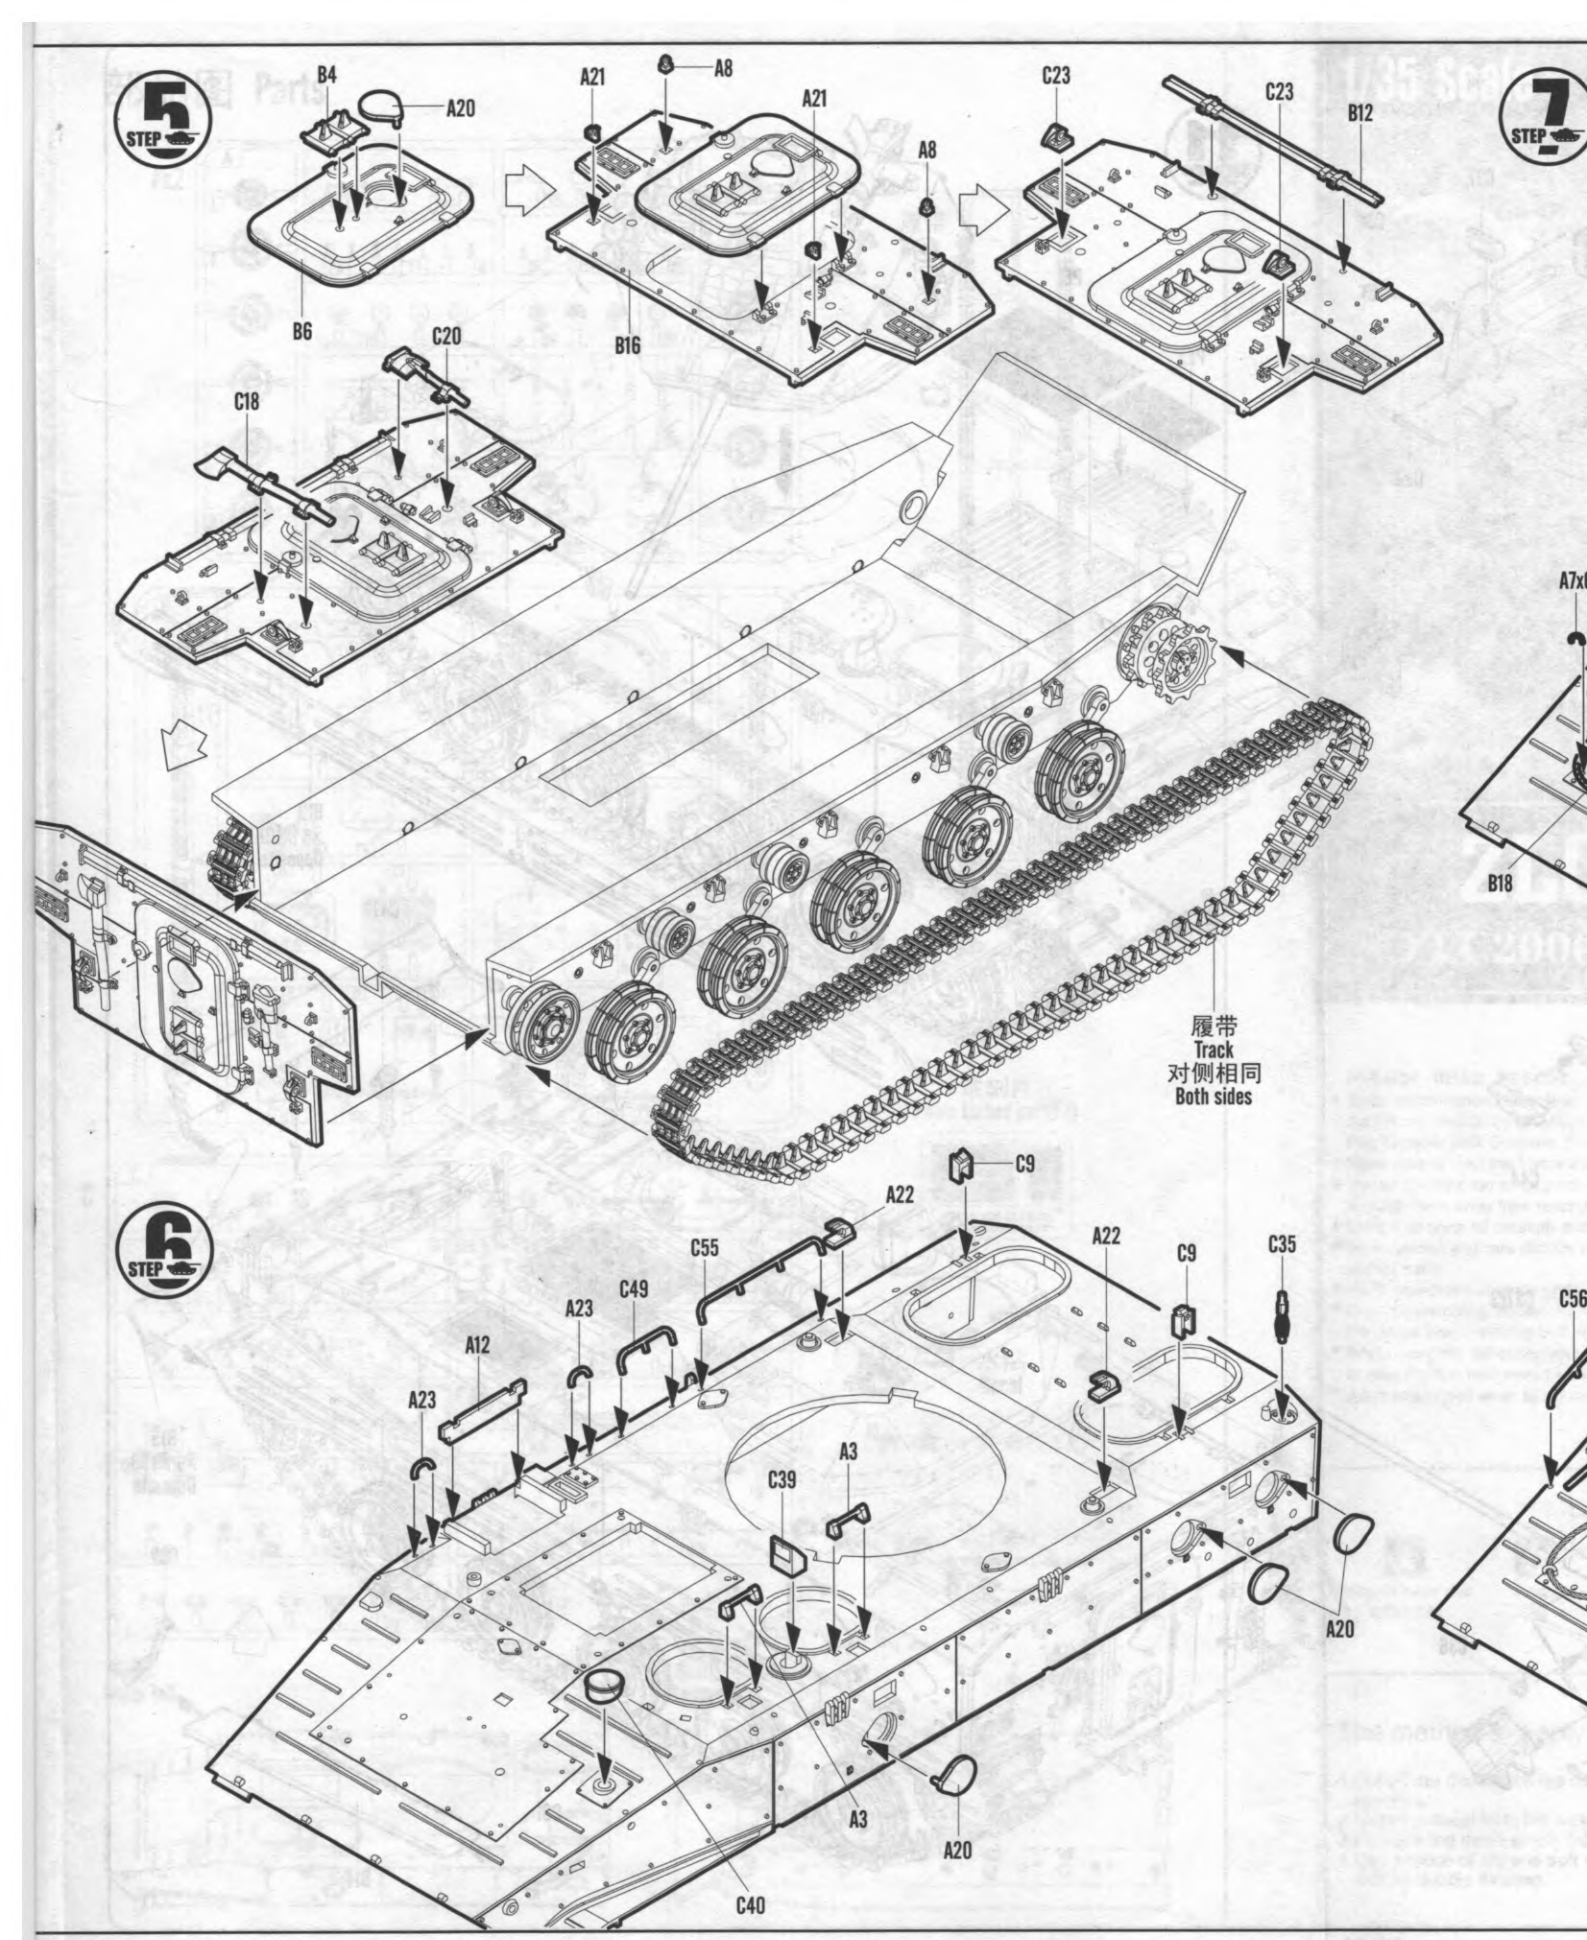
STEP 5
B4
A20
B6
A21
A8
A21
A8
B16
C23
C23
B12
C18
C20
履带
Track
对侧相同
Both sides
STEP 6
C9
A22
C55
A22
C9
C35
C49
A23
A12
A23
A3
C39
A20
A3
A20
C40
STEP 7
A7x
B18
C56

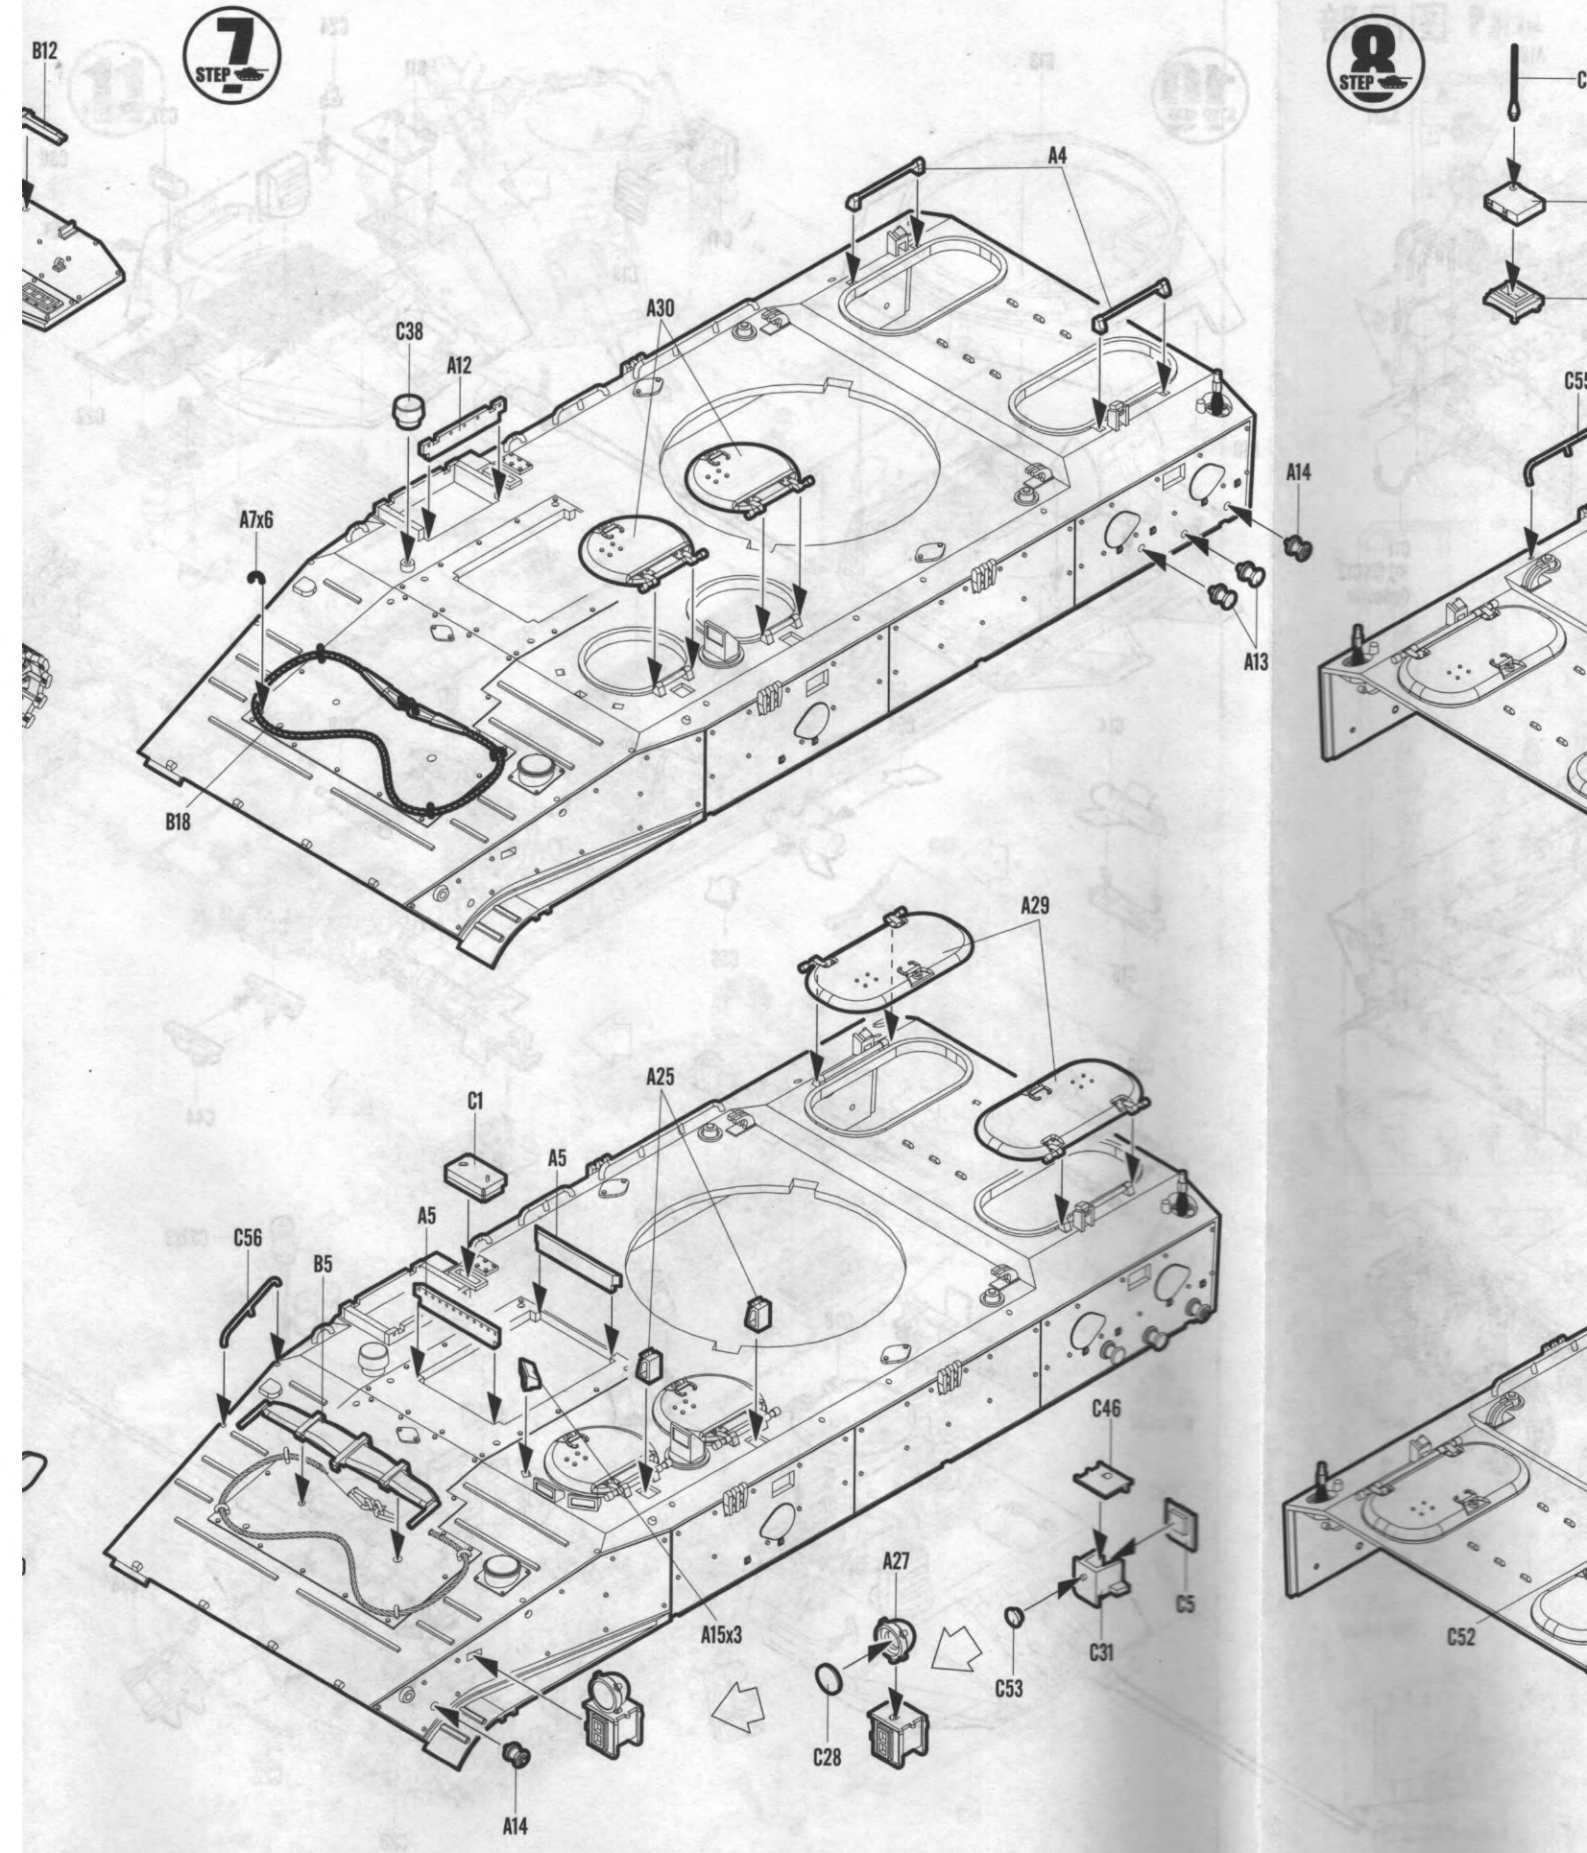
STEP 7
B12
A4
A30
C38
A12
A7x6
A14
A13
B18
A29
A25
C1
A5
A5
C56
B5
C46
A27
C5
A15x3
C31
C53
C28
A14
STEP 8
C
C5
C52

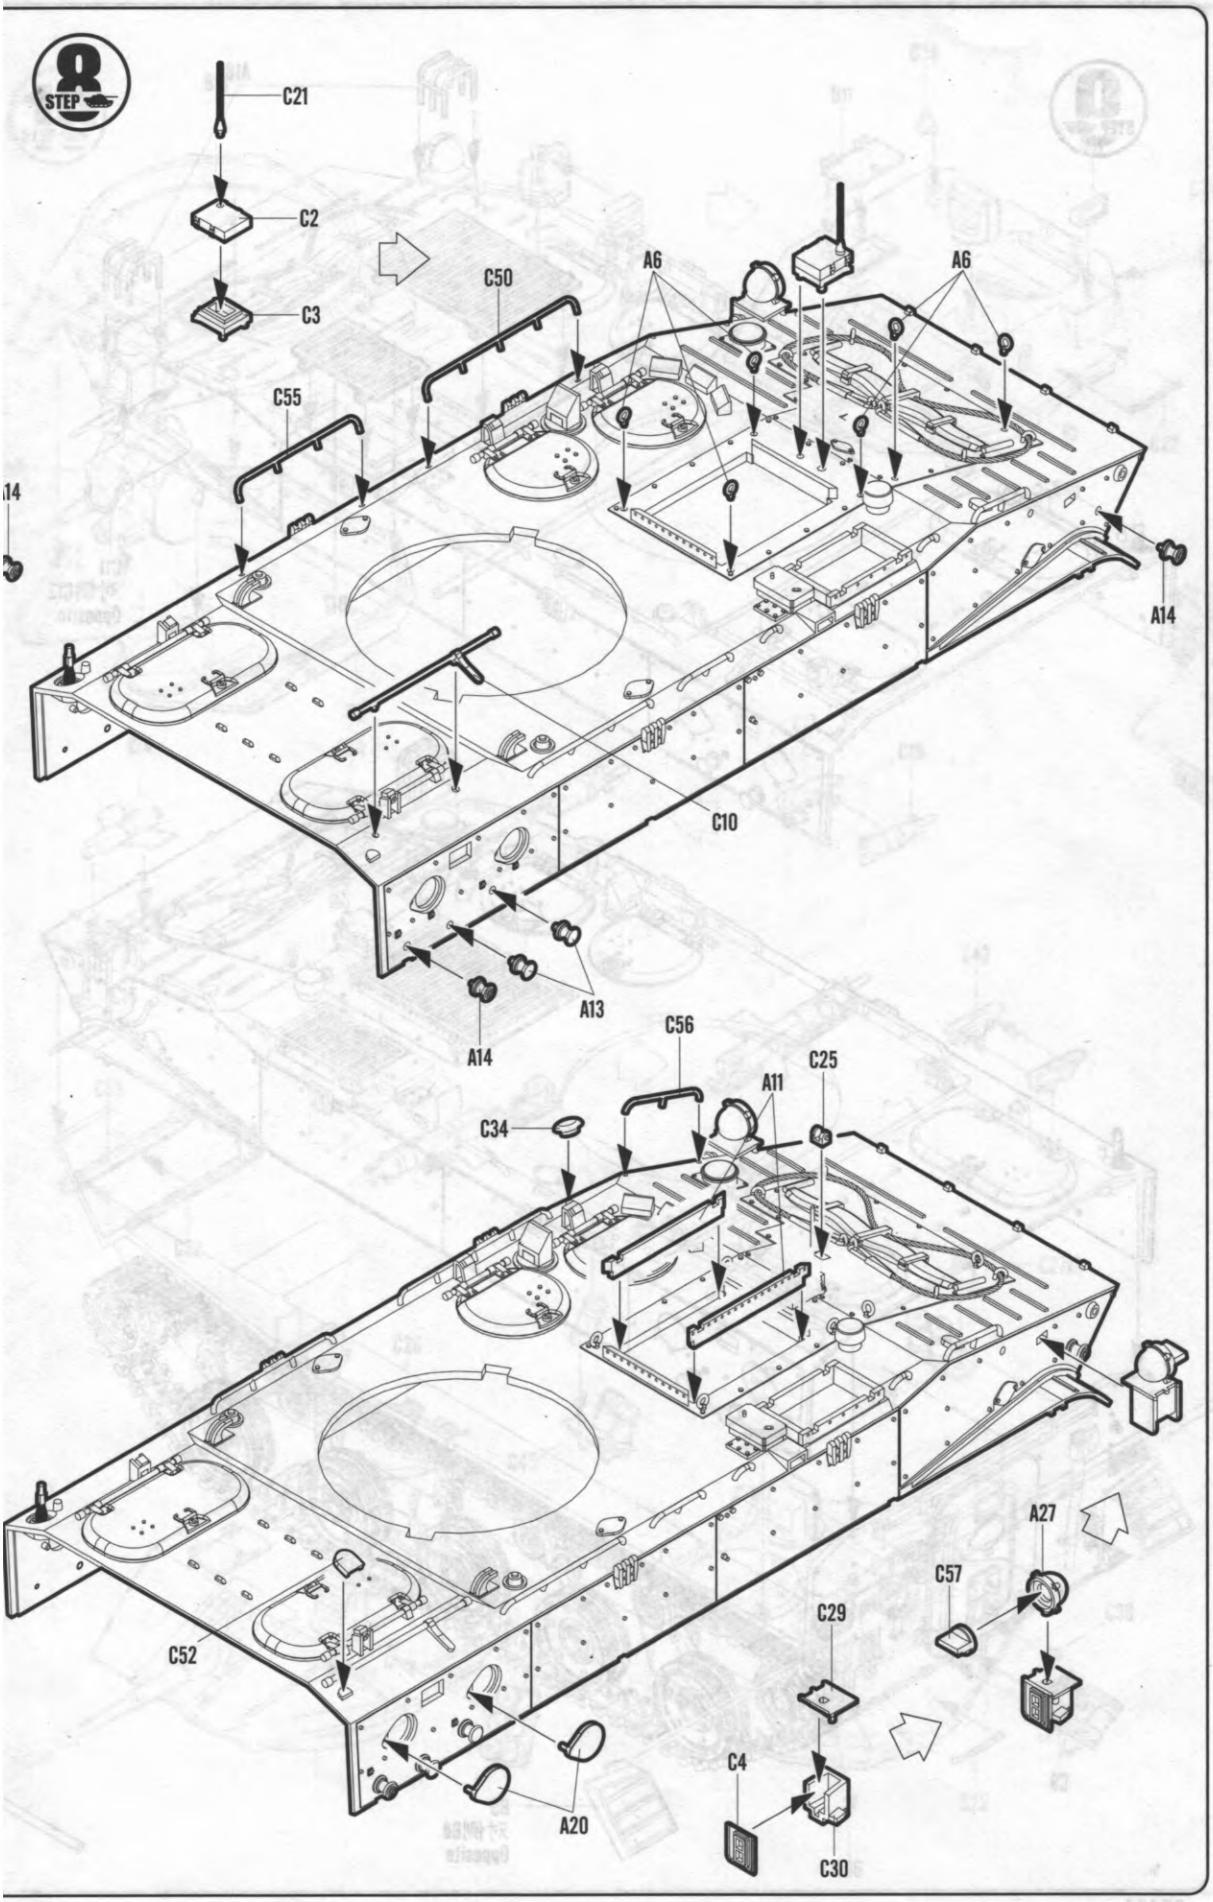
8 STEP
C21
C2
C3
C50
A6
A6
C55
A14
C10
A13
A14
C56
C25
A11
C34
C52
A27
C57
C29
C4
A20
C30

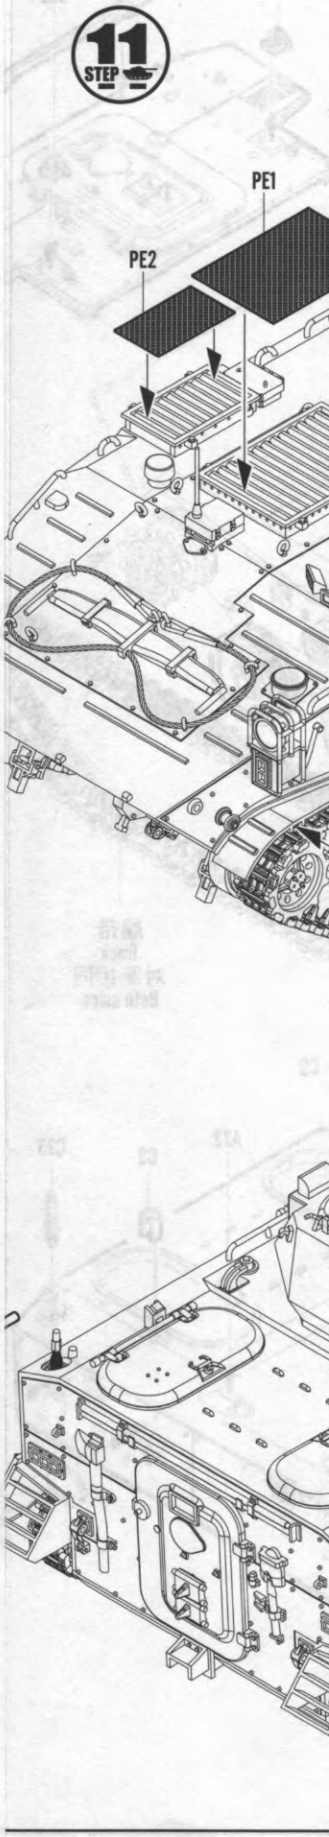
11 STEP
PE1
PE2

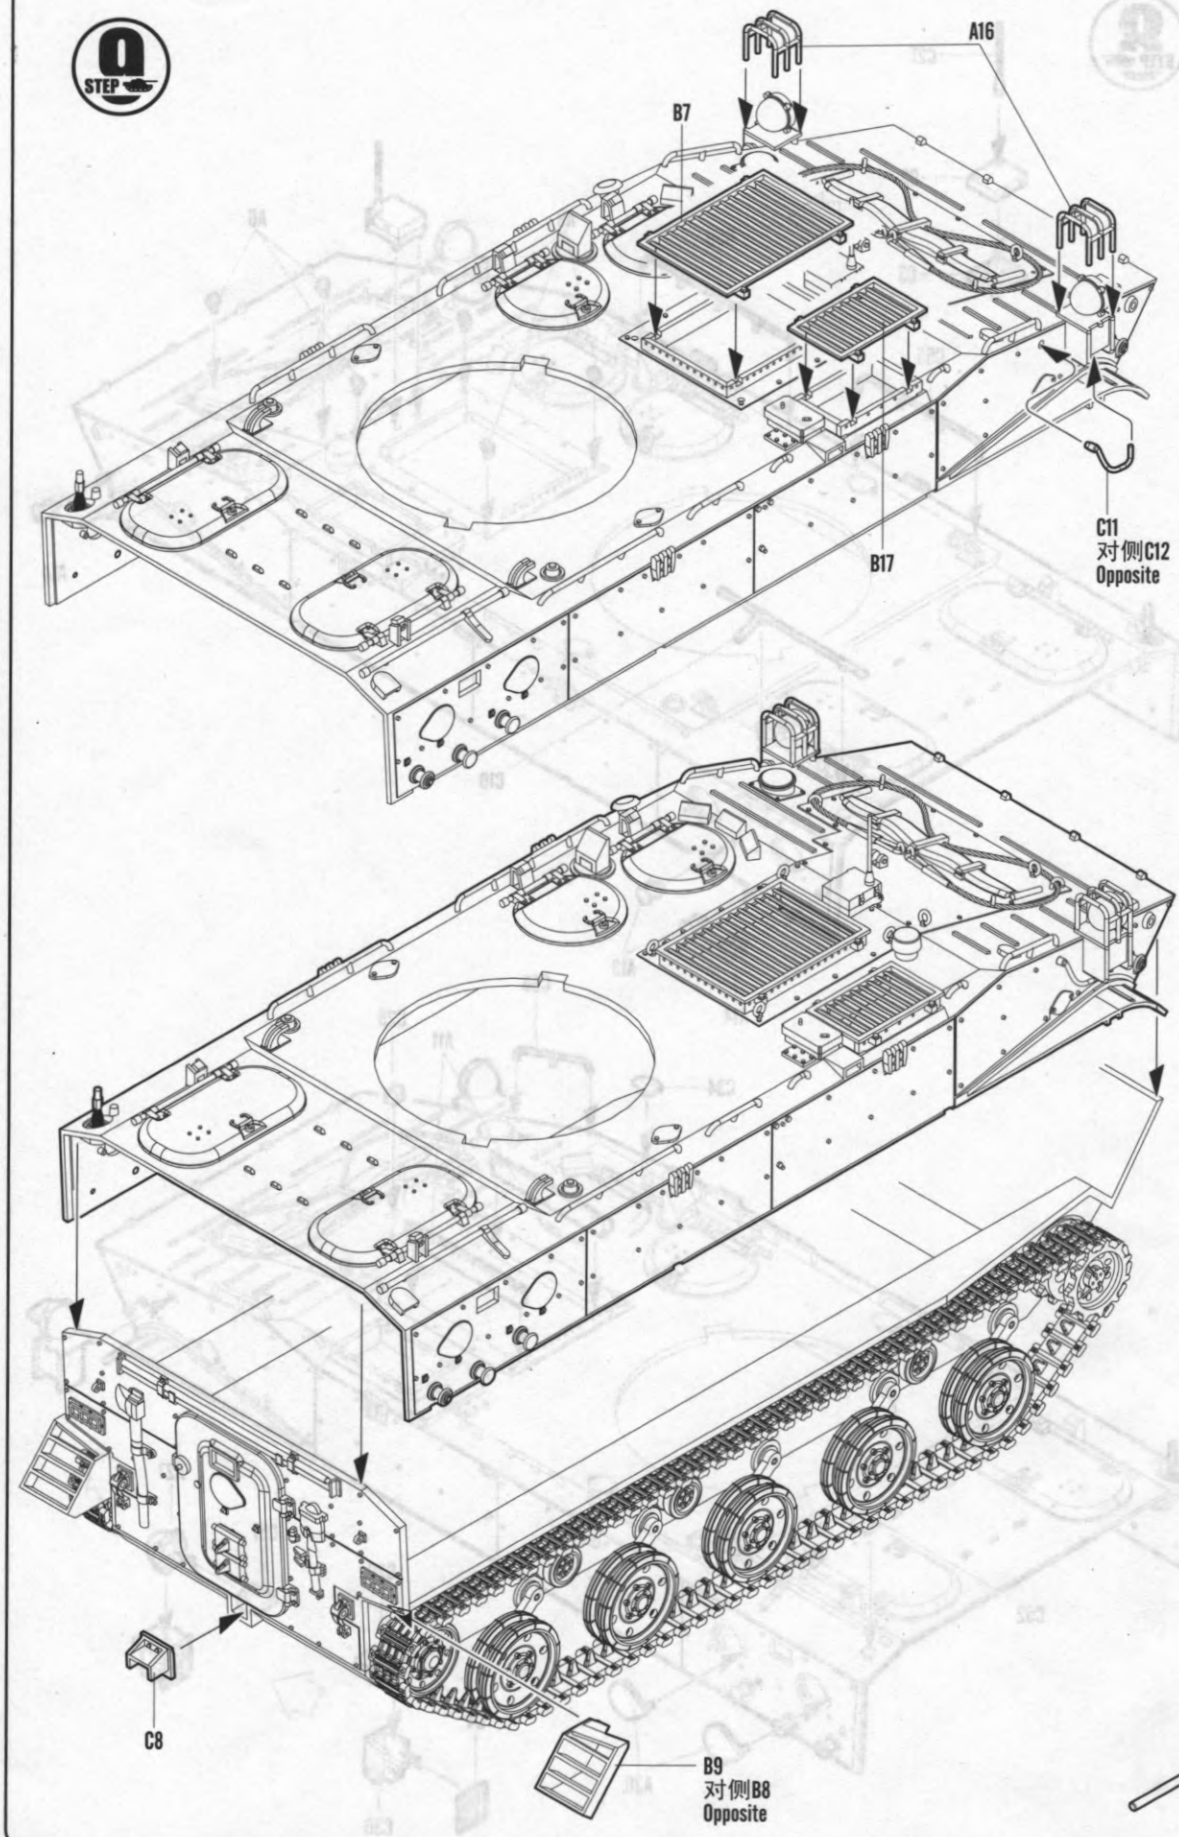
STEP 9
A16
B7
B17
C11
对侧C12
Opposite
C8
B9
对侧B8
Opposite

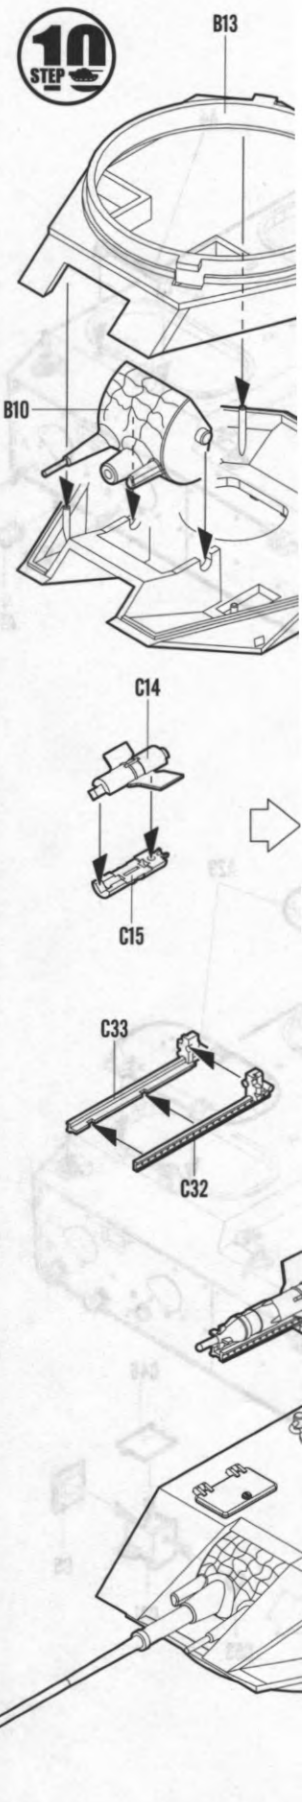
STEP 10
B13
B10
C14
C15
C33
C32

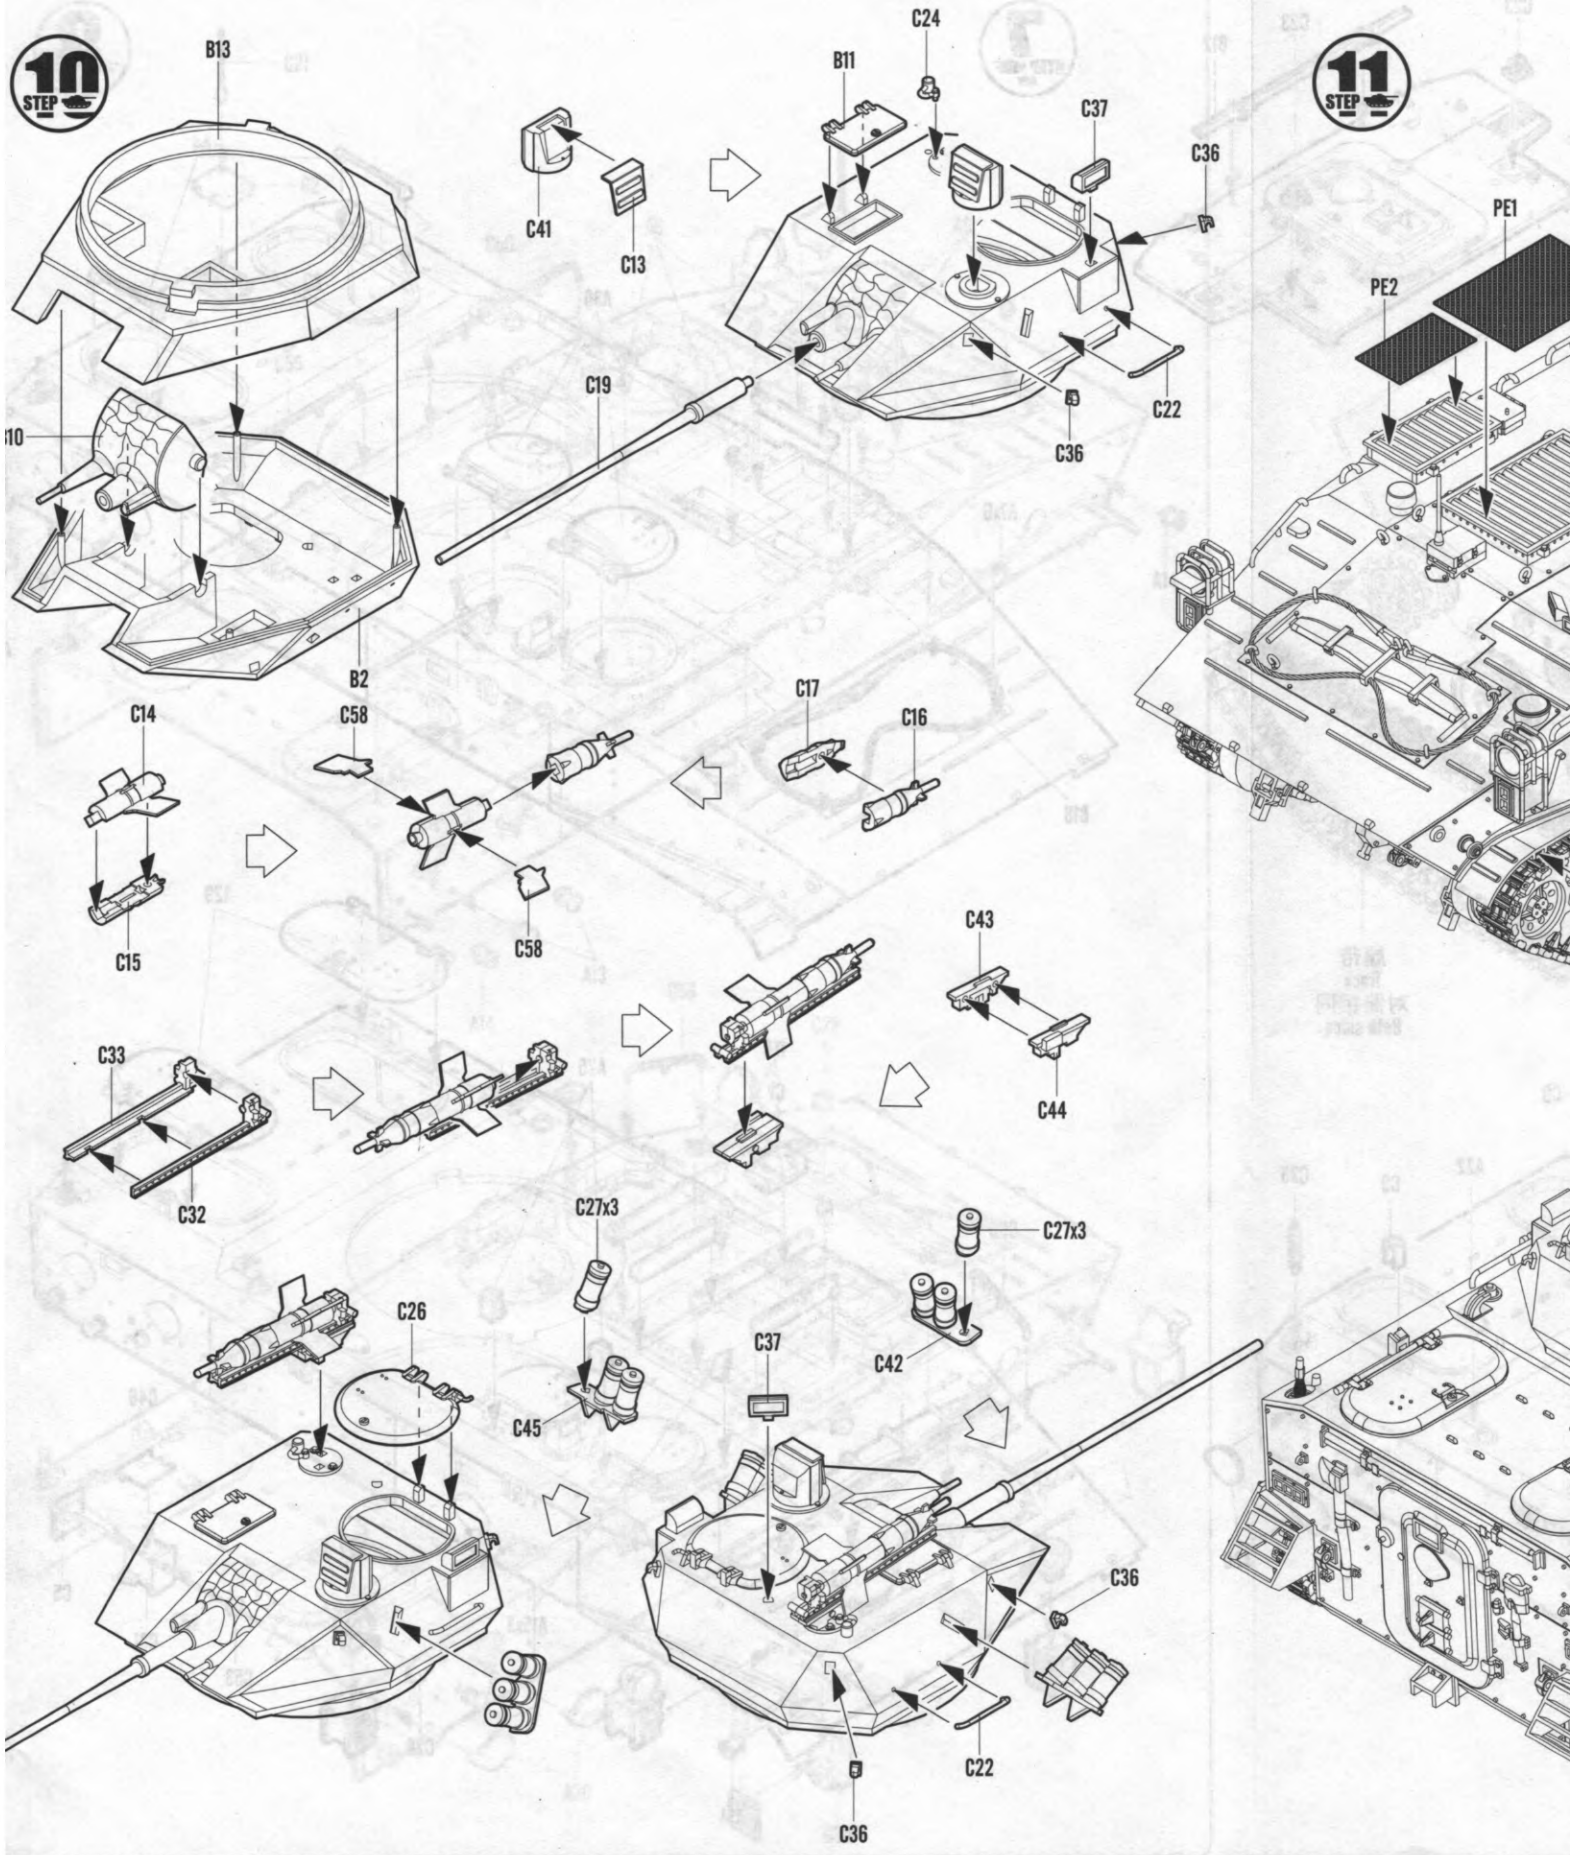
10 STEP
B13
B10
B2
C41
C13
C24
B11
C37
C36
C19
C22
C36
11 STEP
PE1
PE2
C14
C15
C58
C58
C17
C16
C43
C44
C33
C32
C27x3
C45
C26
C27x3
C42
C37
C36
C22
C36

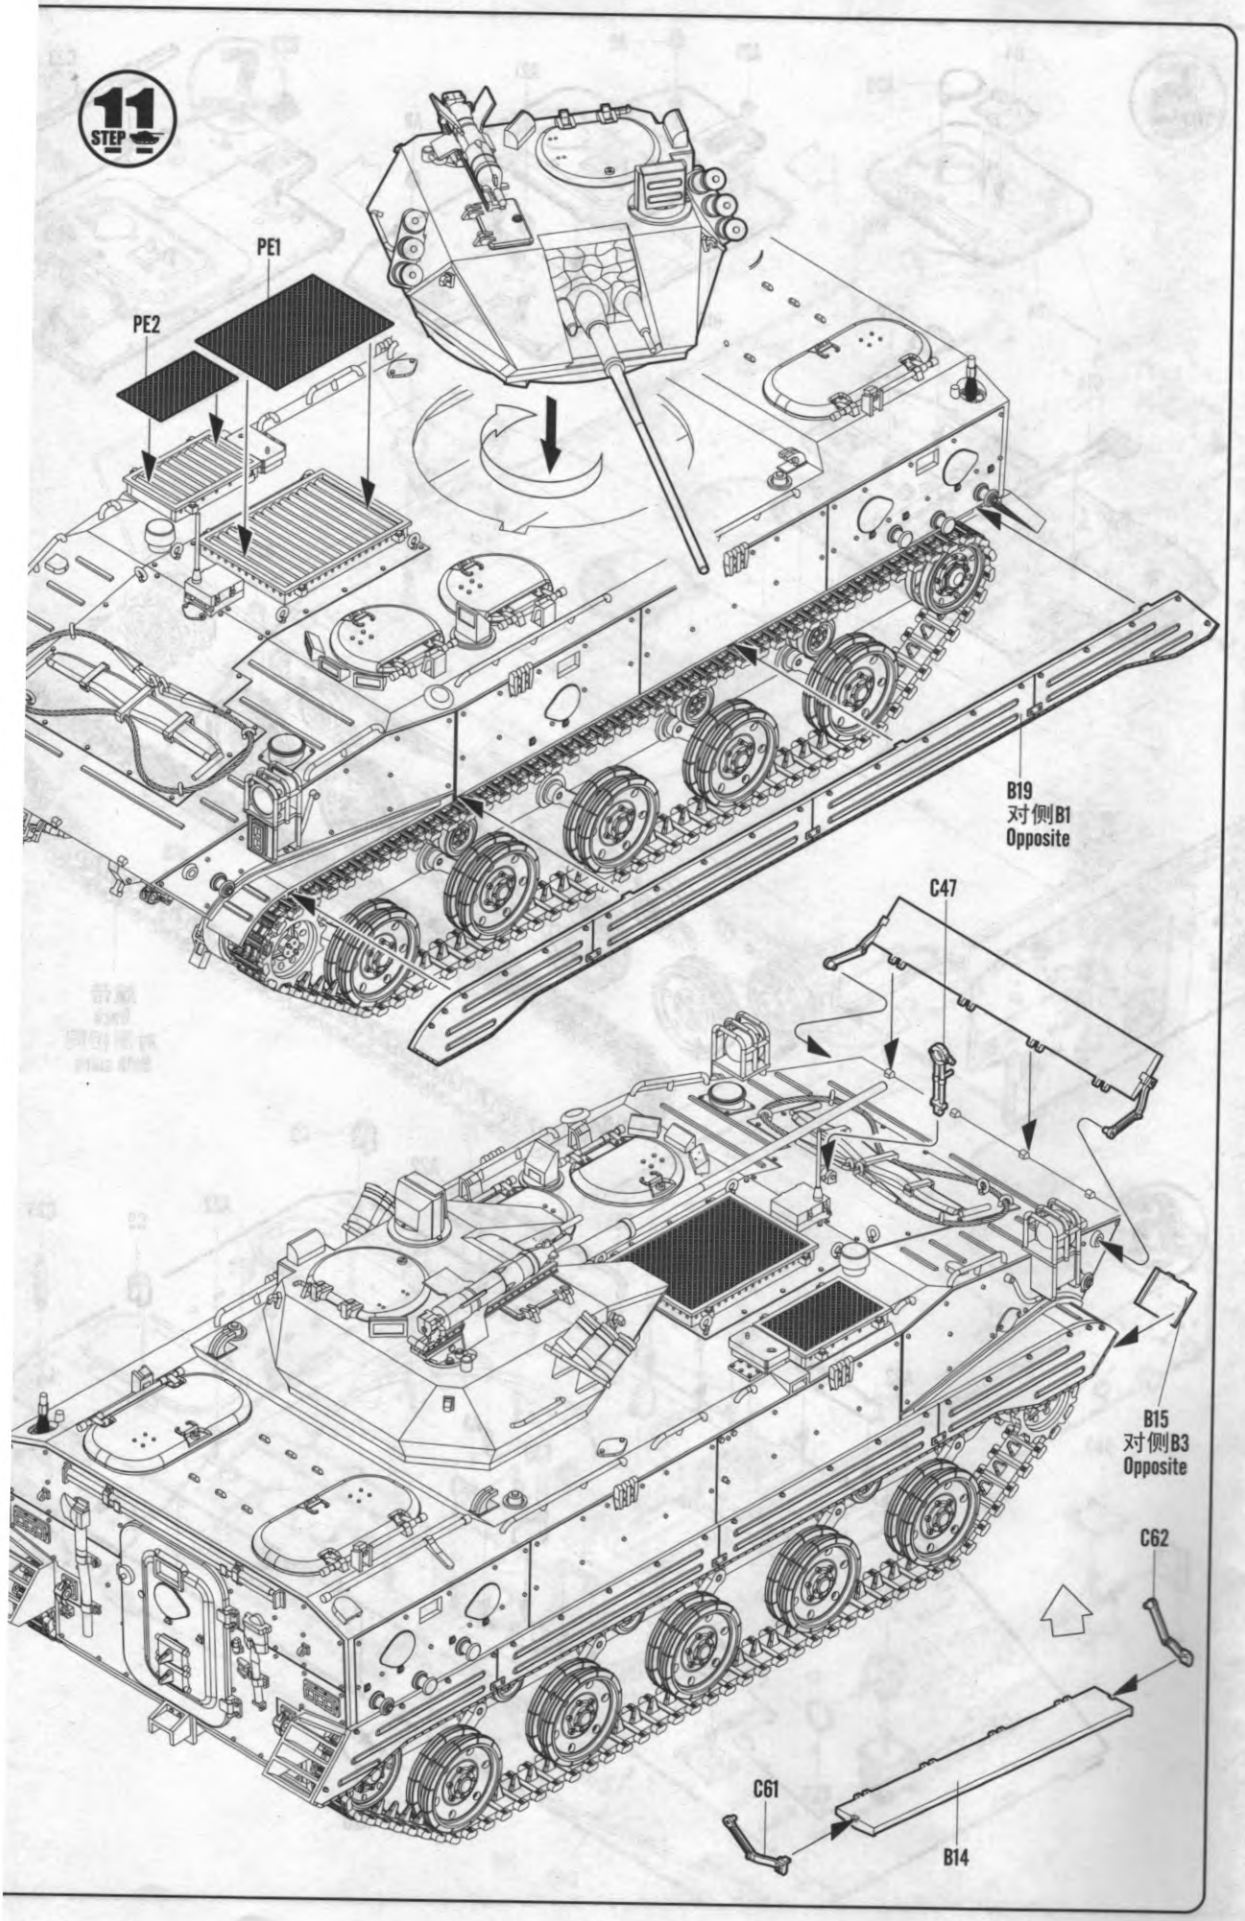

部品图 Parts

Ax2

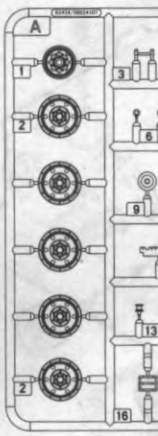

B

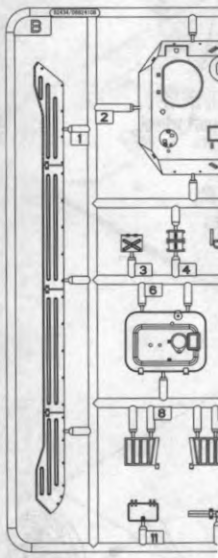

C

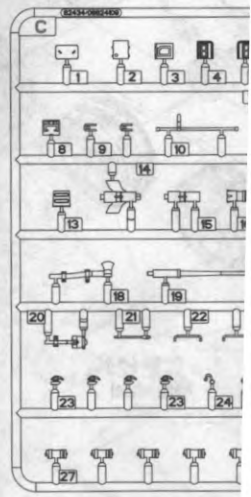

车面
Upper hull

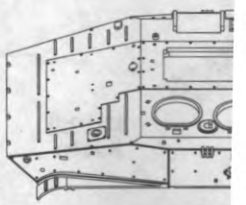

部品图 Parts

Ax2

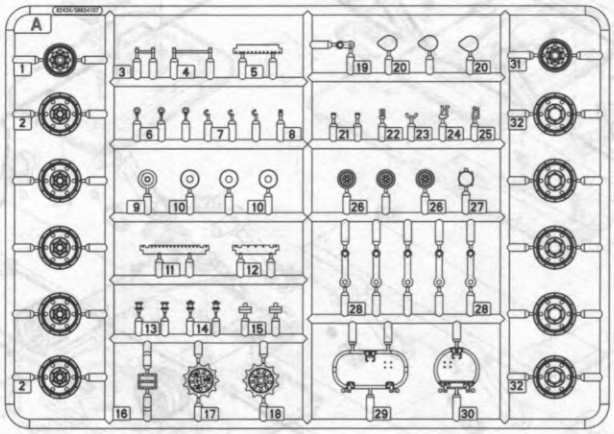

履带
Track

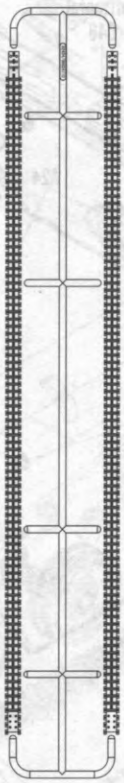

B

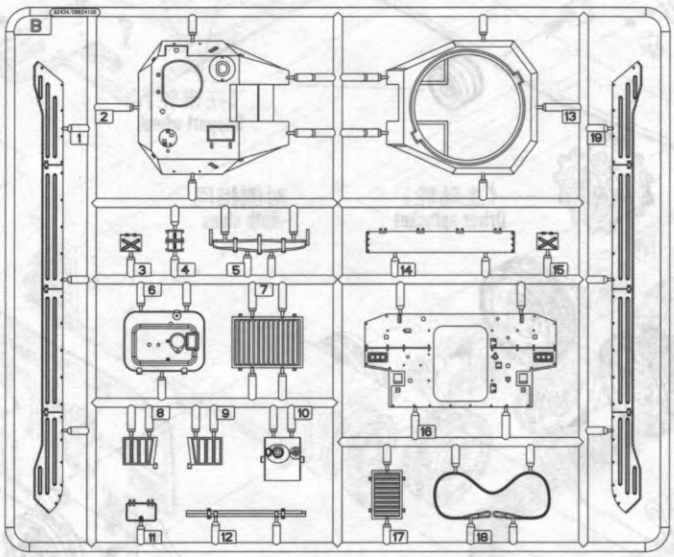

蚀刻片
Photo Etched part(PE)

C

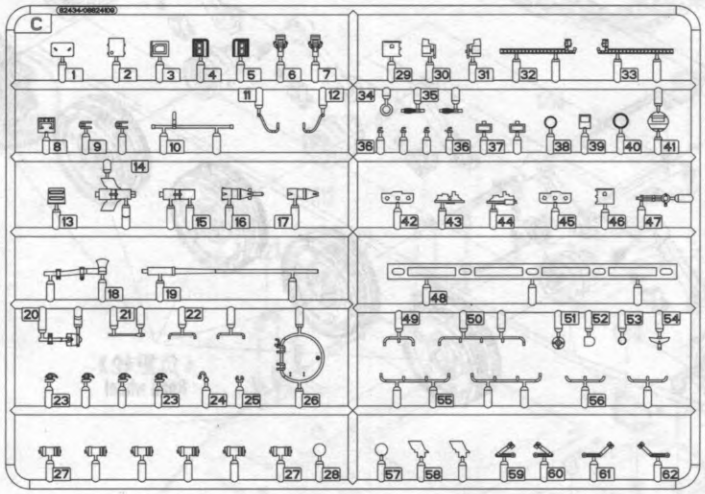

水贴
Decal

车面
Upper hull

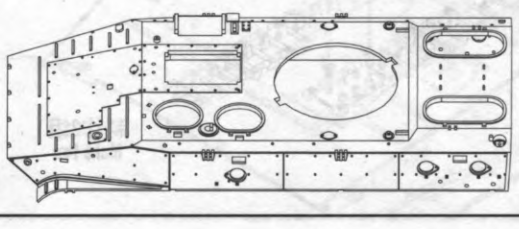

车底
Lower hull

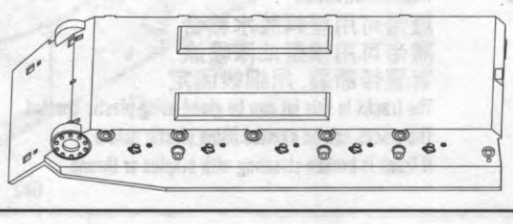

1/35 Scale

ZLC

ZLC2000

PLEASE READ BEFORE

* Tools recommended as below: Adhesives; Paints; Side Cutters; File; Nippers; Drill; Scissors; San
* Make sure to read this instruction
* The kit contains the small parts, so keep them away from reach o
* Cut the all parts off carefully and
* More caution and care should be etched parts.
* Make attention that some parts s
* During assembling, please tear u the dangerous if wearing over he
* When using the adhesives and p or near the fire, also must be ver
* Adult supervised when assemble

Using CA super glue
使用强力胶

weight
配重

The method to apply

1.Cut off the decal from the de seconds.
2.Take the decal from the wate
3.Remove the decal slowly fro
4.Use a piece of dry and soft c and no bubble existing.

82434