



1/35 MILITARY MINIATURE VEHICLE UPGRADE SERIES PE35784

**Modern German PzH2000 SPH w/ADD-ON
Armoured basic(atenna base include)**

现代德国PzH 2000 自行榴弹炮附加装甲型基本件 (含金属天线)

[For MENG TS-019]

■ 推荐使用工具 RECOMMENDED TOOLS

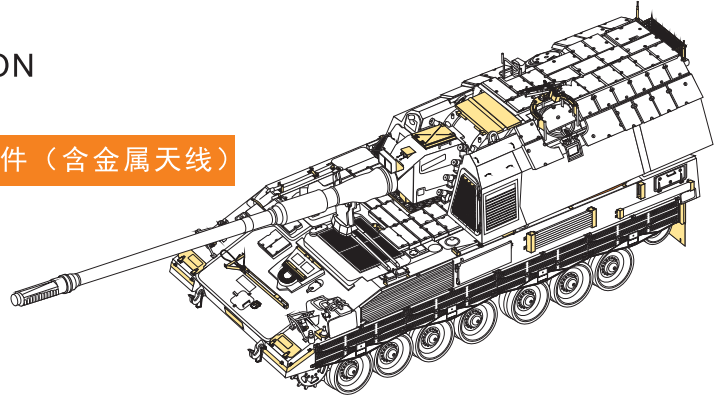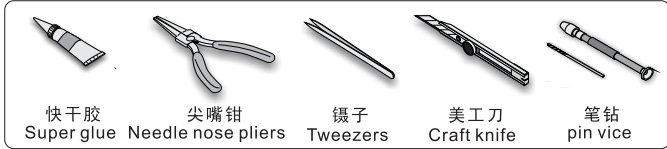



- 安装 install
- 折叠 bend
- A1** 改造件零件编号 PE/resin part number
- B12** 原零件编号 kit part number
- C22** 被替换的原零件编号 replaced kit part number
- 钻孔 drill
- 切除 remove
- 另一侧相同制作 repeat on opposite side
- 弧度卷曲 radial bending
- x2** 制作若干组 multiple assembly
- 选择安装 alternative

用尖端在凹槽处冲压 use penpoint to press on the dent




钻到片零件内侧面向上 Put the part upside down

用笔尖在凹槽处刺 Use penpoint to press on the dent




制作线圈 make coil

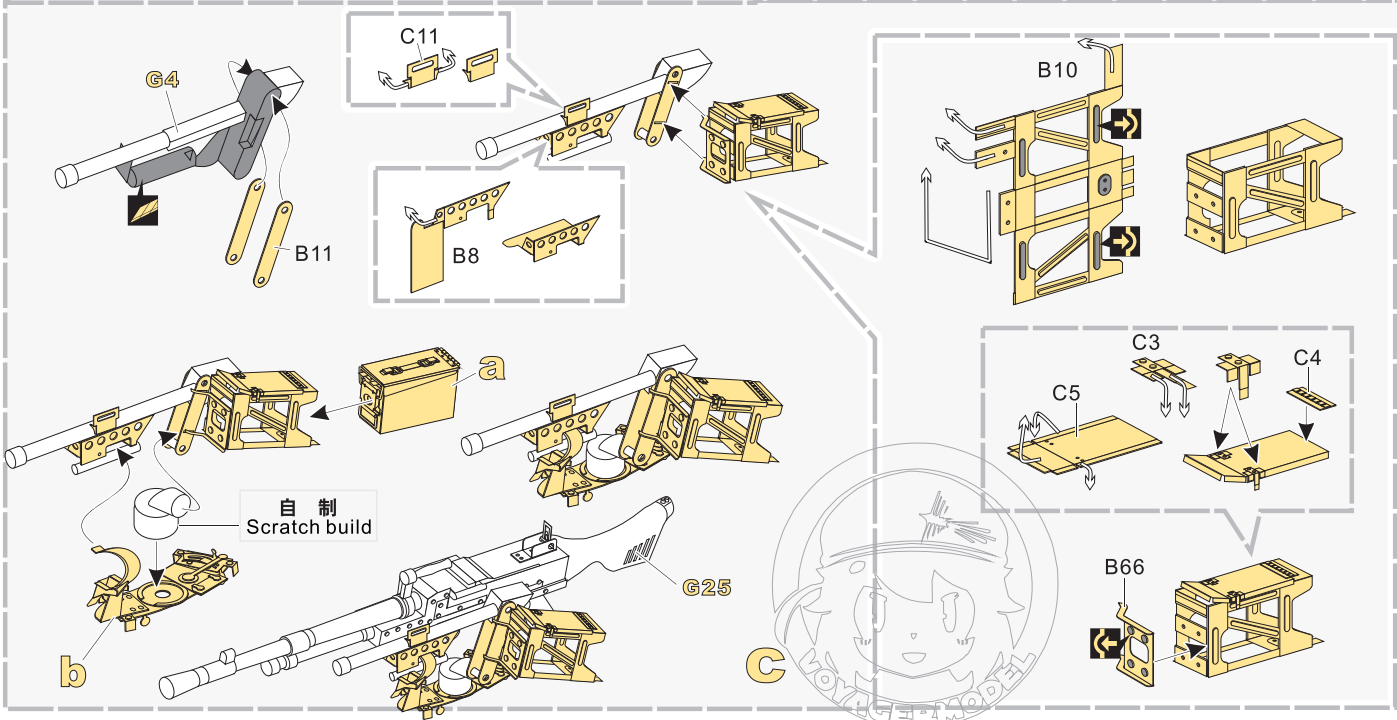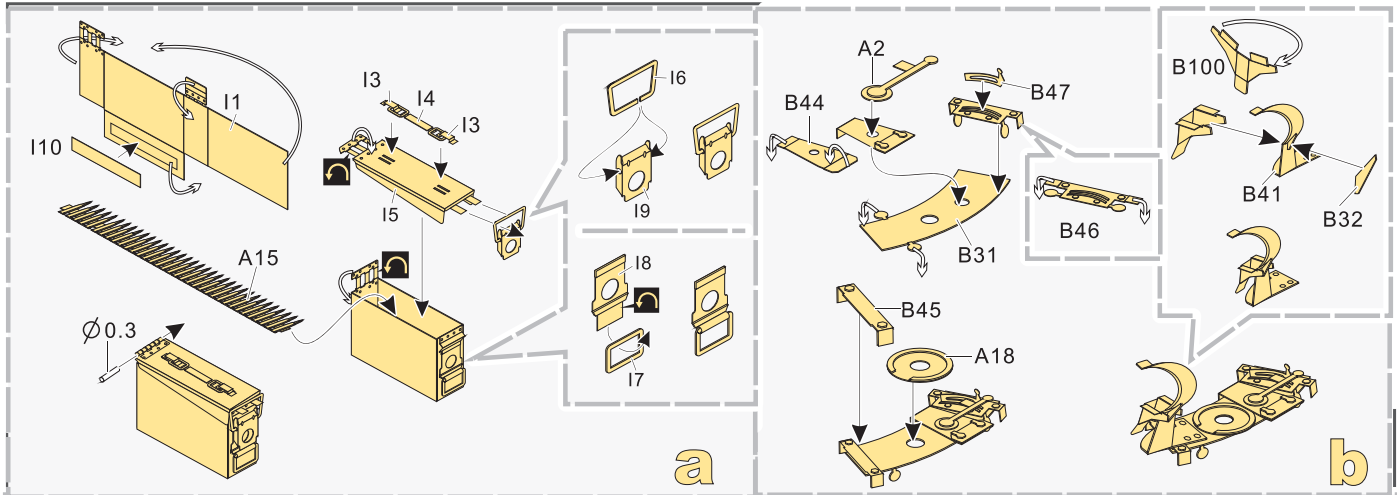


1/35 MILITARY MINIATURE VEHICLE UPGRADE SERIES PE35784

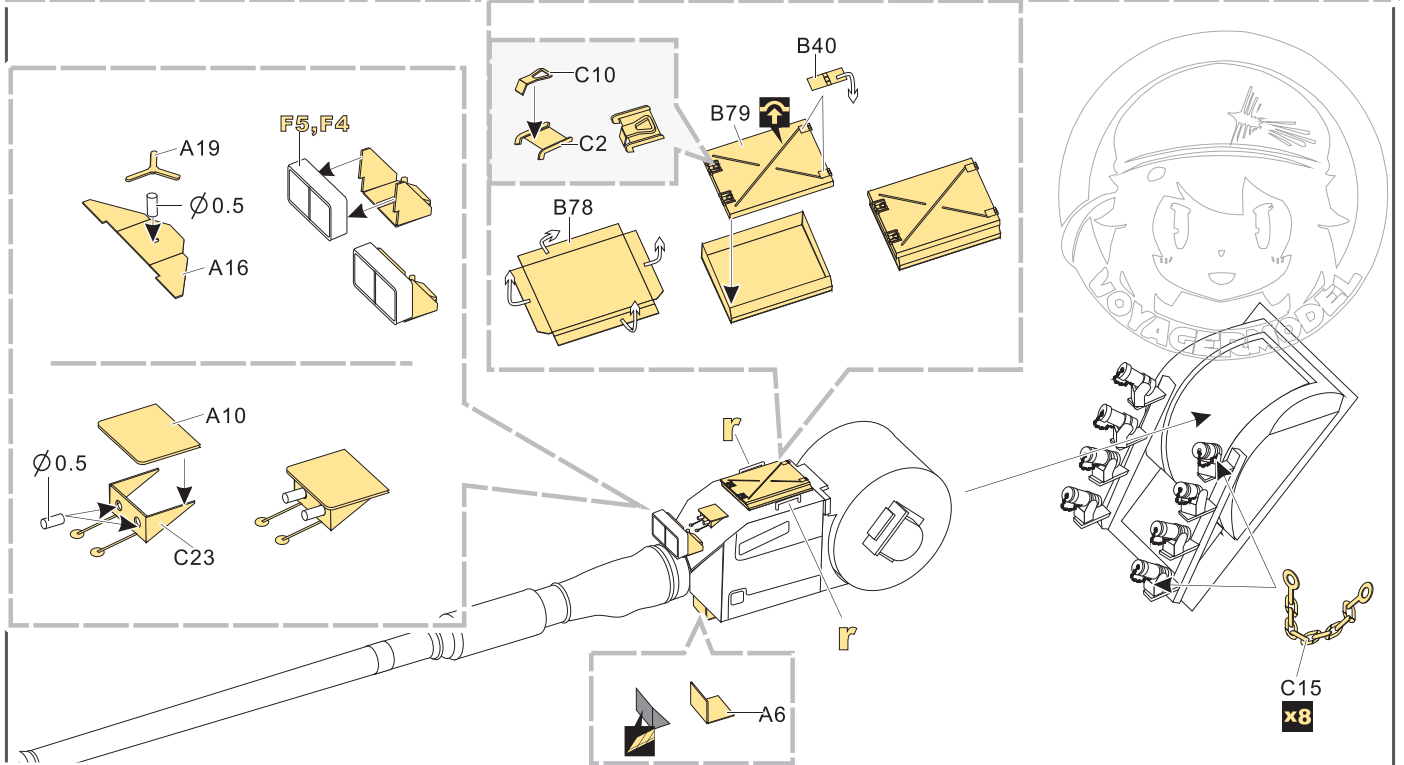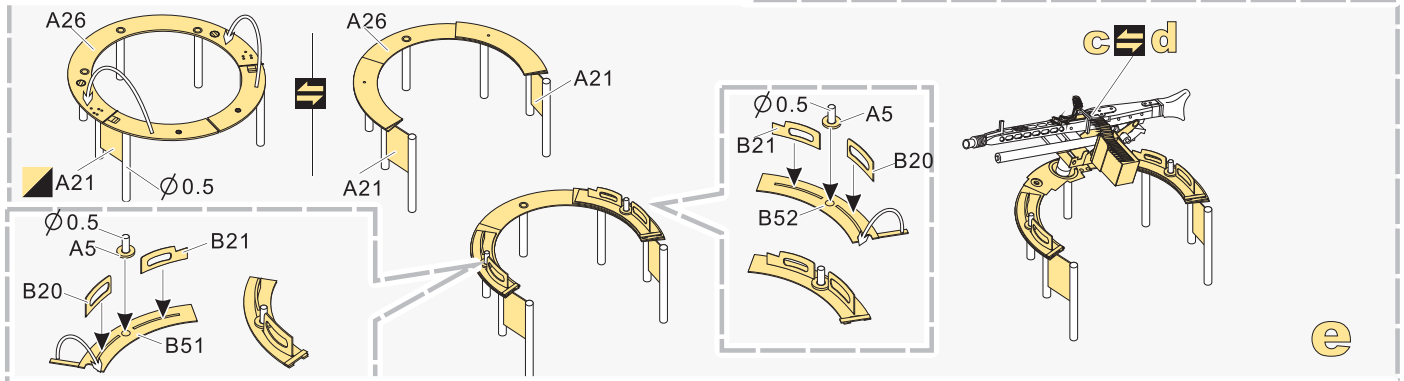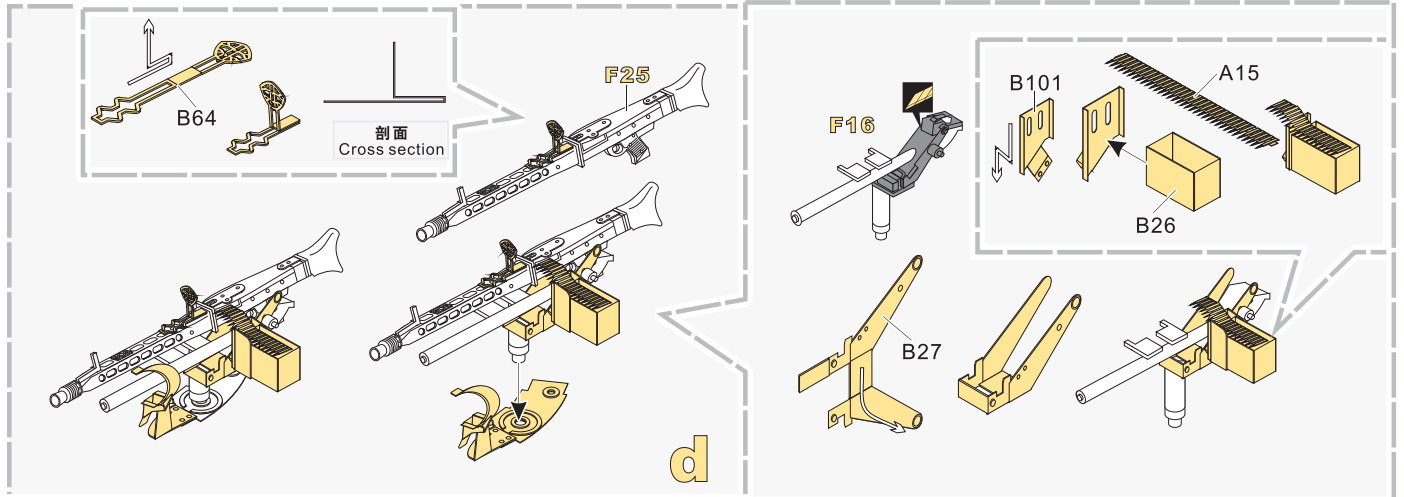


1/35 MILITARY MINIATURE VEHICLE UPGRADE SERIES PE35784

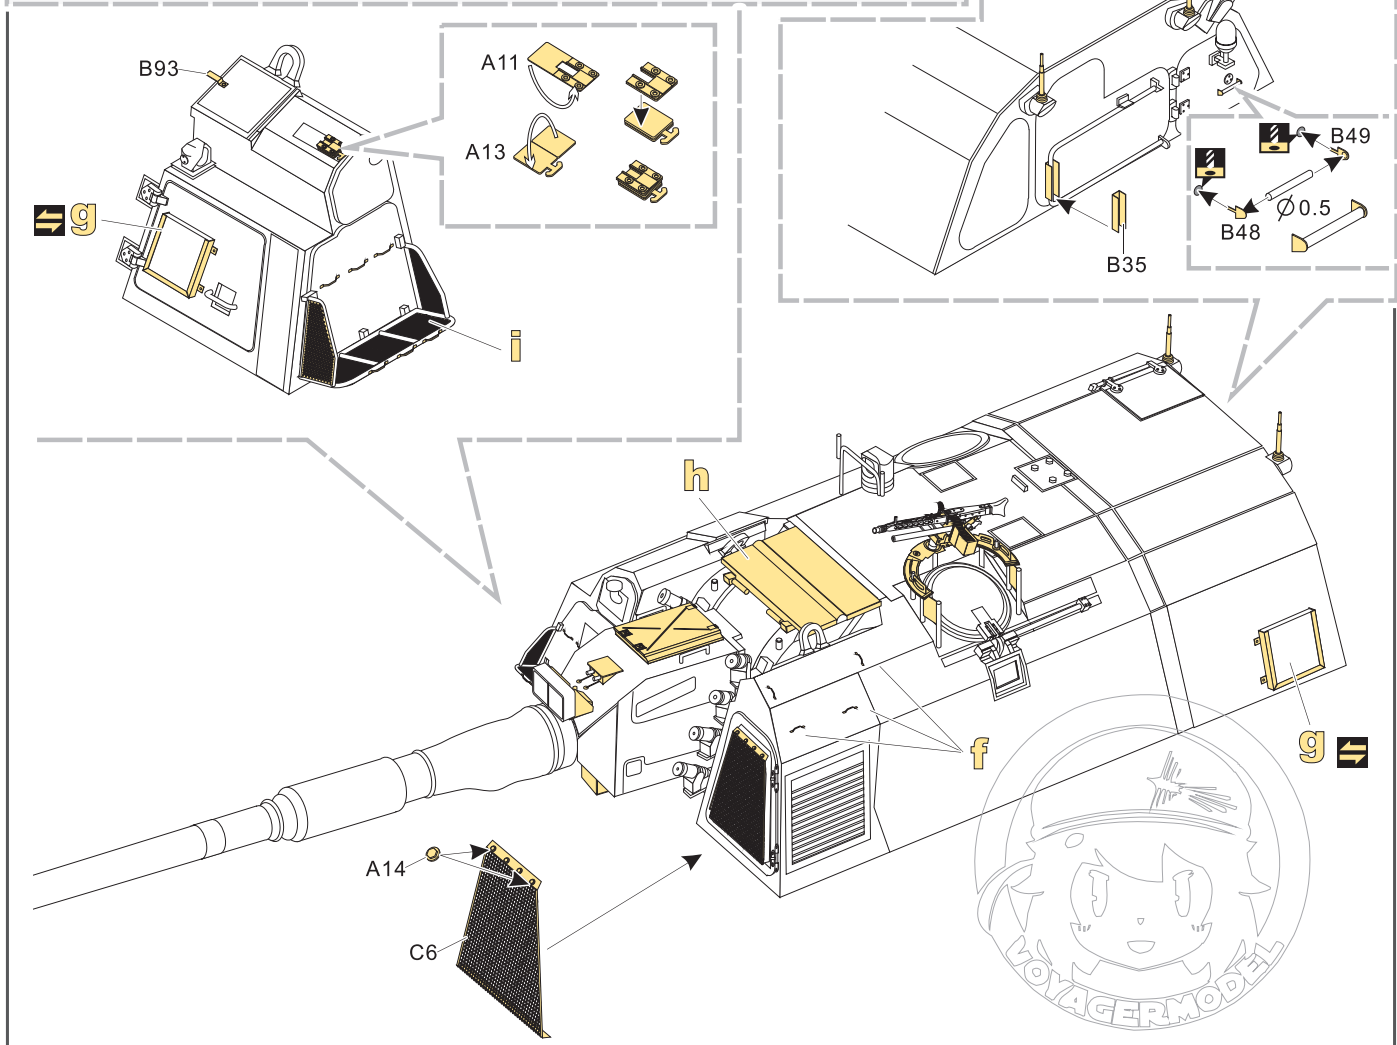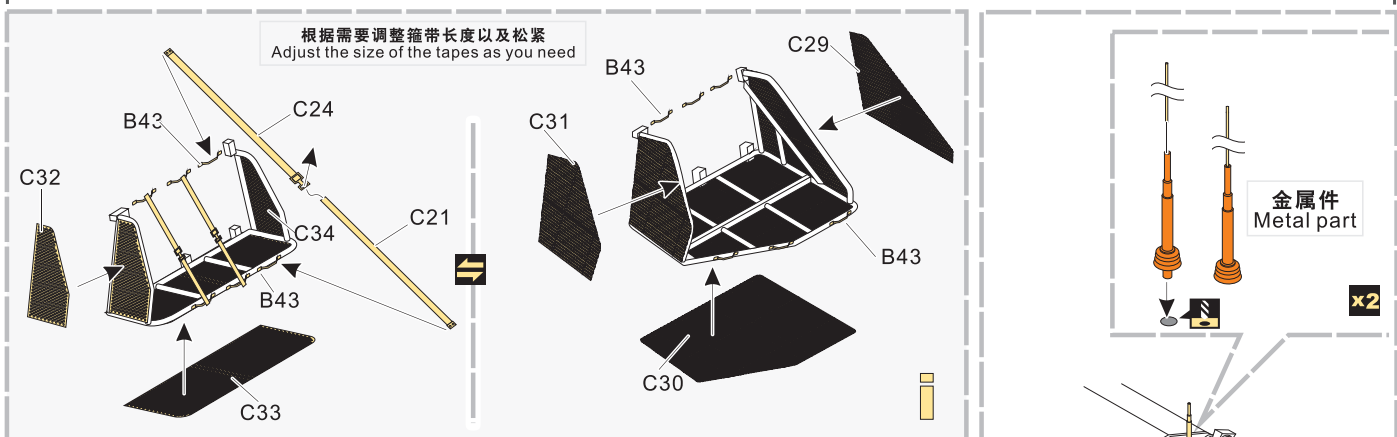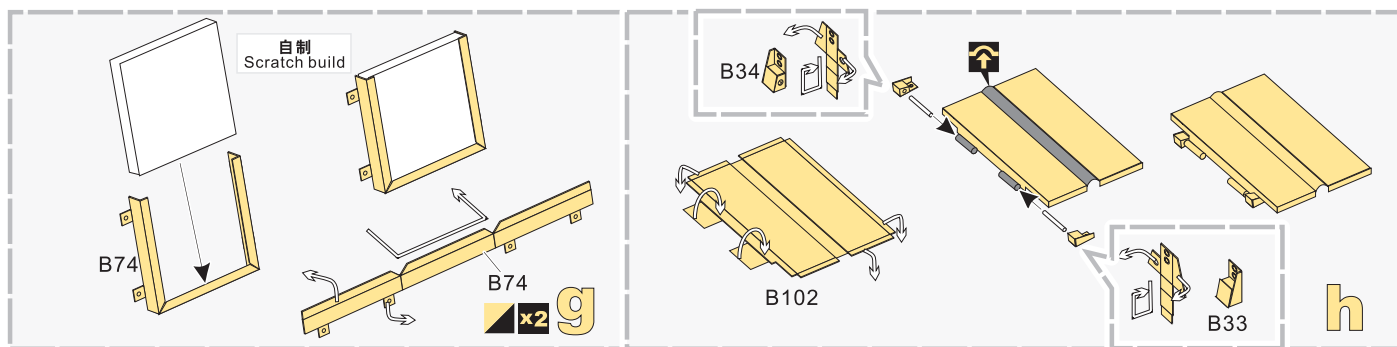


1/35 MILITARY MINIATURE VEHICLE UPGRADE SERIES PE35784

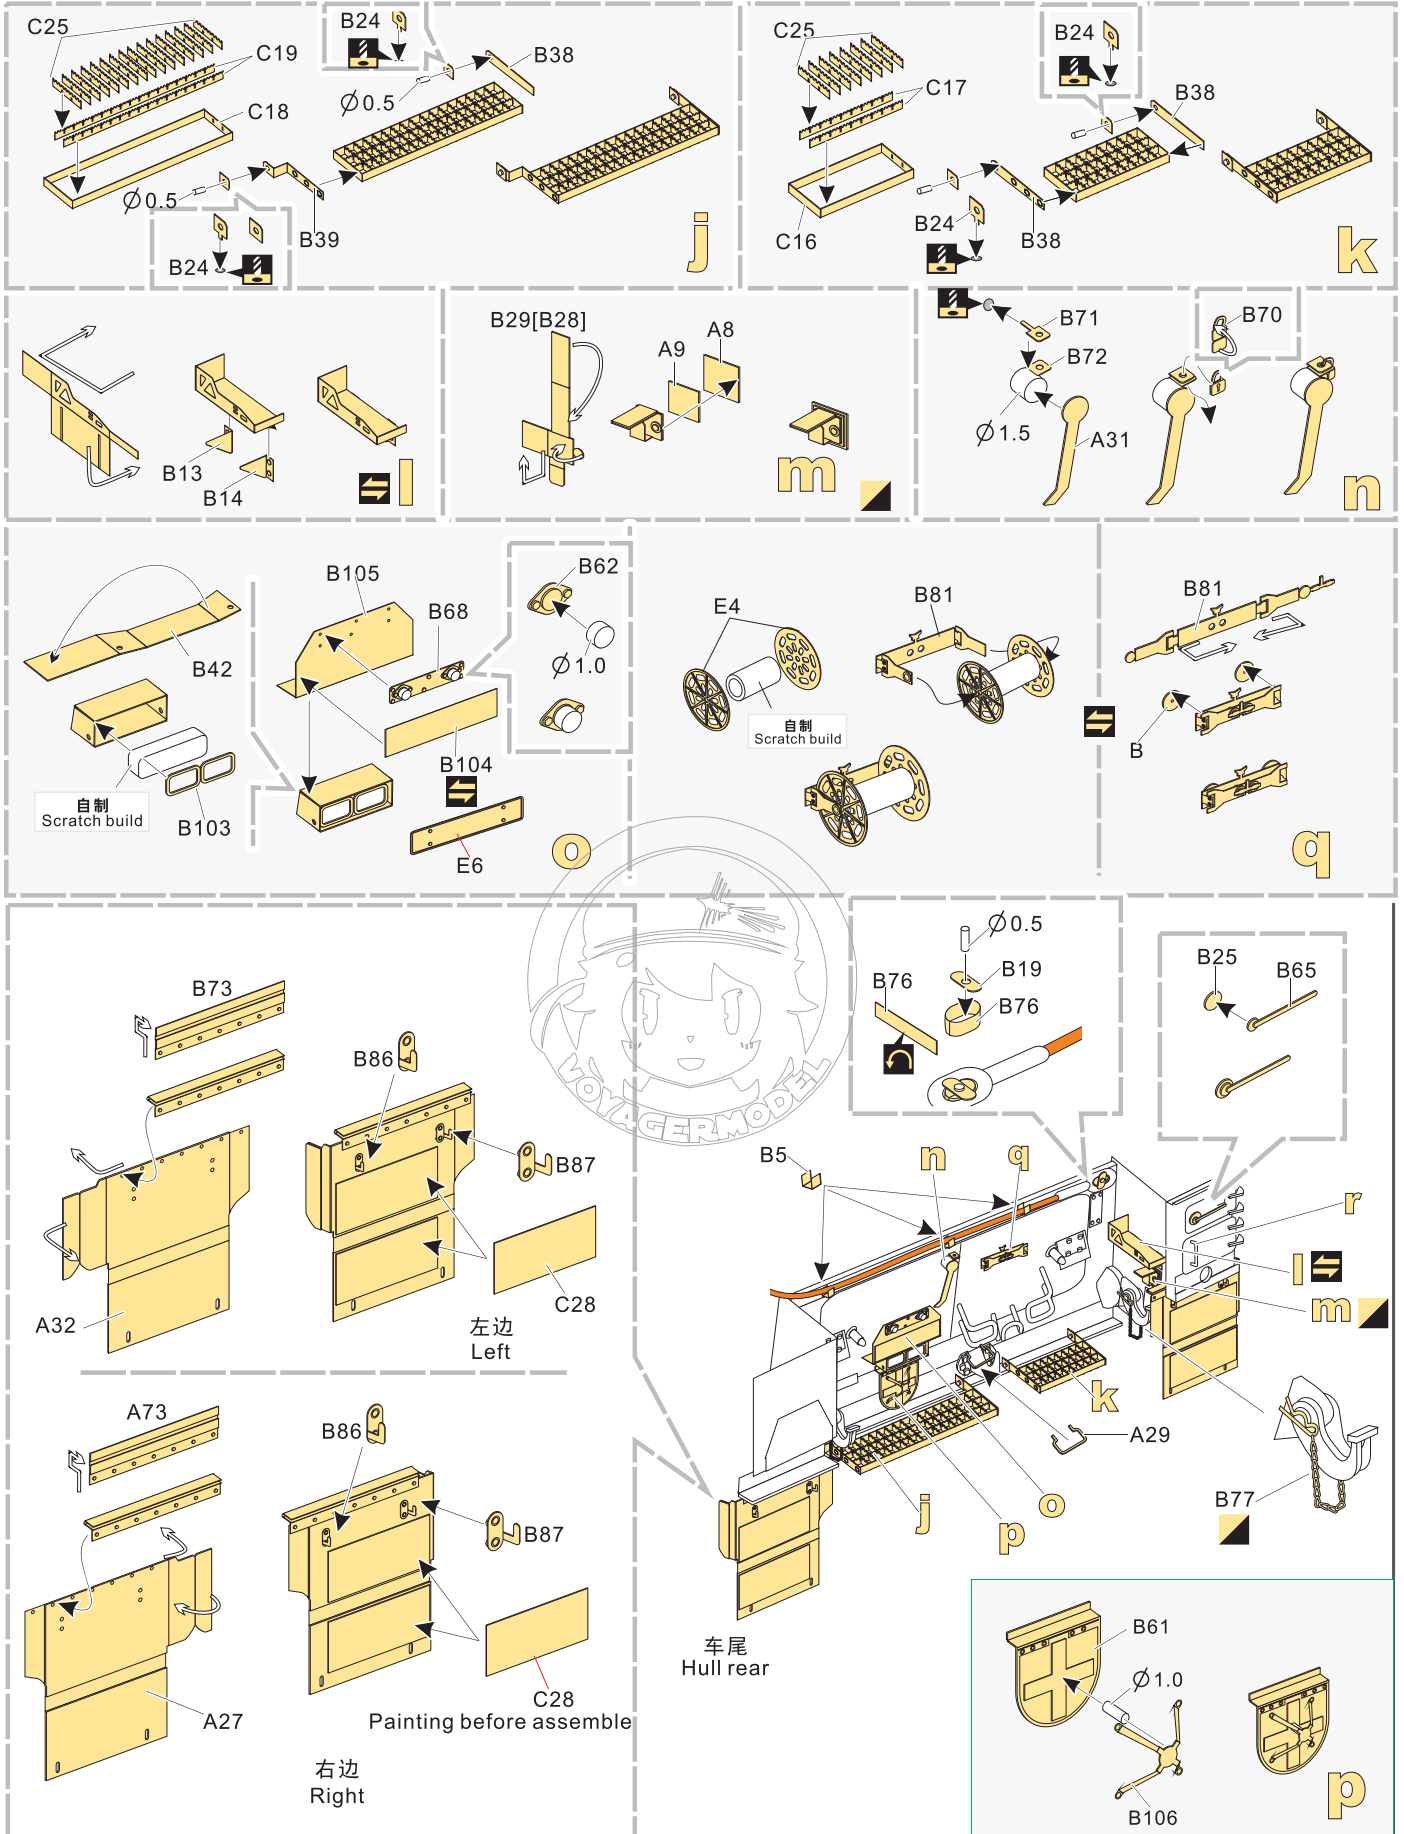


1/35 MILITARY MINIATURE VEHICLE UPGRADE SERIES PE35784

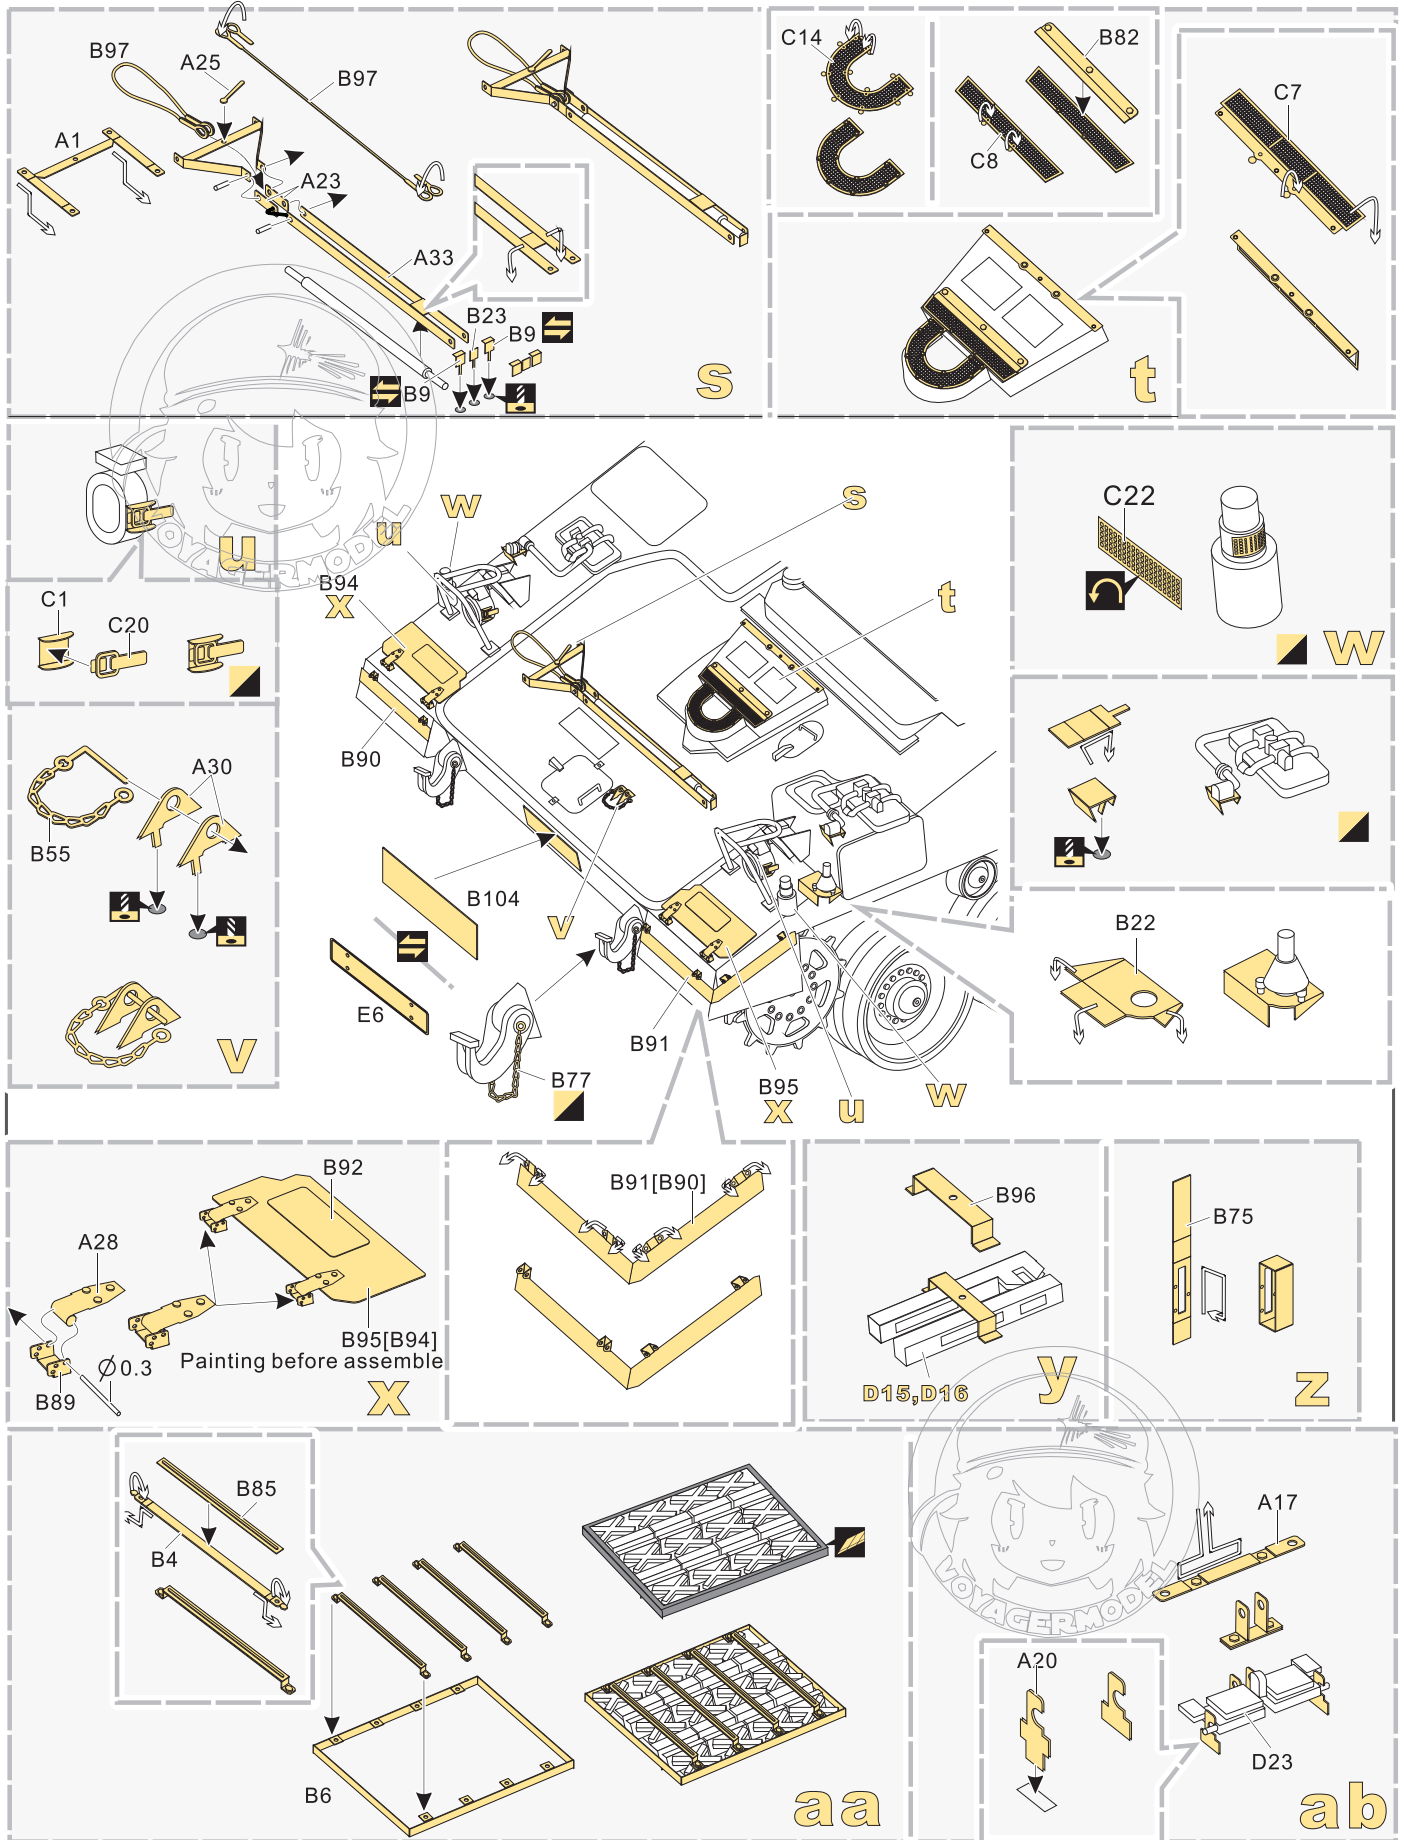

1/35 MILITARY MINIATURE VEHICLE UPGRADE SERIES PE35784

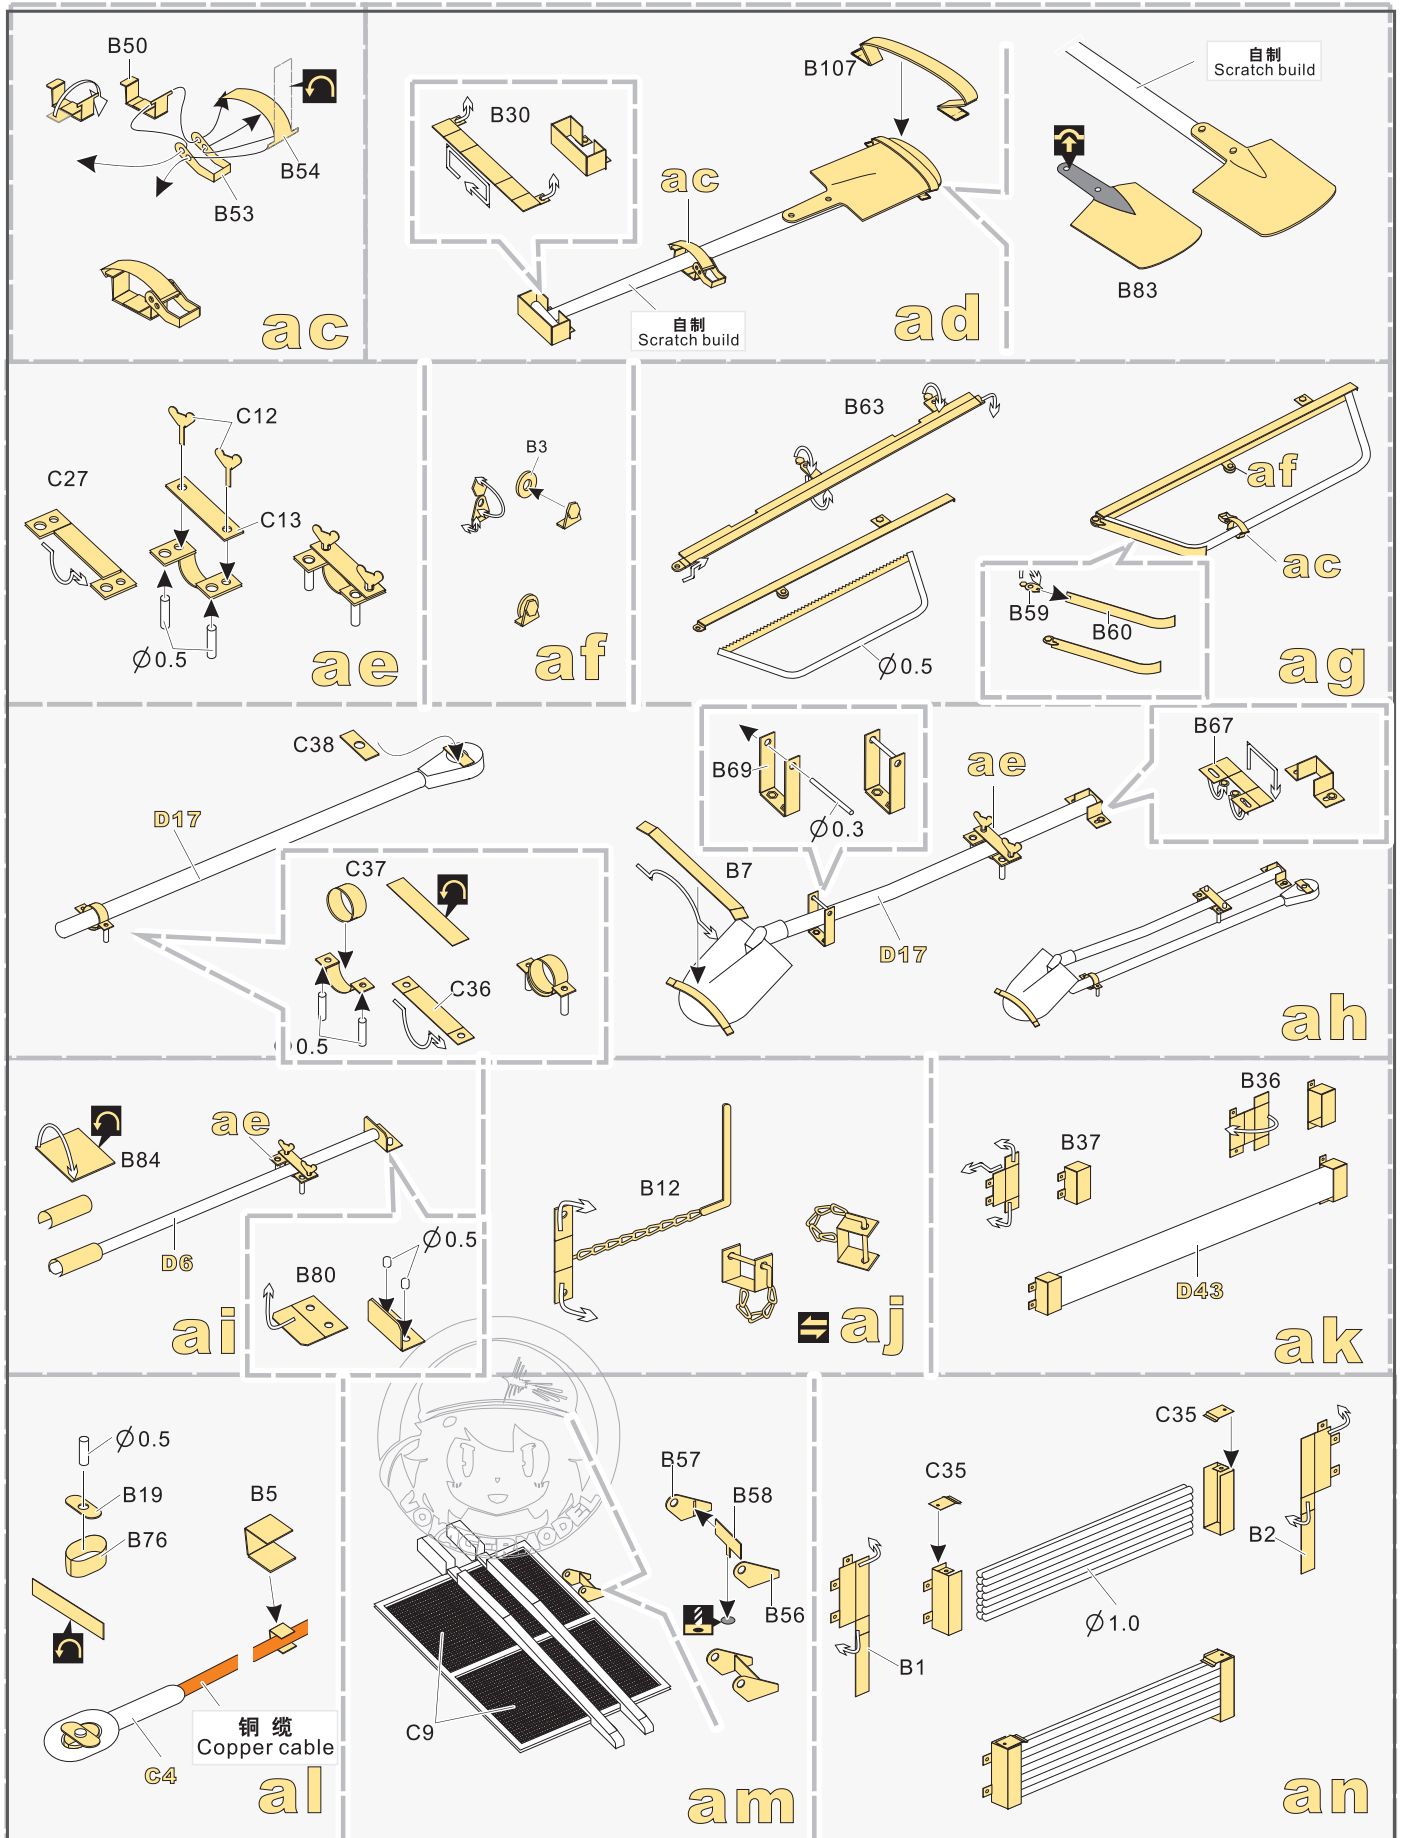

1/35 MILITARY MINIATURE VEHICLE UPGRADE SERIES PE35784

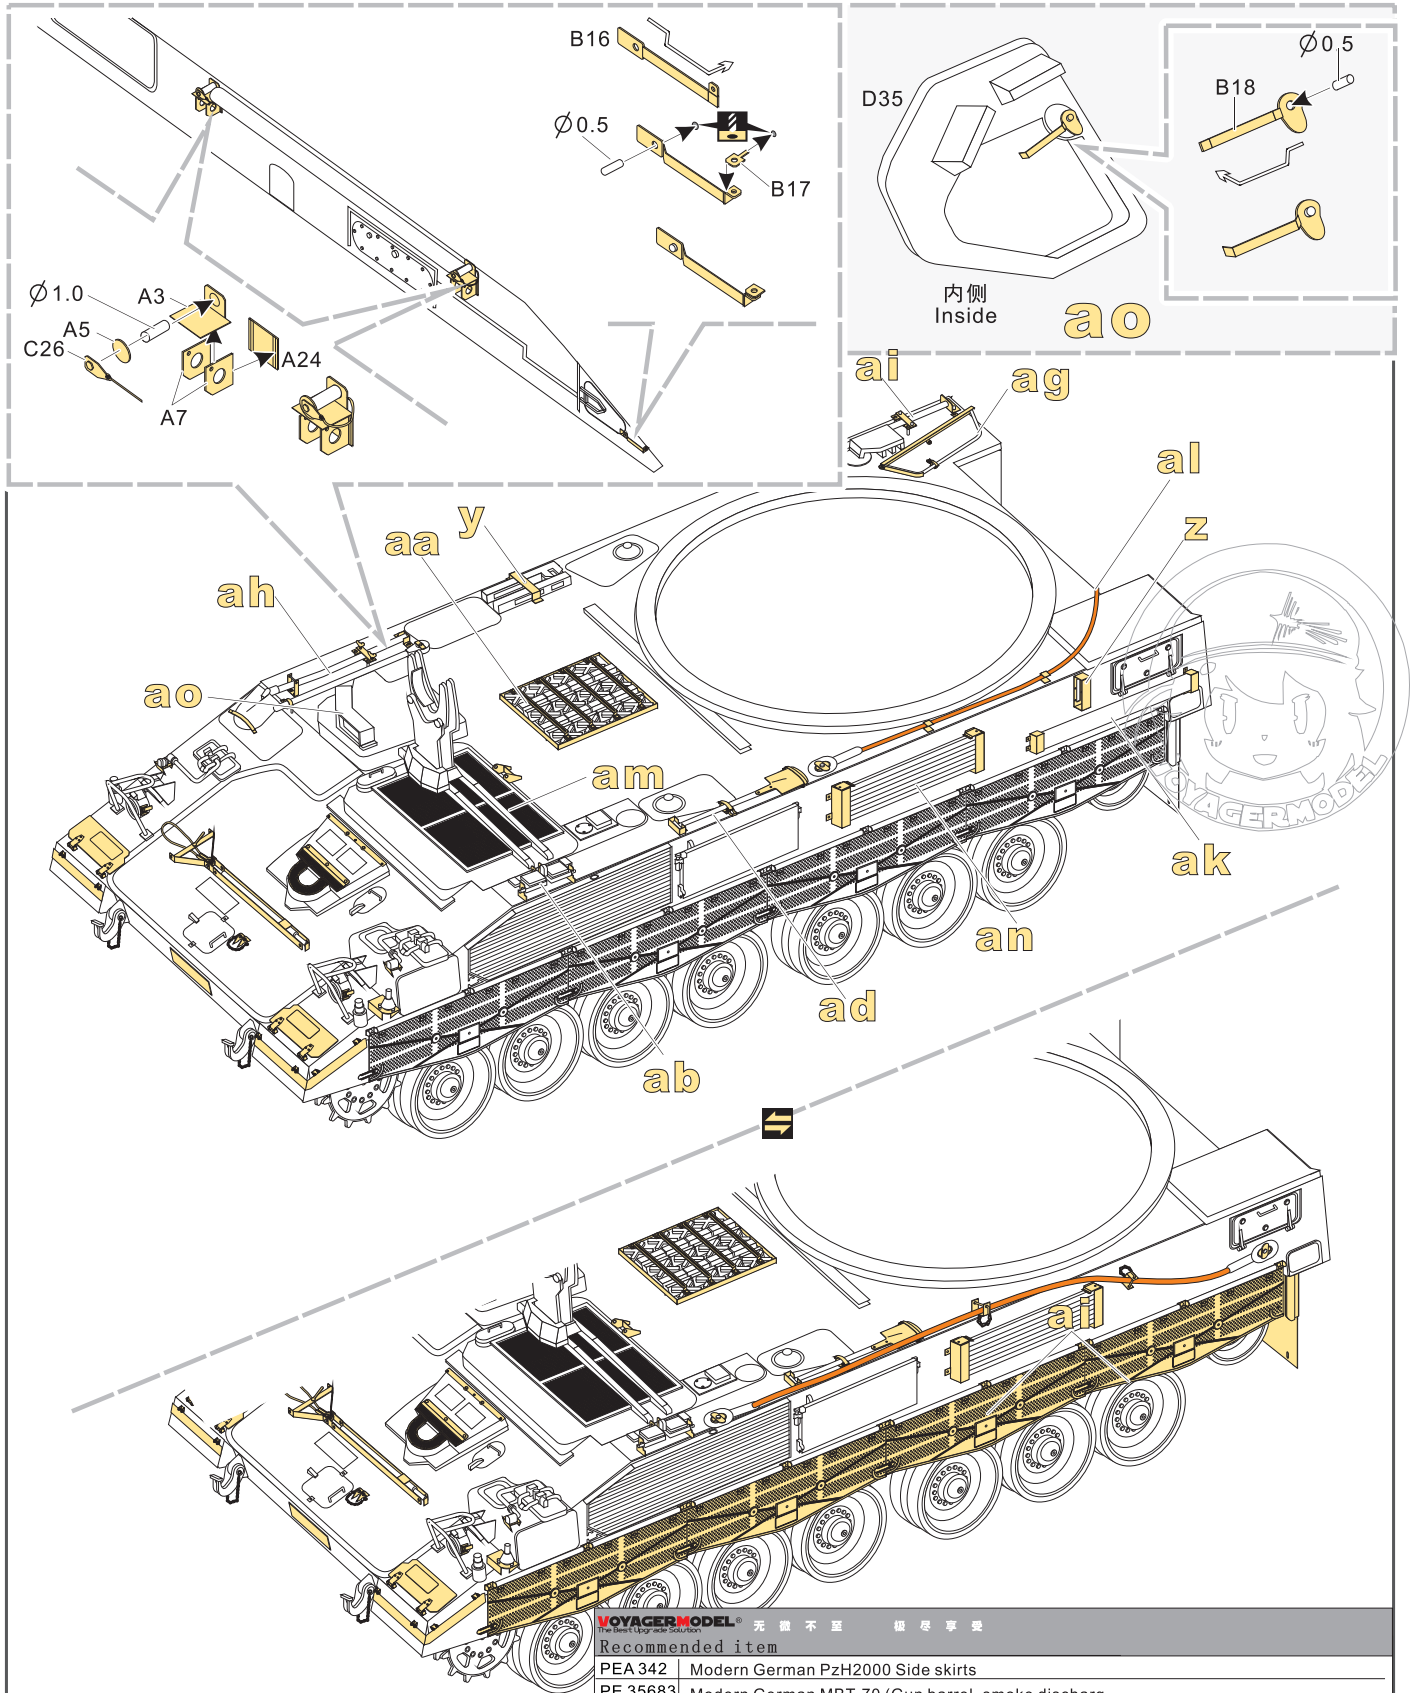

VOYAGERMODEL[®] 无微不至 精益求精

Recommended item

PEA 342	Modern German PzH2000 Side skirts
PE 35683	Modern German MBT-70 (Gun barrel ,smoke discharg
PE 35631	WWII German self-propelled howitzer Wespe basic (Gun barrel Include)
PE 35636	Modern German Leopard 1A4 MBT (Gun barrel Include)
PE 35652	Modern Canadian Leopard C2 MEXAS MBT(Gun barrel ,smoke discharger include)
PE 35684	Modern German Leopard1A5 MBT (Gun barrel ,smoke discharger, antenna base include)
PE 35685	Modern Canadian Leopard C2 MBT (Gun barrel ,smoke discharger, antenna base include)
PE 35699	Modern German PzH2000 SPH basic(antenna base include)

1/35 MILITARY MINIATURE VEHICLE UPGRADE SERIES PE35784


漏喷板使用说明:
Instruction:



未上色零件
Unpainted part



喷橡胶黑
spray tyre black

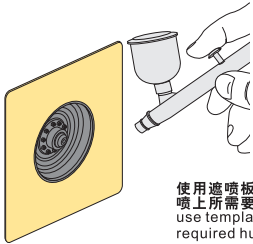

使用遮喷板为轮毂
喷上所需要的颜色
use template to paint
required hub colour



漏喷板使用说明:
Instruction:

Painting white

B95, B94





C28


切下所需漏喷模板,
用胶带固定位置并遮盖要贴
Cut off required pattern,
use tape for positioning and masking




Tape

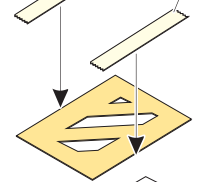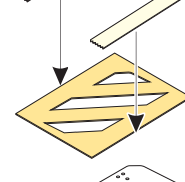

Painting red

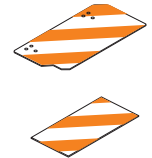

喷涂单色图案所需颜色; 或喷涂多色图案之底色
For single colored insignia, spray required color;
For multi-colored ones, spray background color at this time

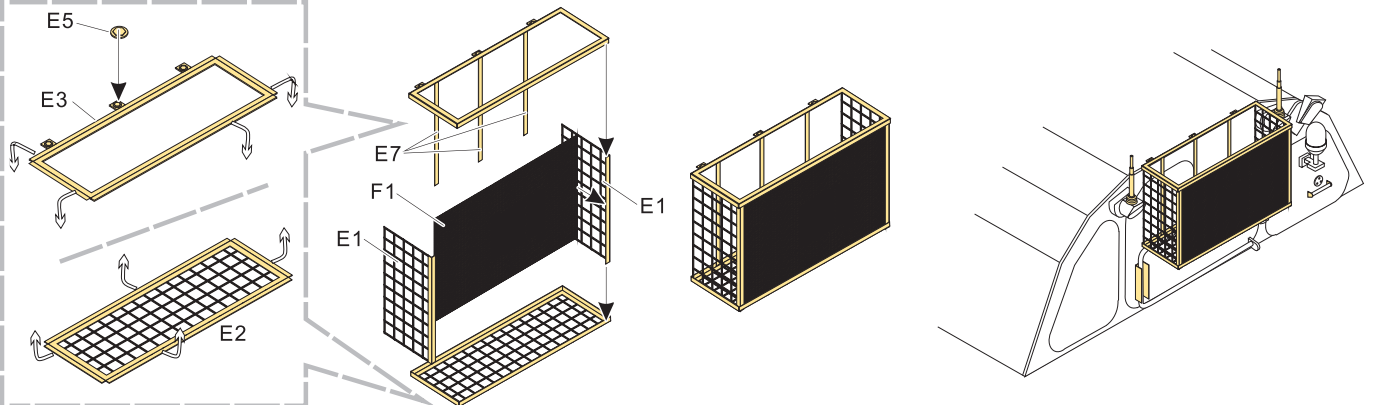

**VOYAGER
MODEL**



更多PE35784样品照片参考请扫一扫
MORE PICTUER OF PE 35784
REFERENCE SCAN HERE

