


1:35 SCALE

ITEM NO.:01539

German E-75 Flakpanzer

E-75自行防空火炮

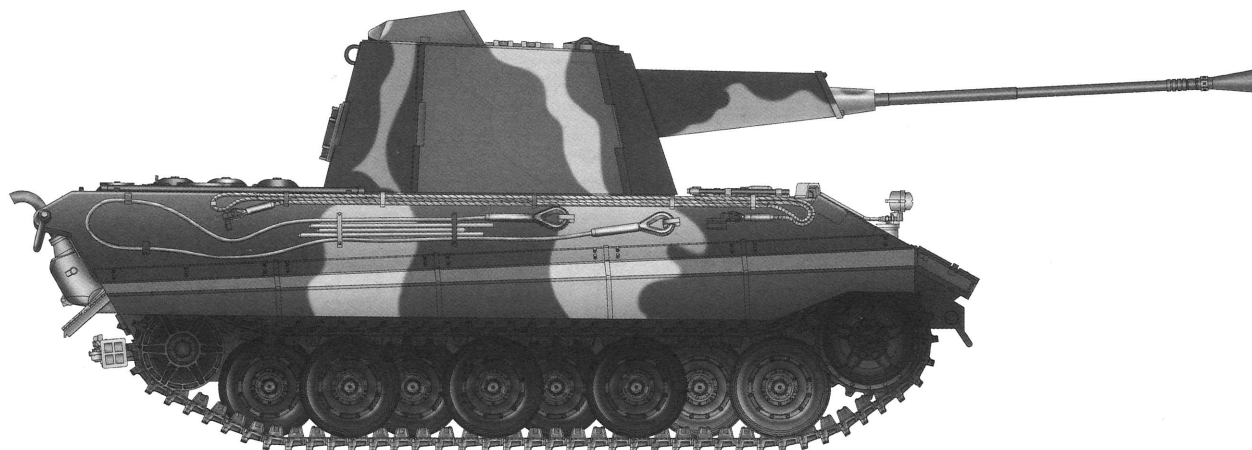

READ BEFORE ASSEMBLY:

- Study and understand these instructions thoroughly before beginning assembly
- When needed, remove photo-etch parts carefully using a modeling knife or photo etch sprue cutter, being careful not to damage or lose small parts.
- Take extra care in handling photo etch parts in order to avoid injury
- Apply instant cement sparingly to photo etch parts where instructed
- Tools recommended(not included in kit):Plastic and instant cements, sprue cutters,long nose pliers,modeling knife, small files, tweezers, pin vise & scissors. Soft cloth and sandpaper will also assist in construction
- Glue and paint are not included in the kit. Use plastic cement and hobby paints only. Color guide for purchasing paint is included in the kit.

装配之前仔细阅读

- 小心用模型锉刀锉平所有零件表面的注射浇口。
- 小心用刀片切下蚀刻片零件，不要遗失小零件。
- 用强力快干胶水粘合蚀刻片零件和金属轴。过量快干胶水使用可能导致可动零件会粘住，小心涂胶。
- 取蚀刻片时应特别注意安全，防止利边划伤手指。
- 某些零件表面需贴上水贴纸，请选择在装配的同时进行。
- 推荐模型工具(自备)：胶水，水口剪刀，长咀钳，刀片，锉刀，镊子，钳，钻，剪刀，瞬间快干胶。
- 软布同砂纸同时也应该是必备工具。
- 请使用塑料胶水和油漆，模型内不含。



配重
Weight



使用强力胶
Cyanoacrylate glue



钻孔
Make hole



切除
Cut / Remove



贴纸
Decal



锉平
File / Sand



选择
Option



不涂胶水
No cement



弯曲
Bend

水贴纸的使用:

- 1.从水贴上剪下印花;
- 2.将印花放入温水中浸10秒, 然后放在干净布上。
- 3.拿着印花纸板将印花移到模型上;
- 4.手指蘸水将印花移到适当的位置;
- 5.用软布轻压印花直至水干, 气泡消失






DECAL APPLICATION

- 1.Cut decals from sheet as needed
- 2.Dip the decal in warm water for about 10 seconds and then place on soft clean cloth.
- 3.Hold the decal backing sheet edge and gently slide the decal onto the model in its proper position.


- 4.While still wet,decal can be adjusted for better fit on model by dampening it gently with your finger.
- 5.When placed in the proper position,gently press decal down with a soft cloth until excess water and air bubbles are gone.
- 6.Allow decal to dry completely before handling model

部品图 Parts


AX2

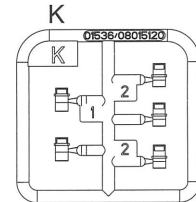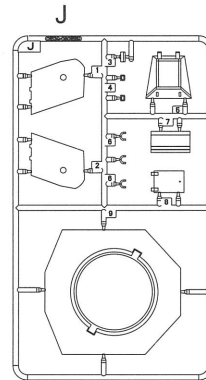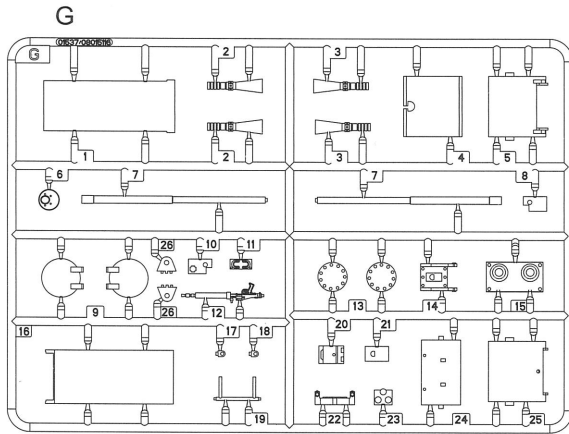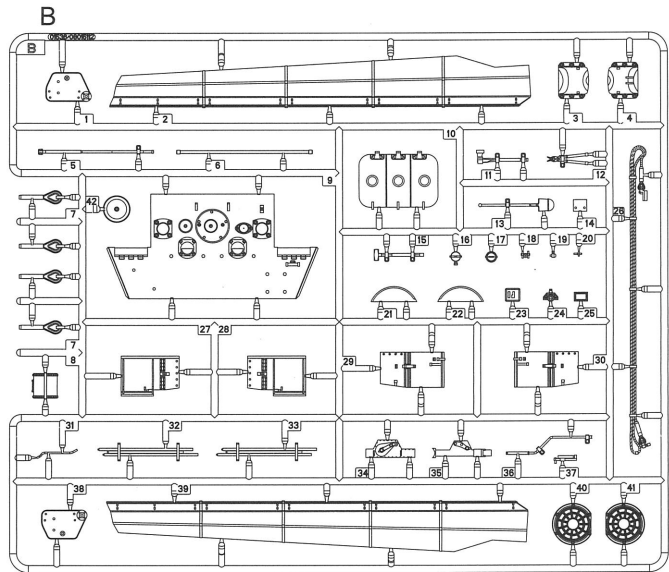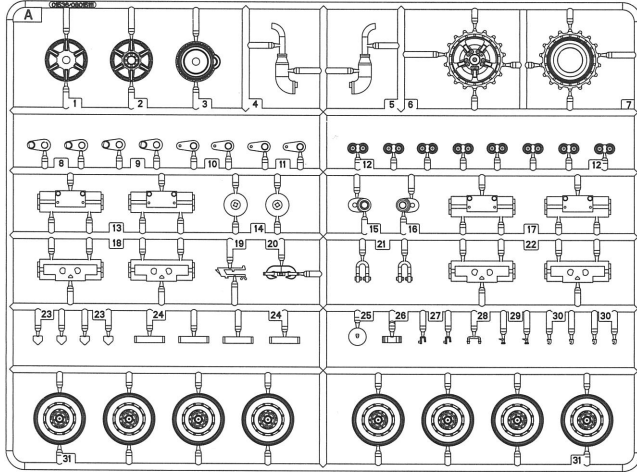


<<蚀刻片>>
PE

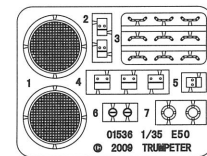


<<车面>>
Upper hull

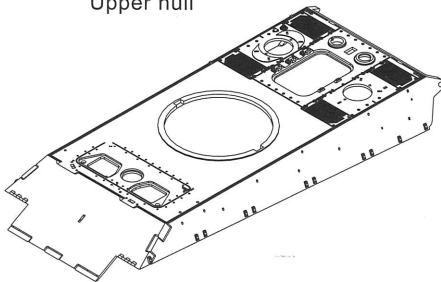

<<车底>>
Lower hull

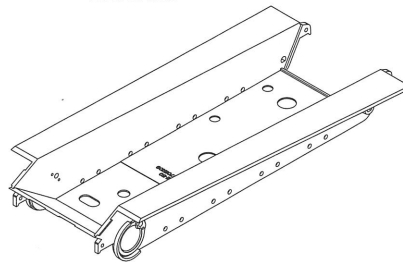

<<炮塔>>
Turret

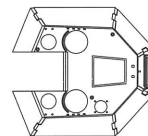

<<履带>>
Track



<<履带>>
Track



<<铜缆>> $\varnothing 0.8 \times 450\text{mm}$
Brass wire




不用部品: K1 PE-2 PE-4 PE-5
Un unused part:

01539

1 车轮组装 Wheels assembly


<<主动轮>>
Sprocket wheel

制作2组
Make two

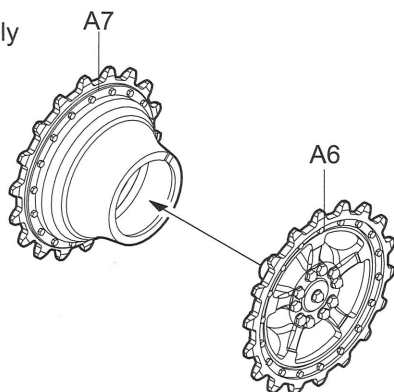


<<诱导轮>>
Idler wheel

制作2组
Make two

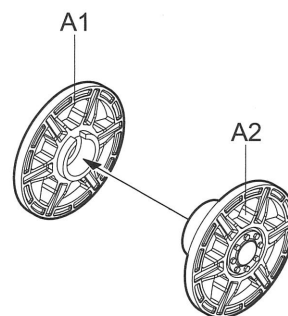


2 履带连接 Track construction

- * 履带可用塑料胶水粘合。
- * 履带可用模型油漆喷涂。
- * 若履带断裂，用细丝线固定。
- * The tracks in this kit can be glued using plastic cement.
- * The tracks can be painted using plastic paints.
- * If track is broken strengthen with staples or thread.

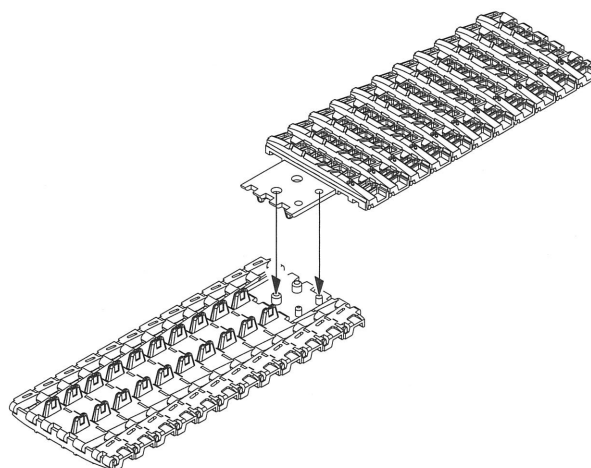


3 悬臂组装 cantalever assembly


<<R>>

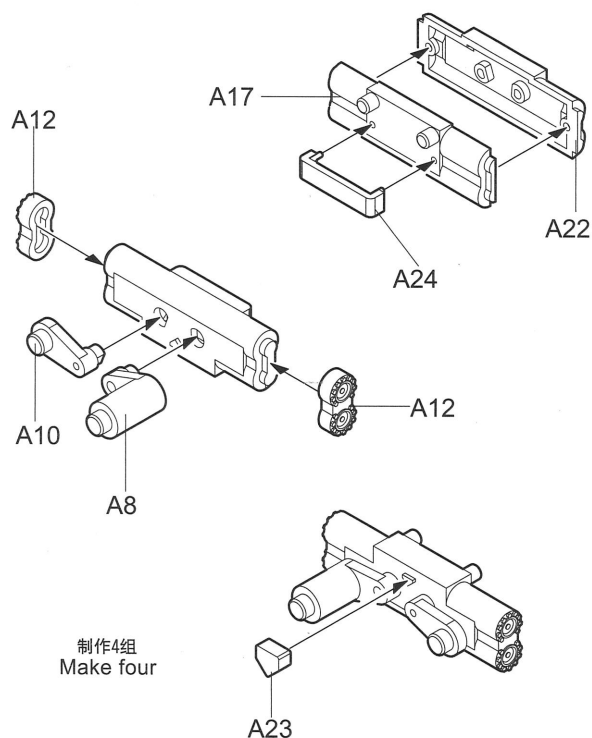


<<L>>

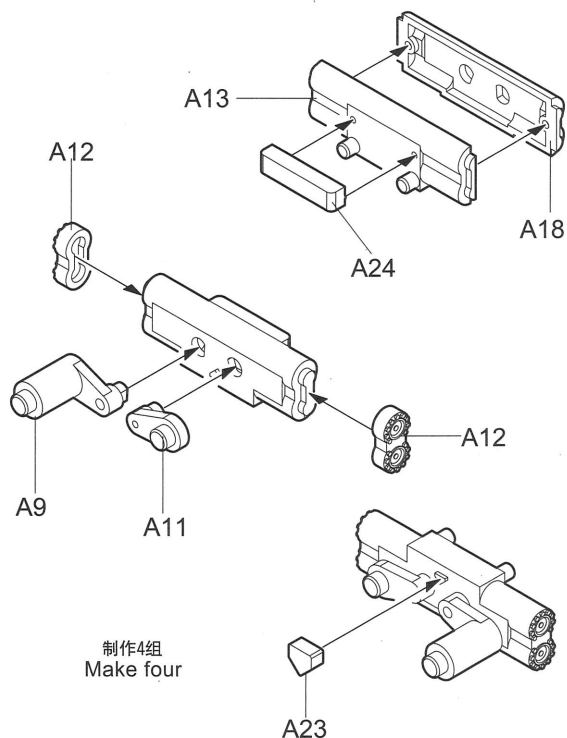


4 悬臂安装 Attaching cantalever

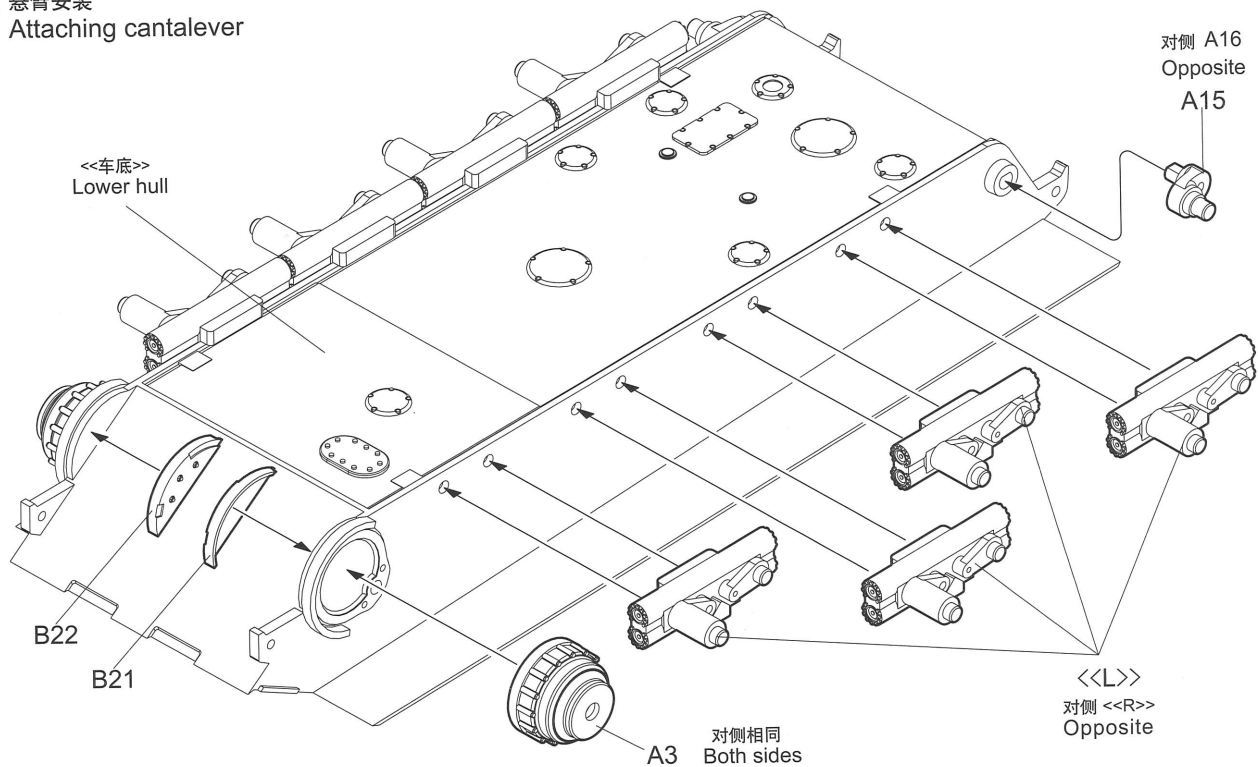


5 车轮安装 Attaching wheel

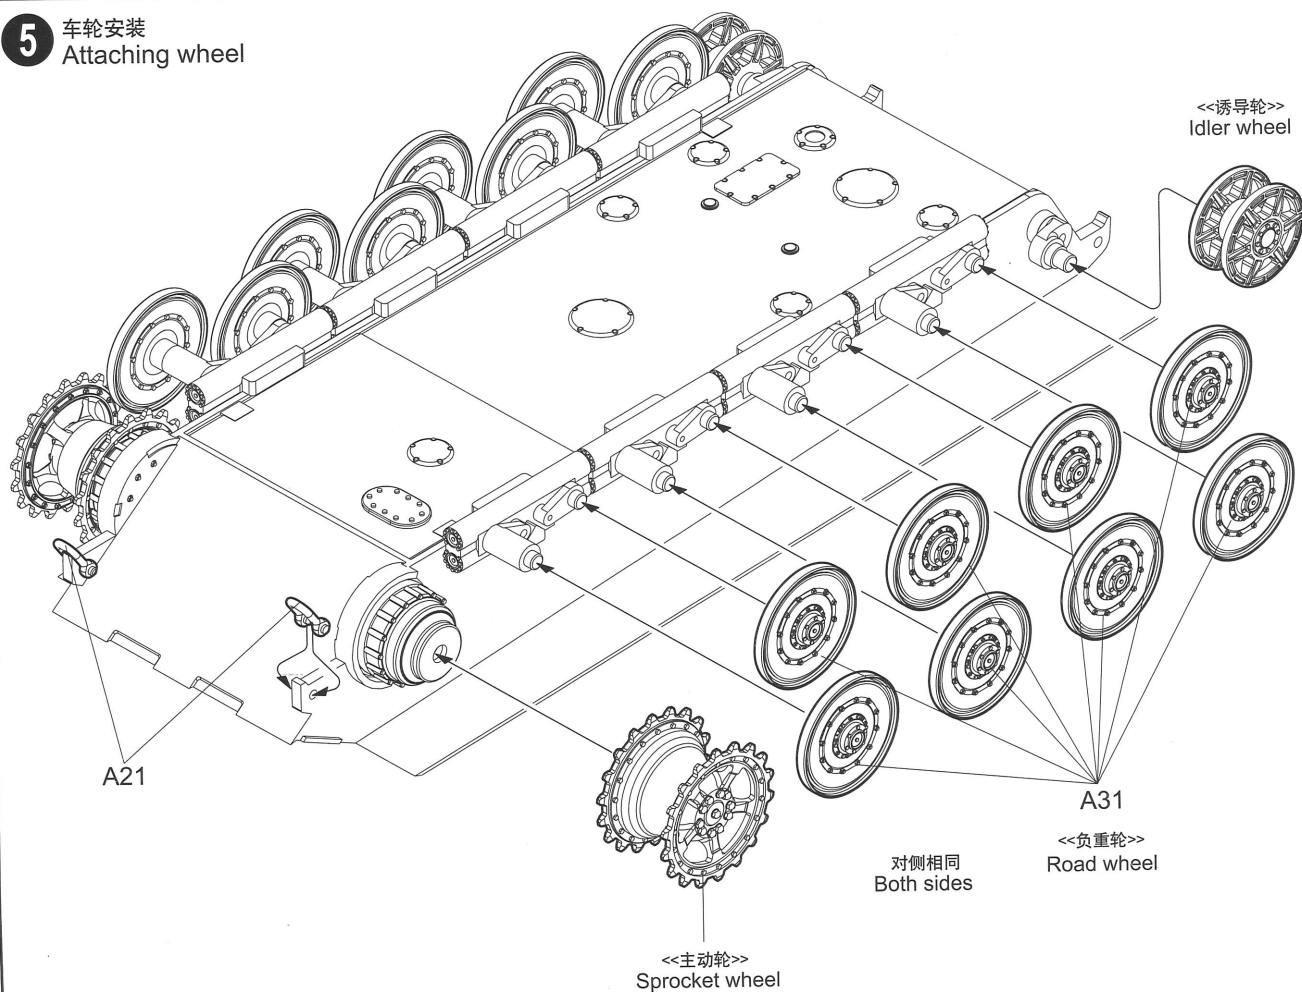


6 履带安装 Attaching track

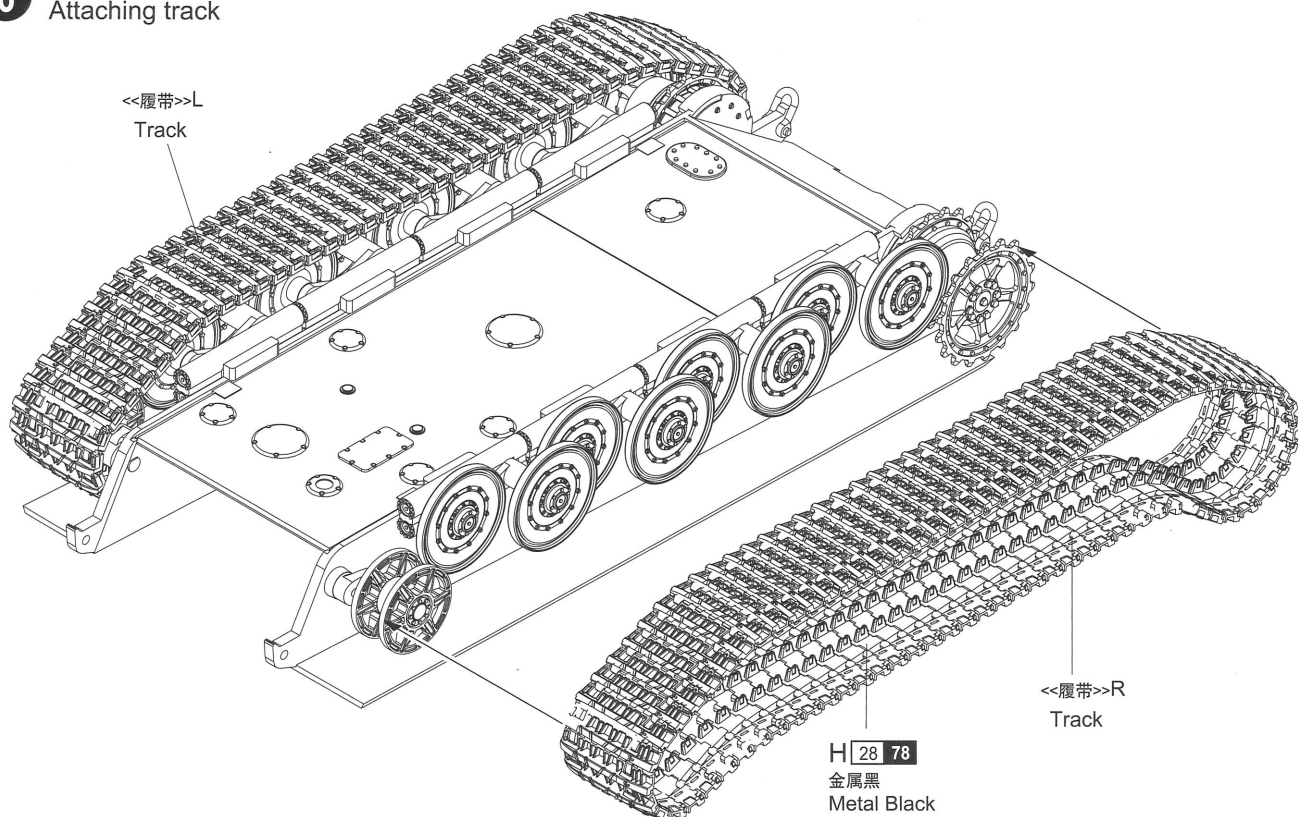


7 后板组装 Rear panel assembly

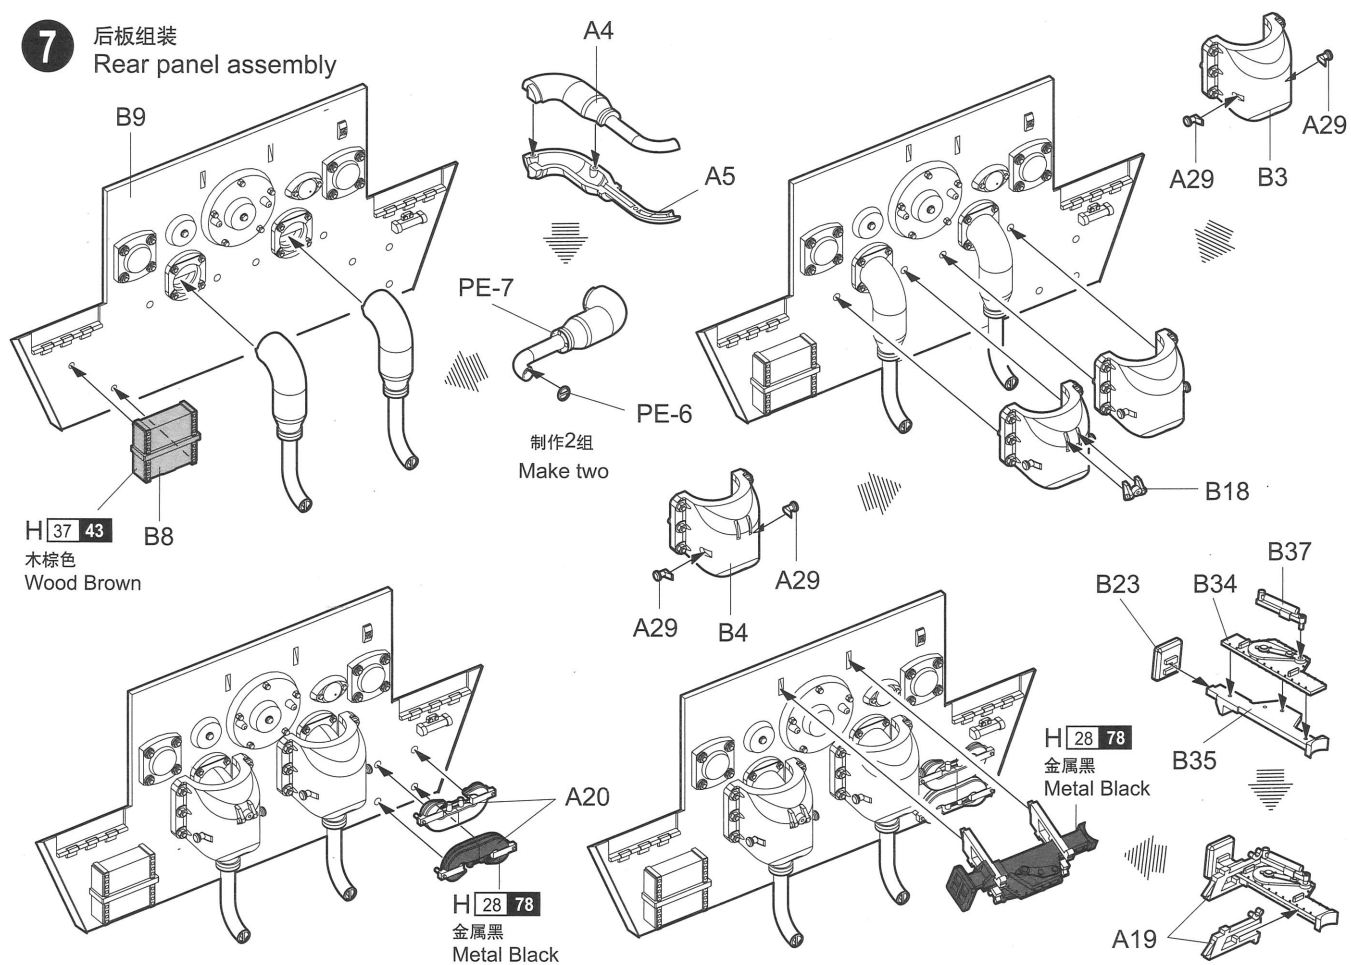


8 后板安装
Attaching rear panel

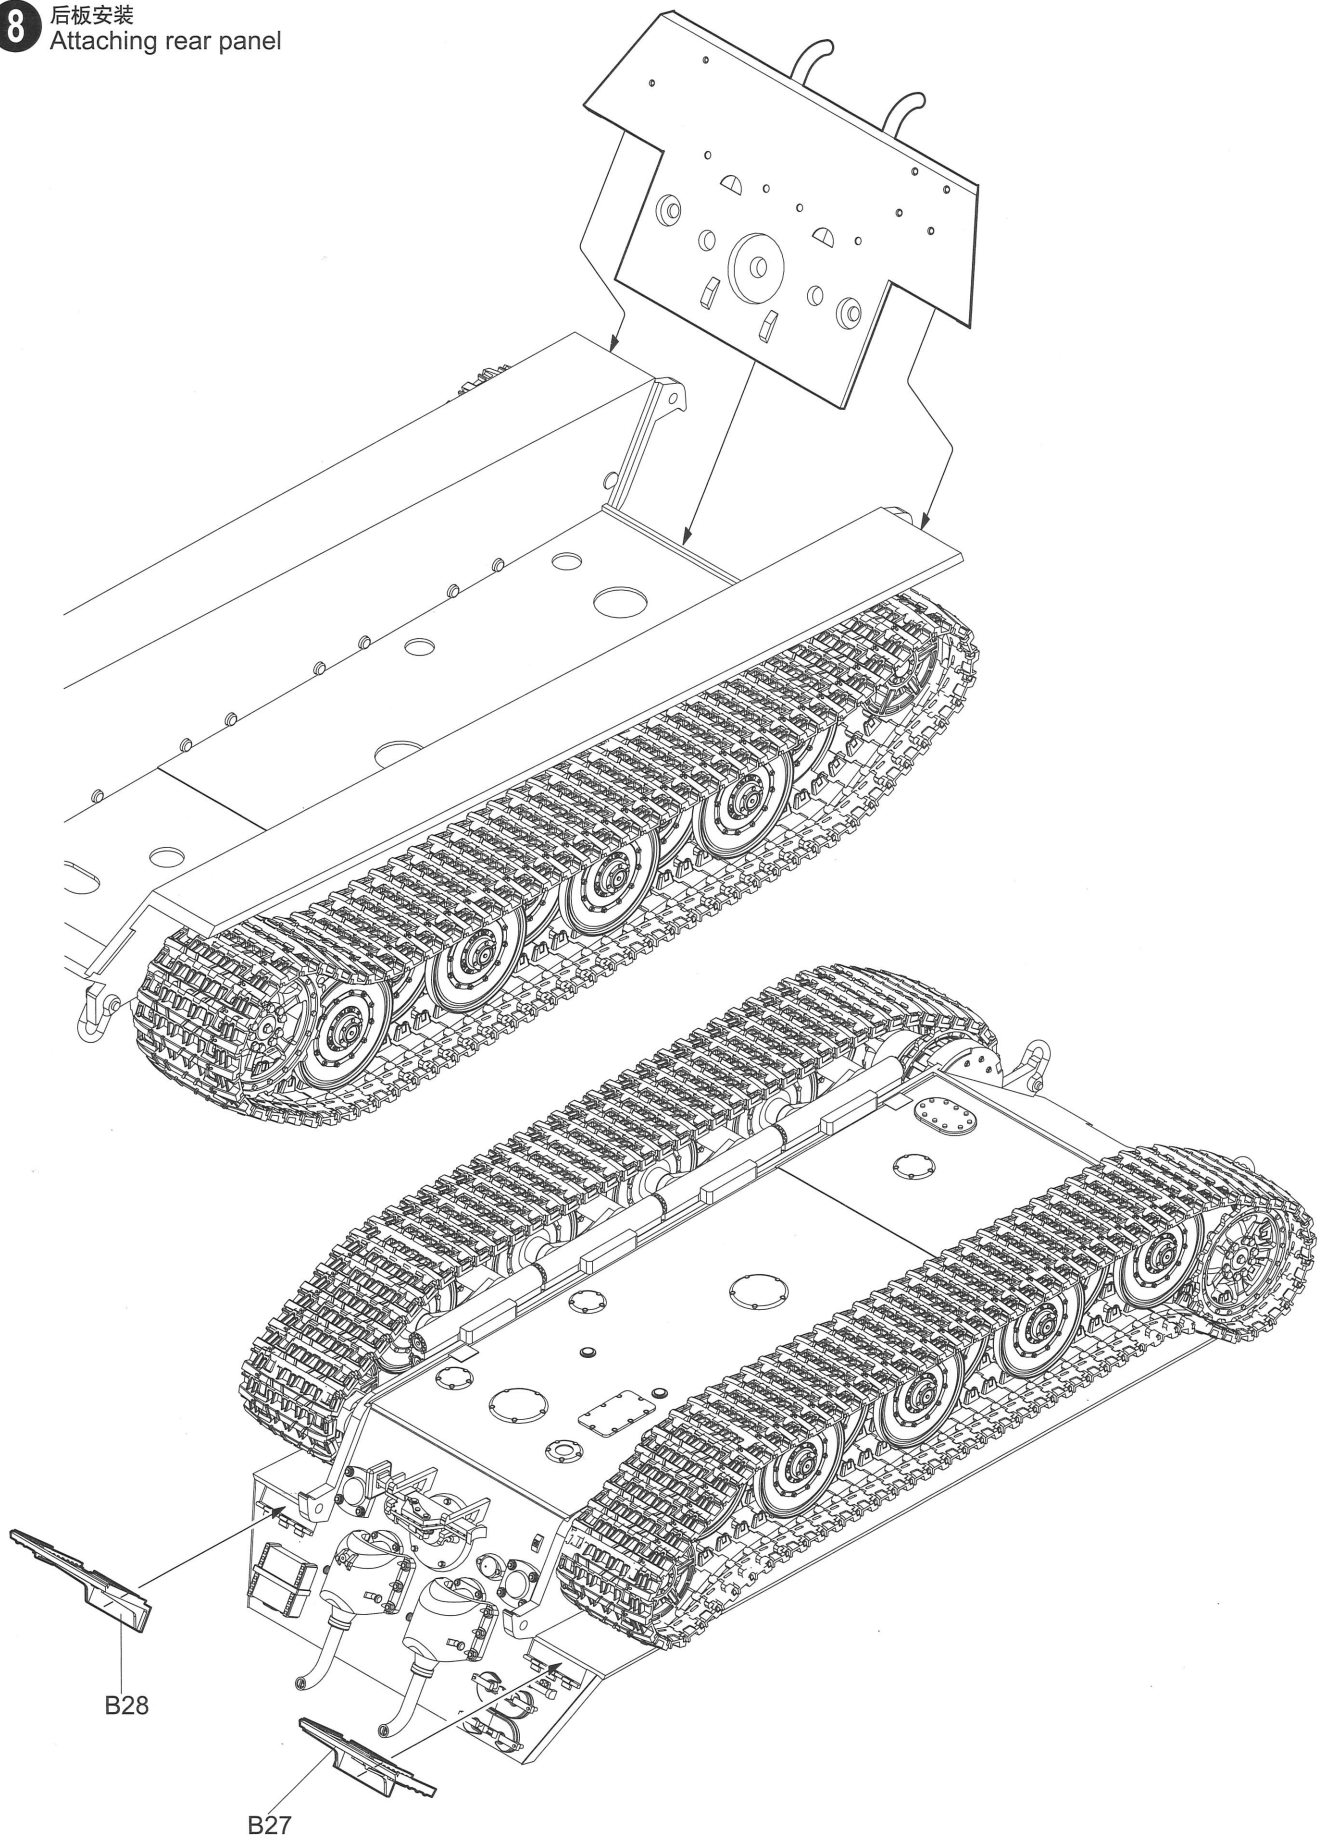


9

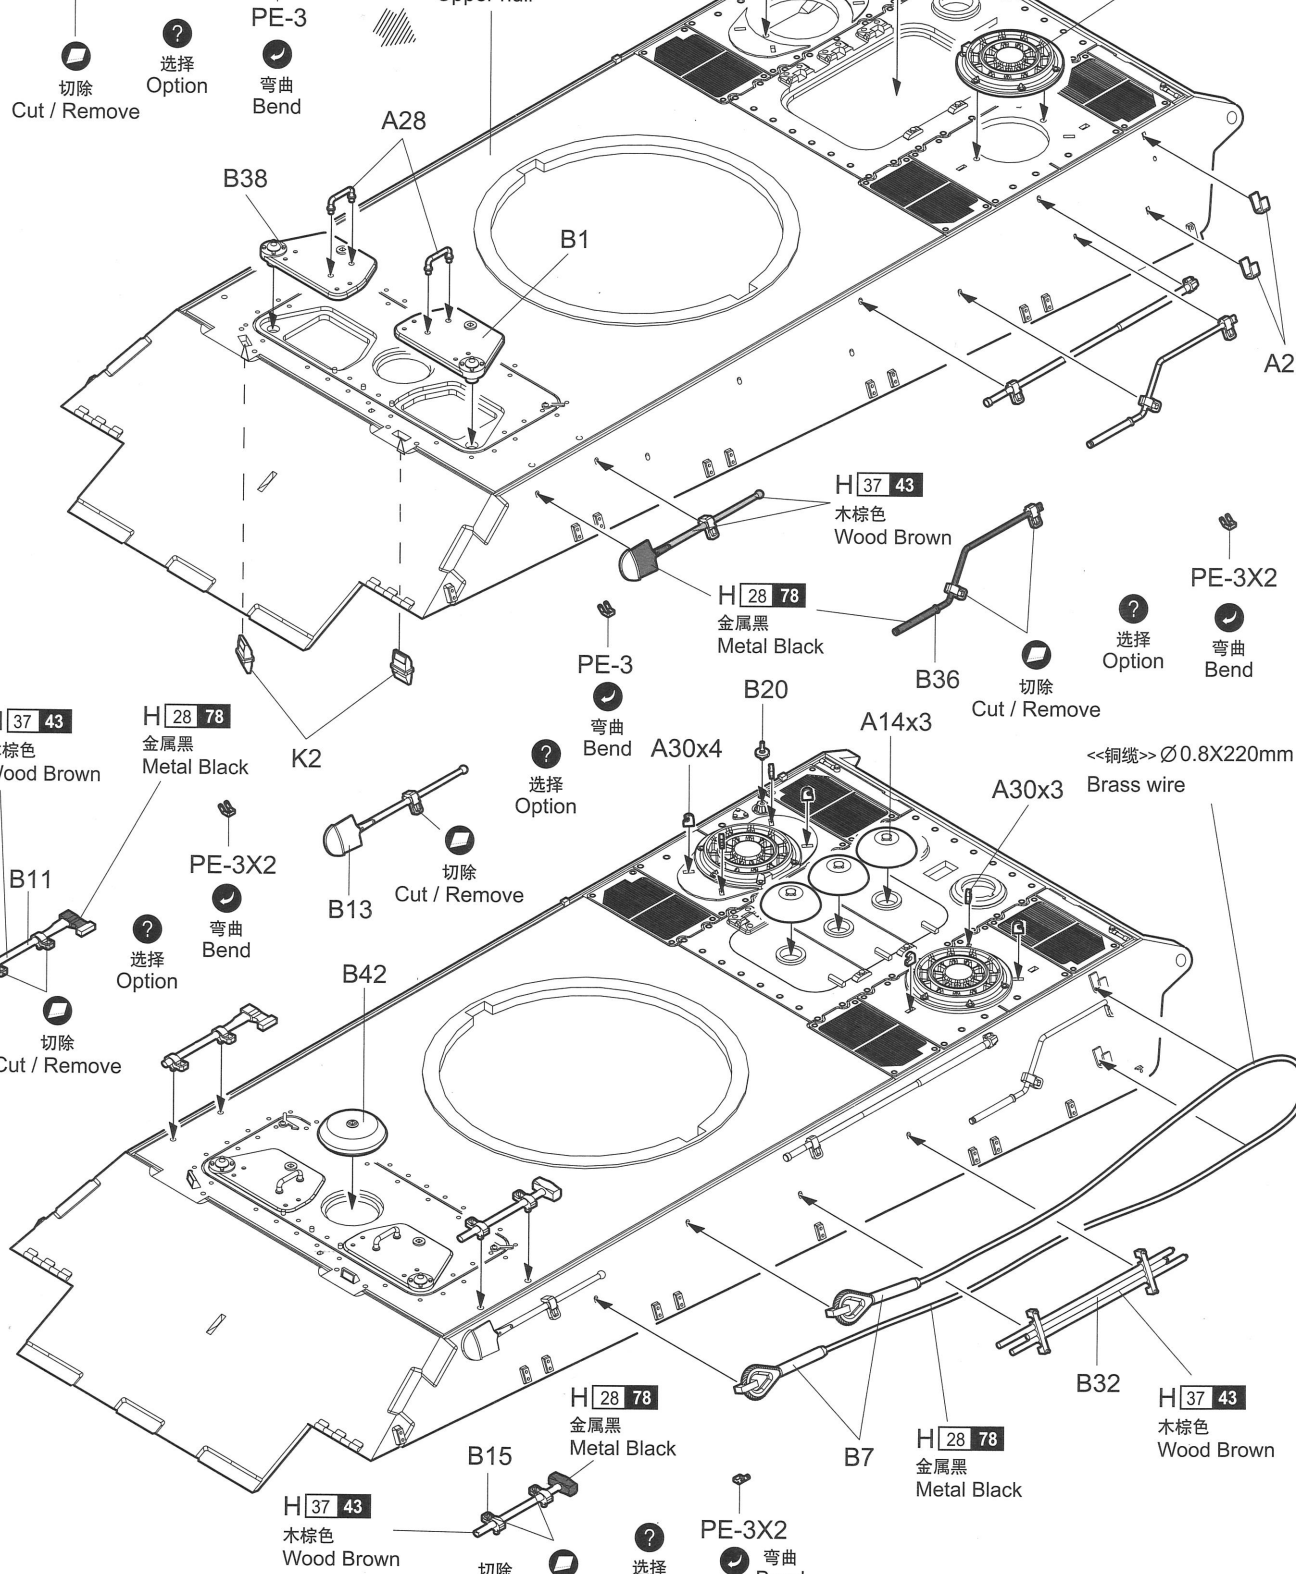


10




11 车面安装
Attaching upper hull

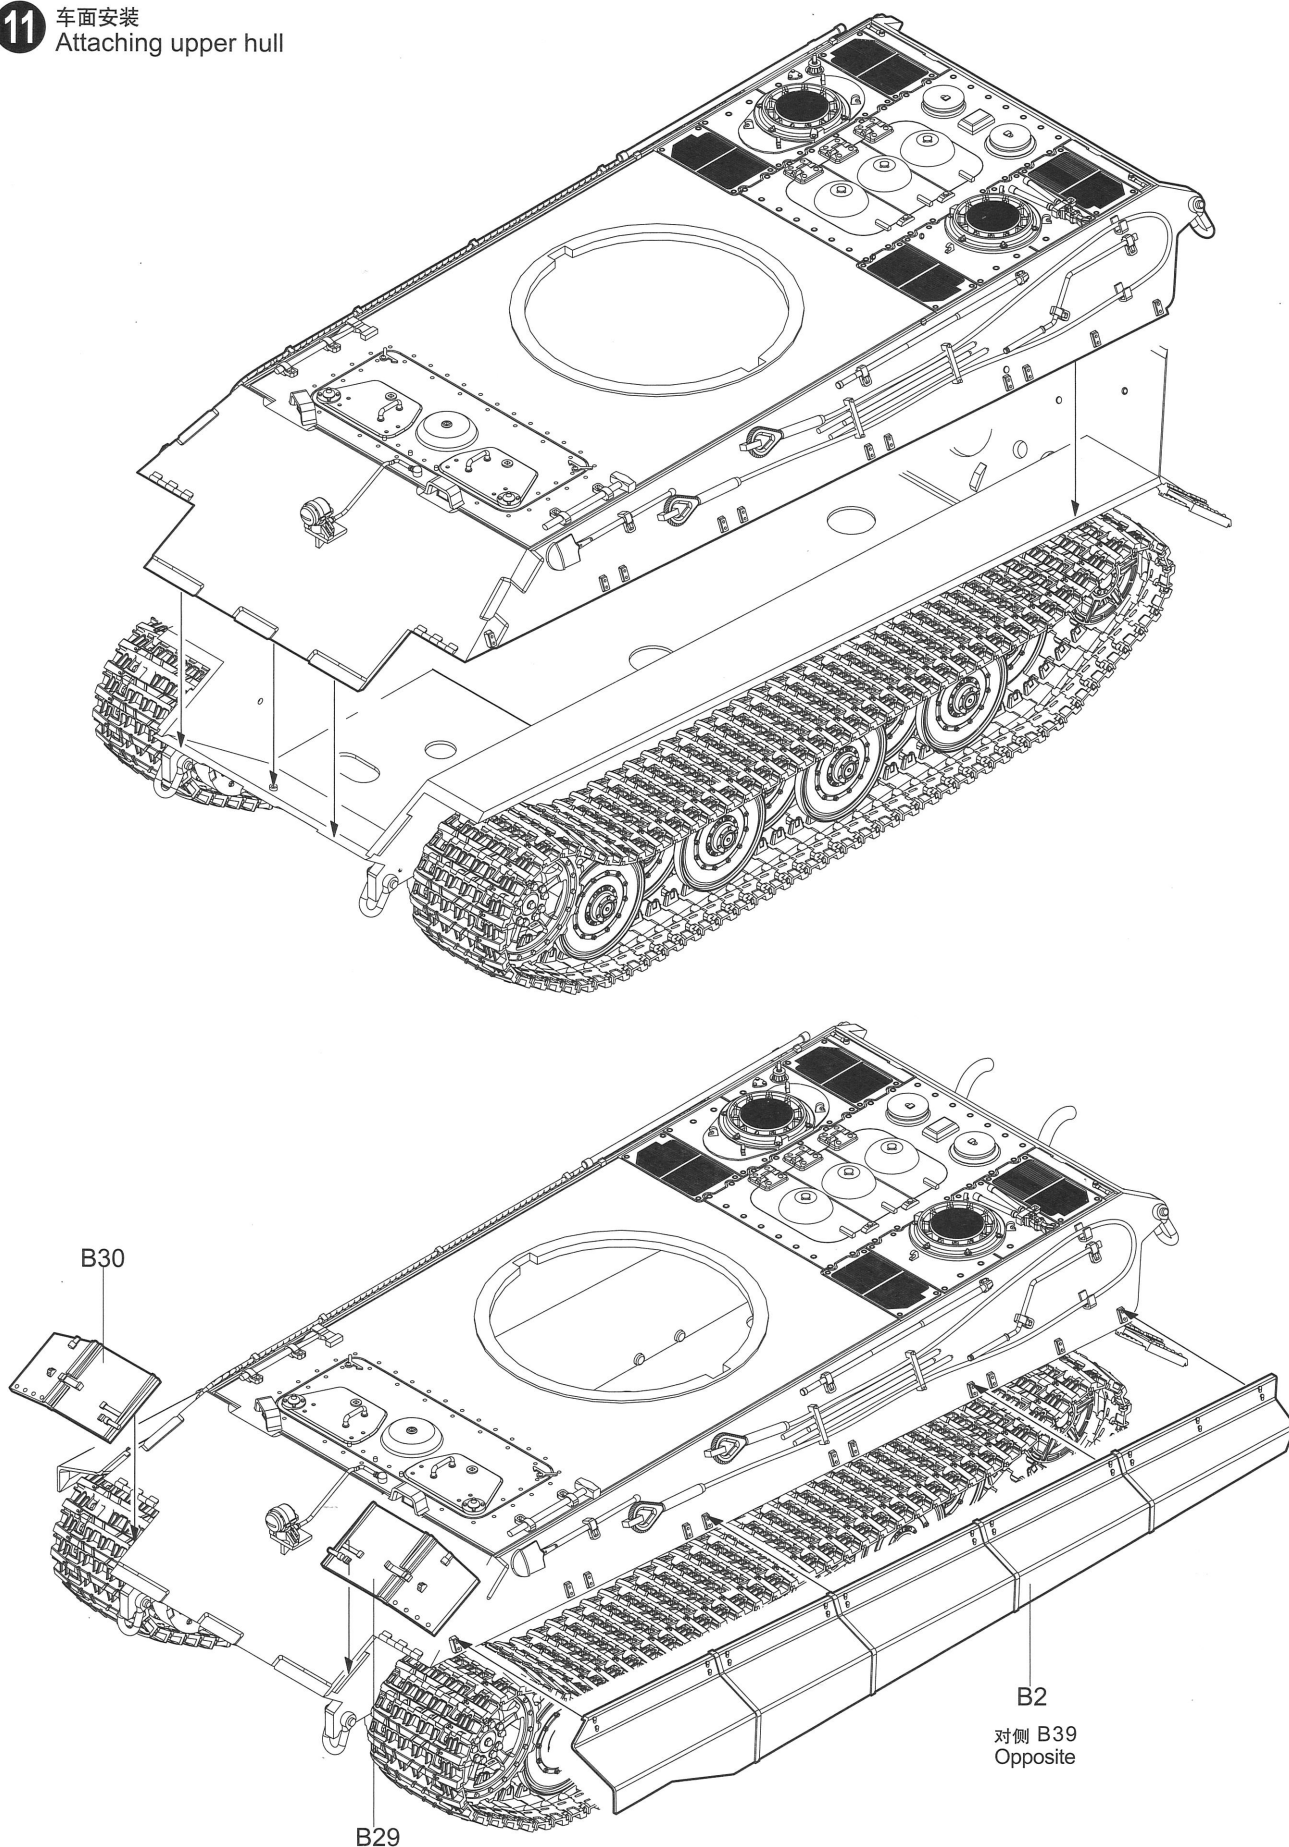


12 炮塔组装 Turret assembly

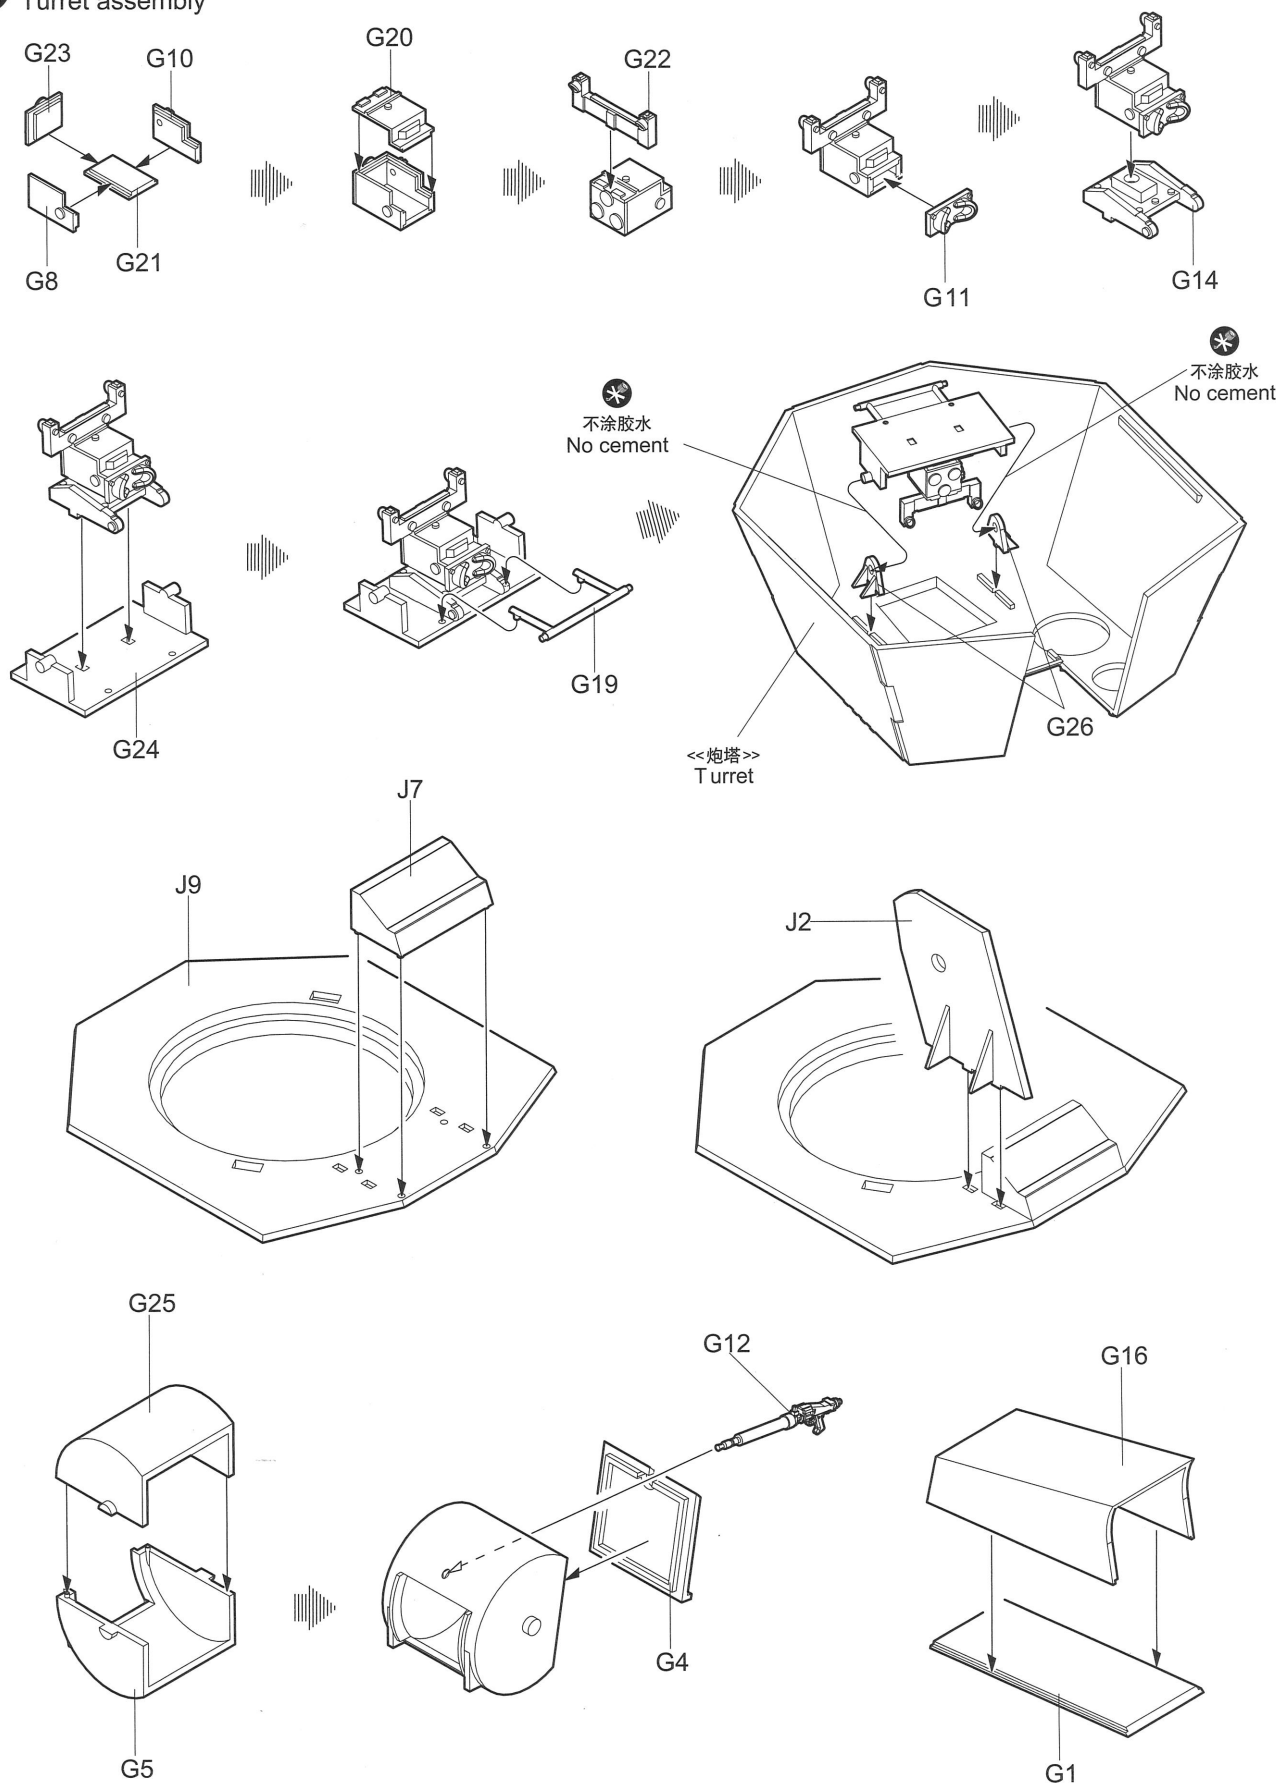

13

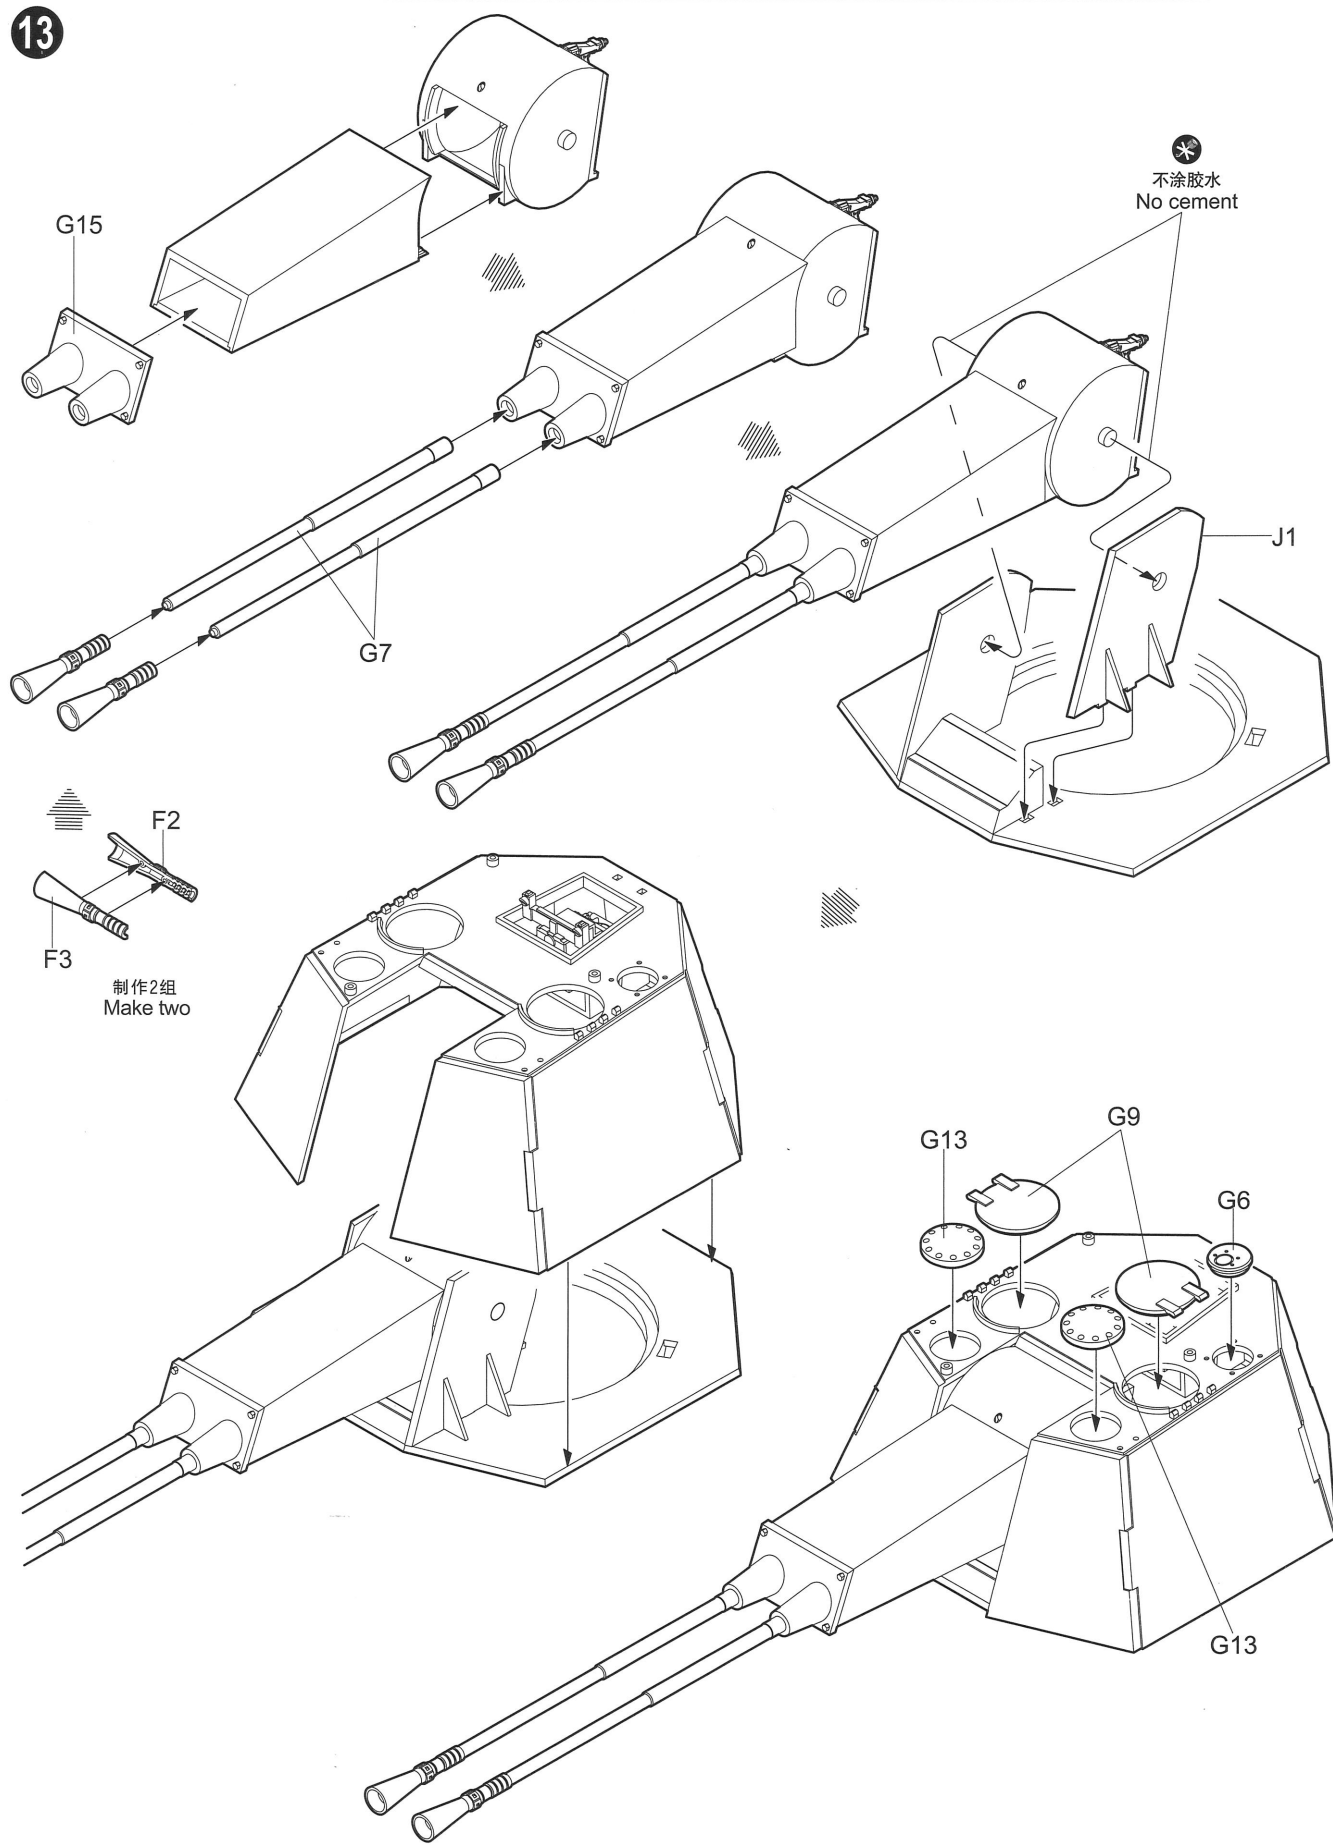


14

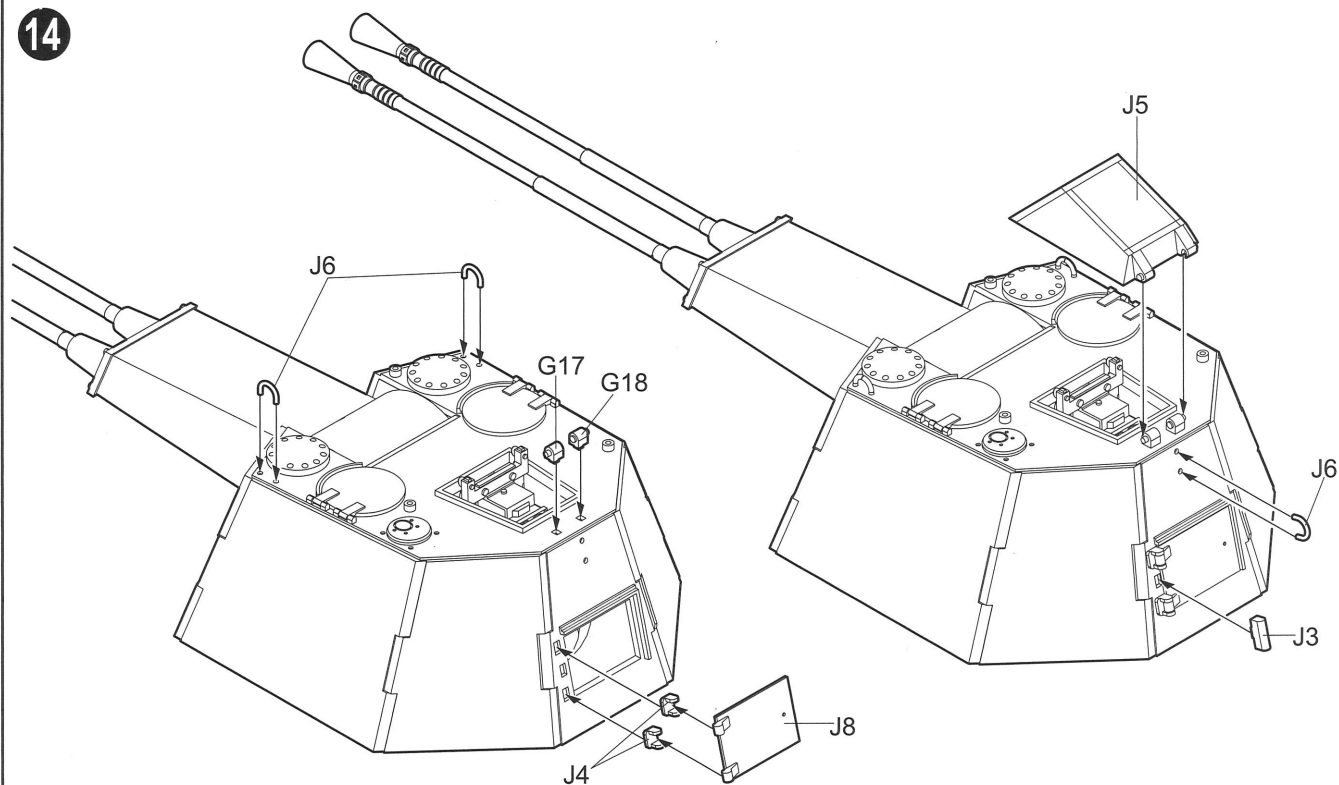

15

炮塔安装
Attaching turret

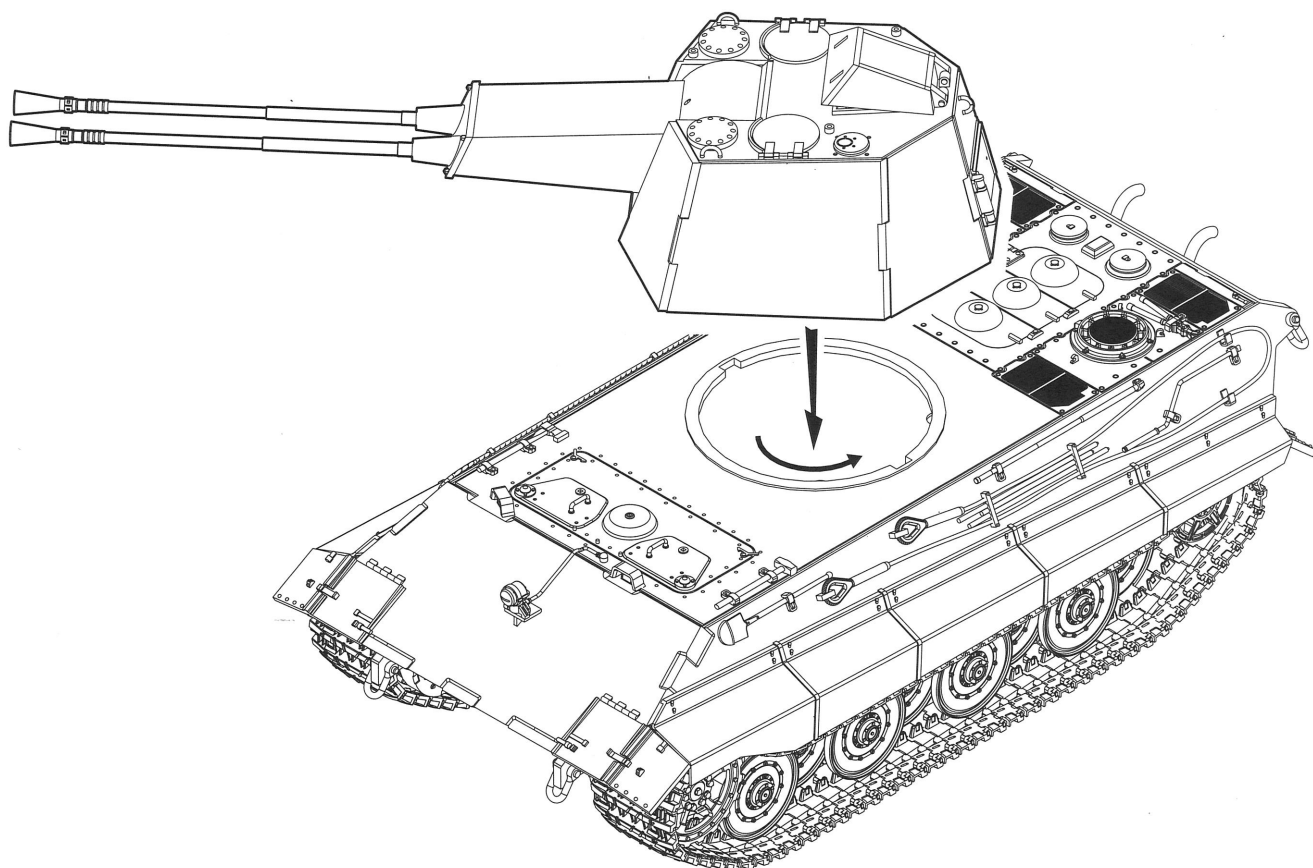


涂装同标贴指示

Painting & Marking guide

PAINT REFERENCE COLOUR

Color	Mr.Hobby	Vallejo	Model Master	Tamiya	Humbrol
Red brown 红棕色	H 47 41	984	—	XF64	160
Dark Yellow 沙黄色	H 79 39	842	—	XF59	93
Steel (Metal Black) 战车绿	H 70	—	—	—	—
Wood Brown 木棕色	H 37 43	983	1701	—	186
Steel (Metal Black) 黑铁色	H 18 28	864	1402	—	—
Burnt Iron 烧铁色	H 76 61	863	1795	X10	53

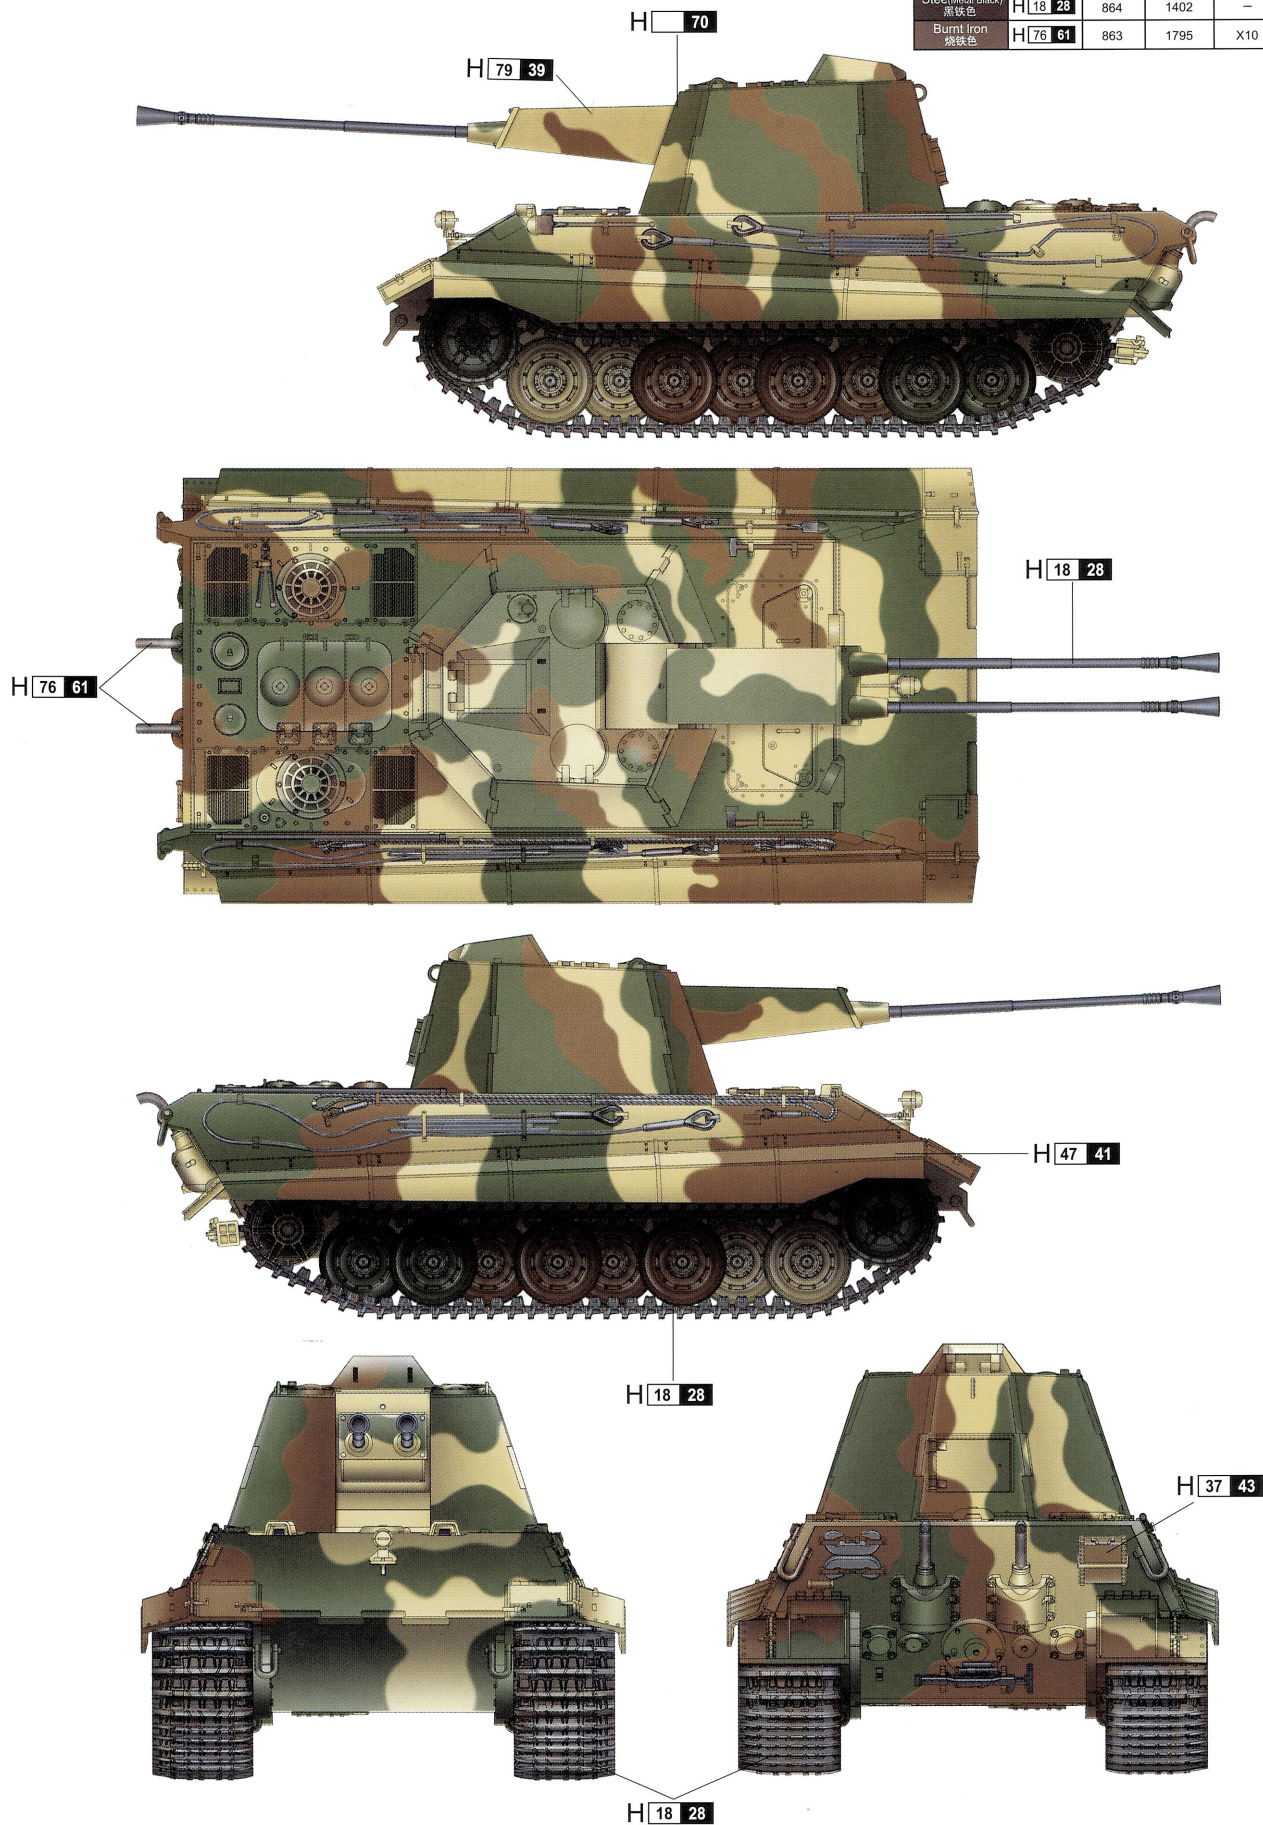

H ☒ AQUEOUS HOBBY COLOR

■ Mr. COLOR