


Get some L and U Plastruct.
Cut to size and glue to hook rail.
This forms the canopy rail and
makes the hooks vertical.
The F-14 is the only one that has
angled out hooks. But the model
canopies are at too great an angle.
You must use Plastruct and or filler
to lessen the angle to make hook
rails fit neatly and straight.
To install mirrors, paint first, bend
mirrors and canopy handles up slightly
then curve mirror frame around a pill
bottle, X-acto knife, dowel, etc,
about the same size as front of
canopy. Center middle mirror, put a
tiny amount of cyano glue at frame.
Then working down, glue each side of
frame to canopy front. Trim ends, bend
mirrors to 90 degrees and handles
out to 45 degrees.

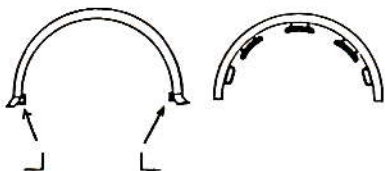

U or L Plastruct as needed.