


****IMPORTANT NOTES****

1. Wash all resin parts in warm soapy water prior to painting.
2. Use only small amounts of SUPER GLUE (CYANOACRYLATE) to adhere resin parts to your model.
3. *****VERY IMPORTANT*****
When using Cyanoacrylate glue and sanding resin parts, all due care should be taken NOT to inhale the fumes or resin dust.
BE CAREFULL!!

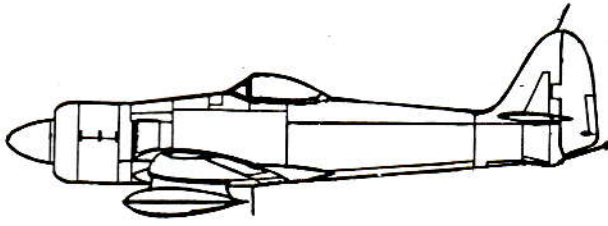

HAWKER SEA FURY FB.11

1/72 SCALE COVERSION No.72-004


This RESIN CONVERSION contains the following parts:

1. 2 x 90 GAL FUEL TANKS.
2. 2 x 45 GAL FUEL TANKS.
3. 2 x BOMB CARRIERS.
4. 2 x BOMBS.
4. 3 x COPPER WIRE.


This conversion has been designed to compliment the FROG / NOVO and the PIONEER kit of the 1/72 scale Hawker Sea Fury.



Use Needle file and sandpaper to clean up excess runner from lower part of Drop Tank.

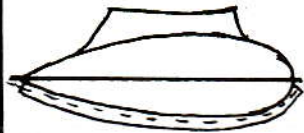

Use Needle file and sandpaper to clean up excess runner from lower part of Drop Tank.



Cut Bomb Carrier from runner with a sharp razor saw and clean up with a Needle file.



Cut Bomb parts from runner with a sharp razor saw. Glue front section to rear section of bomb followed by the tail ring.

****CAUTION: Contains small components - keep out of reach of children****

1/72

PLANE



BITS



COVERSION
No.72-004

Reference for this conversion was taken from "Hawker Sea Fury in Action" by Squadron Signal Publication No. 117. and Aviation News Warpaint "Hawker Sea Fury FB.11.

HAWKER
SEA FURY FB.11

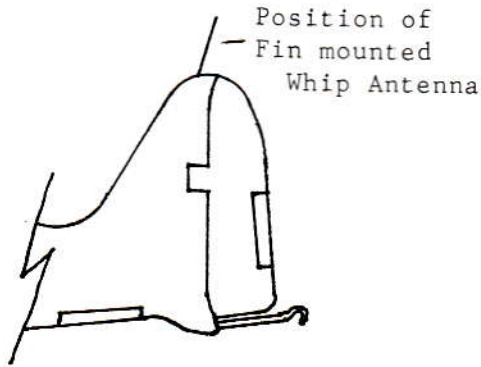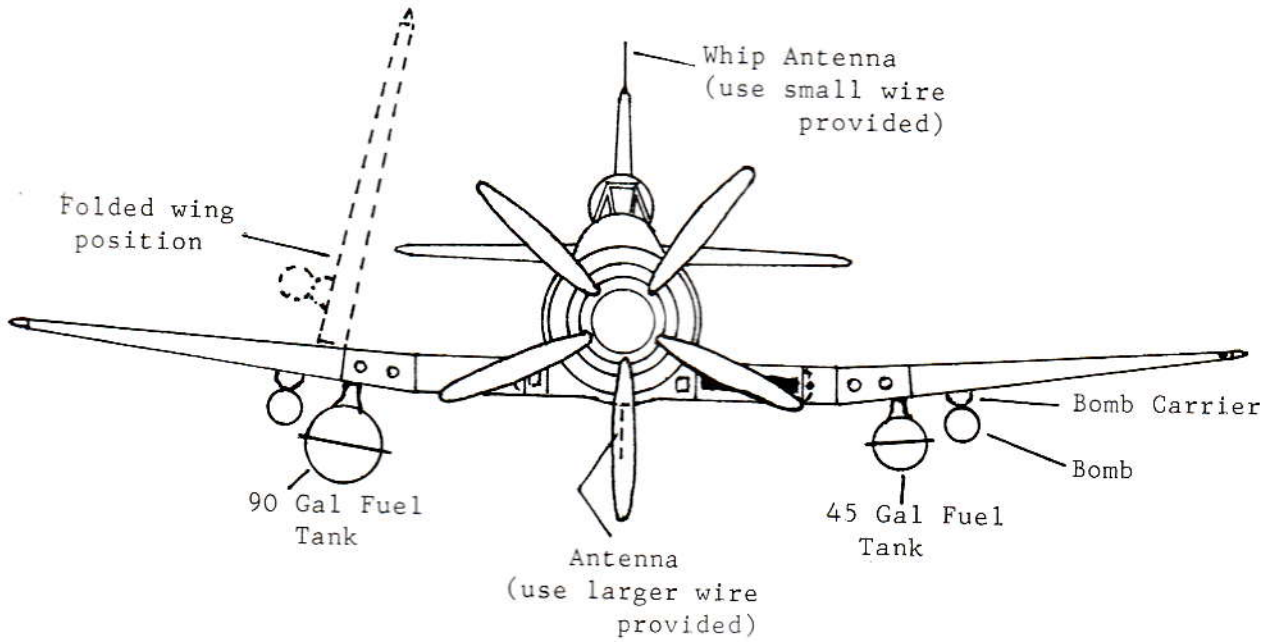

Position of underfuselage
Antenna.
Centrally positioned
to the rear of main
gear doors.



For extra detail, Braces (4) can be added from the Bomb Carriers to the Bombs as shown. Use the larger wire provided.

