



1/35 MILITARY MINIATURE VEHICLE UPGRADE SERIES PE35948

Modern US M551 Sheridan Airborne Tank (Vietnam War)

现代美军M551谢里登轻型坦克越战型

[For TAMIYA 35365]






推荐使用工具 RECOMMENDED TOOLS

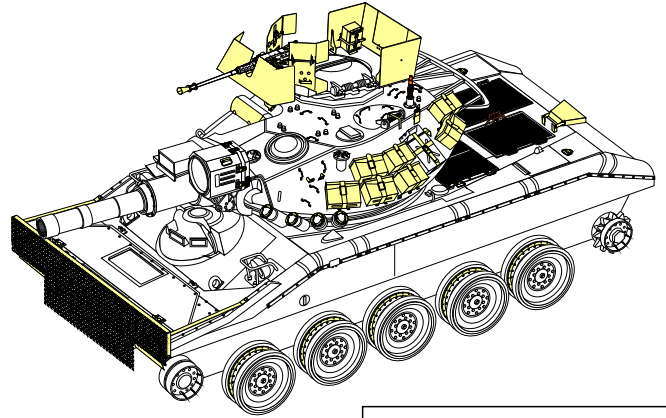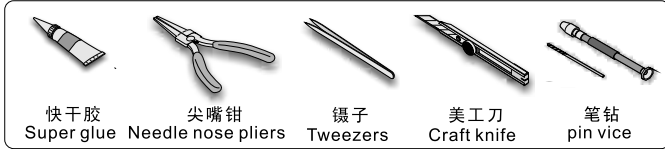

- 安装
install
- 折叠
bend
- A1**
改造件零件编号
PE/resin part number
- B12**
原零件编号
kit part number
- C22**
被替换的原零件编号
replaced kit part number
- 另一侧相同制作
repeat on opposite side
- 切除
remove
- 打磨
grind off
- 弧度卷曲
radial bending
- 制作若干组
multiple assembly
- 选择安装
alternative
- 钻孔
drill
- 用胶棒制作
make from plastic rod

用尖端在凹槽处冲压
use penpoint to press on the dent

蚀刻片零件内侧面向上
Put the part upside down
用笔尖在凹槽处刺
Use penpoint to press on the dent



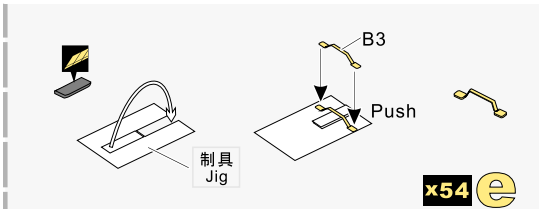
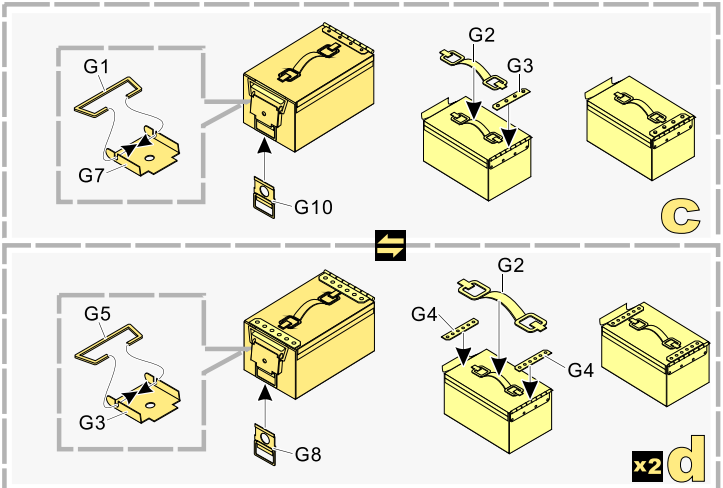
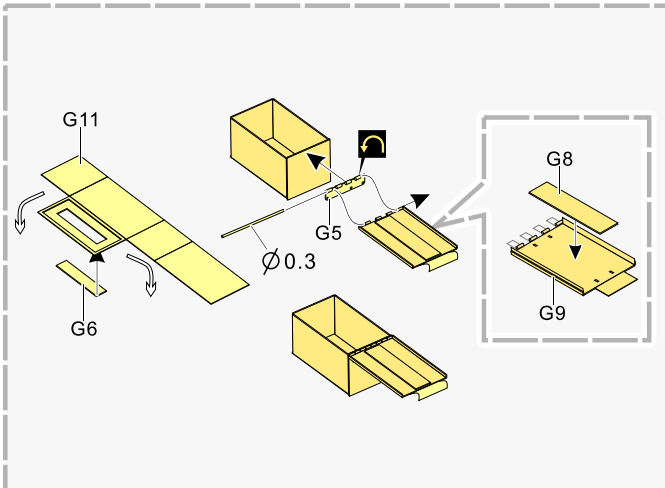
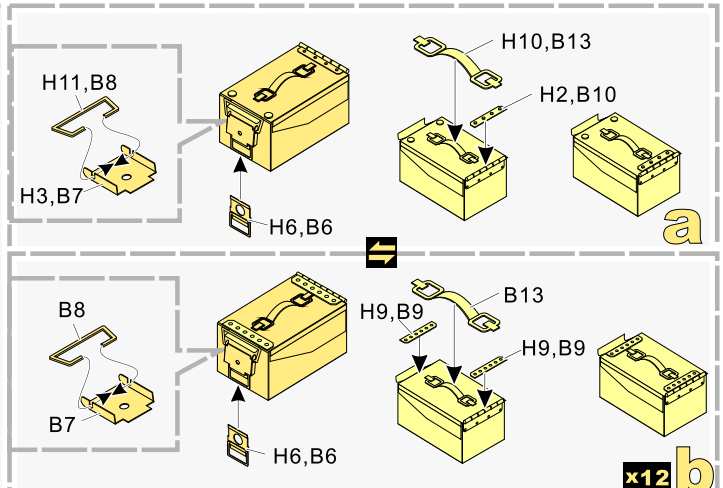
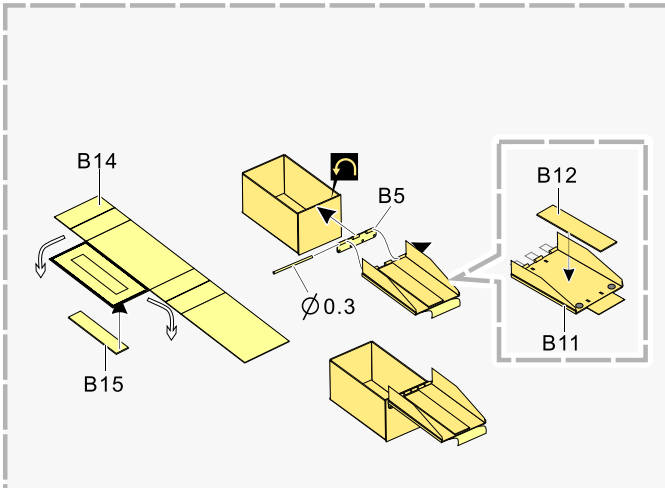


VOYAGERMODEL 无微不至 极尽享受
Recommended item




PE 35081	WWII German Pz.Kpfw.IV Ausf.E Armor
VBS0534	Modern US Army M551 Sheridan L/17.5 M81 152mm Gun Barrel Late Version
VBS0535	Modern US Army M551 Sheridan L/17.5 M81 152mm Gun Barrel Early Version
VBS0219	Modern US Vehicle Mounted M2 Browning Machine Gun Old Model Patten 2 w/SHIELD
Fe35051	Modern US Army M551 Sheridan Grills set

1/35 MILITARY MINIATURE VEHICLE UPGRADE SERIES PE35948


安装示例
Typical installation

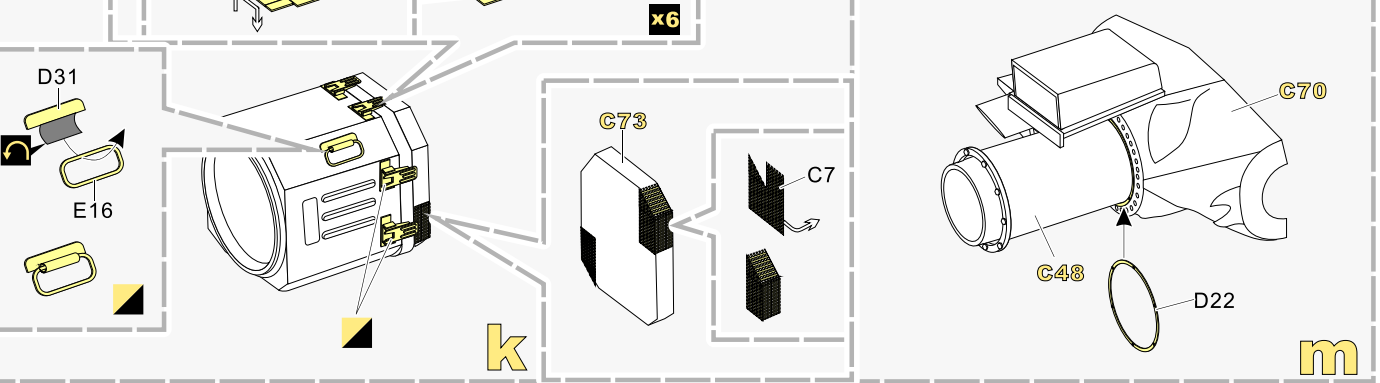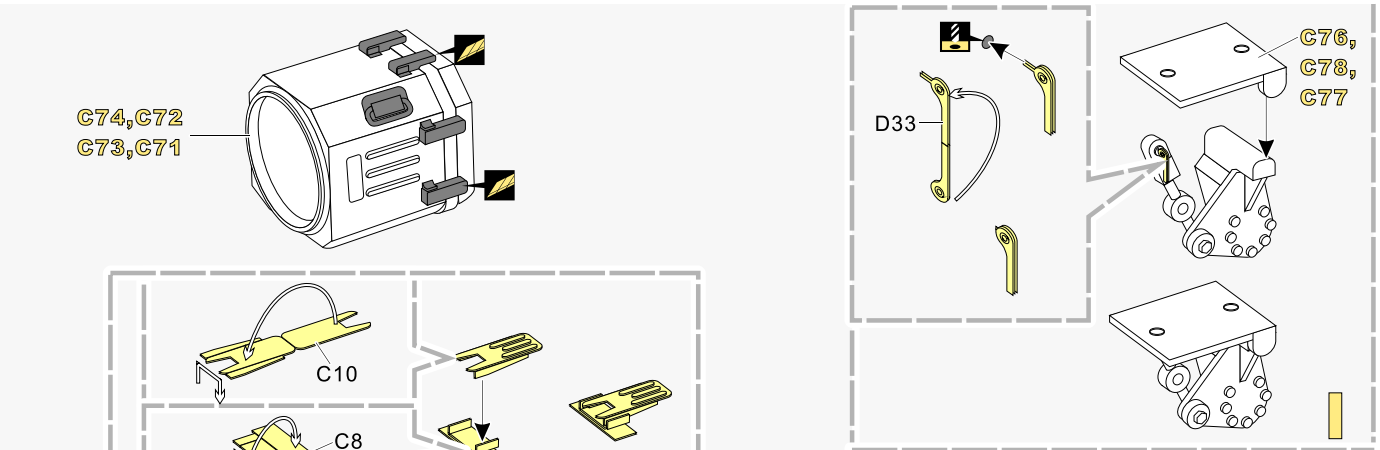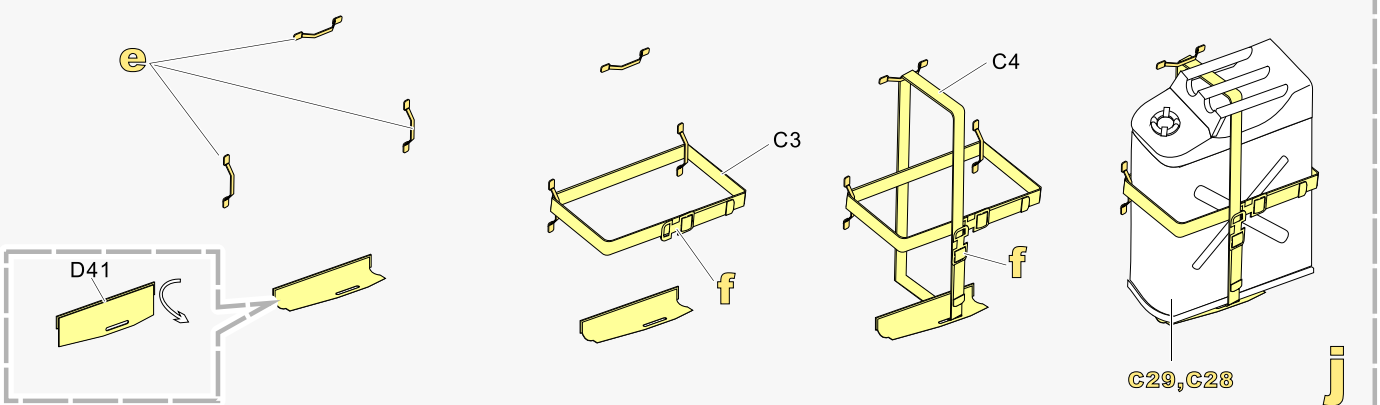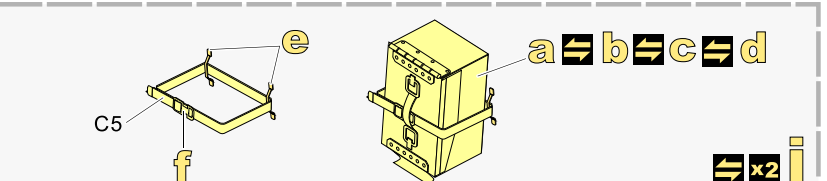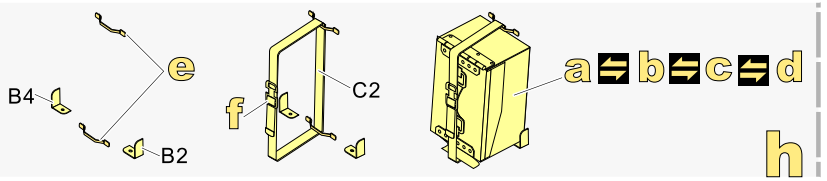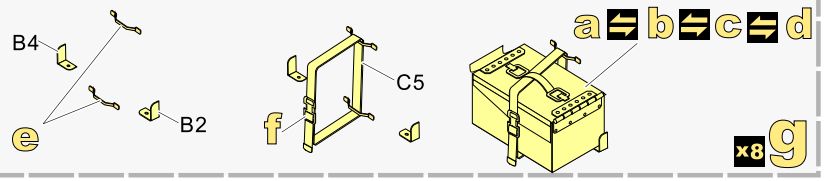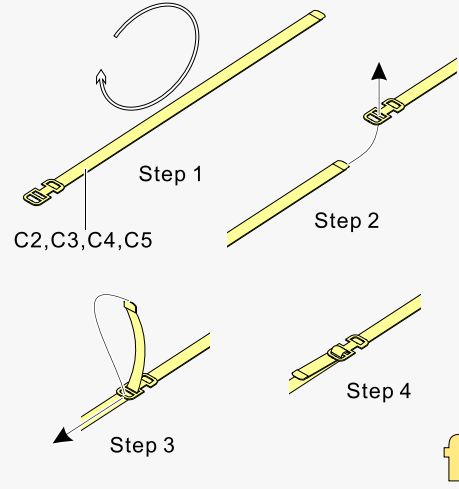






1/35 MILITARY MINIATURE VEHICLE UPGRADE SERIES PE35948

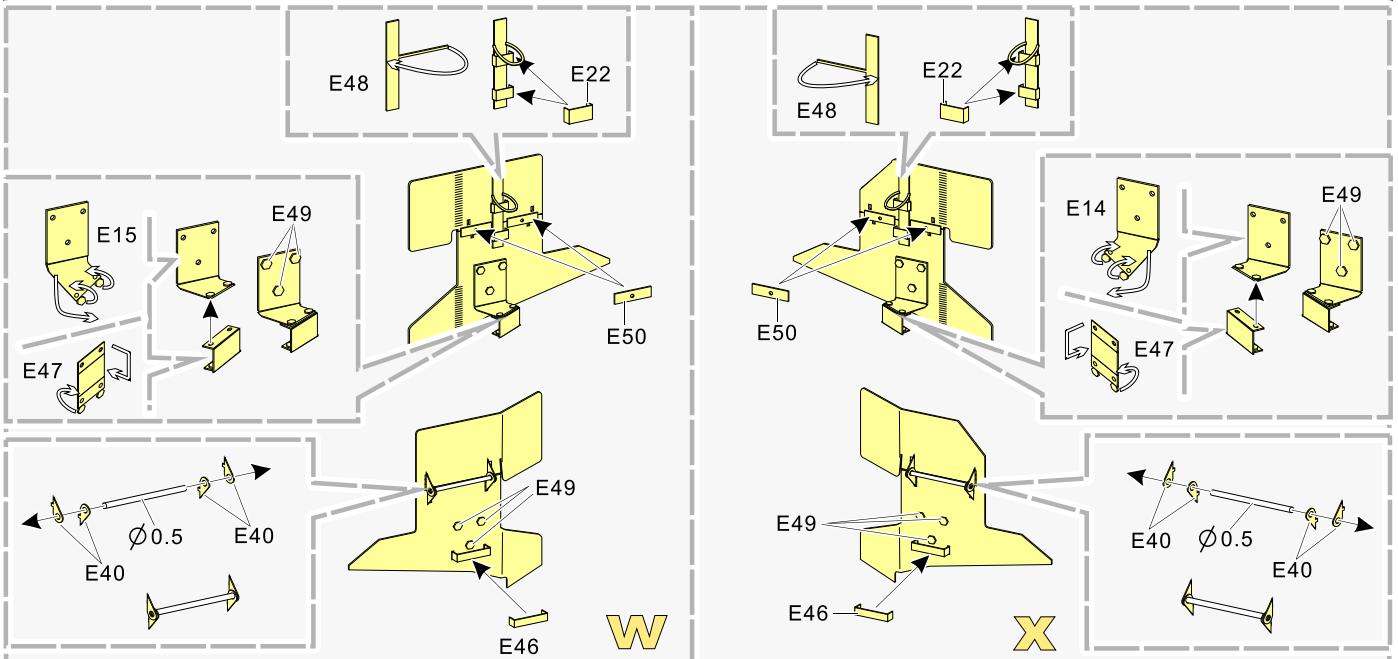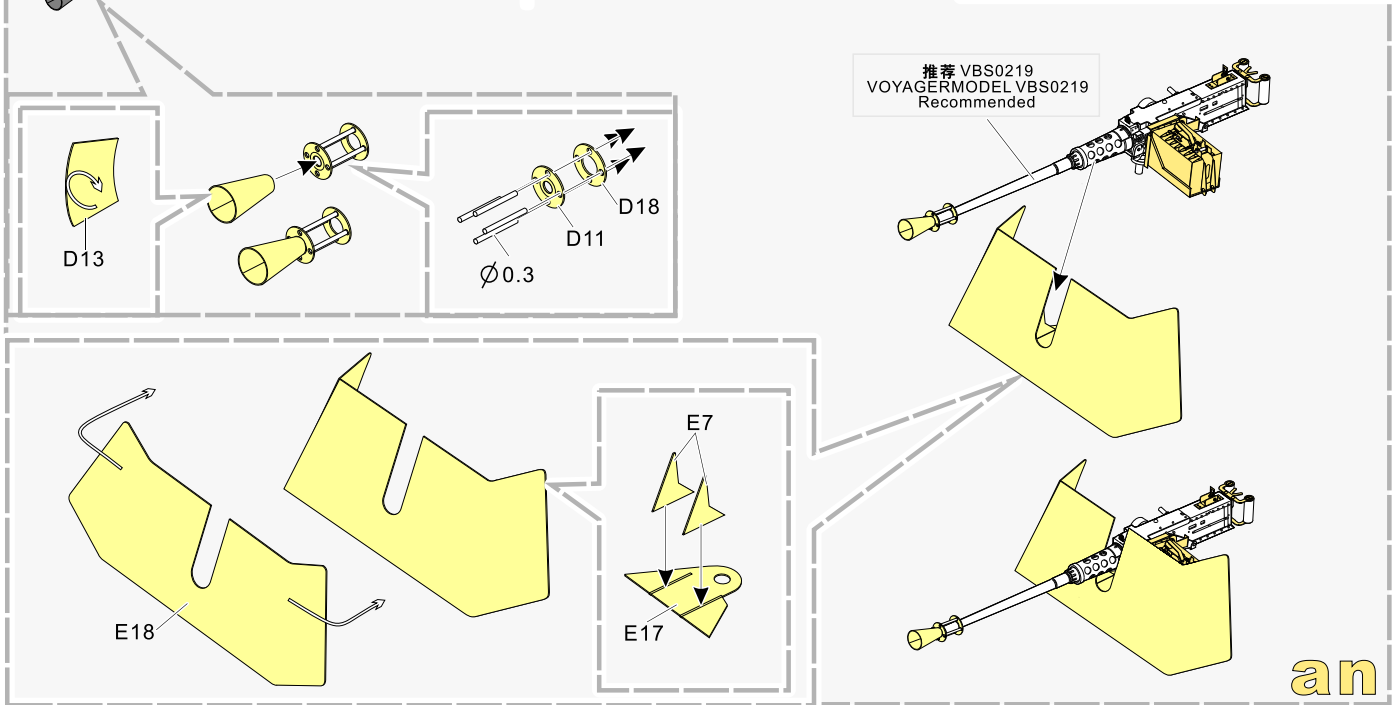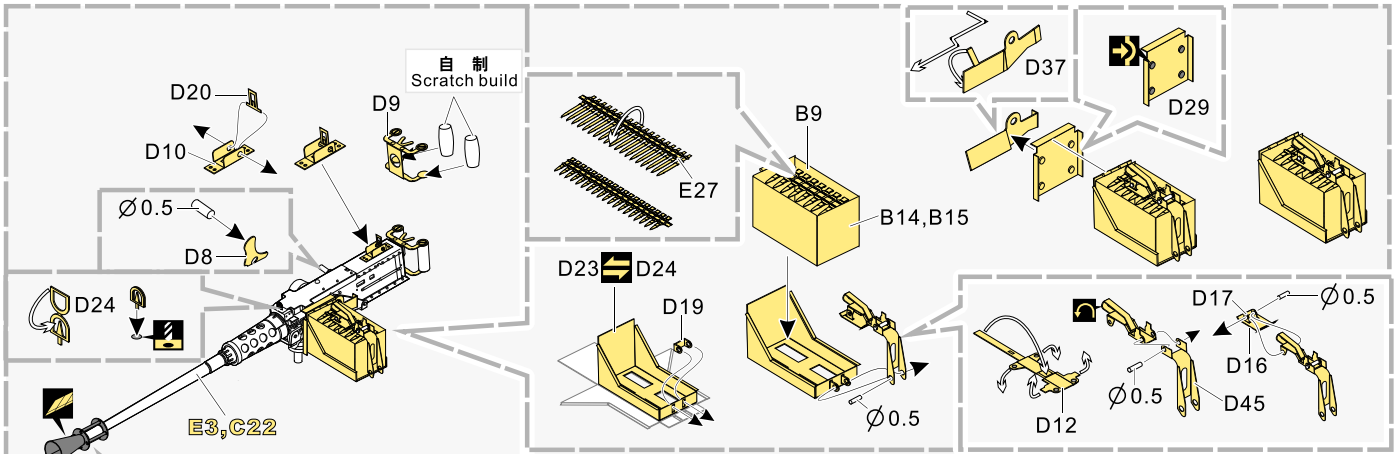

1/35 MILITARY MINIATURE VEHICLE UPGRADE SERIES PE35948

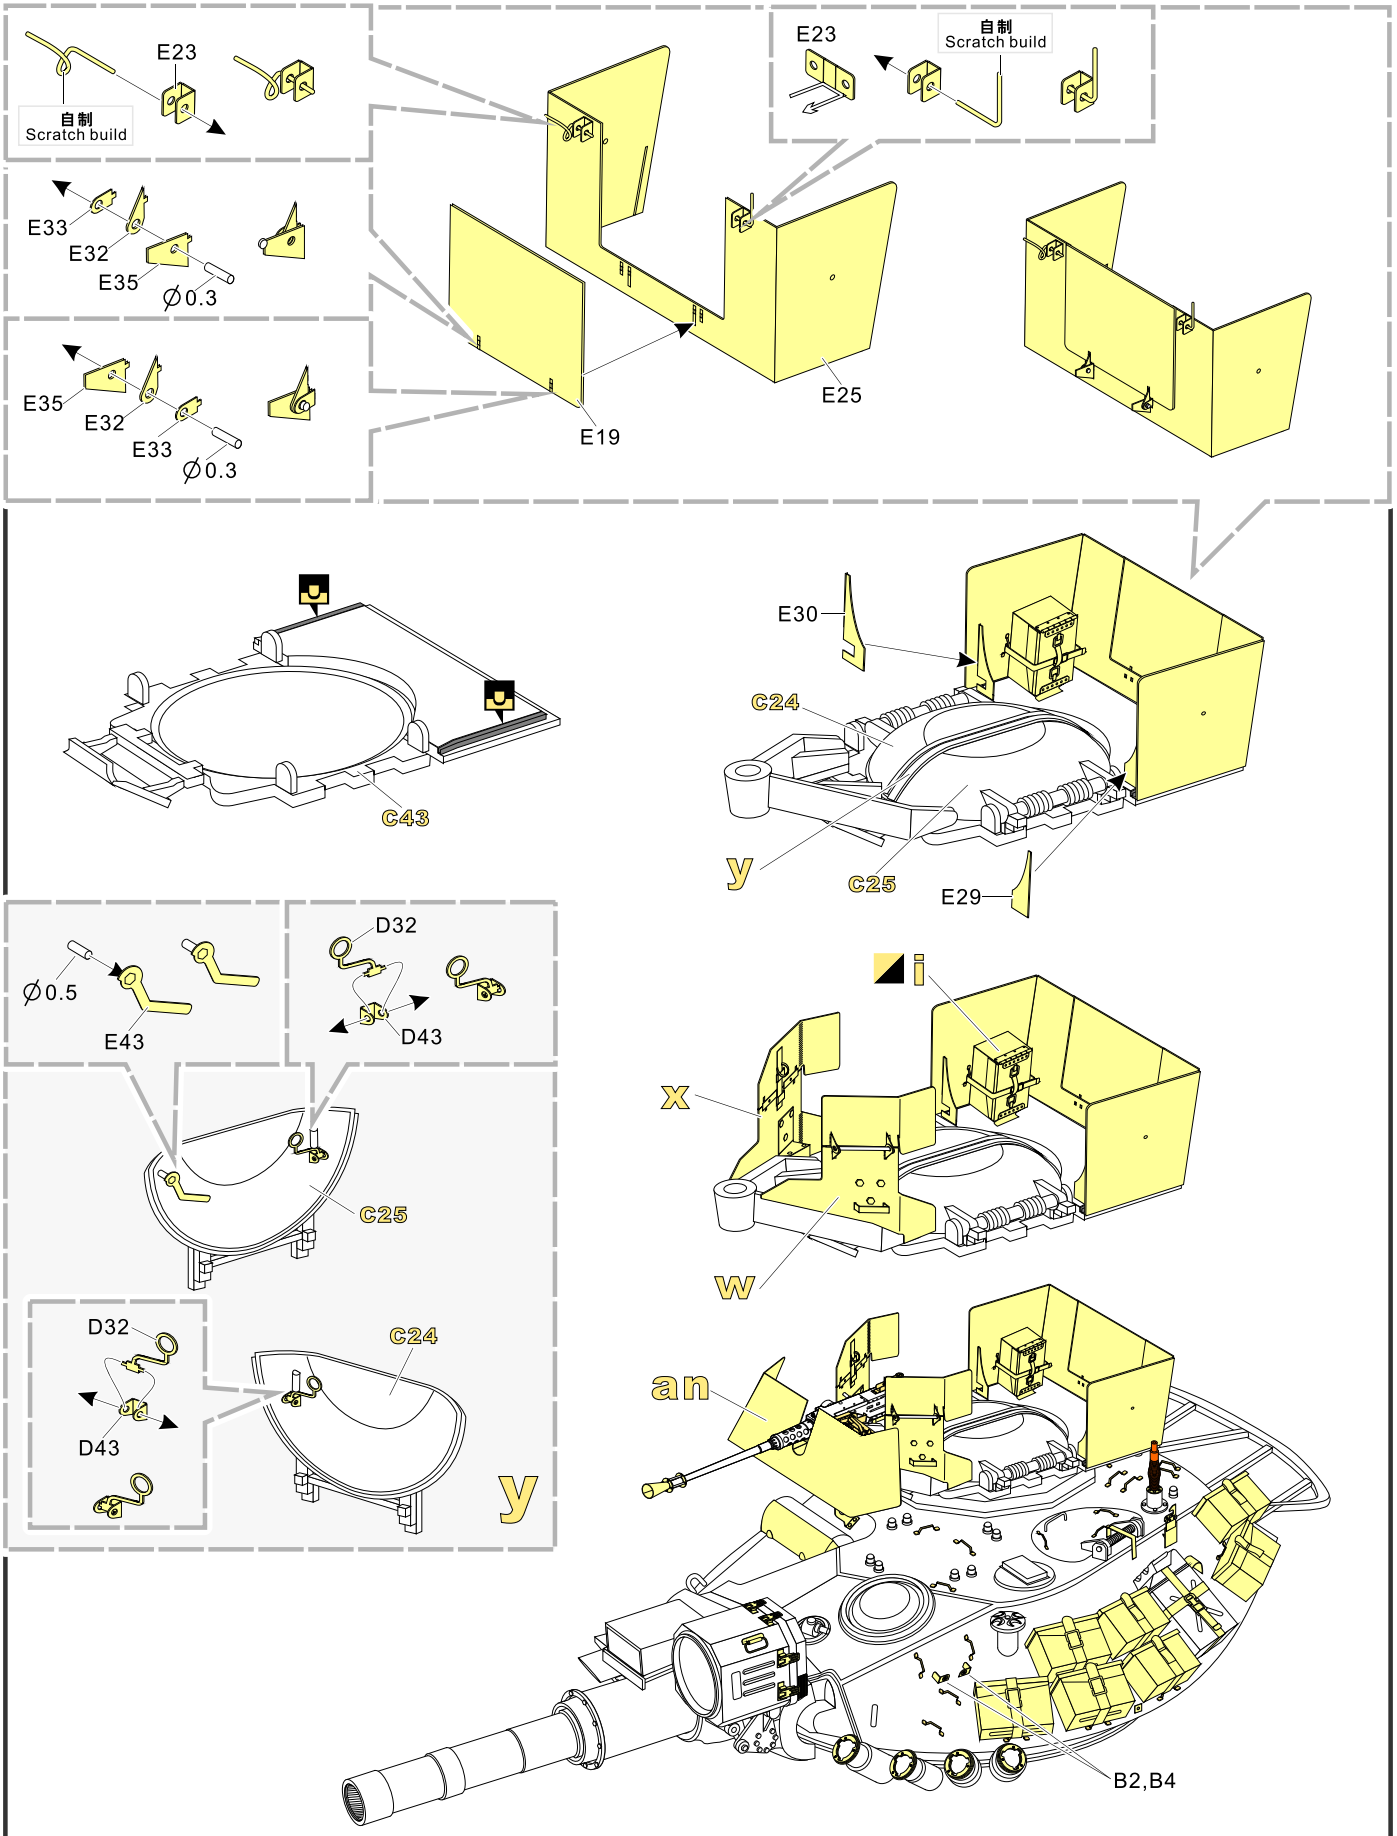

1/35 MILITARY MINIATURE VEHICLE UPGRADE SERIES PE35948

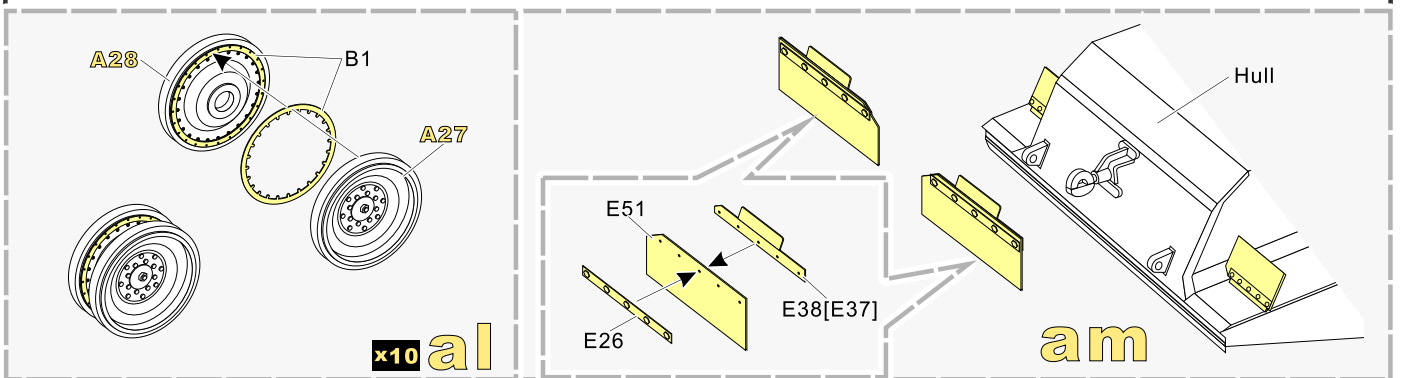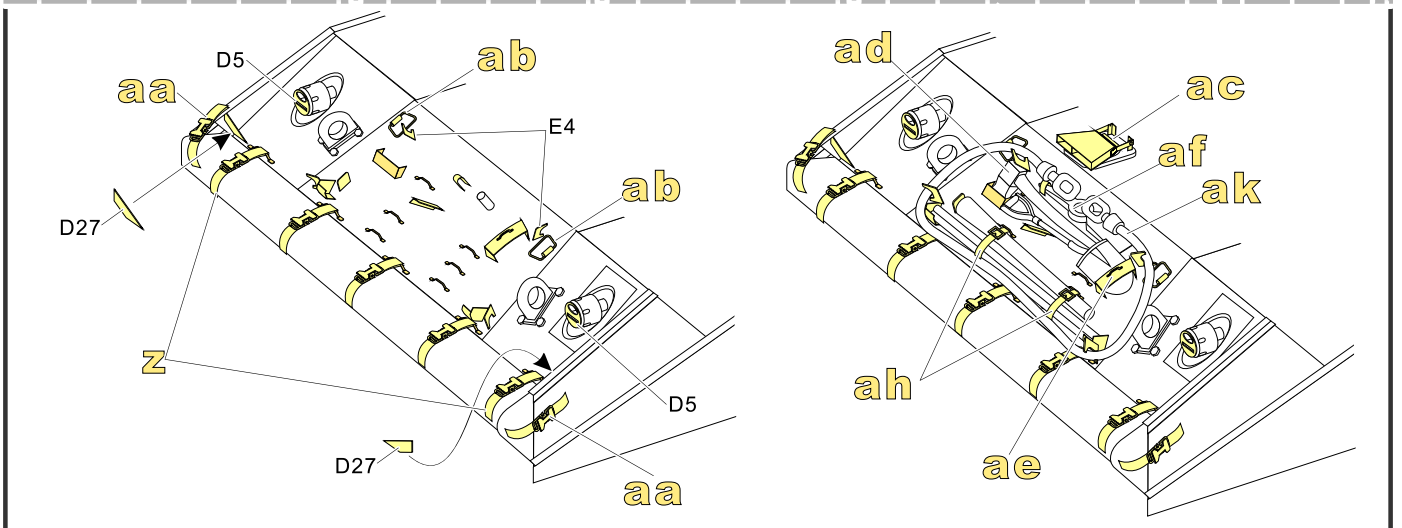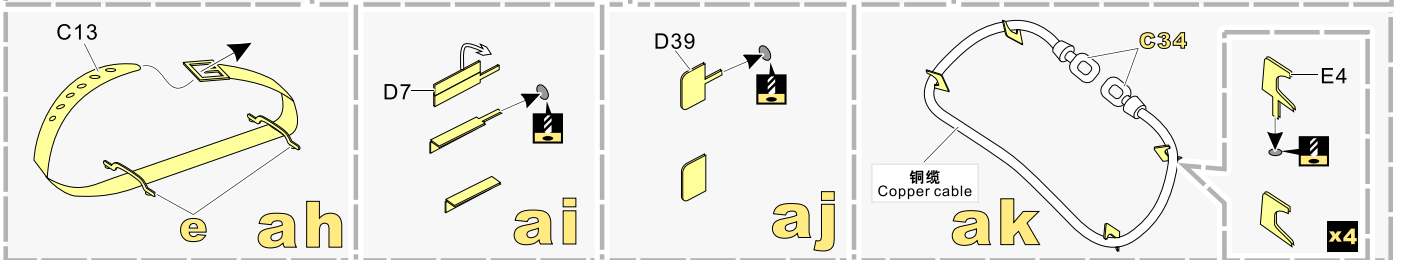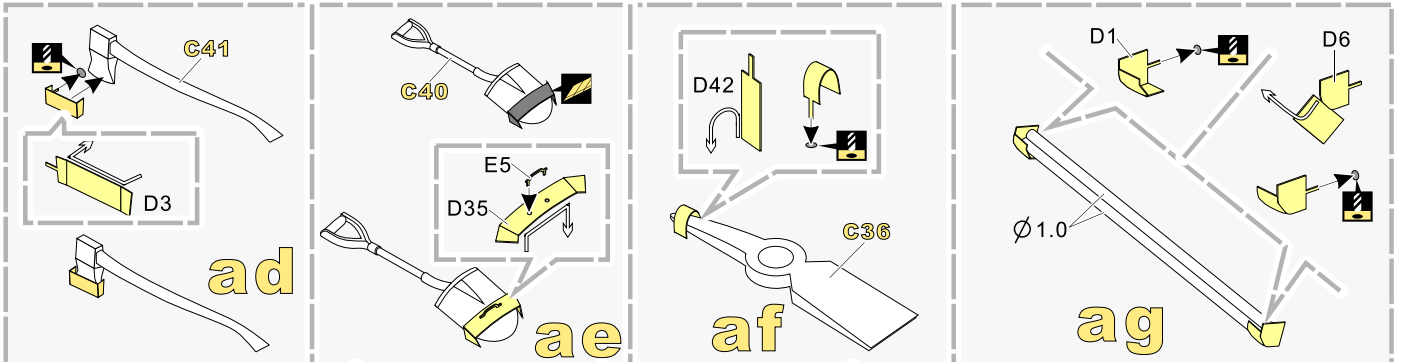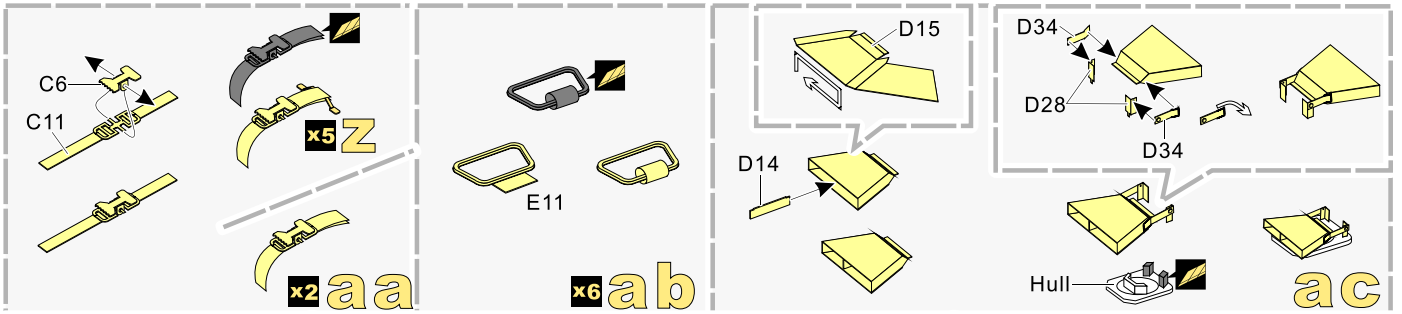

1/35 MILITARY MINIATURE VEHICLE UPGRADE SERIES PE35948

