



1/72 XB-70 Valkyrie

for Italeri kit 1282 and AMT/ERTL kit 8908

<http://mek.kosmo.cz/newware>

tom.nwkits@seznam.cz

Important:

Let the sprayed color dry before applying masks. Remove masks very carefully after painting.


Where the mask is divided into A and B parts, first apply part A, next part B.

The set does not include masks for all areas, so mask the rest with masking tape or liquid mask.


K kit part

* start placing the mask from this point


Placing wet masks on wet surface is recommended, except those marked by **W**

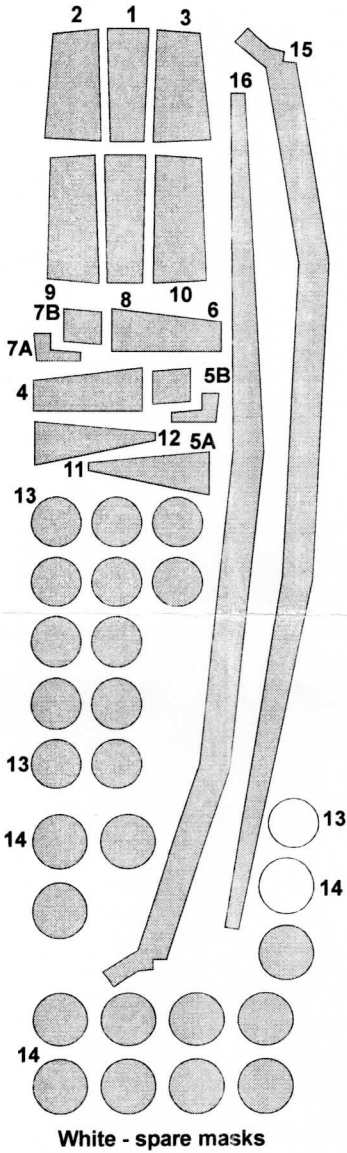


White - spare masks

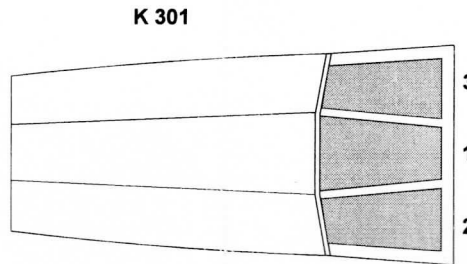

K 301



4 5B 5A
opposite side 6, 7B, 7A
after placing masks 5B and 7B remove
masks 5A and 7A

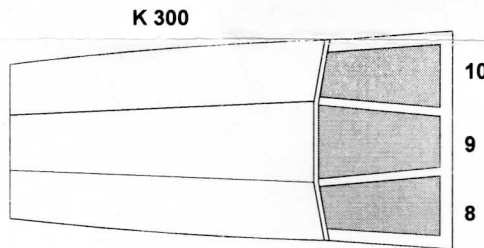


K 300




11 5B 5A
opposite side 12, 7B, 7A
after placing masks 5B and 7B remove
masks 5A and 7A

K 49 and 51

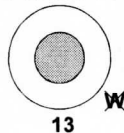


13

K 52

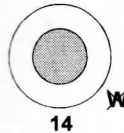

14

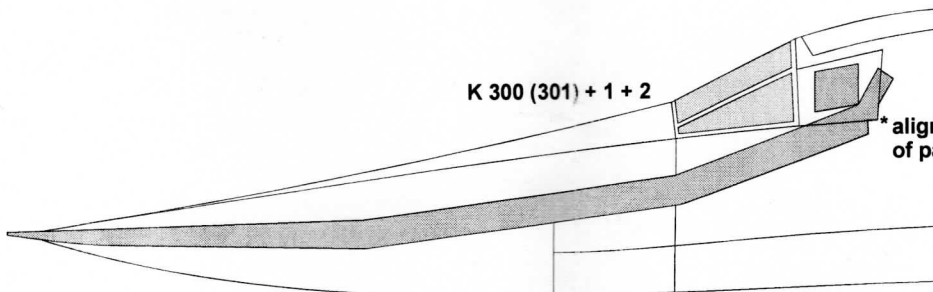

K 300 (301) + 1 + 2

* align the mask to the rear corner
of part 300 or 301

15
opposite side 16
the rest mask using masking tape