


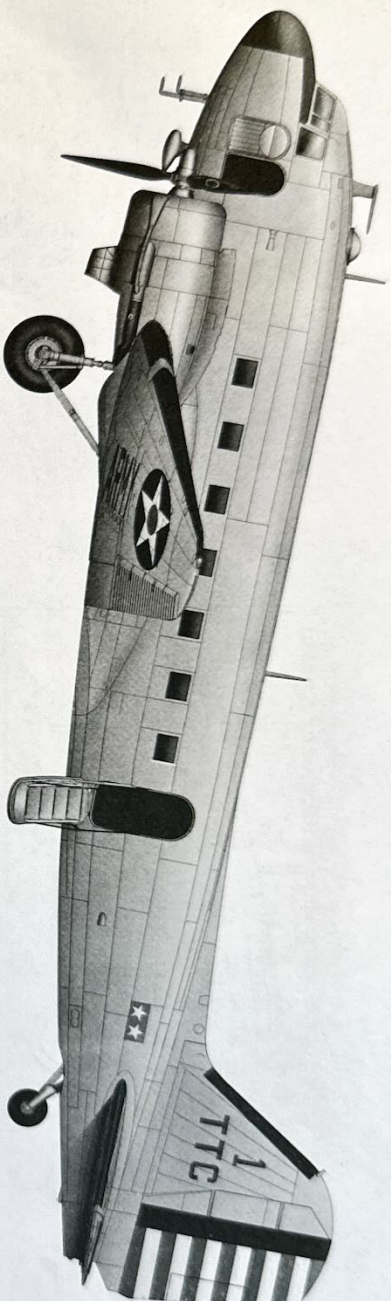

C-48C Skytrain

C-48C “空中列车”运输机

1:48 SCALE

READ BEFORE ASSEMBLY:

- Study and understand these instructions thoroughly before beginning assembly
- When needed, remove photo-etch parts carefully using a modeling knife or photo etch sprue cutter, being careful not to damage or lose small parts.
- Take extra care in handling photo etch parts in order to avoid injury
- Apply instant cement sparingly to photo etch parts where instructed
- Tools recommended(not included in kit):Plastic and instant cements,sprue cutters,long nose pliers,modeling knife, small files, tweezers, pin vise & scissors. Soft cloth and sandpaper will also assist in construction
- Glue and paint are not included in the kit. Use plastic cement and hobby paints only. Color guide for purchasing paint is included in the kit.

装配之前仔细阅读

- 小心用模型锉刀锉平所有零件表面的注射浇口。
- 小心用刀片切下蚀刻片零件,不要遗失小零件。
- 用强力快干胶水粘合蚀刻片零件和金属轴。过量快干胶水使用可能导致可动零件会粘住,小心涂胶。
- 取蚀刻片时应特别注意安全,防止利边划伤手指。
- 某些零件表面需贴水上贴纸,请选择在装配的同时进行。
- 推荐模型工具(自备):胶水,水口剪刀,长咀钳,刀片,锉刀,镊子,钳,钻,剪刀,瞬间快干胶。
- 软布同砂纸同时也应该是必备工具。
- 请使用塑料胶水和油漆,模型内不含。

水贴纸的使用:

- 1.从水贴纸上剪下印花;
- 2.将印花放入温水中浸10秒,然后放在干净布上。
- 3.拿着印花纸将印花移到模型上;
- 4.手指蘸水将印花移到适当的位置;
- 5.用软布轻压印花直至水干,气泡消失。

DECAL APPLICATION

- 1.Cut decals from sheet as needed
- 2.Dip the decal in warm water for about 10 seconds and then place on soft clean cloth.
- 3.Hold the decal backing sheet edge and gently slide the decal onto the model in its proper position.
- 4.While still wet,decal can be adjusted for better fit on model by dampening it gently with your finger.
- 5.When placed in the proper position,gently press decal down with a soft cloth until excess water and air bubbles are gone.
- 6.Allow decal to dry completely before handling model.



使用强力胶



配重



钻孔



切除

Cyanoacrylate glue Weight

Make hole

Cut / Remove



选择



不涂胶水



贴纸



弯曲



锉平

Option

No cement


Decal

Bend


File / Sand

部品图 Parts


A

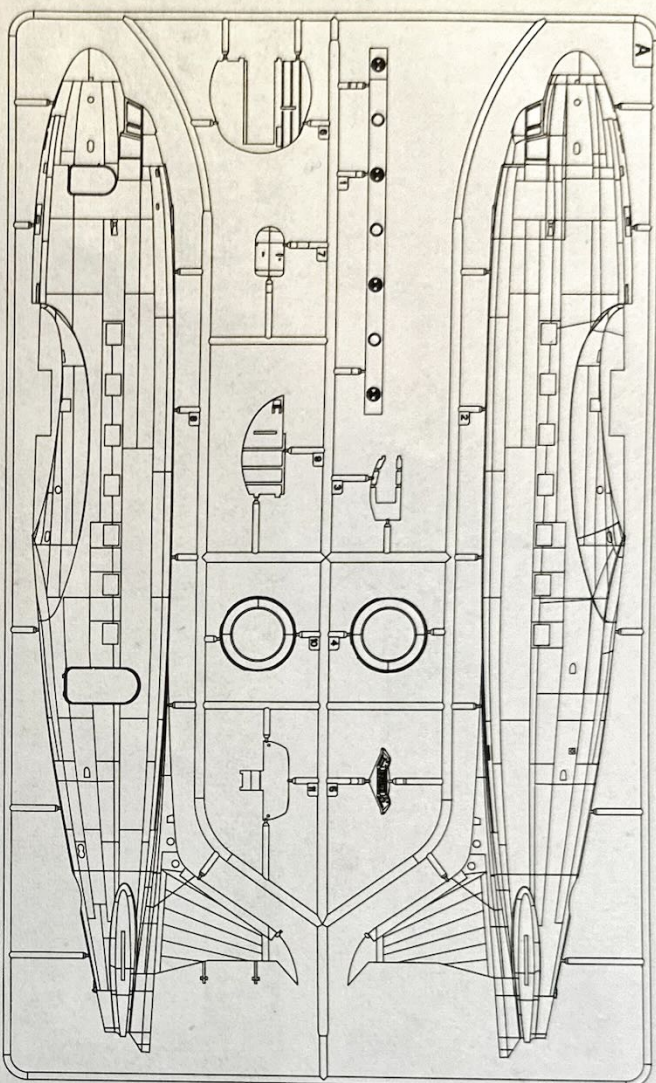


E

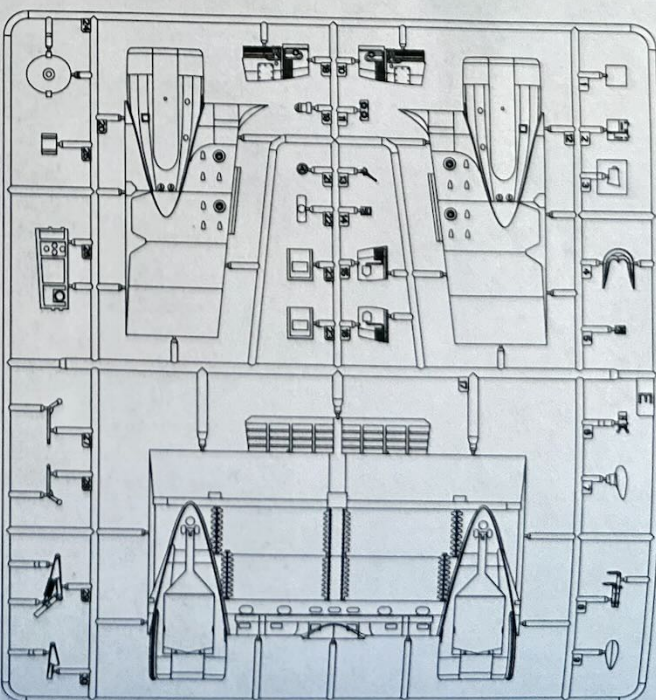


B

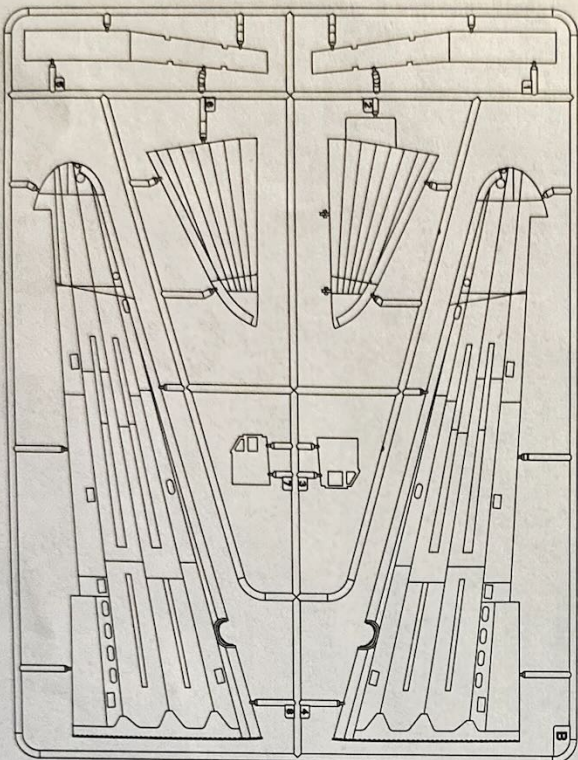

C

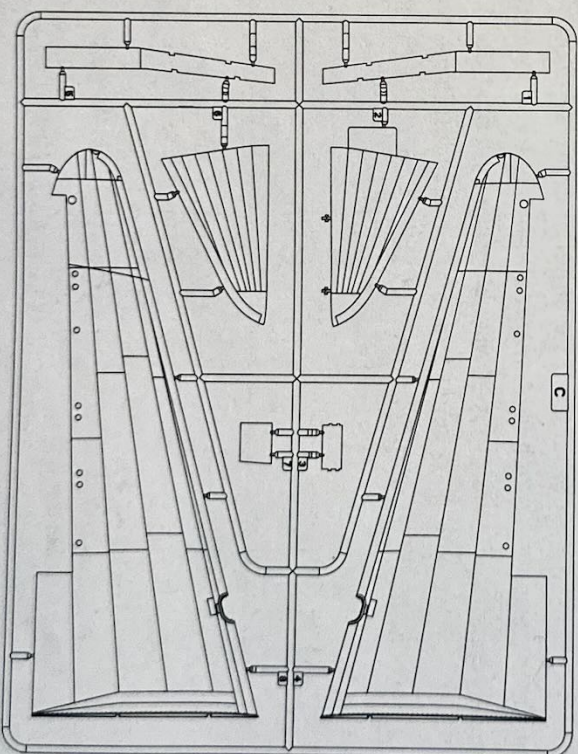

<<金属起落架>>
Metal parts

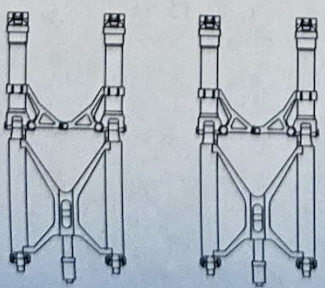

<<主轮轴>>
Main tyre × 2




<<尾轮轴>>
Tail tyre




部品图 Parts


D

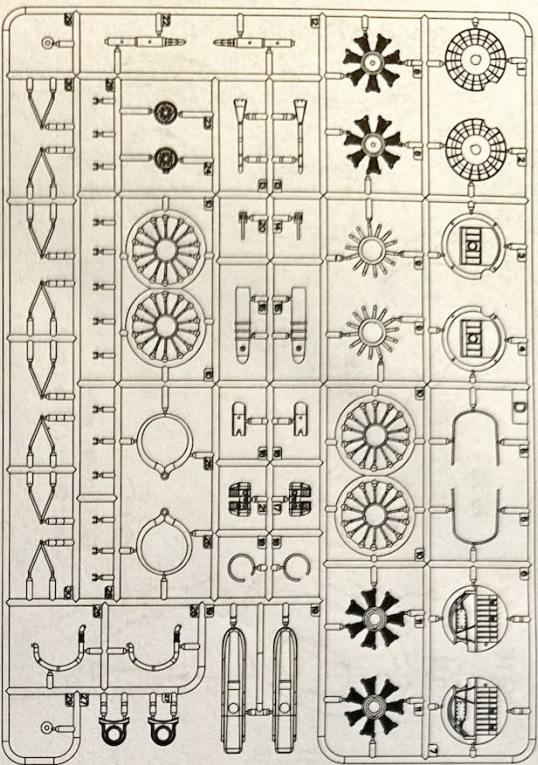


F

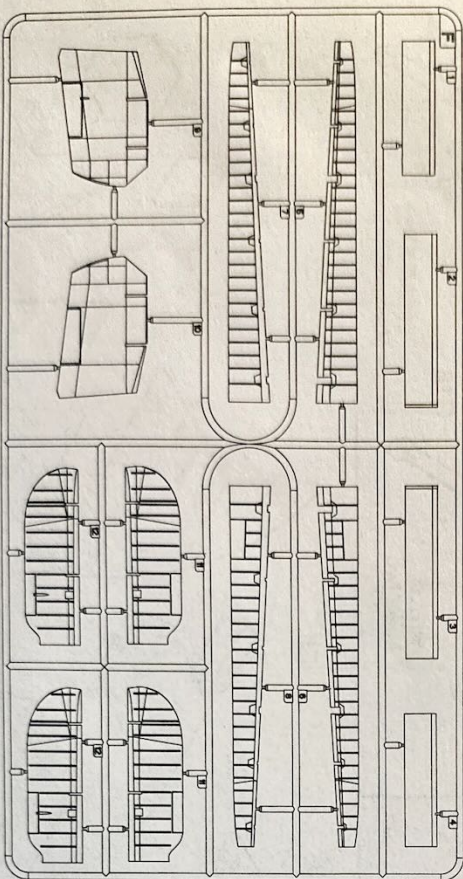


<<菲林片>>
Film

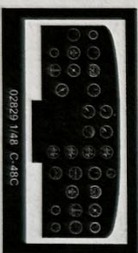


K

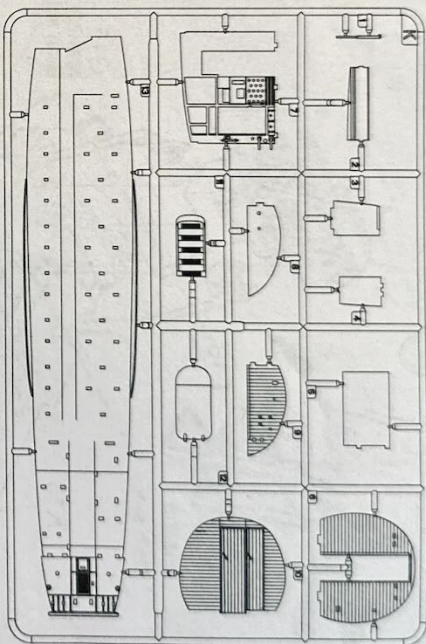


M

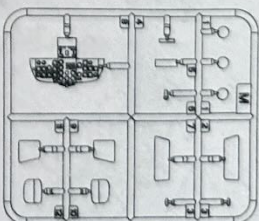


N

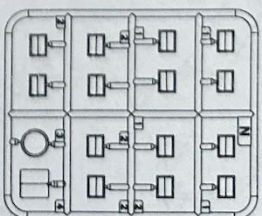


G×2

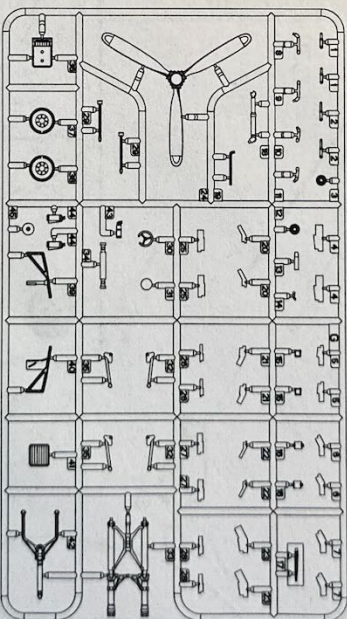


L×2

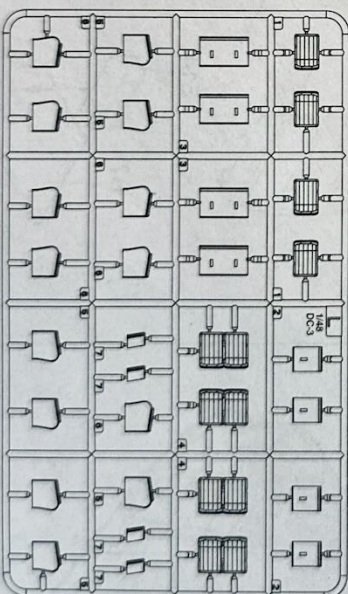


<<水貼>>
Decal

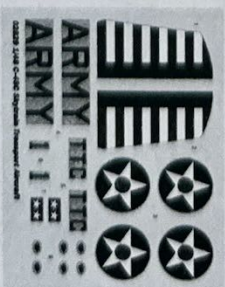


<<蚀刻片>>
Photo etched parts(PE)

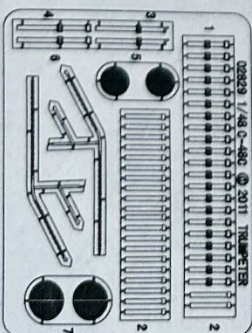


1

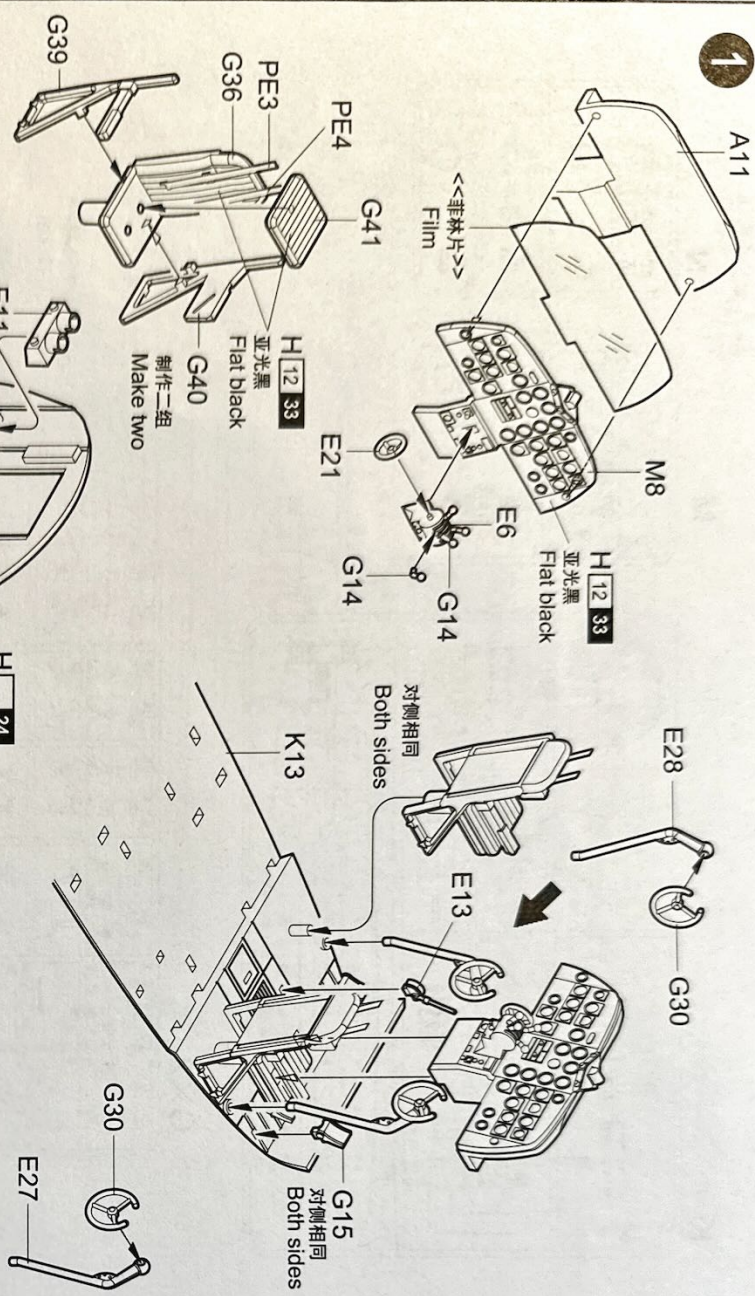


2

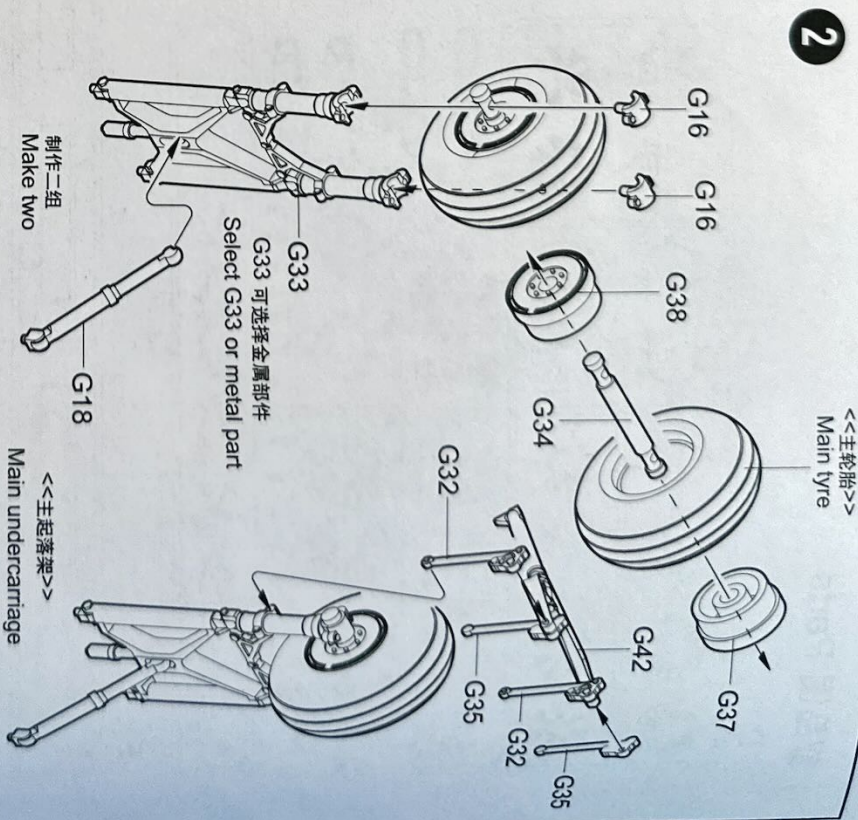


3

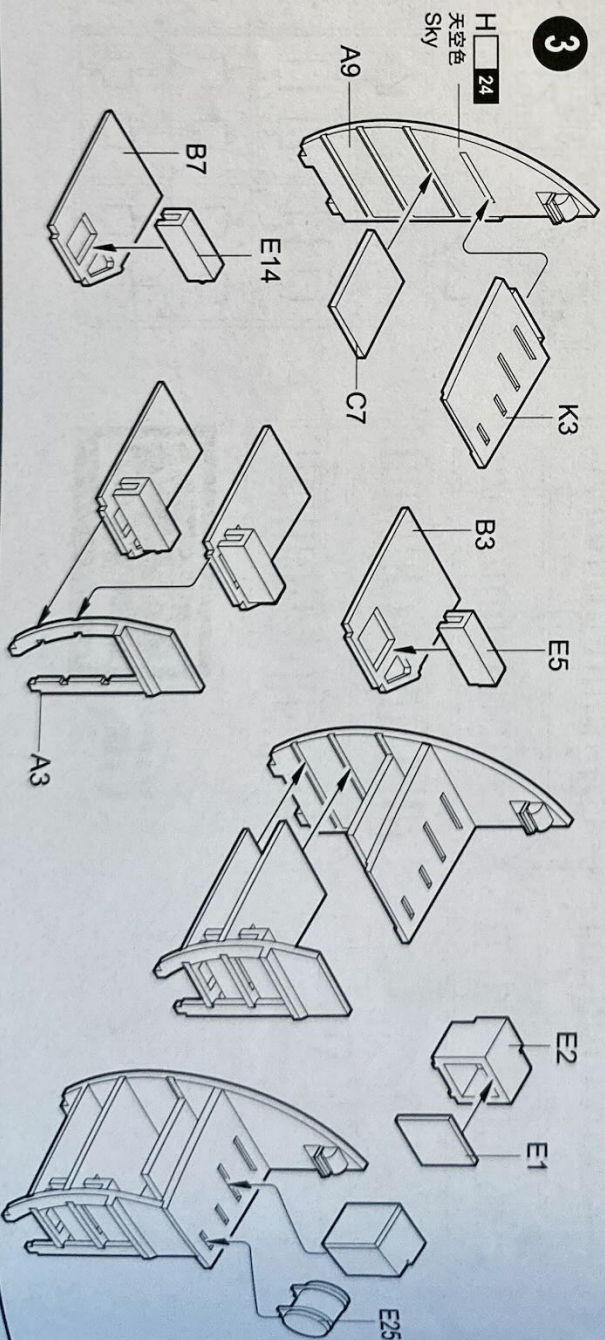


4

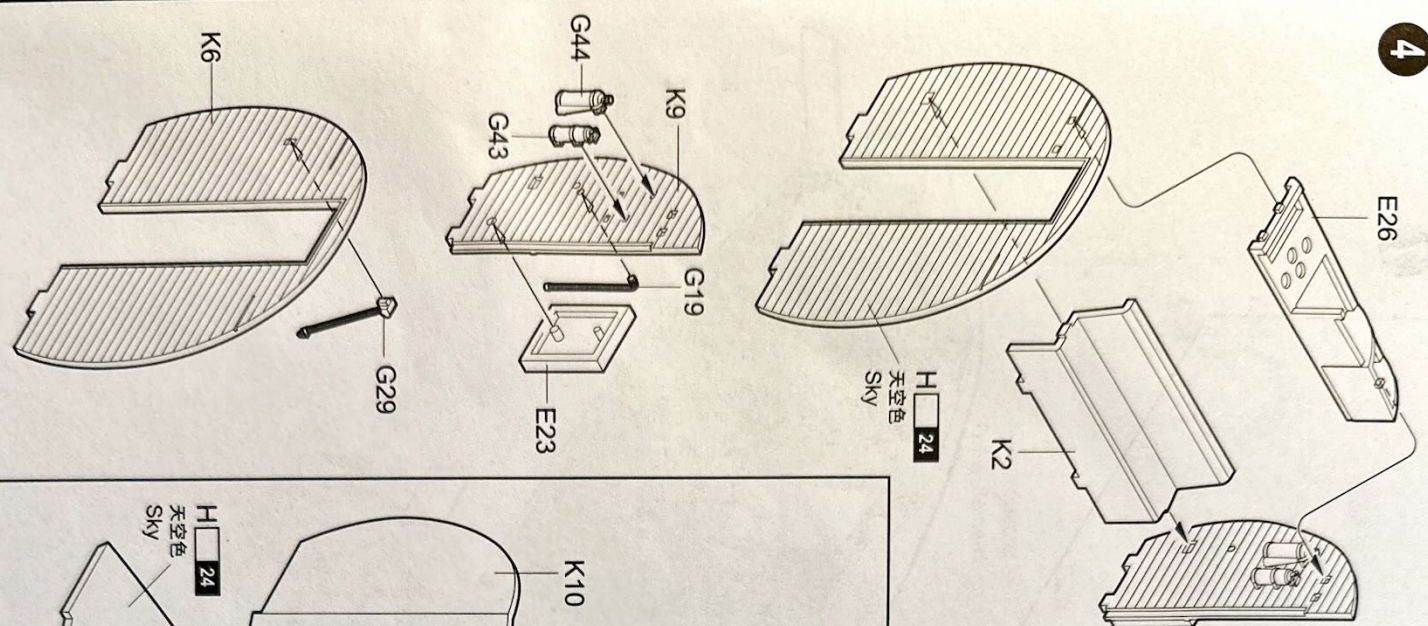




5

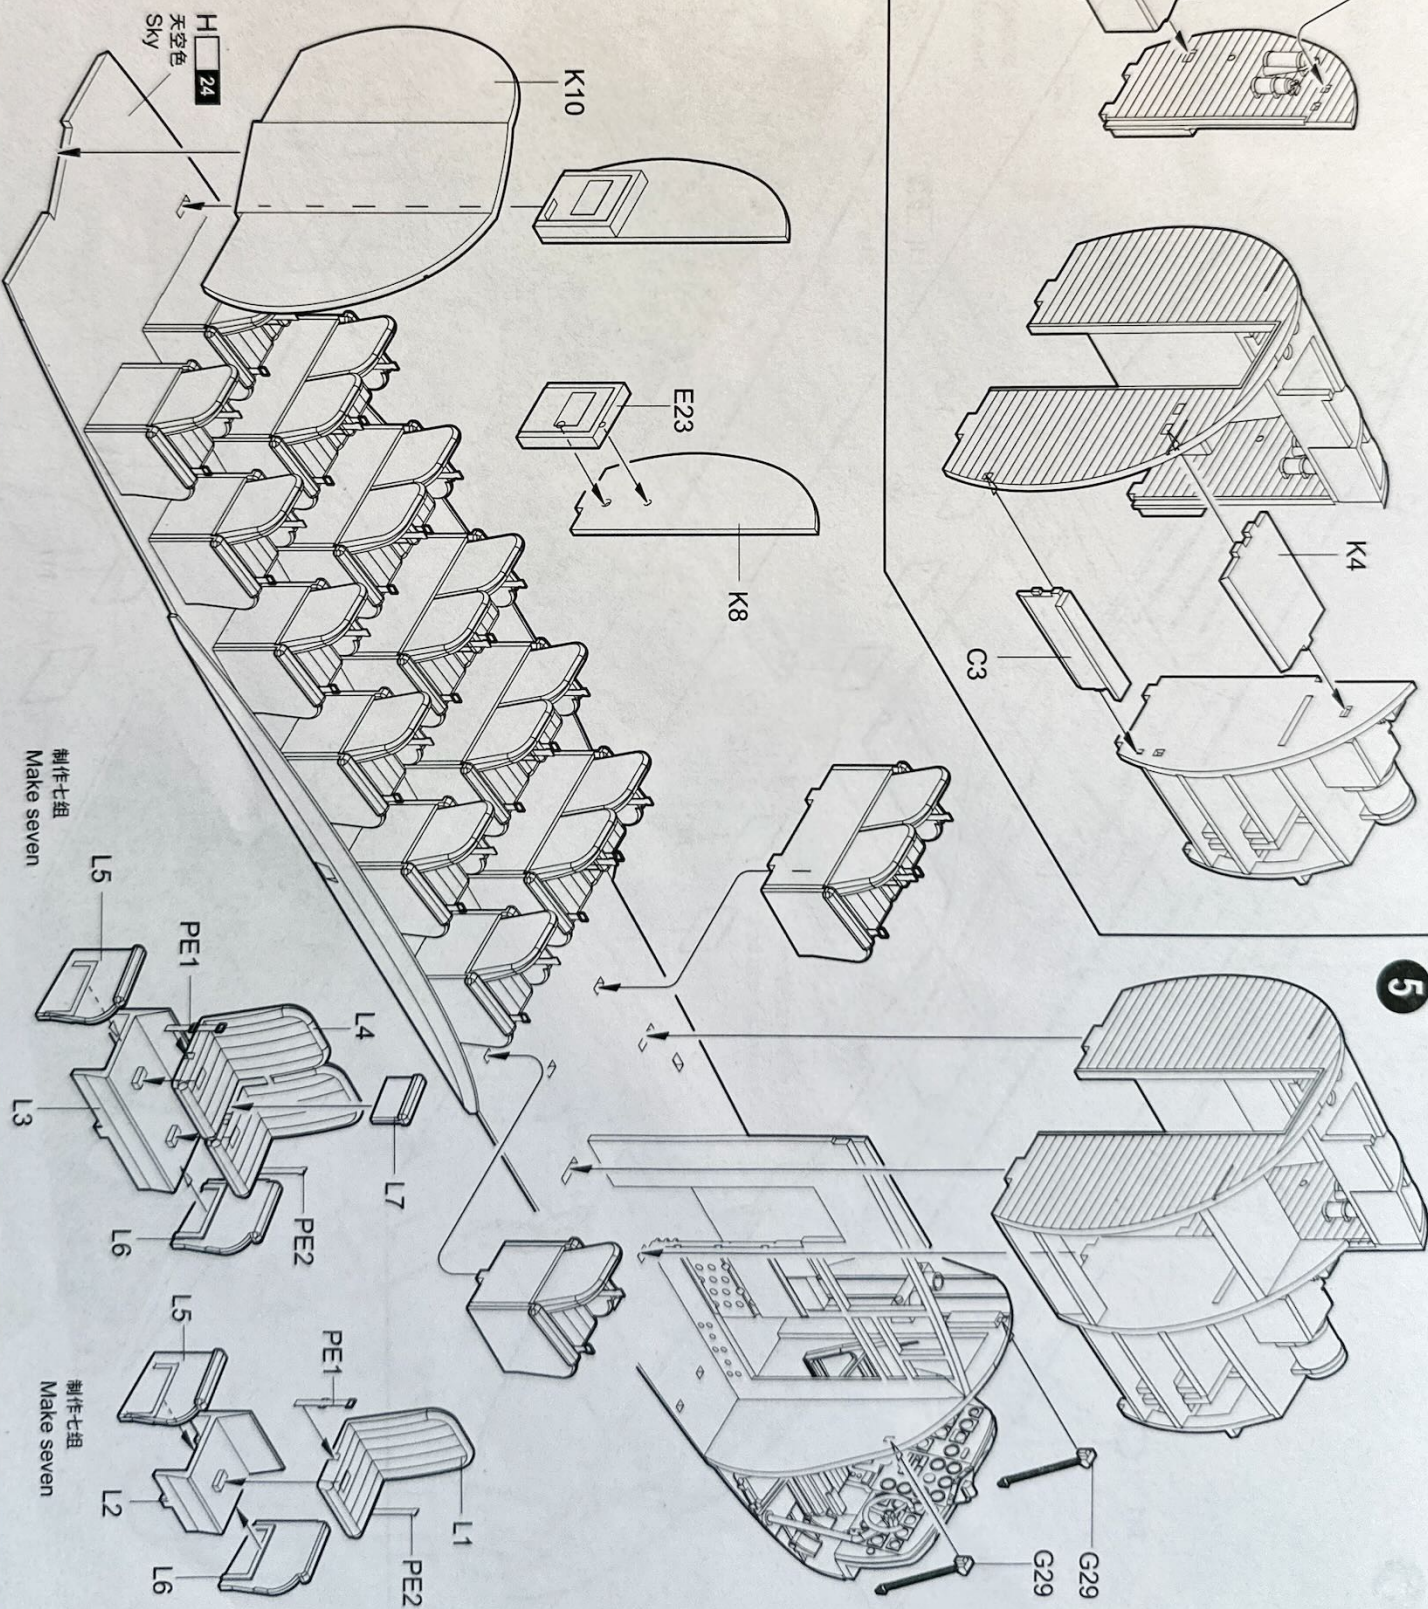


6

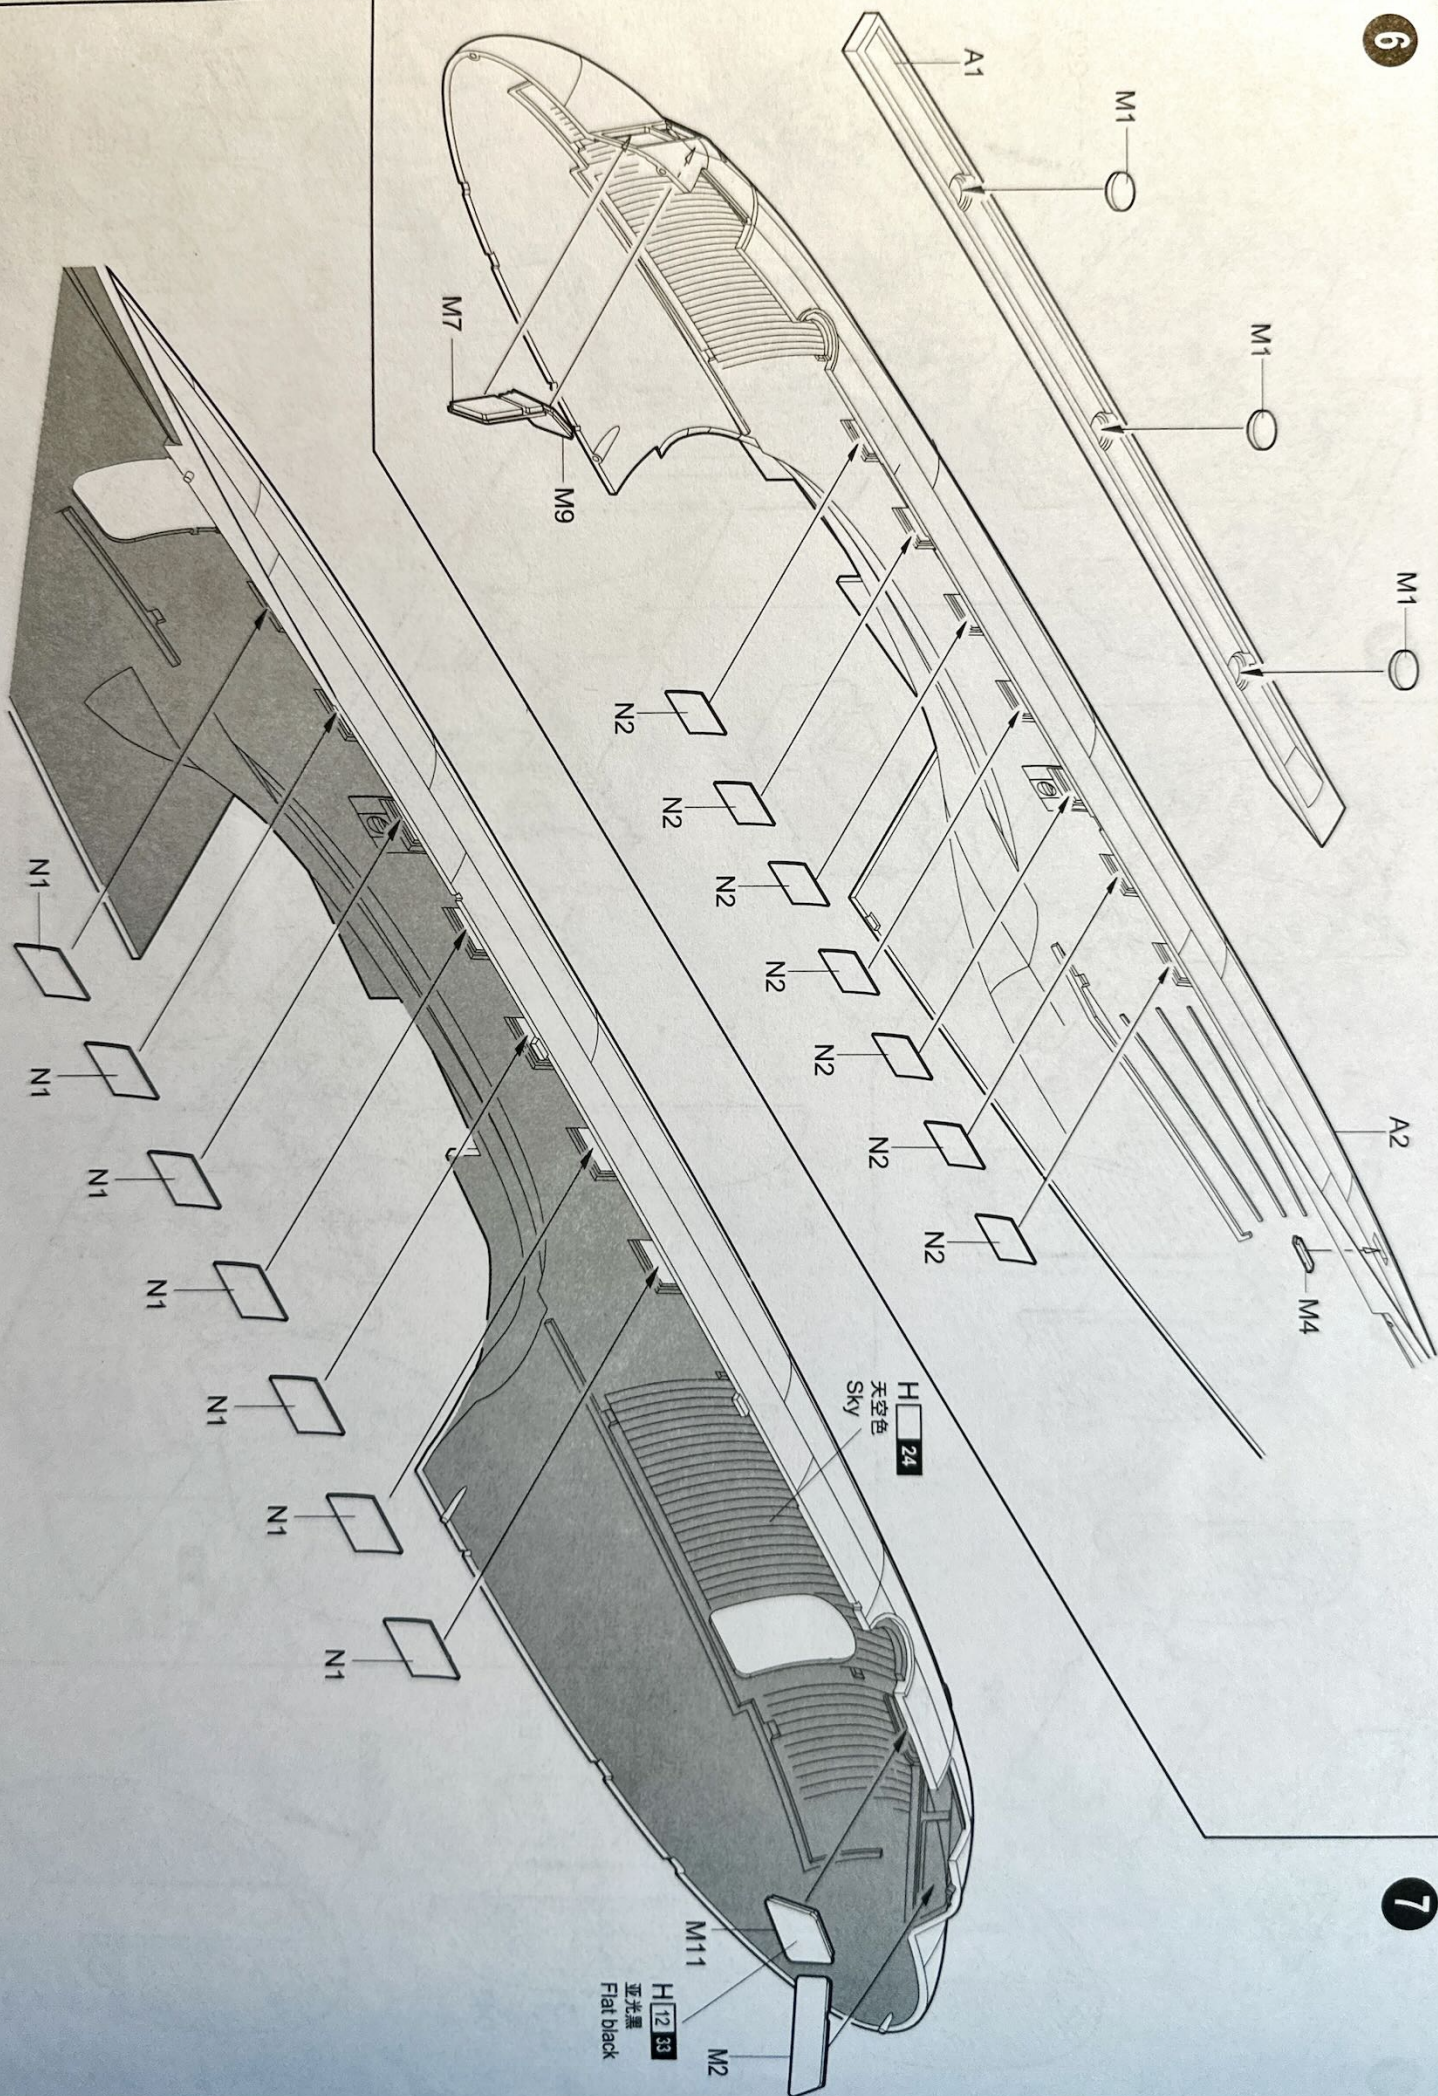


7

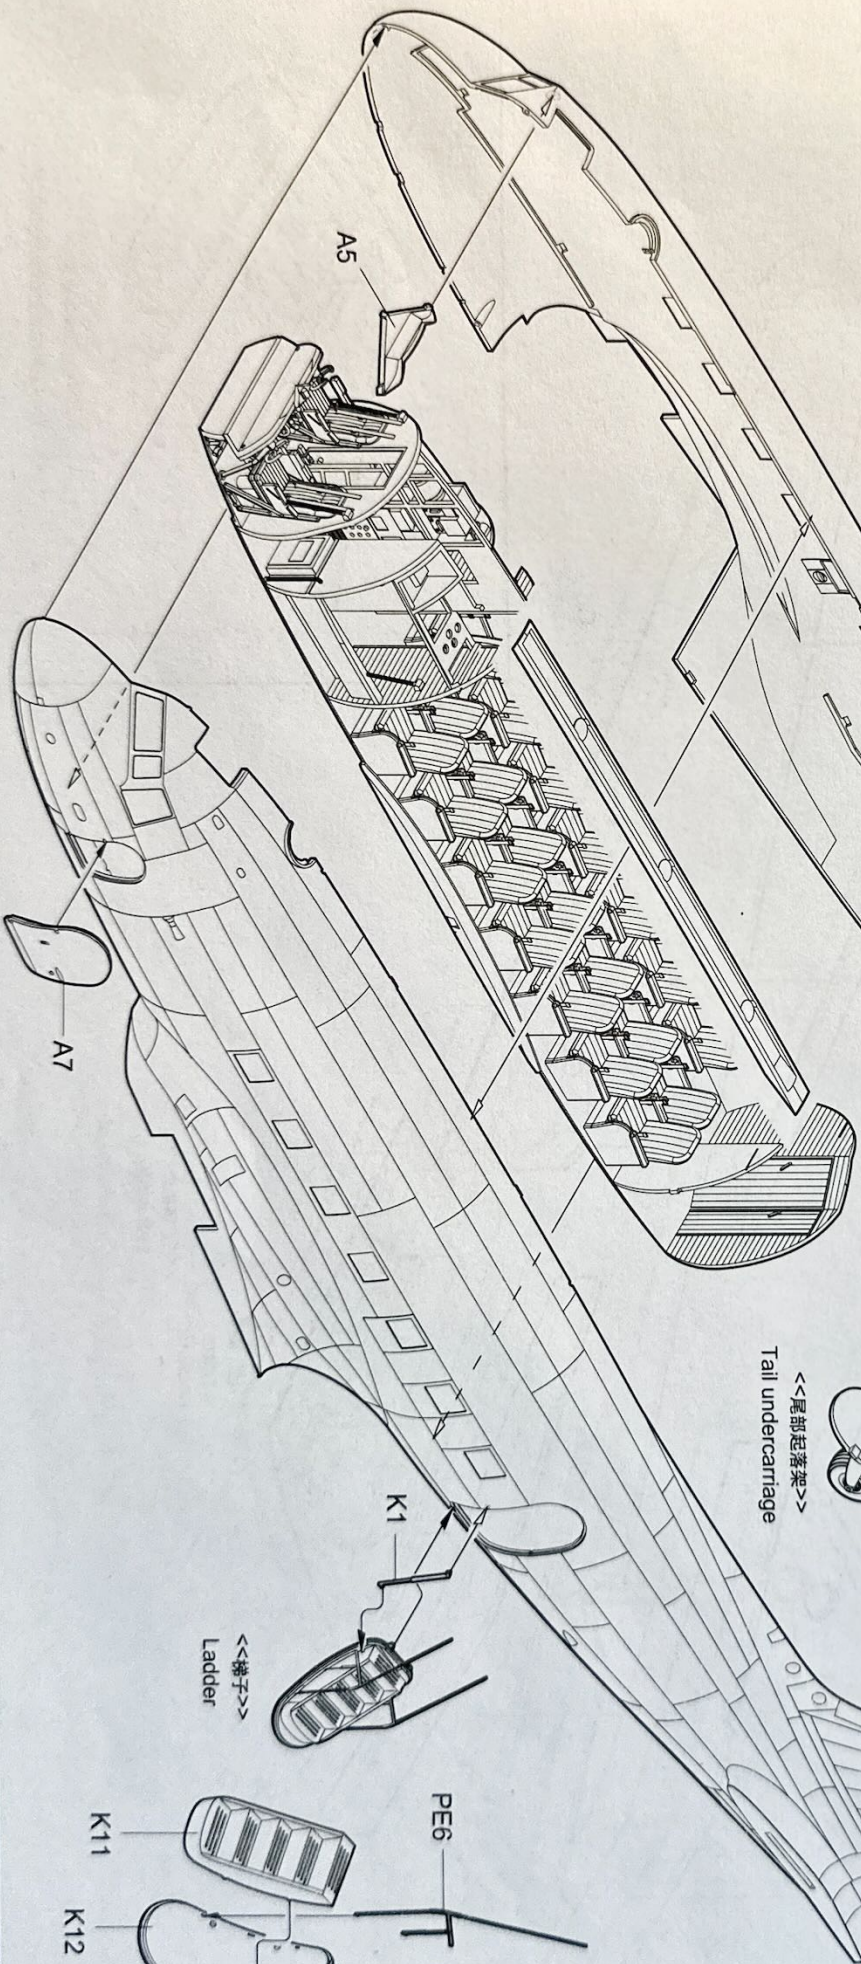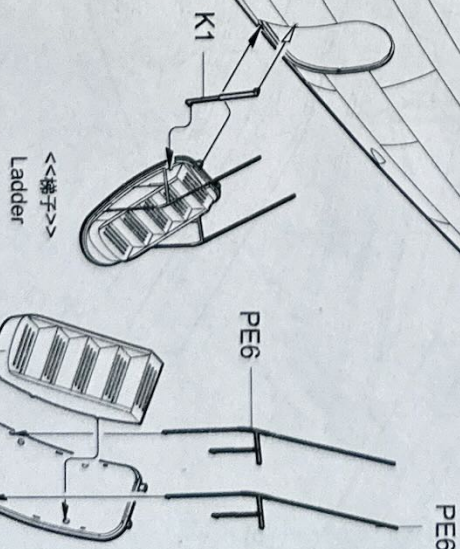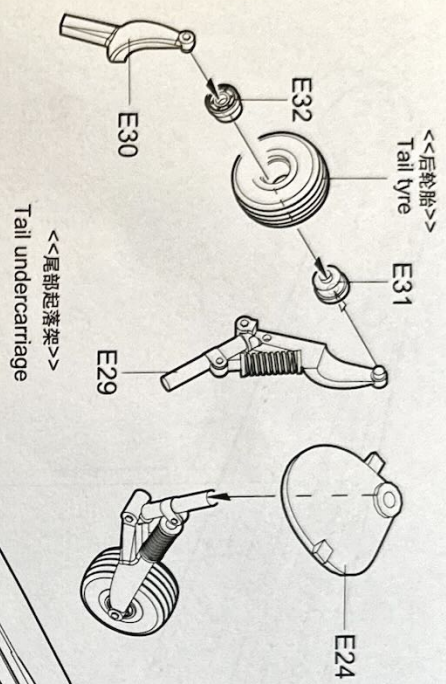


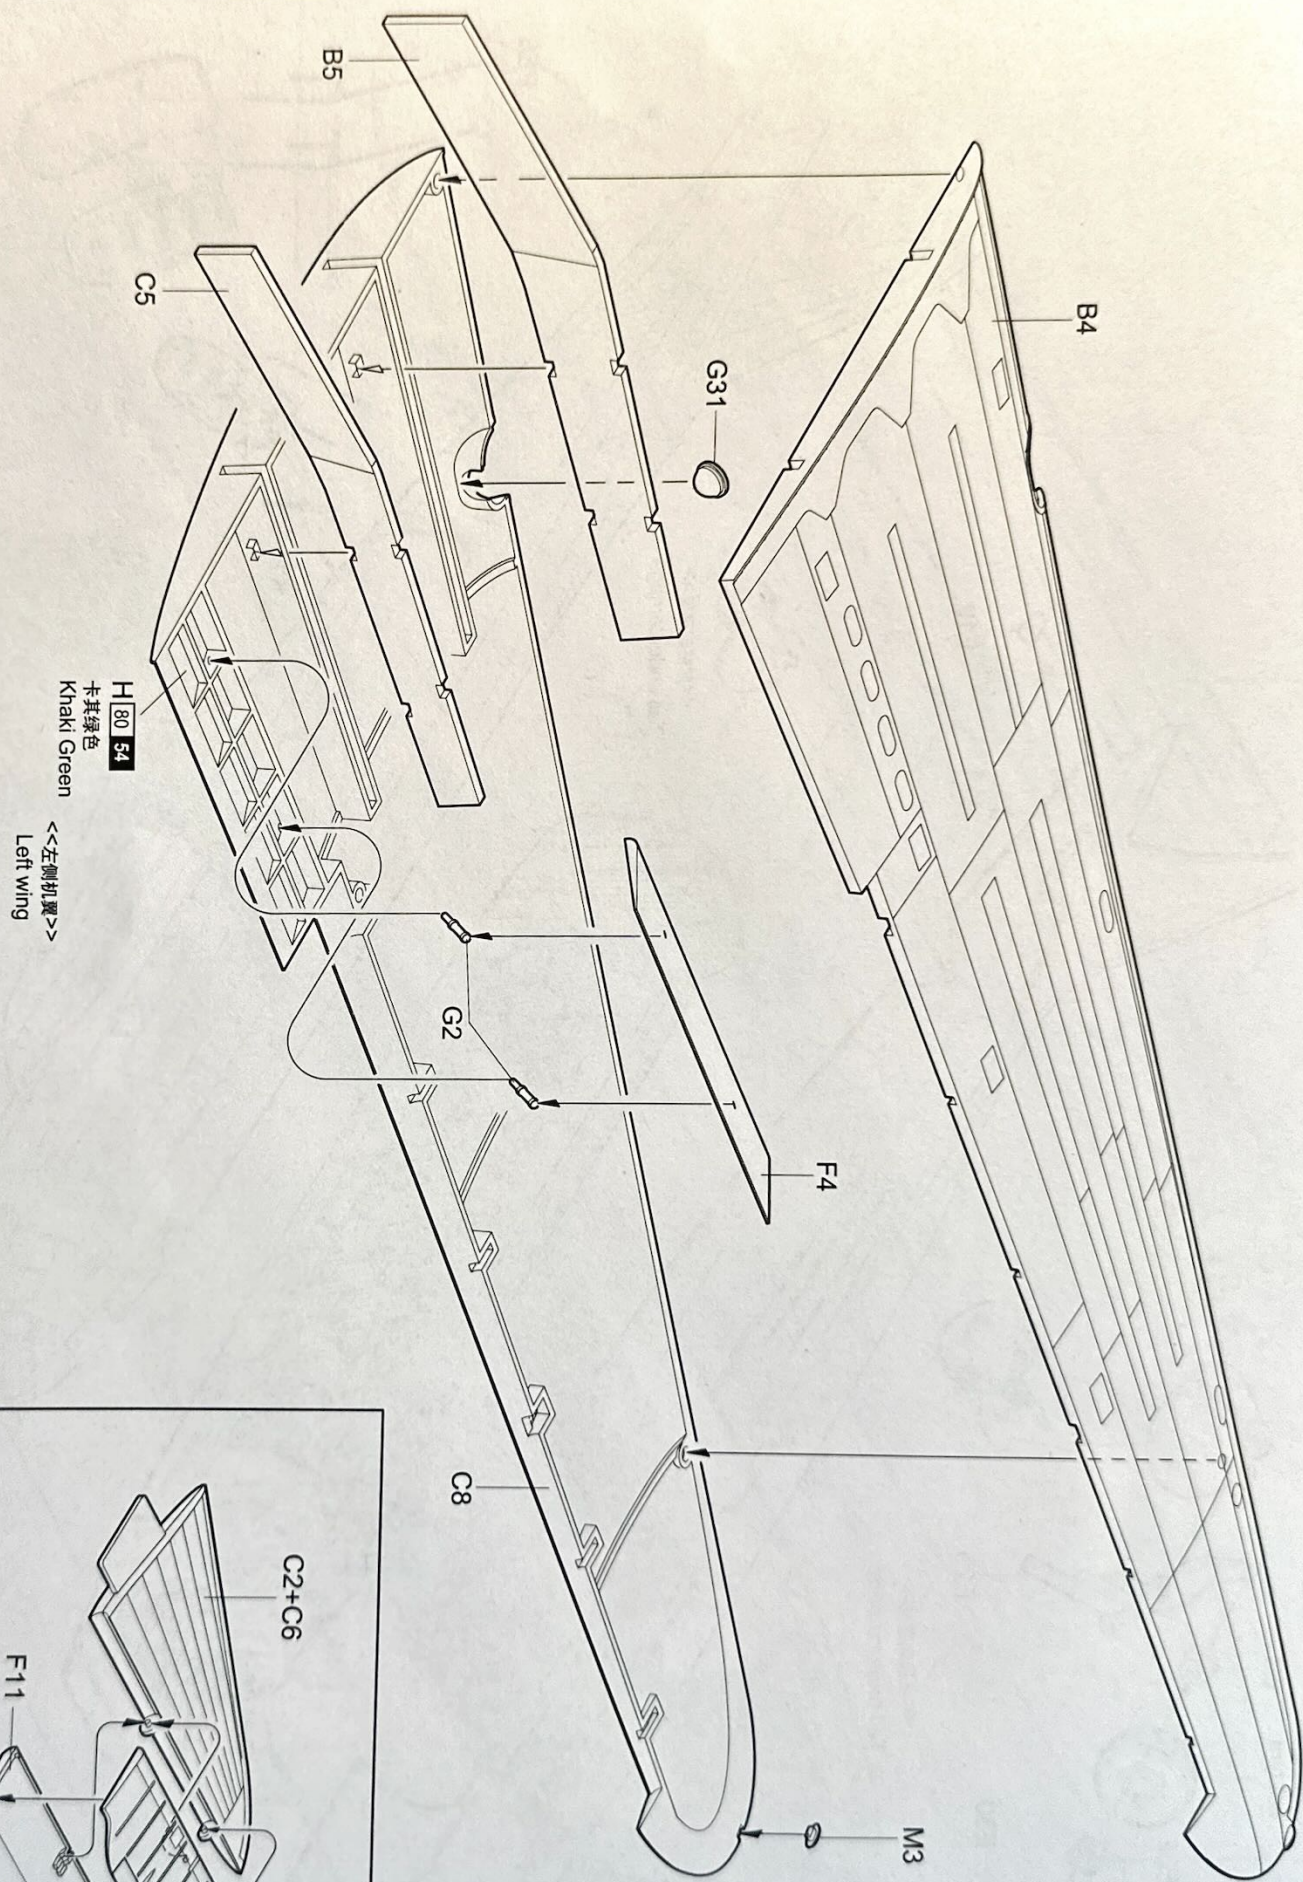

H 80 54
卡其绿色
Khaki Green
<<左侧机翼>>
Left wing

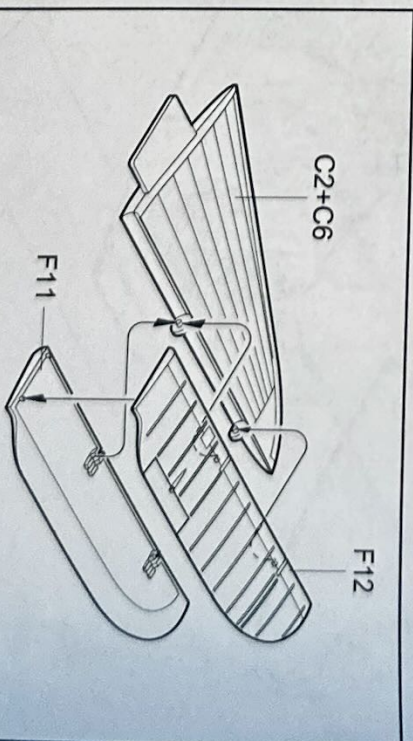


<<左侧水平尾翼>>
Left horizontal stabilizer

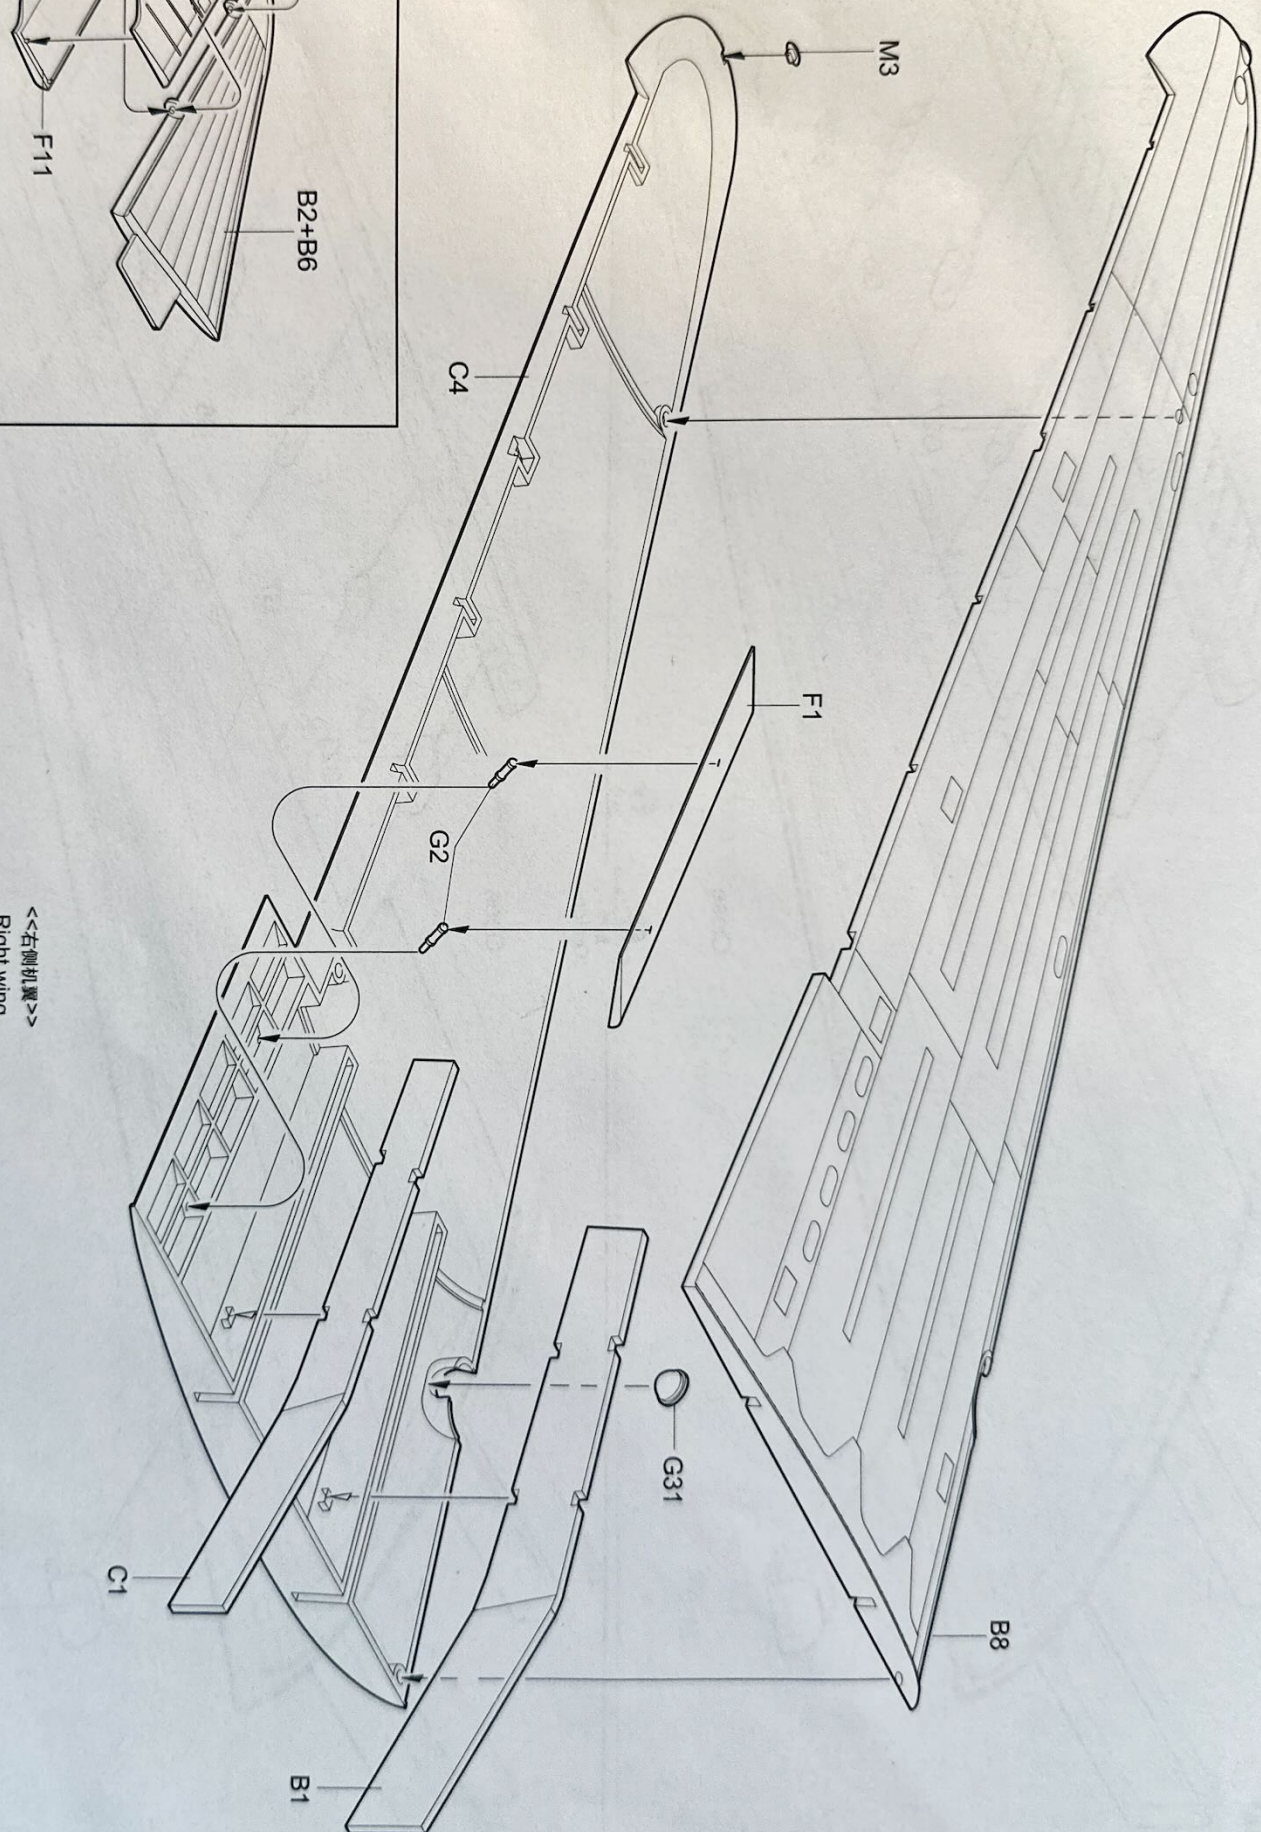

<<右侧机翼>>
Right wing

<<右侧水平尾翼>>
Right horizontal stabilizer

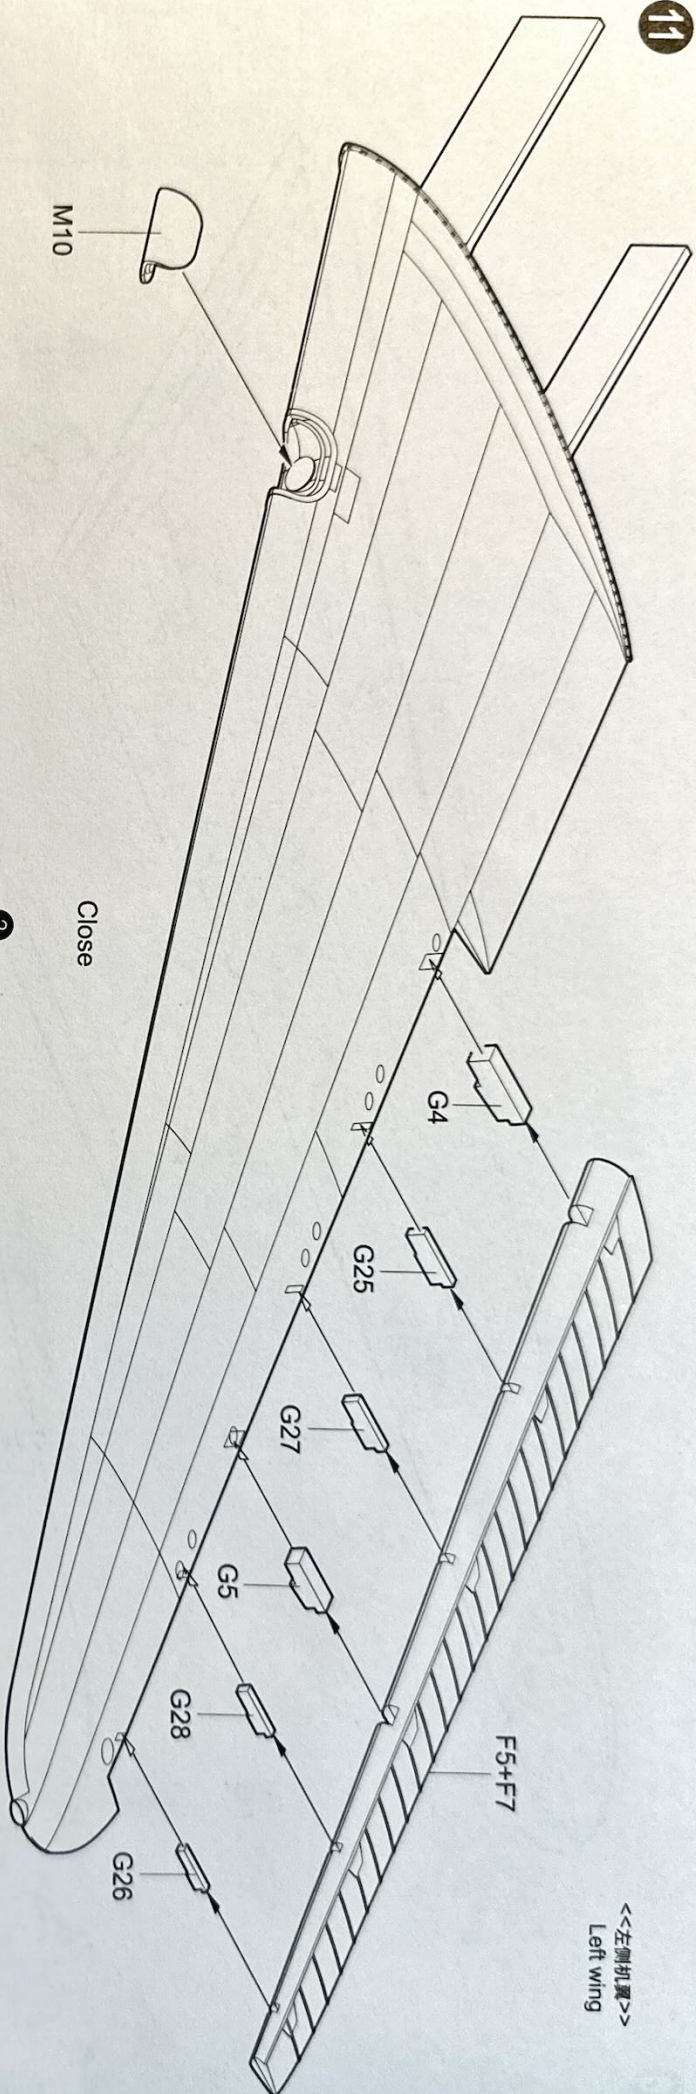


<<左侧机翼>>
Left wing

Close




选择
Option

Open

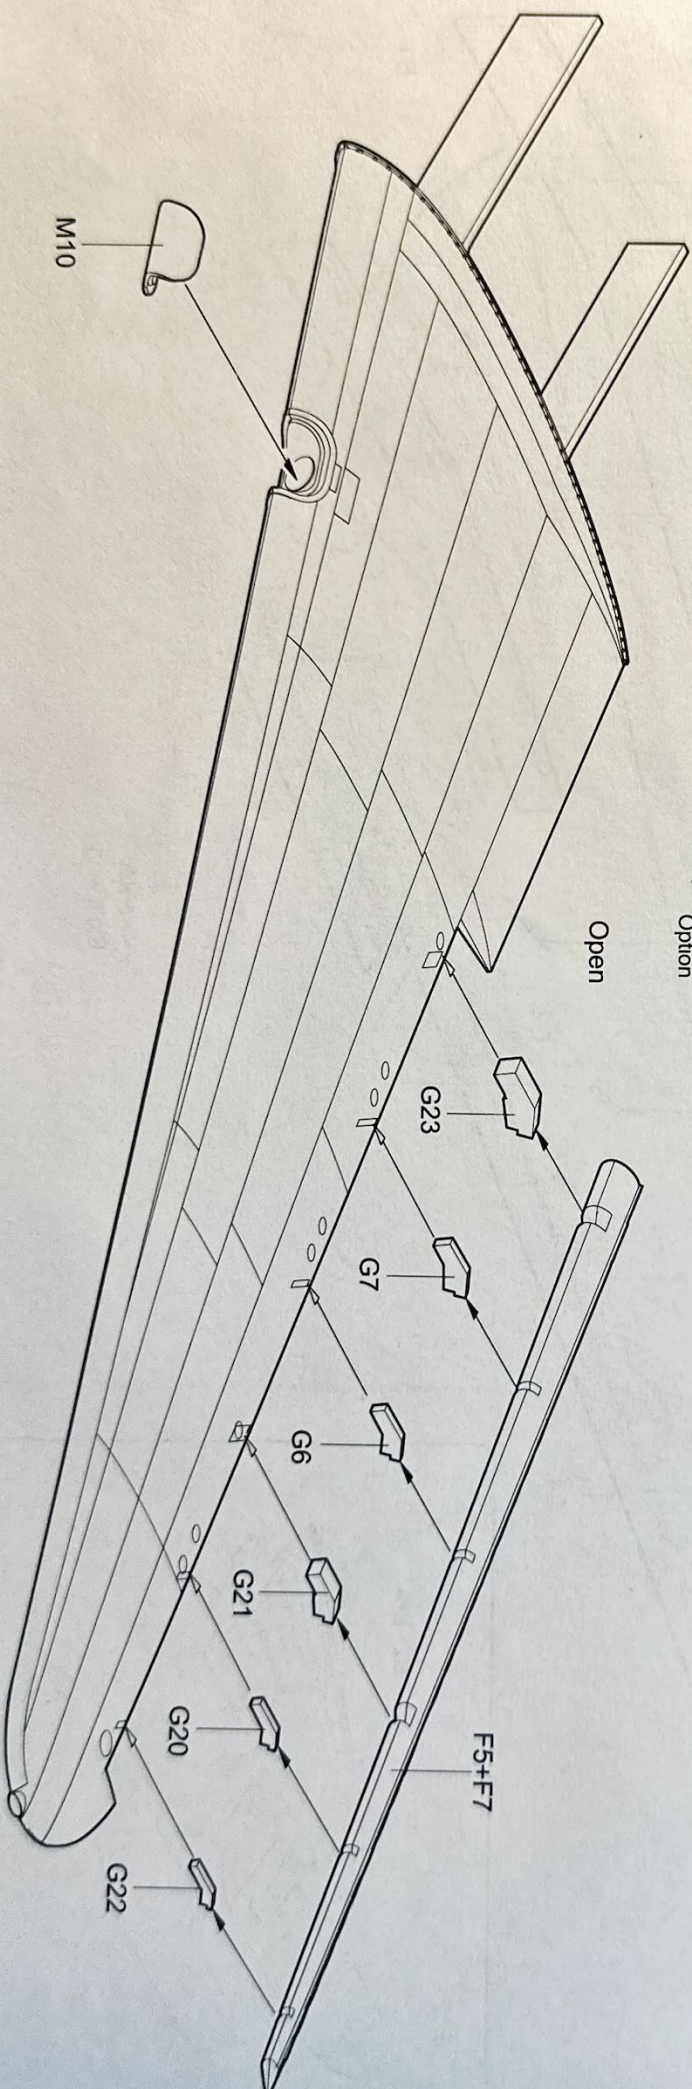


<<右侧机翼>>
Right wing

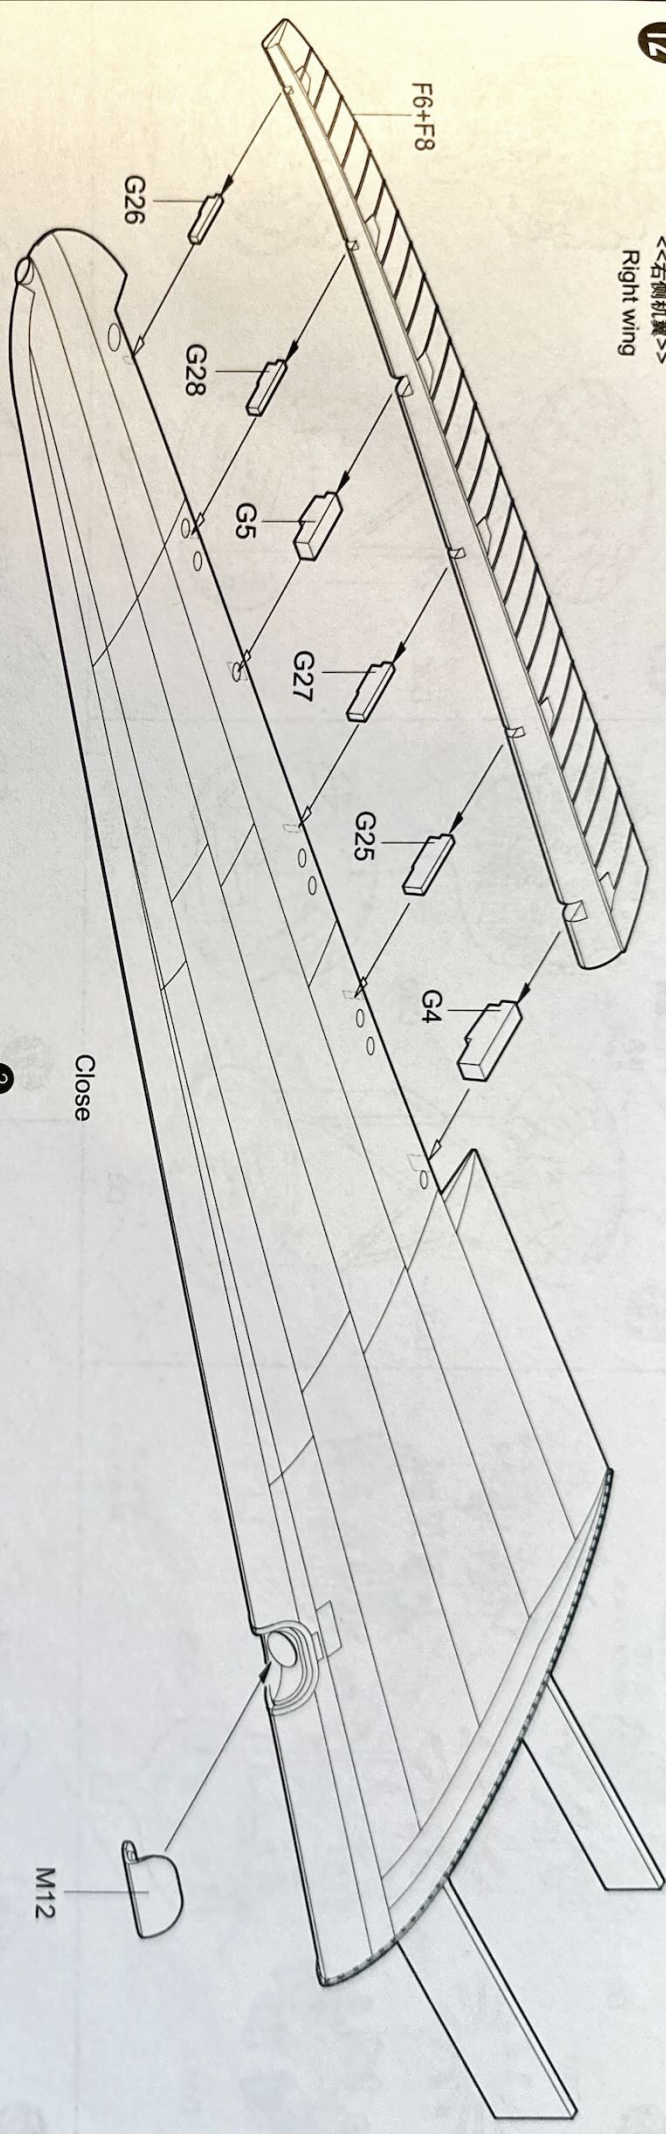




Close




选择
Option

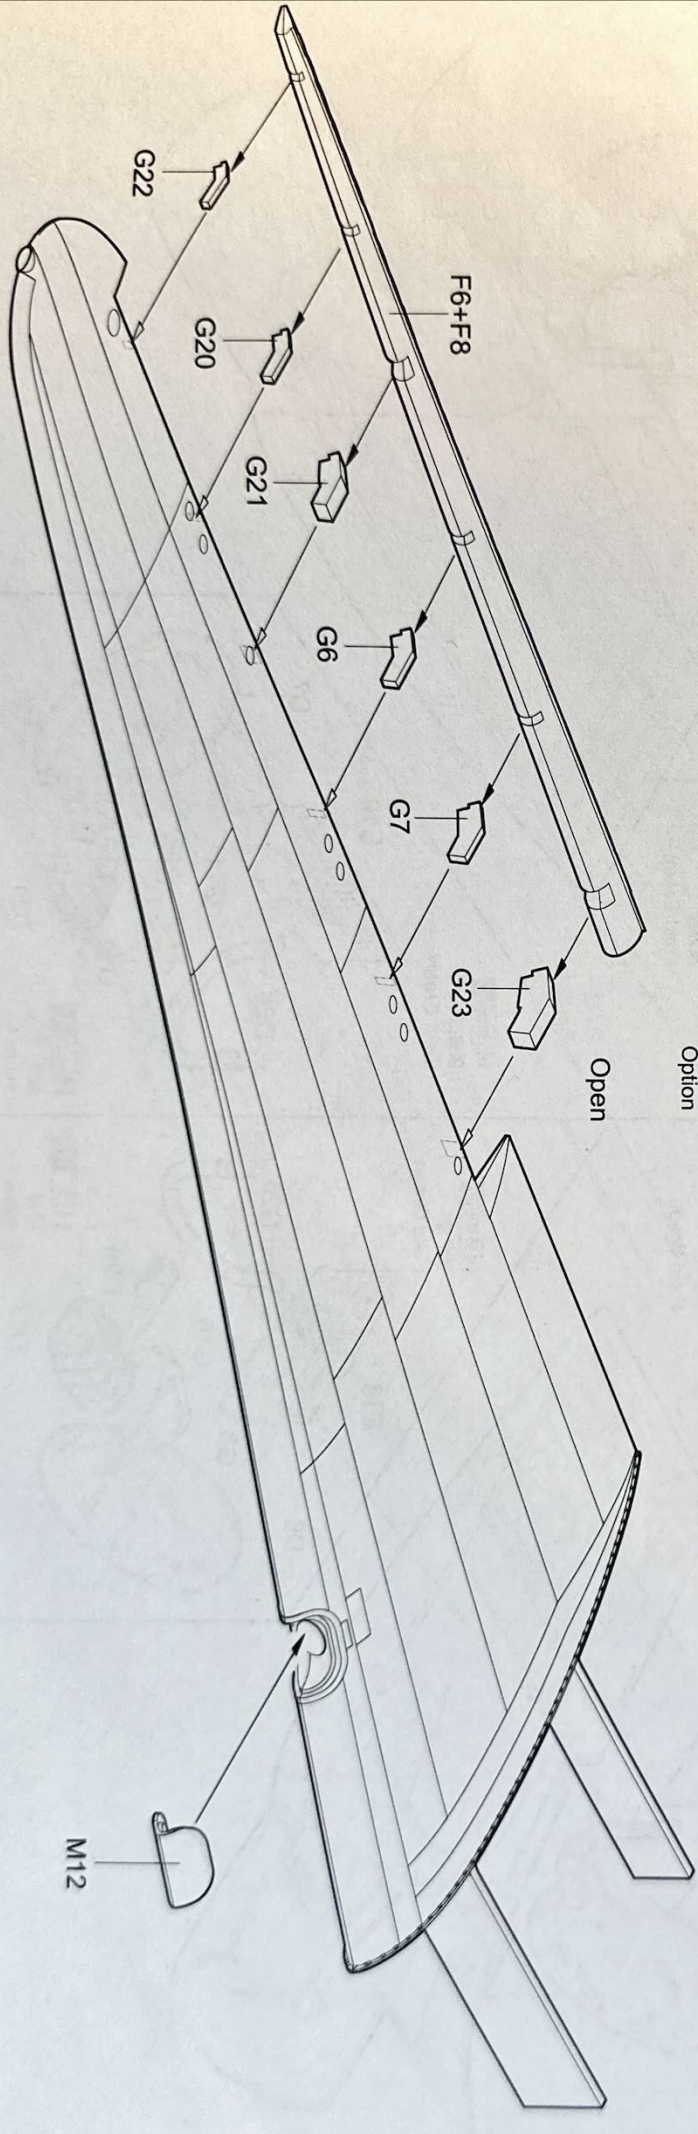


Open

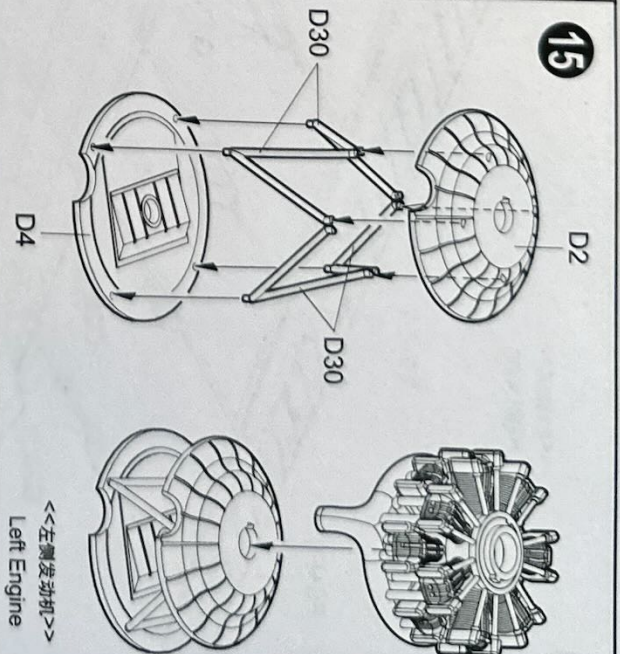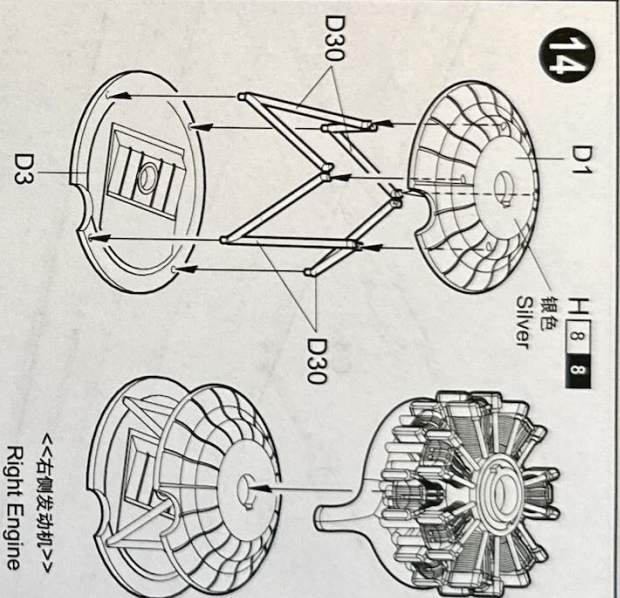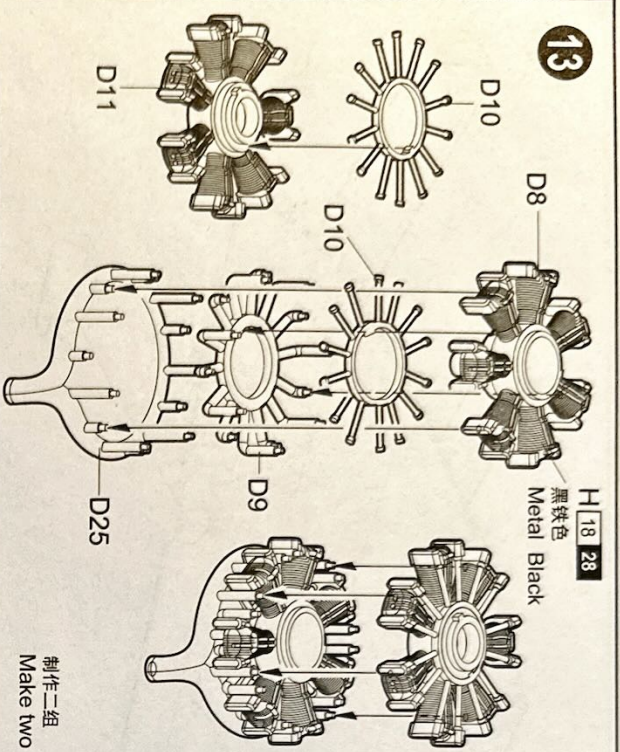



16

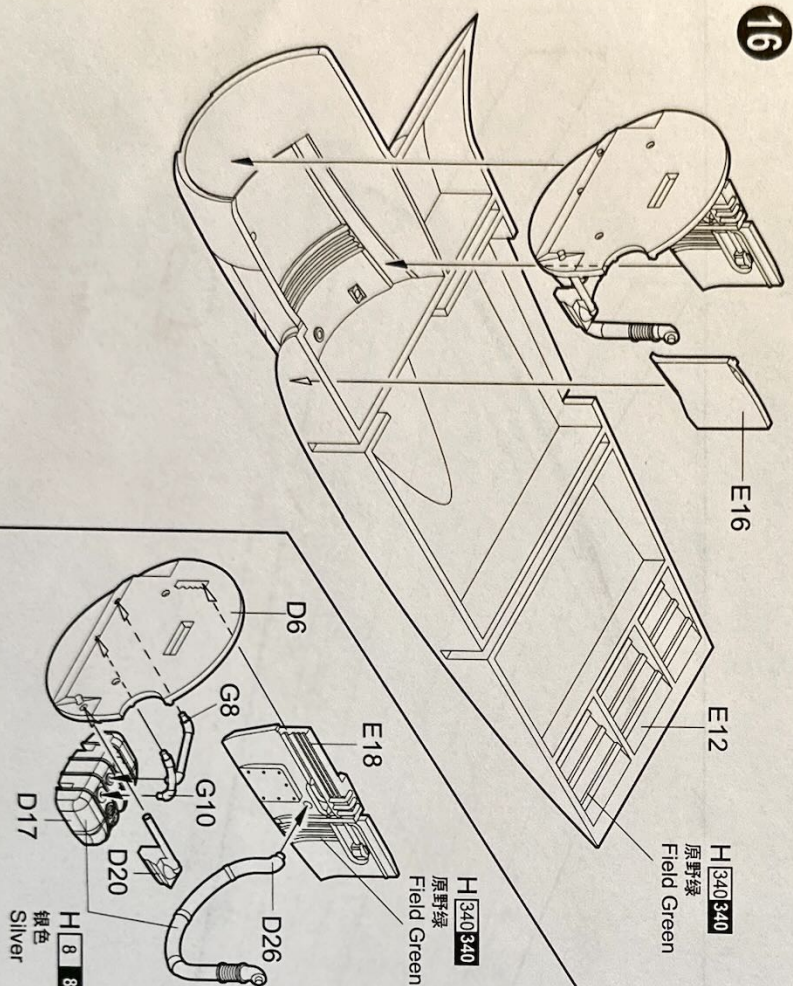

17


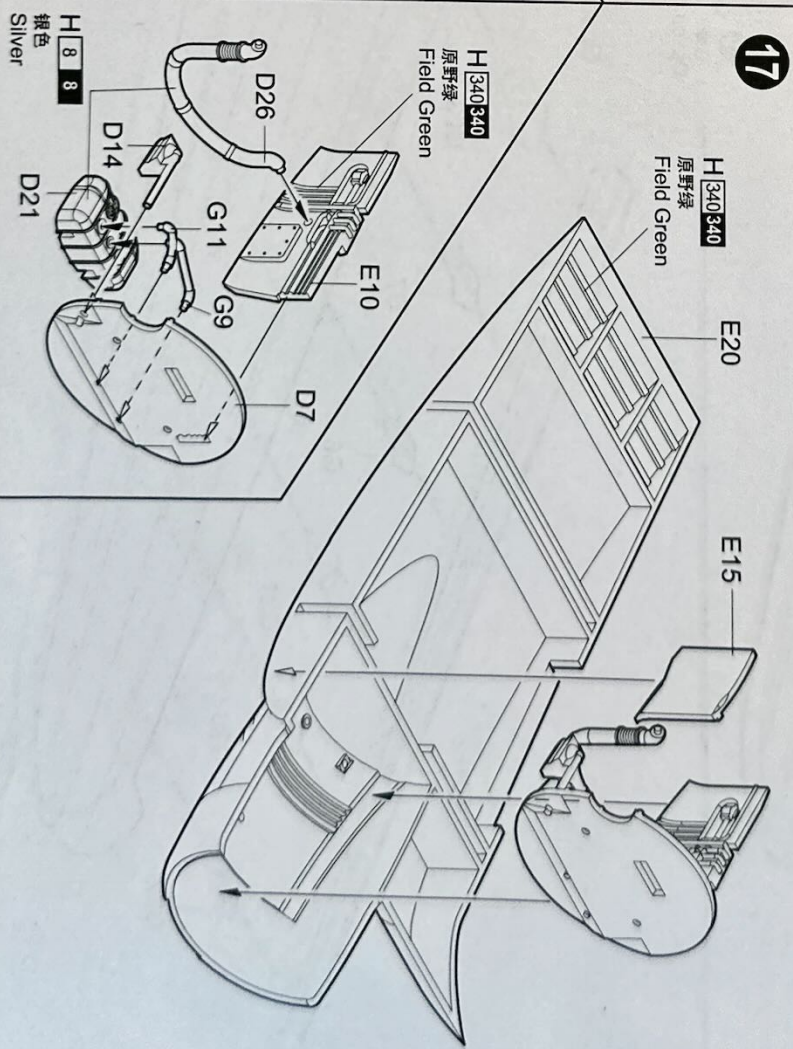


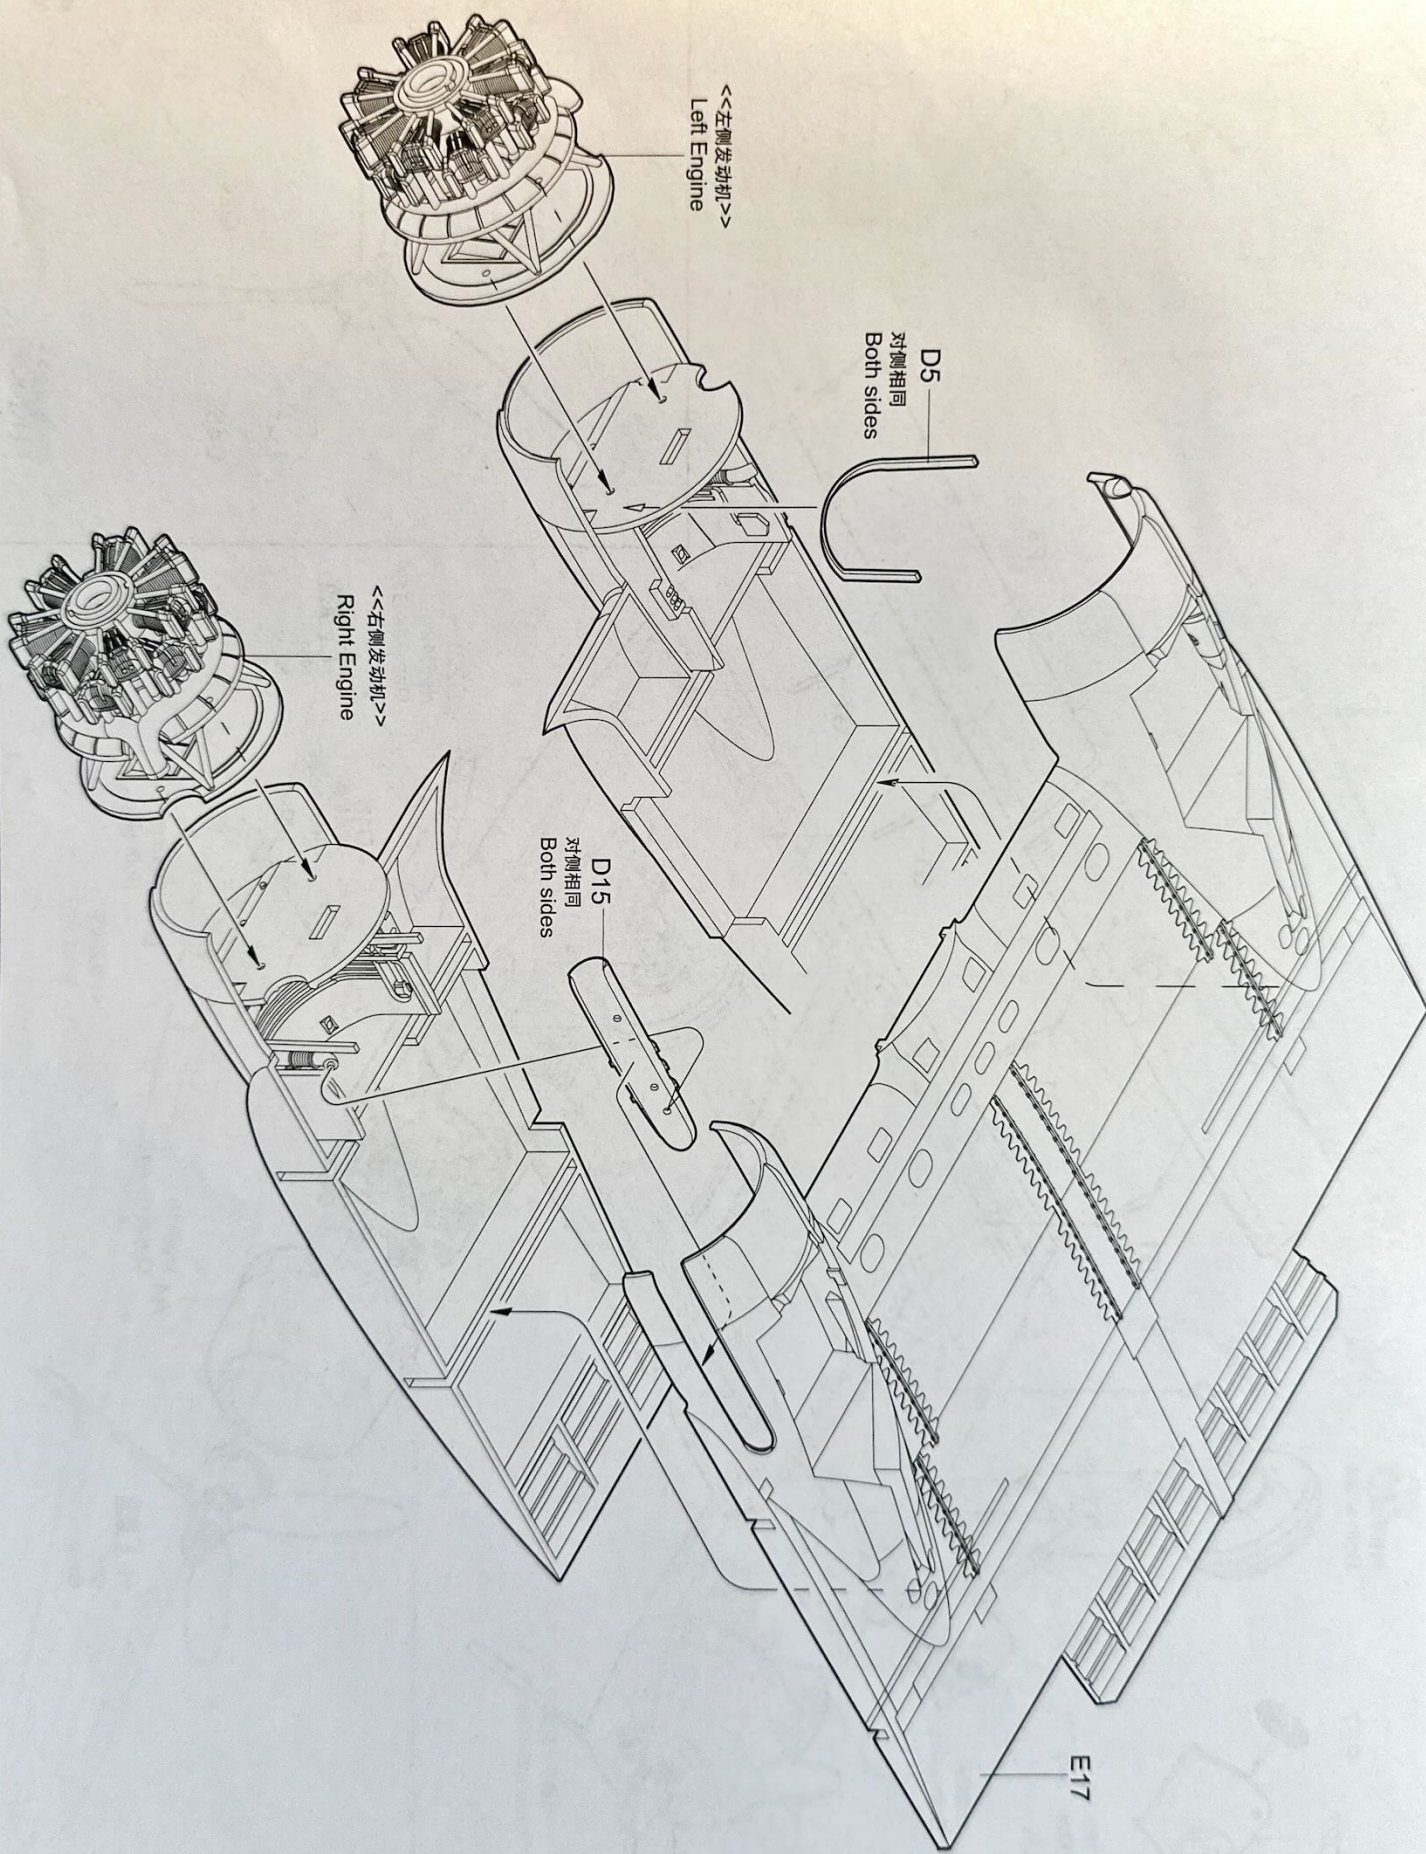

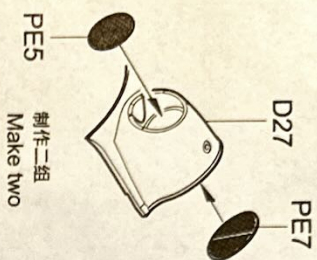


两侧相同
Both sides

两侧相同
Both sides

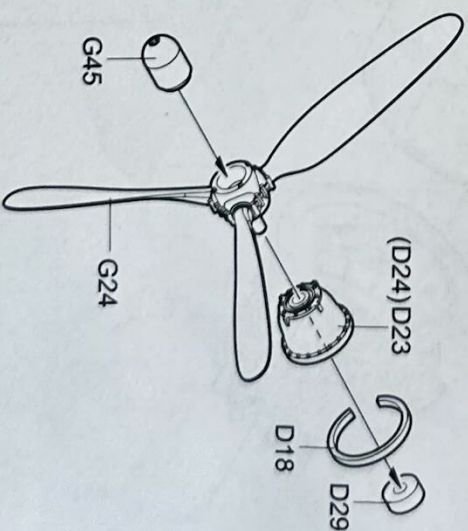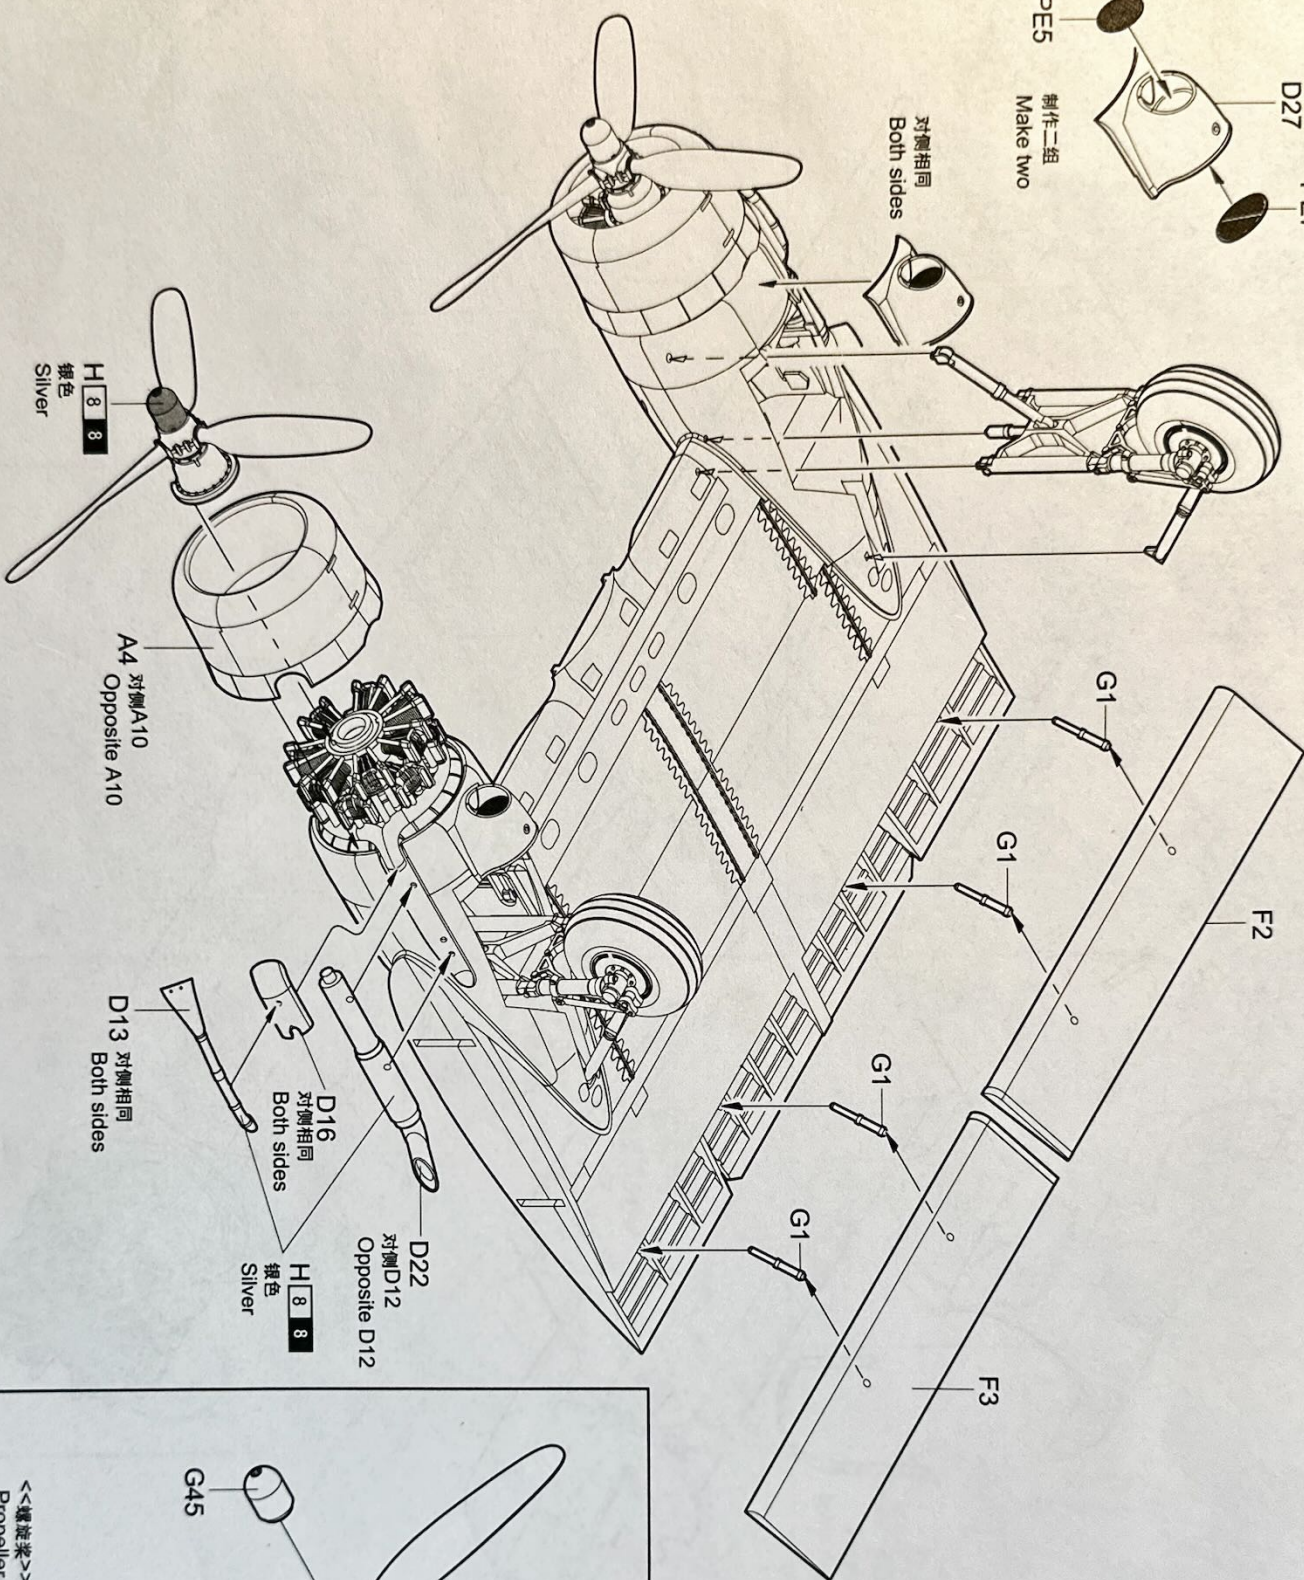




<<螺旋桨>>
Propeller


制作二组
Make two

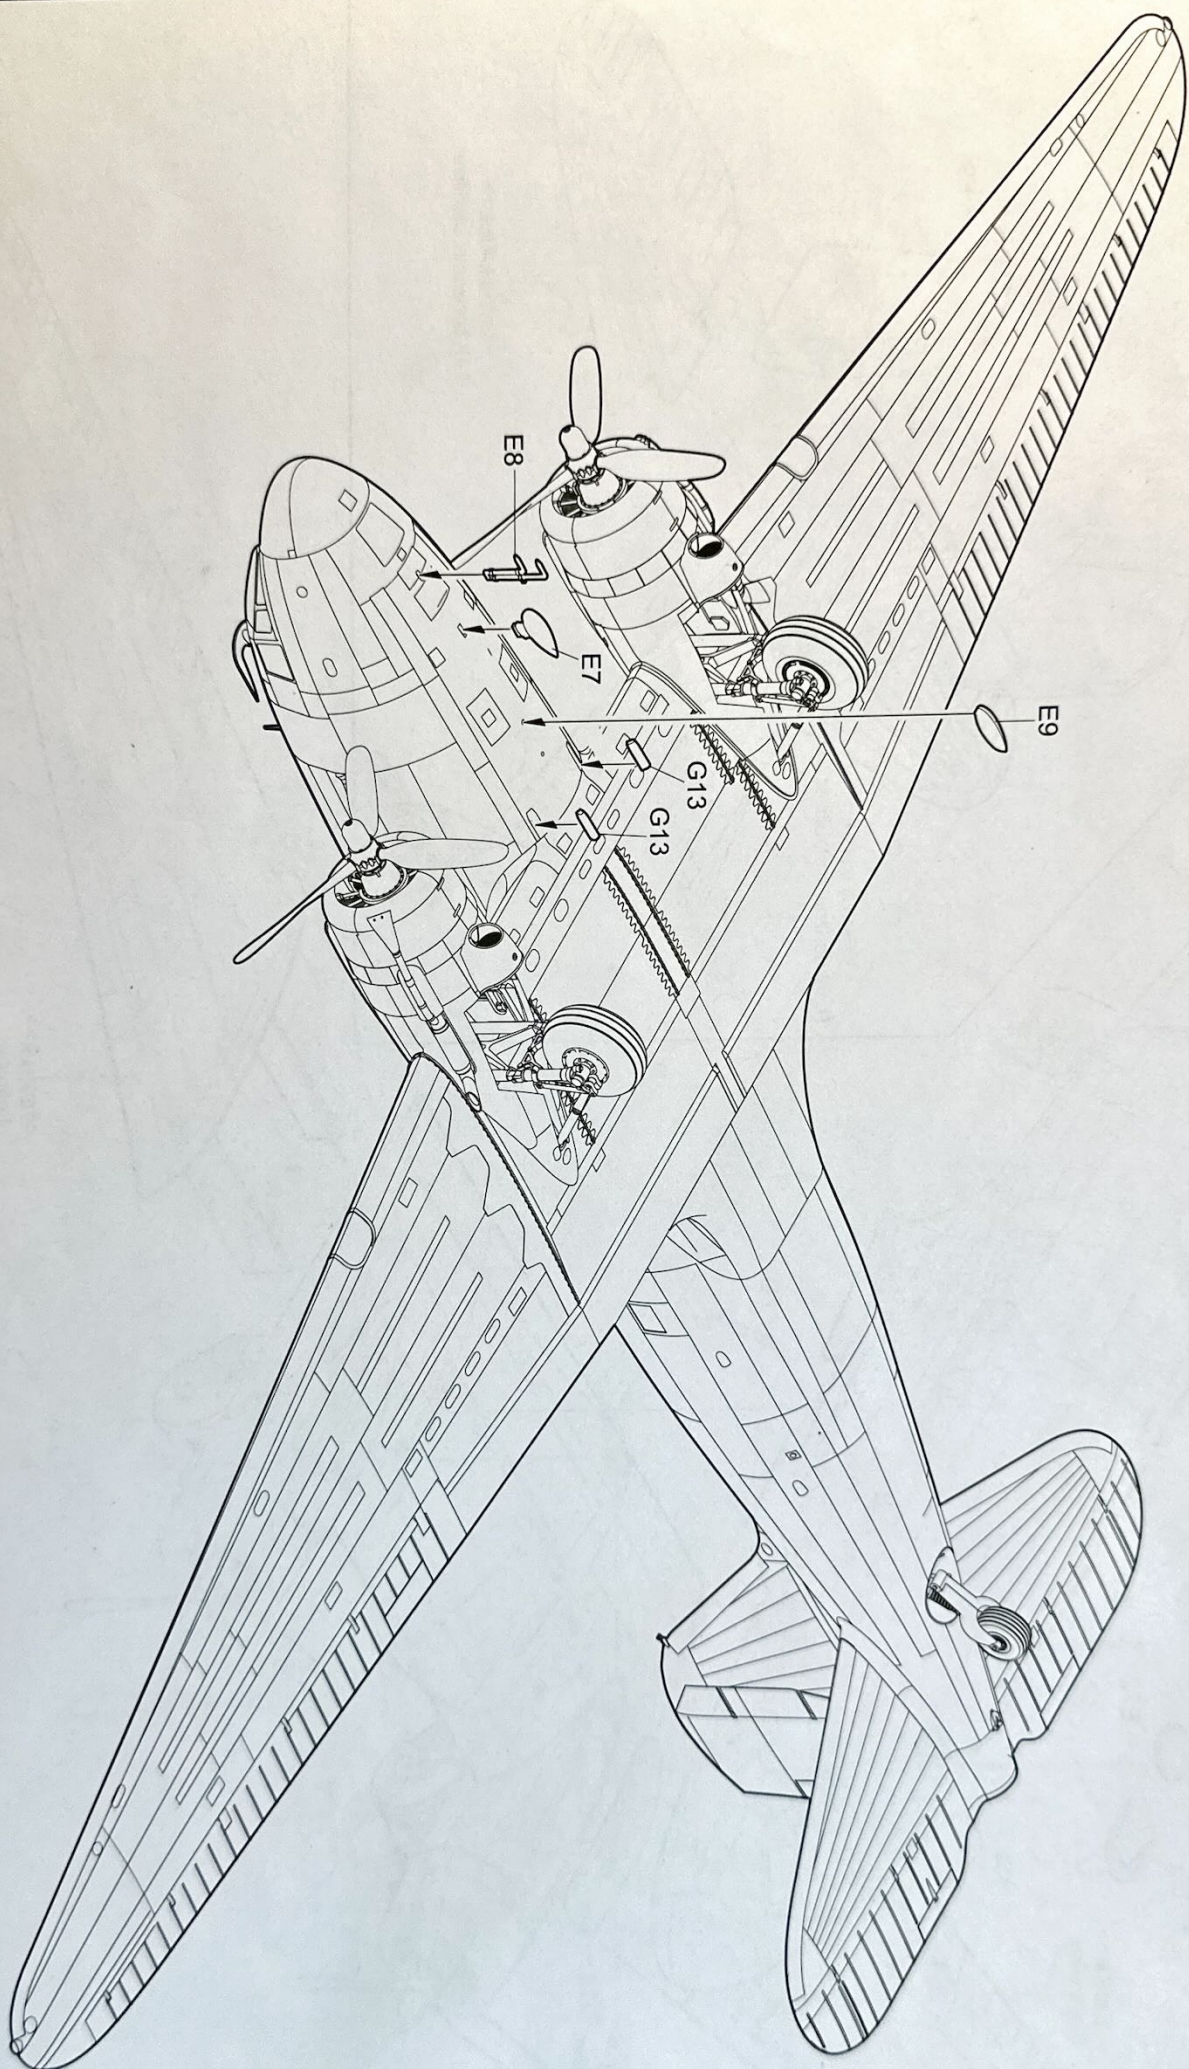

涂装同标贴指示
Painting & Marking guide

PAINT REFERENCE COLOUR					
Color	Mr Hobby	Vallejo	Model Master	Tamiya	Humbrol
Tire Black 胎黑色	H[77] 137	—	—	—	—
Silver 银色	H[8] 8	997	1546	X11	11
Burnt Iron 烧铁色	H[76] 61	863	1795	X10	53
Flat black 消光黑	H[12] 33	950	1749	XF1	33

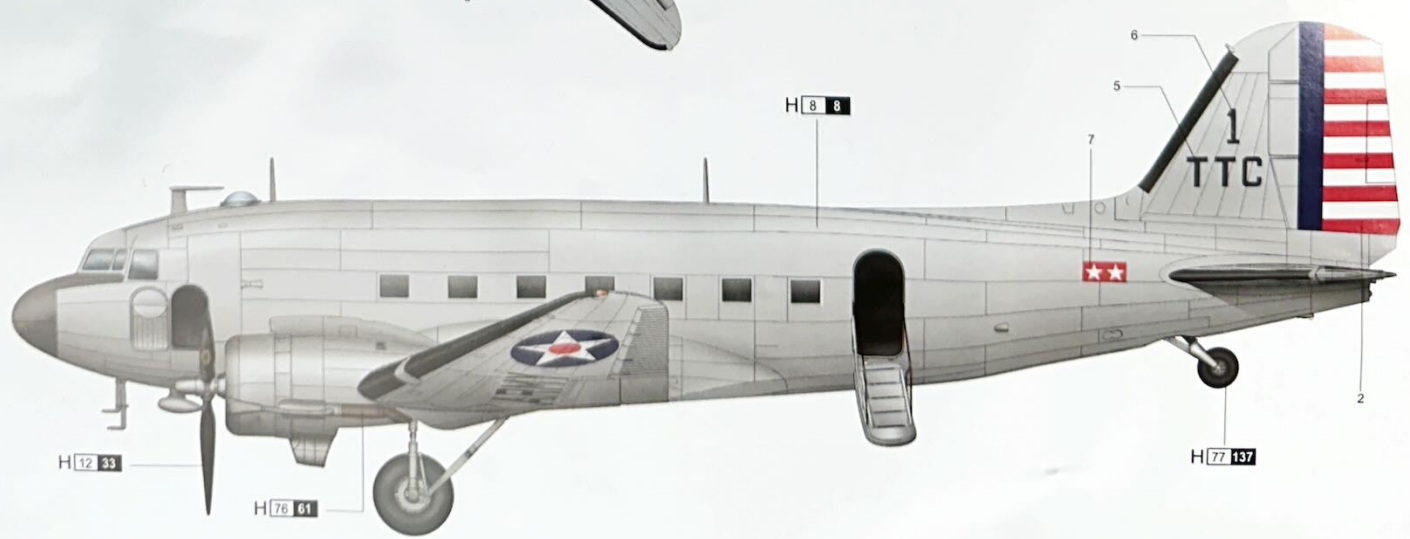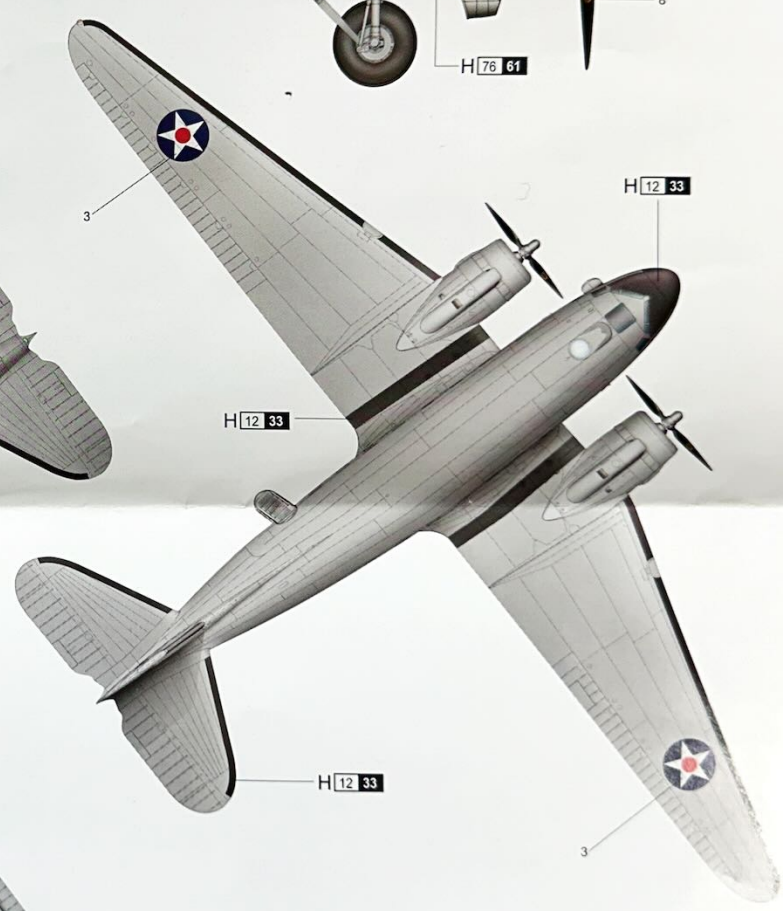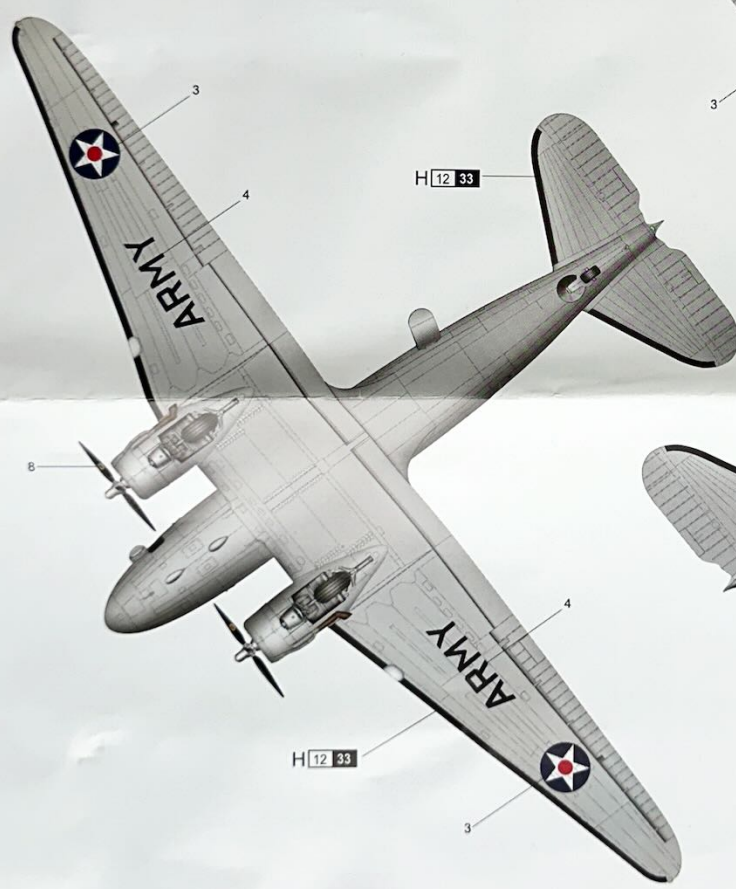

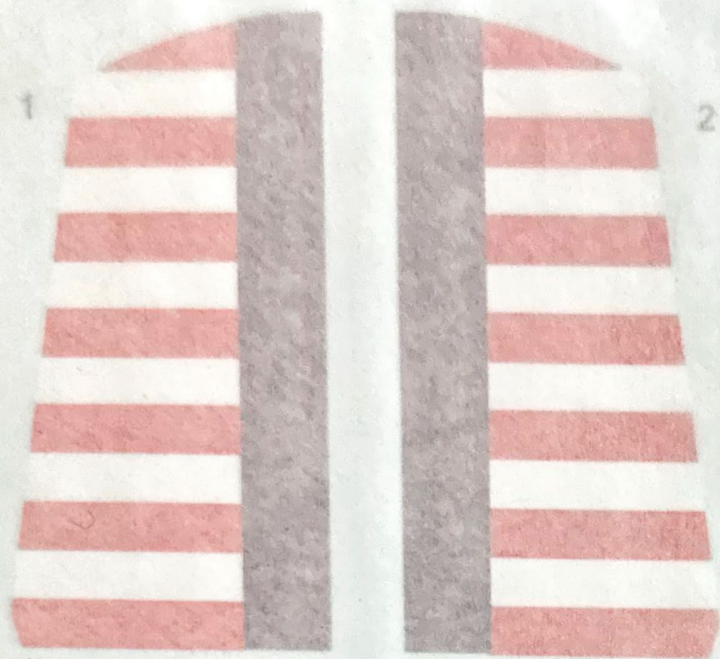

ARMY
ARMY

TTC TTC

1 1



02829 1/48 C-48C Skytrain Transport Aircraft