


CUT

REMOVE PROTECTIVE COVER





USE A SAW TO REMOVE SUPPORTS
FROM 3D PRINTED PARTS





R1





R6

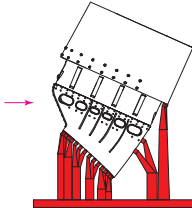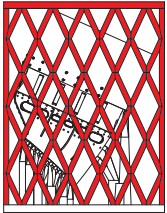


R2

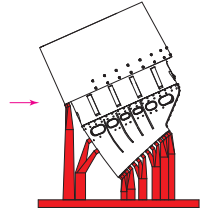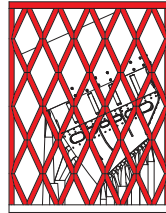

R3

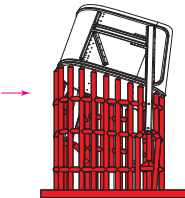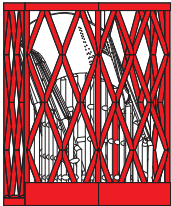

R4

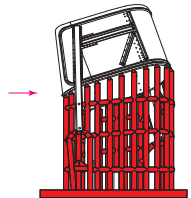

R5

ASSEMBLE ACCORDING TO KITTY HAWK'S INSTRUCTIONS.
WHEN ASSEMBLING, REPLACE THE PLASTIC
PARTS ACCORDING TO THE LIST.

IN STEP 7:
REPLACE PART C26 WITH R6;

IN STEP 8:
PARTS C8, C9, C19 REPLACE WITH R1 AND R3,
PARTS C10, C11, C18 WITH R1 AND R2;

IN STEP 9:
PARTS C4, C7, REPLACE WITH R5,
PARTS C5, C6 REPLACE WITH R4;

