
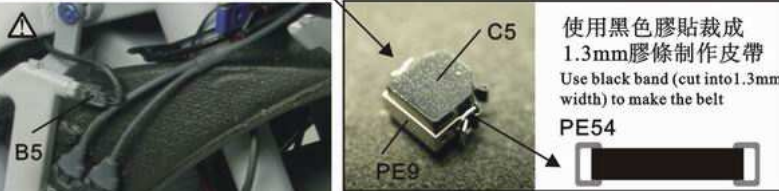
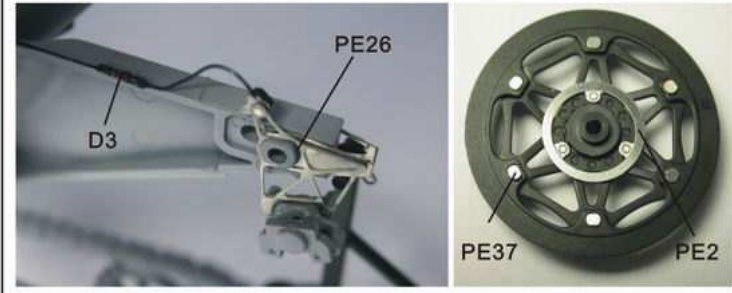
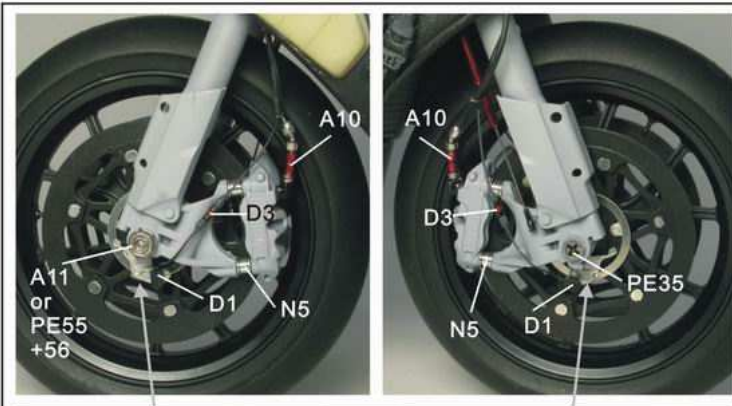
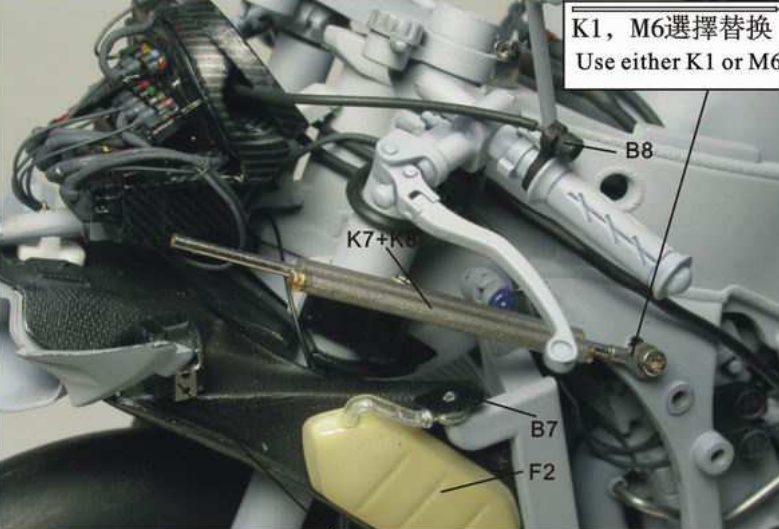


Top Studio YZR-M1 2004



1/12 Super Detail-Up Set


Detail Master www.topstudiohobby.com

制作前先將TAMIYA原件修整到圖中狀態
Please modify the Tamiya's original parts as the figures shown
注意這些零件與車殼的配合! Pay attention to the fitting of small parts and cowling

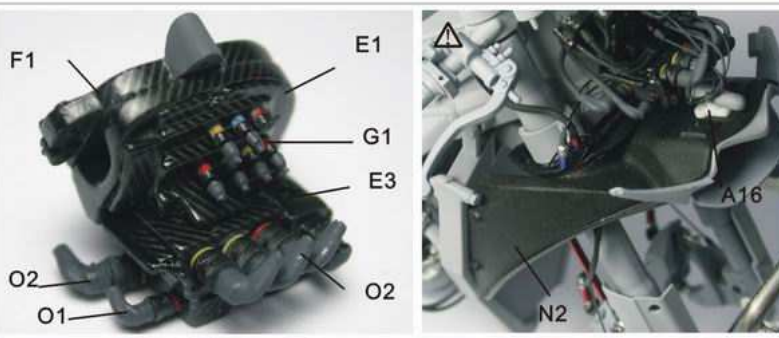

安裝N2與B16後會頂到車殼C6, C9
建議將C6, C9內側相應位置磨薄
As N2 and N16 are mounted, they will hit the cowling C6, so the inside of C6 and C9 need to be shaved to adjust.

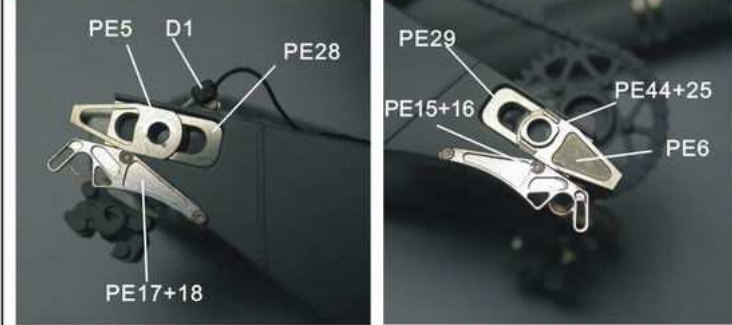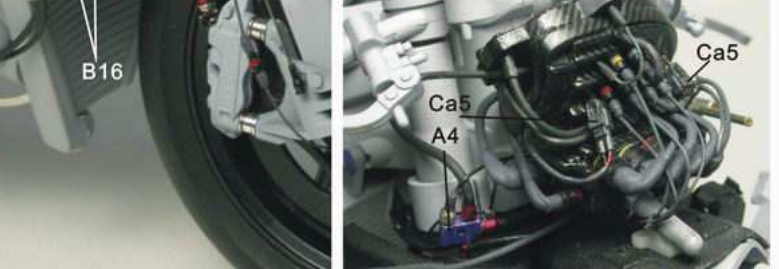

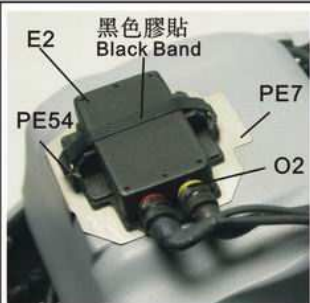


黑色膠貼
Black Band

E2

PE54

PE7

O2

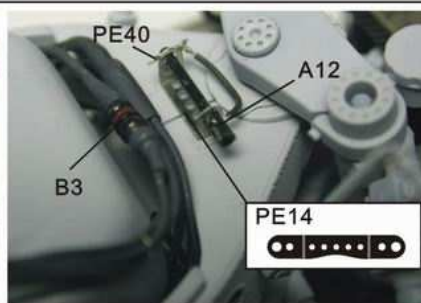


PE40

A12

B3

PE14

•••••

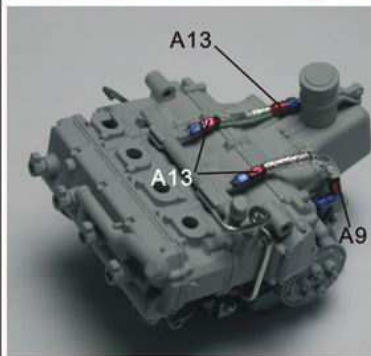

A13

A13

A9




A15

C1


A15



A14

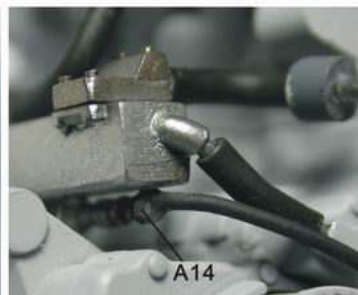

A14

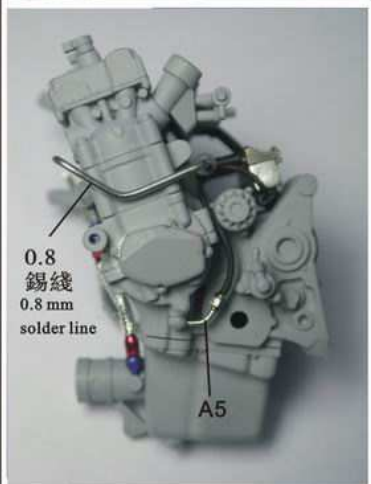

0.8 錫綫

0.8 mm solder line

A5



0.8 錫綫

0.8 mm solder line

A14




鋁箔貼紙
silver metal foil sticker

黑色膠貼
Black Band

F5

A2

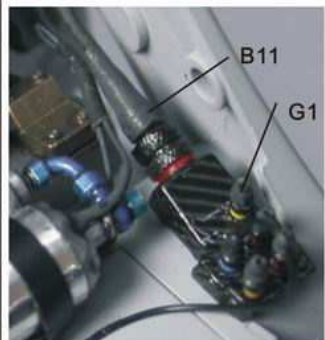

B11

G1



B12

B9

B13

B10

PE23+PE43



M3 M4

將M3,M4粘接後，使用2000#以上沙紙打磨拋光
After sticking M3 and M3, sand with #2000 sandpaper to polish




D2

D2



PE38

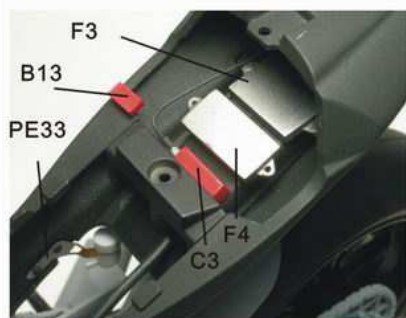

F3


PE33

F4

C3



B15 or B14

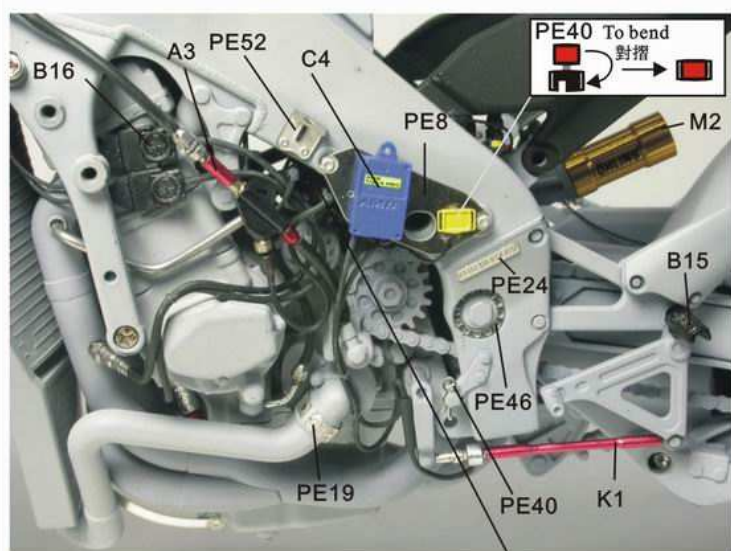

PE40 To bend

對摺

B16

A3

PE52

C4

PE8

M2

PE24


PE46

PE19

PE40

K1

B15

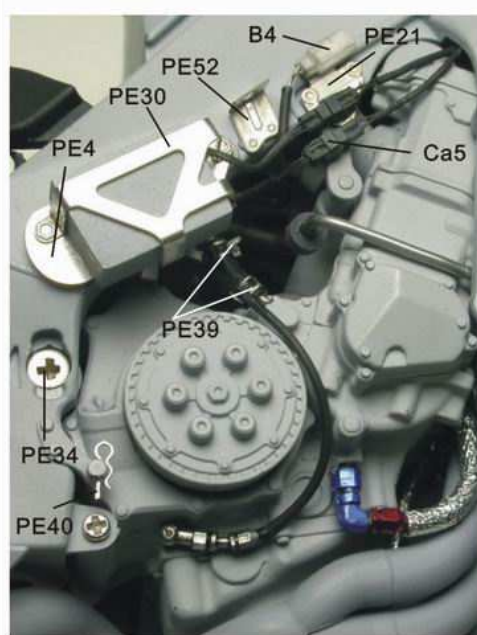

PE4

PE30

PE52

B4


PE21

Ca5

PE39


PE34

PE40

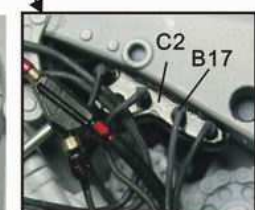

C2

B17

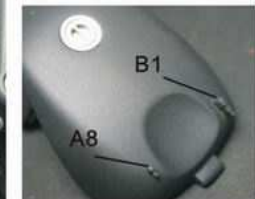

B1

A8



B2



安裝PE3,4,8時使用
TAMIYA A27,A26的圓柱子
When mounting PE3, 4, 8, use
Tamiya's A27, A26 rods

小接頭G1的配線選擇:

1. 0.2mm金屬線
2. 黑色流道加熱拉長(需自己制作)
3. 0.2mm金屬線+熱縮管
4. 0.4mm熱縮管


Small connectors G1 wiring options:

1. 0.2mm metal wire
2. black wire (use shrink tube to make)
3. 0.2 mm metal wire + shrink tube
4. 0.4 mm shrink tube



Ca5 電子插頭的制作方法

The making of electronic parts of Ca5

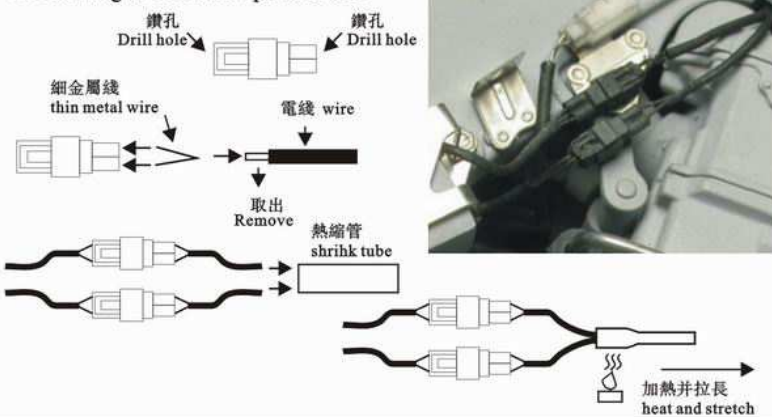

配線使用:

1. 0.5mm-0.6mm電線將樹脂接頭鑽孔後直接插入使用
2. 銀色油管，將管綫貼上鋁箔再用平銼壓出紋路
3. 熱縮管的使用：將熱縮管加熱並加長，可得到不同綫徑的綫段

Wiring usage:

1. Inserting 0.5 mm 0.6mm wire into a hole drilled electronic plug
2. For the silver cord, wrap the wire with silver metal foil. Use a flat file and press the foil surface to get the effect.
3. shrink tube usage: heat and stretch the shrink tube to get different thickness.


熱縮管 Shrink tube	加工範圍 Size
黑色管(細) Black (thin)	1.0mm~0.4mm
黑色管(粗) Black (thick)	1.3mm~0.5mm
透明管 Clear	1.5mm~1.0mm

Using the shrink tube:


熱縮管使用:

1. 將熱縮管均勻加熱，加熱後，熱縮管收縮（此時為收縮的最大直徑）

1. heat the shrink tube evenly, it will be shrunk (the tube now in the largest diameter)

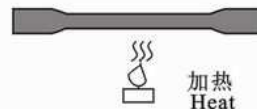


2. 待1~2秒後，將熱縮管拉長，可得到更小的綫徑，拉伸越長，綫徑越小。
2. after 1~2 seconds, stretch the tube, it will be shrunk more when stretch more

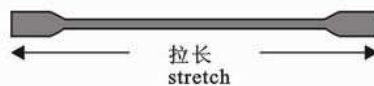

多股配綫制作:

Wiring in connector

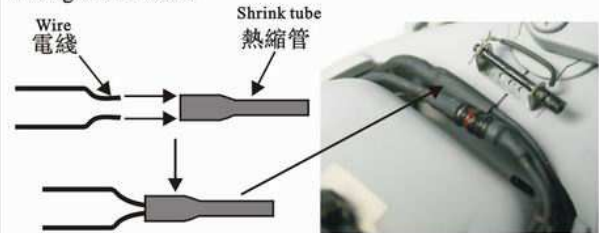

金屬部件

Metal Parts



其它部件:

Other parts:

- | | |
|------------------|-----------------------------|
| 蝕刻片A×1, B×1 | Photo-etched plate A×1, B×1 |
| 熱縮管×5 | Shrink tube×4 |
| 0.2mm金屬綫×1 | 0.2 mm metal wire×1 |
| 細金屬綫×1 | thin metal wire×1 |
| 0.8mm錫綫×1 | 0.8 mm solder line×1 |
| 0.5mm, 0.6mm電綫×2 | 0.5 mm, 0.6 mm wire×2 |
| 鋁箔貼紙×1 | silver metal foil sticker×1 |
| 黑色膠貼×1 | black band×1 |

樹脂部件

Resin Parts

