




1/35 MILITARY MINIATURE VEHICLE UPGRADE SERIES PE35779

Morden German T3 Transporter Bus

现代德国T3 运输面包车 改造件

[For TAKOM 2013]

推荐使用工具 RECOMMENDED TOOLS

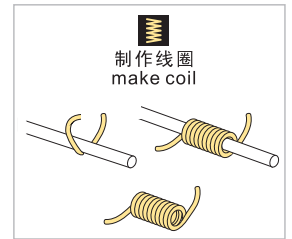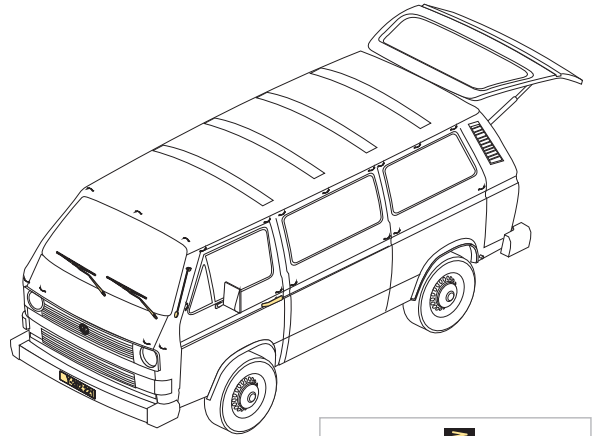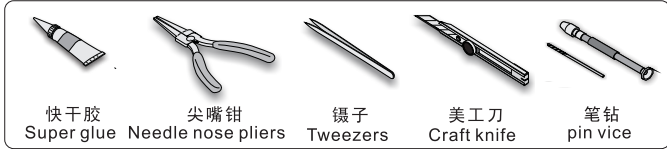





- 安装
install
- 折叠
bend
- A1**

改造件零件编号
PE/resin part number
- B12**





原零件编号
kit part number
- C22**

被替换的原零件编号
replaced kit part number
- 另一侧相同制作
repeat on opposite side
- 钻孔
drill
- 切除
remove
- 打磨
grind off
- 弧度卷曲
radial bending
- x2**

制作若干组
multiple assembly
- 选择安装
alternative
- 用尖端在凹槽处冲压
use penpoint to press on the dent

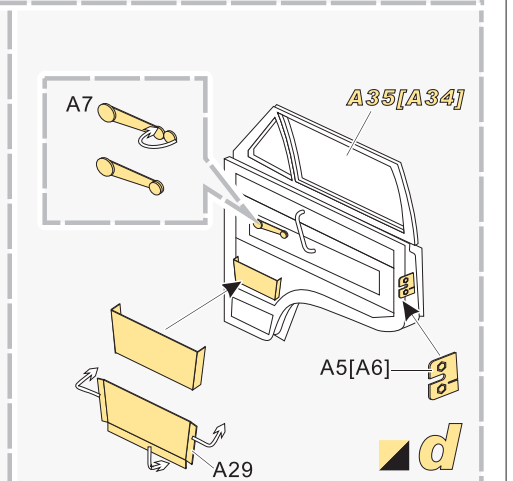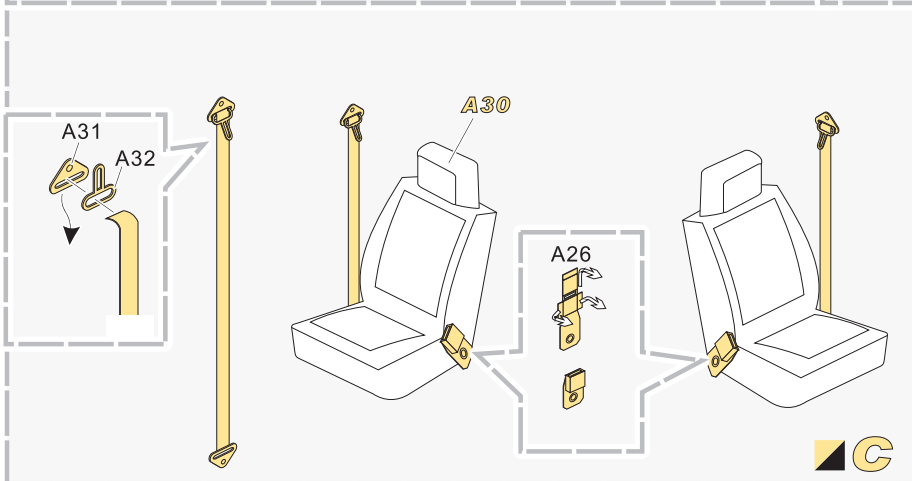
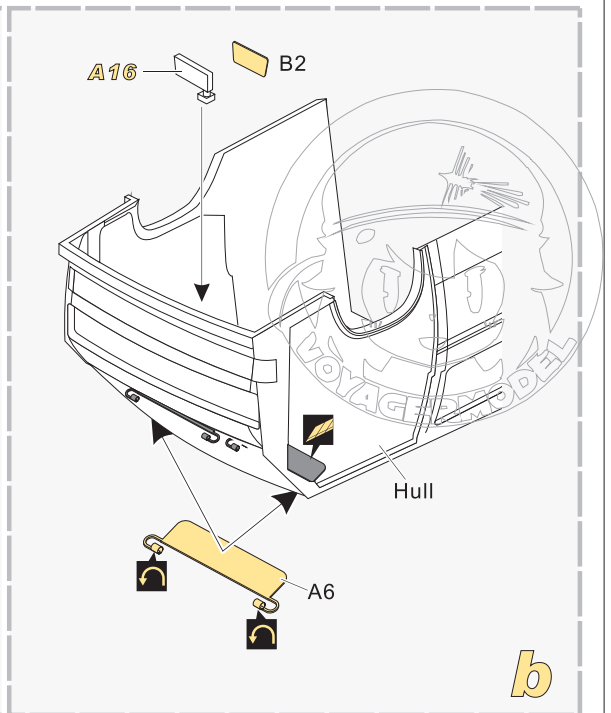
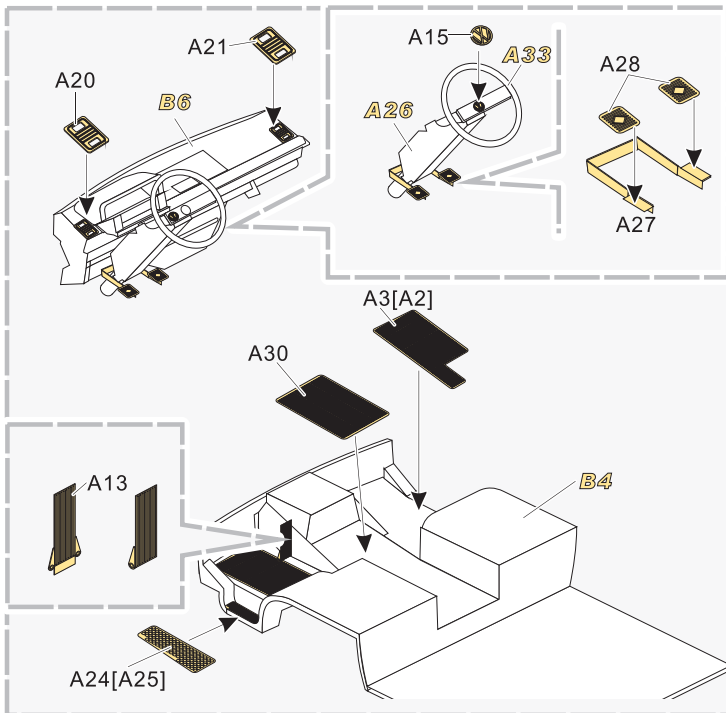


1/35 MILITARY MINIATURE VEHICLE UPGRADE SERIES PE35779

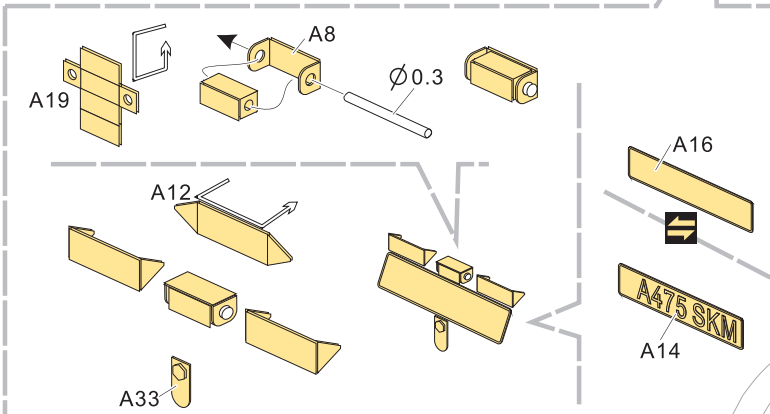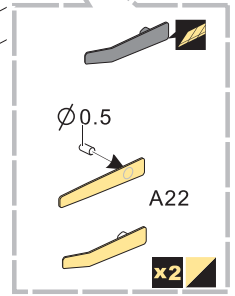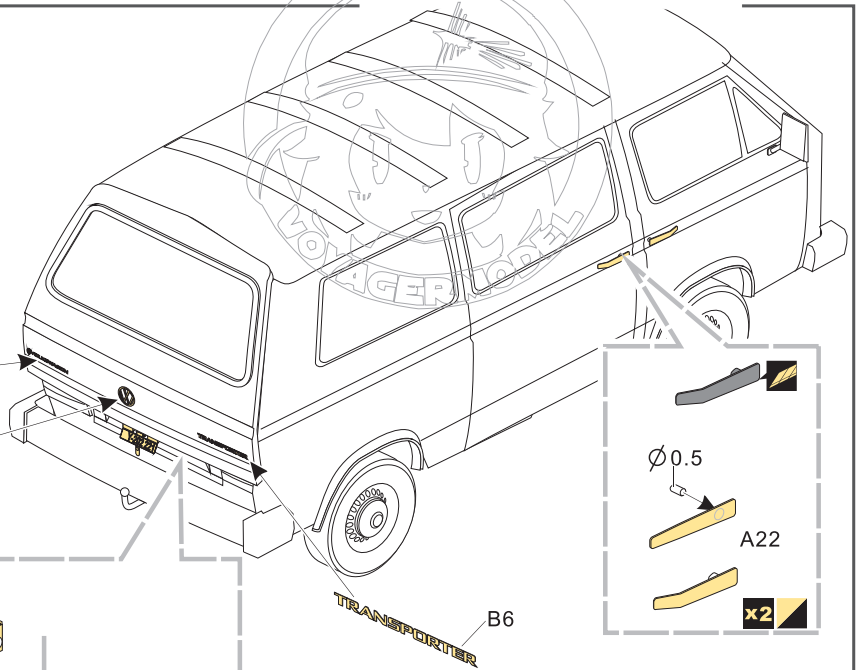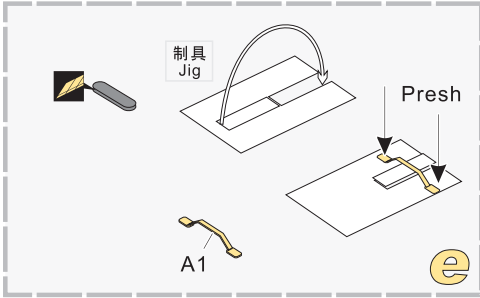

VOYAGERMODEL® 无微不至 极尽享受
The Best Upgrade Solution

Recommended item	
PE 35699	Modern German PzH2000 SPH basic(atenna base include)
PE 35778	Morden German T3 Transporter Trucks
PE 35774	Modern German Leopard 2A4 Basic
PE 35784	Modern German PzH2000 SPH w/ADD-ON Amoured basic(atenna base include)
PE 35781	Morden German SpP22 Luchs A1 Basic
PE 35782	Morden German SpP22 Luchs A2 Basic

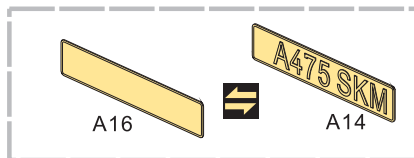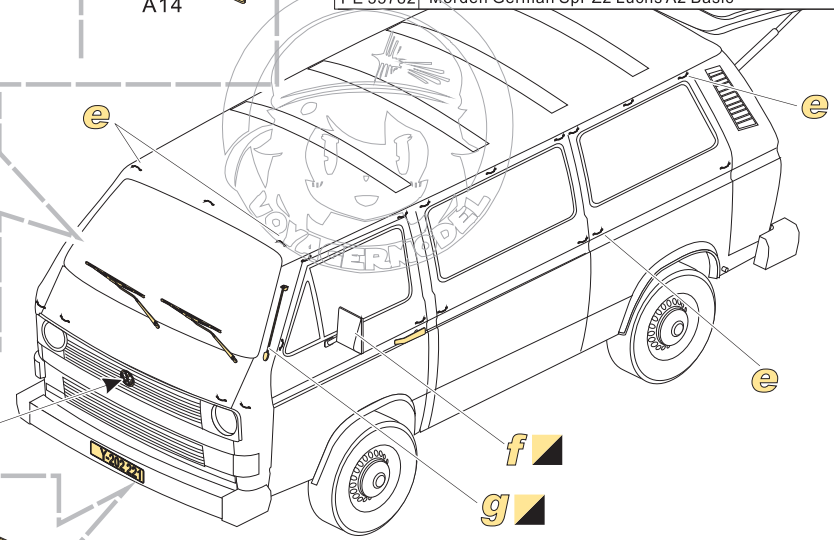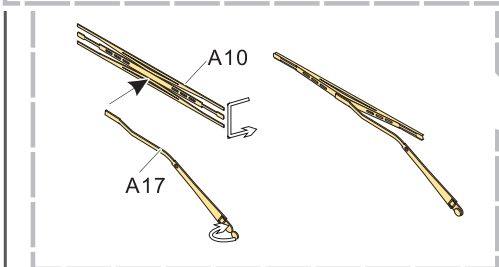

**VOYAGER
MODEL**



更多PE35779样品照片参考请扫一扫
MORE PICTUER OF PE 35779
REFERENCE SCAN HERE

