1:35 SCALE

Polish PT-76B Amphibious Tank

波兰 PT-76B型 水陆坦克

READ BEFORE ASSEMBLY:

- Study and understand these instructions thoroughly before beginning assembly
- When needed, remove photo-etch parts carefully using a modeling knife or photo etch sprue cutter, being careful not to damage or lose small parts.
- Take extra care in handling photo etch parts in order to avoid injury
- Apply instant cement sparingly to photo etch parts where instructed
- Tools recommended(not included in kit):Plastic and instant cements, sprue cutters,long nose pliers,modeling knife, small files, tweezers, pin vise & scissors. Soft cloth and sandpaper will also assist in construction
- Glue and paint are not included in the kit. Use plastic cement and hobby paints only. Color guide for purchasing paint is included in the kit.

装配之前仔细阅读

- 小心用模型锉刀锉平所有零件表面的注射浇口。
- 小心用刀片切下蚀刻片零件，不要遗失小零件。
- 用强力快干胶水粘合蚀刻片零件和金属轴。过量快干胶水使用可能导致可动零件会粘住，小心涂胶。
- 取蚀刻片时应特别注意安全，防止利边划伤手指。
- 某些零件表面需贴上水贴纸，请选择在装配的同时进行。
- 推荐模型工具(自备)：胶水，水口剪刀，长咀钳，刀片，锉刀，镊子，钳，钻，剪刀，瞬间快干胶。
- 软布同砂纸同时也应该是必备工具。
- 请使用塑料胶水和油漆，模型内不含。

贴纸 **Decal**	锉平 **File / Sand**	选择 **Option**	不涂胶水 **No cement**	弯曲 **Bend**
使用强力胶 **Cyanoacrylate glue**	配重 **Weight**	钻孔 **Make hole**	切除 **Cut / Remove**	

水贴纸的使用：

1. 从水贴纸上剪下印花；
2. 将印花放入温水中浸10秒，然后放在干净布上；
3. 拿着印花纸板将印花移到模型上；
4. 手指蘸水将印花移到适当的位置；
5. 用软布轻压印花直至水干，汽泡消失。

DECAL APPLICATION

1. Cut off decal from sheet.
2. Dip the decal in tepid water 40°C for about 10 sec. and place on a clean cloth.
3. Hold the backing sheet edge and slide decal onto the model.
4. Move decal into position by wetting decal with finger.
5. Press decal gently down with a soft cloth until excess water and air bubbles are gone.
6. Allow decal to dry completely before handling model.
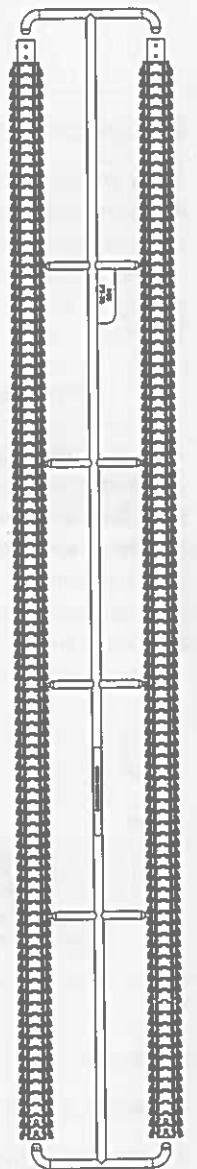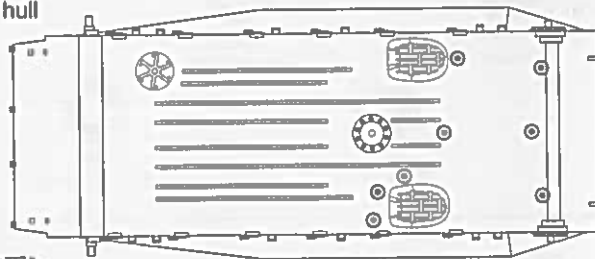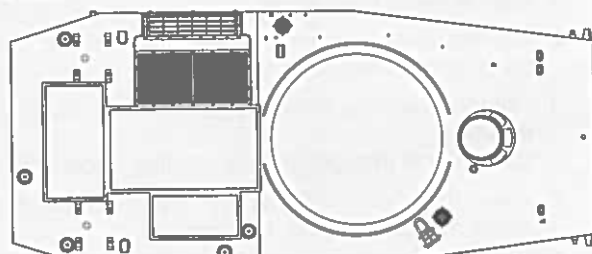
部品图 Parts
Ax2

A

D

E

F

《履带》
Tracks

B

《车底》
Lower hull

《车面》
Upper hull

《水贴》
Decal

4607

4607
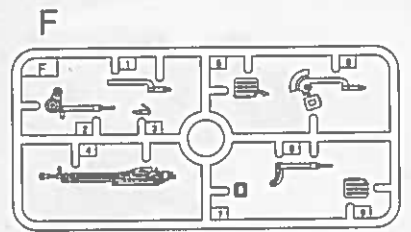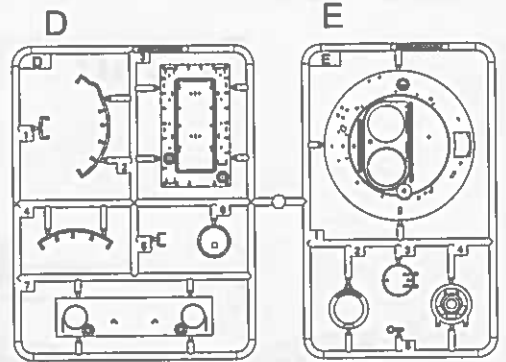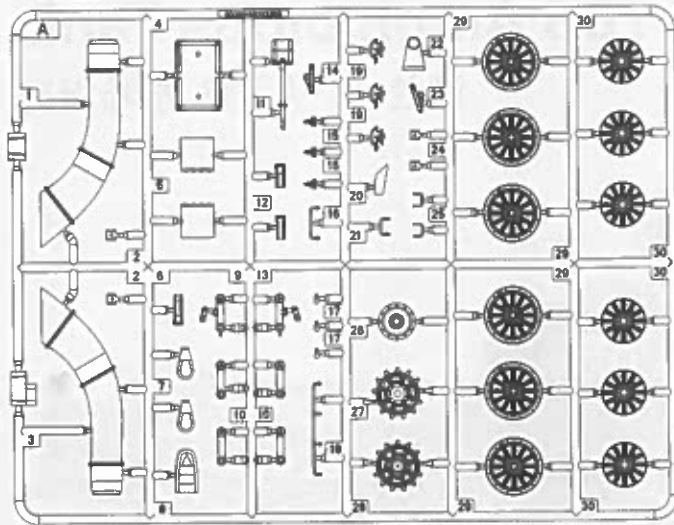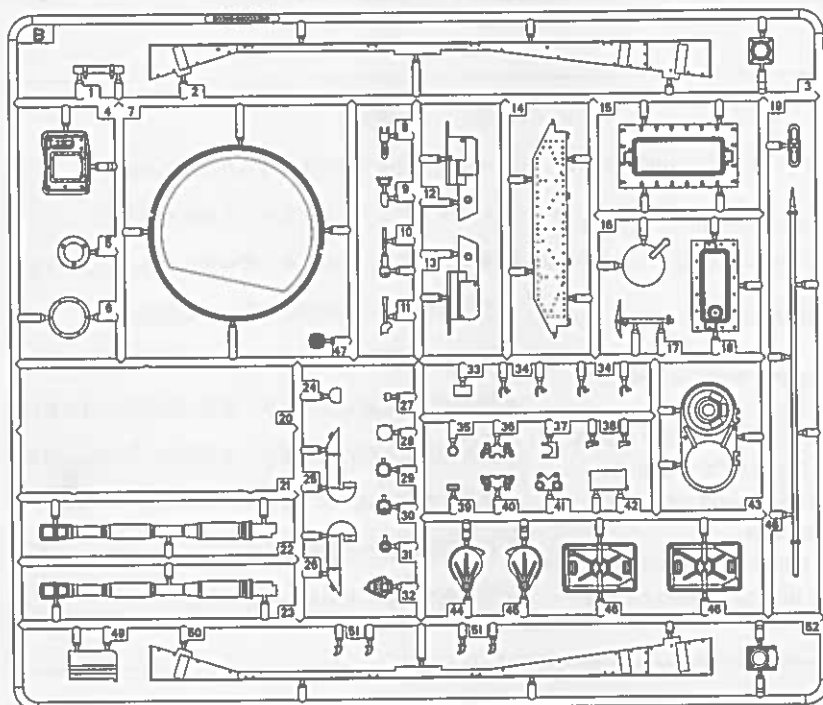
《蚀刻片》A
PE-A

《蚀刻片》C
PE-C

《棉绳》 Ø1x300mm
Rope

1 车轮组装
Wheels assembly

A30 — A29
A28 — A27
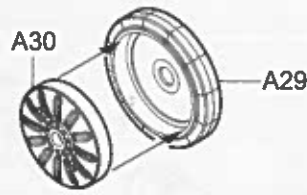
《负重轮》
Road wheel
制作12组
Make twelve
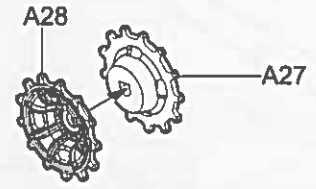
《主动轮》
Drive spocket
制作2组
Make two

2 悬臂安装
Attaching suspension arms

A13 A2
A10
A24
A13
A24
A2
A10
A2
A15
A9
A19
A2
A24
A15
A9
A24
A10

3 车轮安装
Attaching wheels

《负重轮》
Road wheel

《主动轮》
Drive spocket

《主动轮》
Drive spocket

A26

《负重轮》
Road wheel
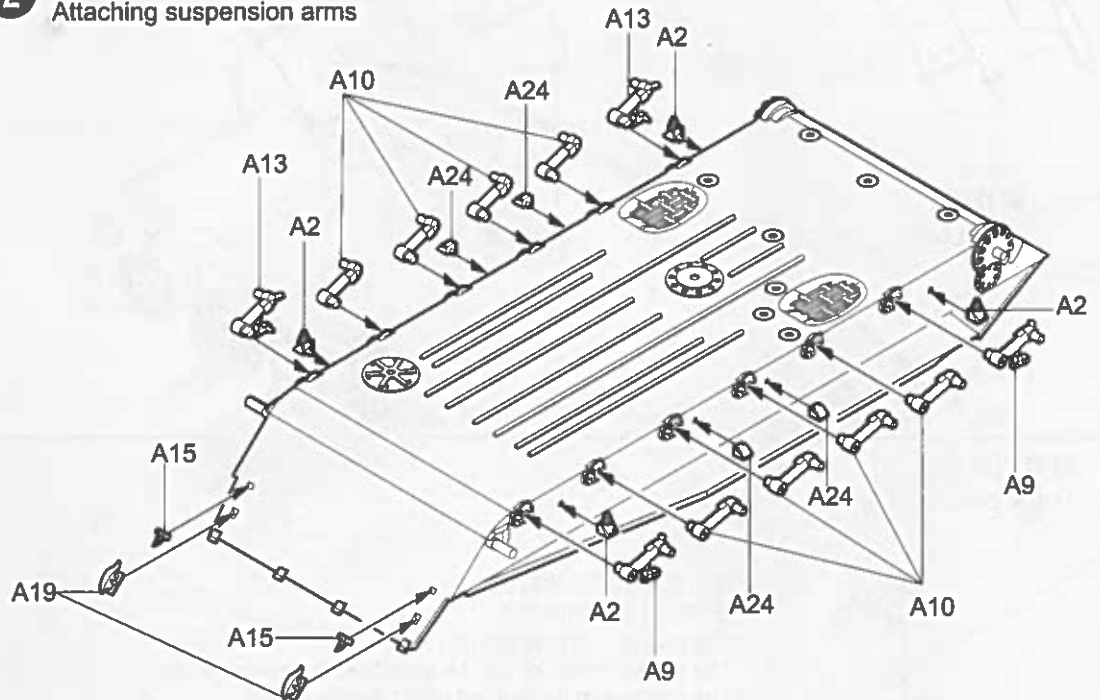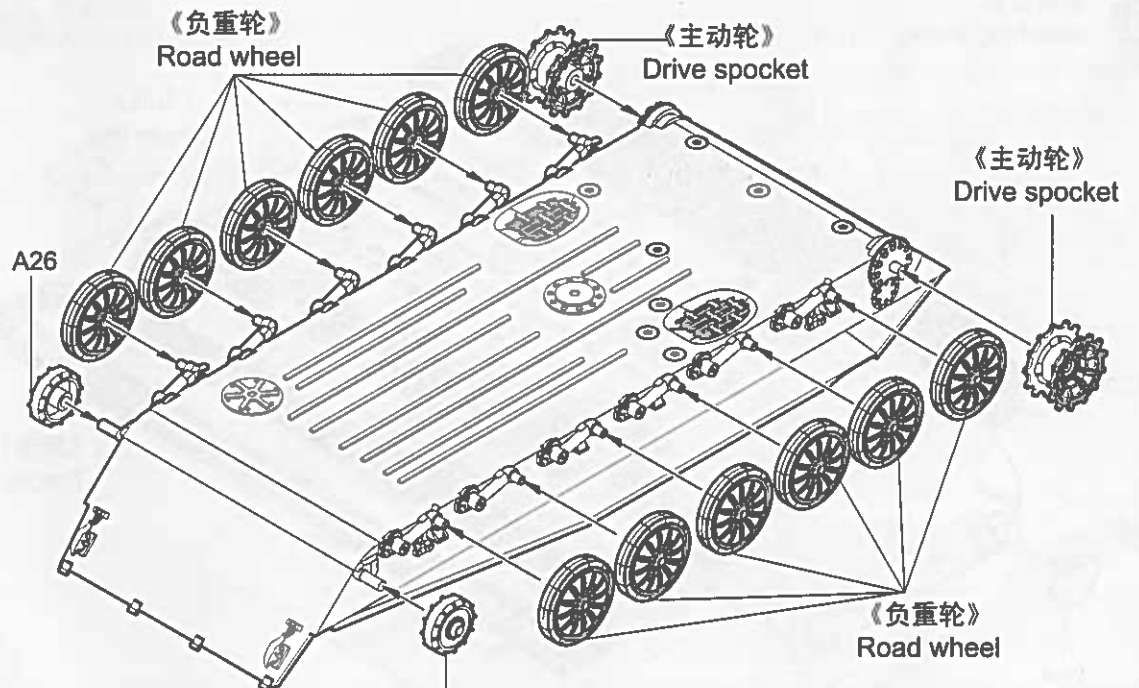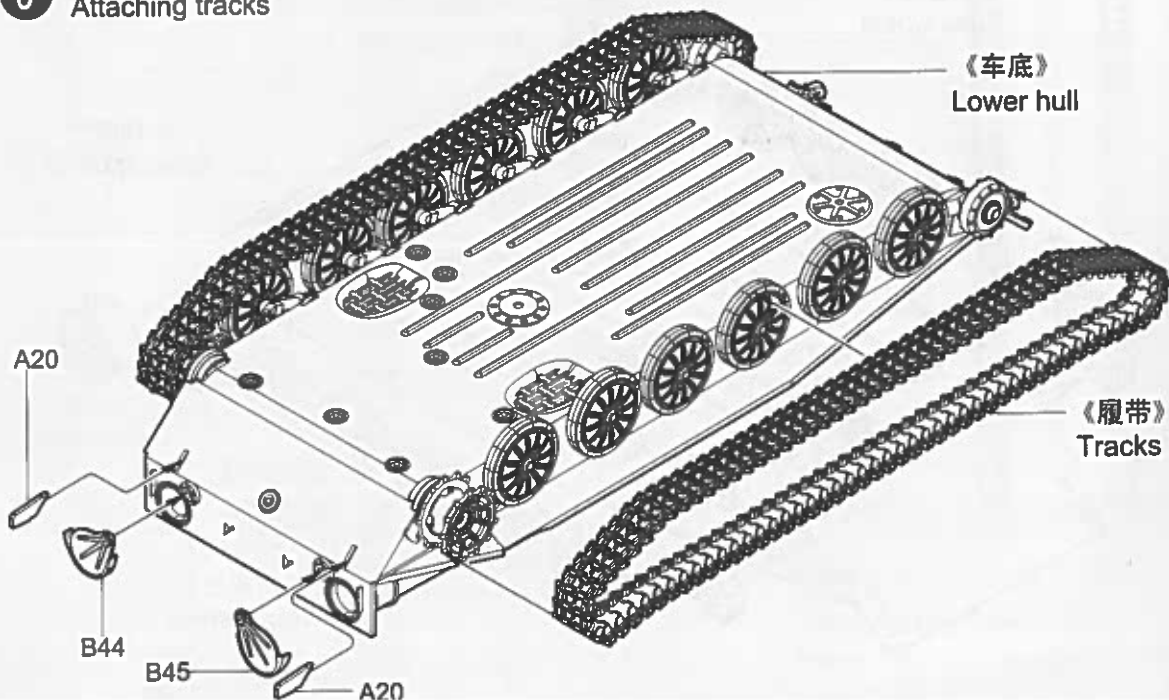
4 车底组装
Lower hull assembly
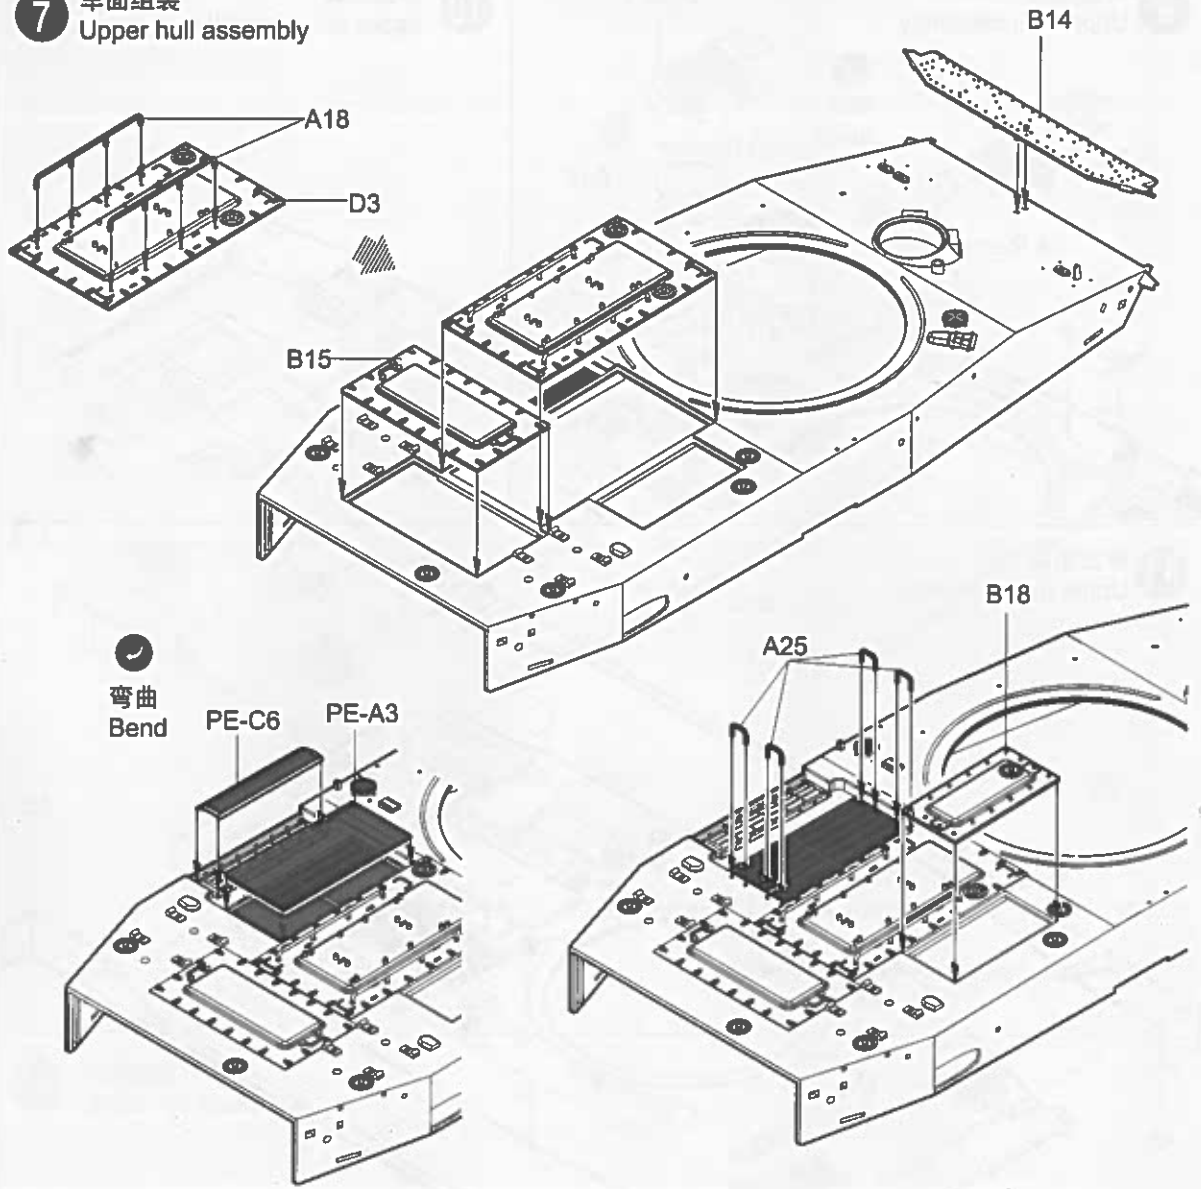
A1

A3

D7

制作2组
Make two
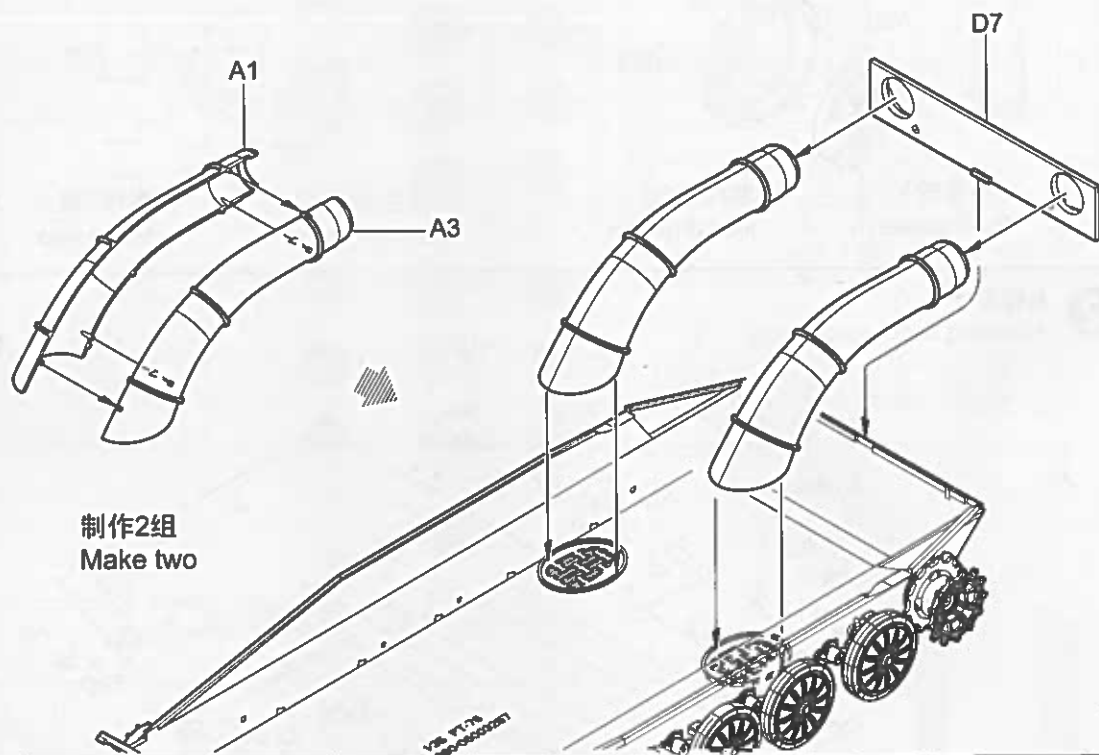
5 履带的联接
Track construction

*履带可用塑料胶水粘合。
*履带可用模型油漆喷涂。
*若履带断裂，用细丝线固定。
* The tracks in this kit can be glued using plastic cement.
* The tracks can be painted using plastic paints.
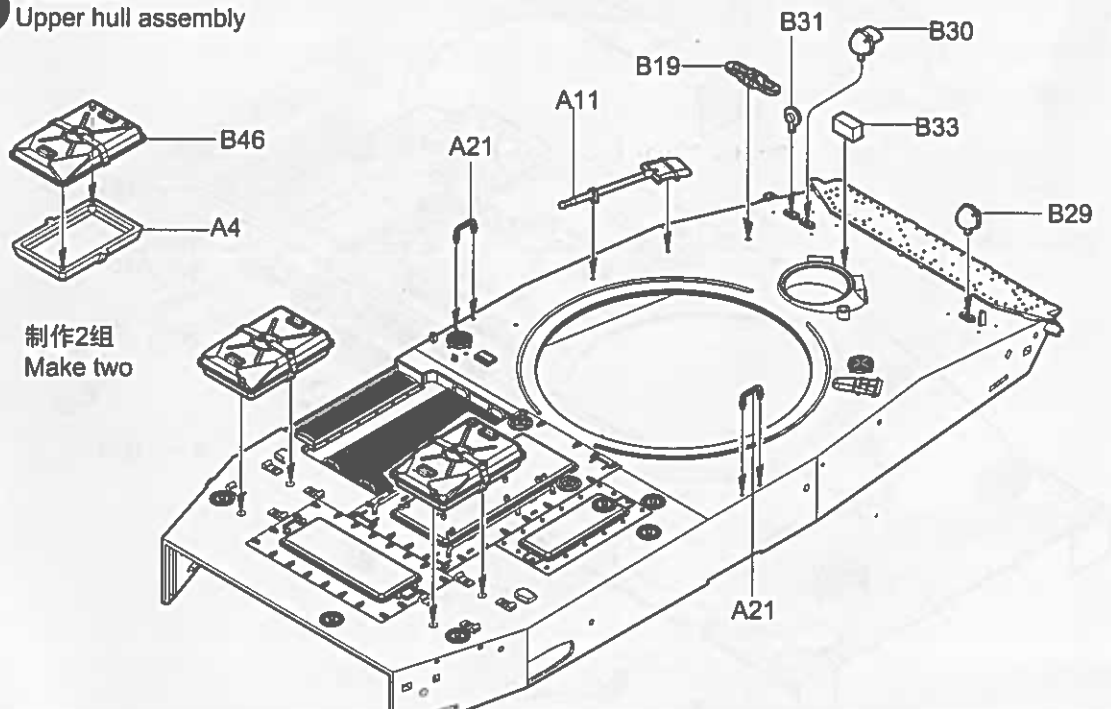* If track is broken strengthen with staples or thread.
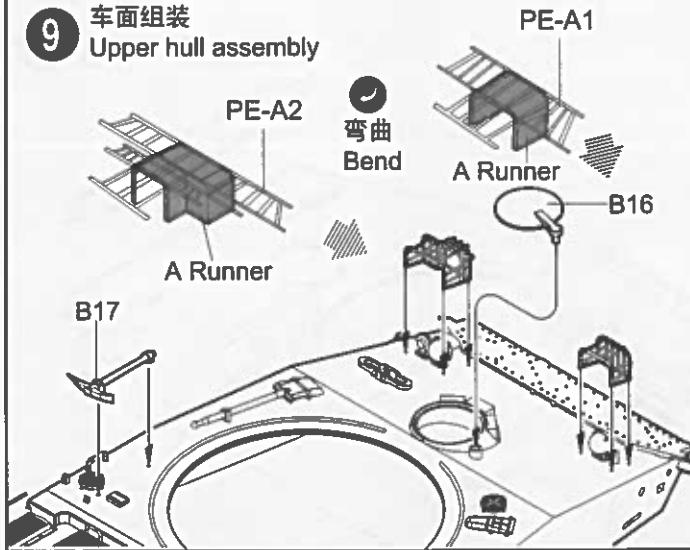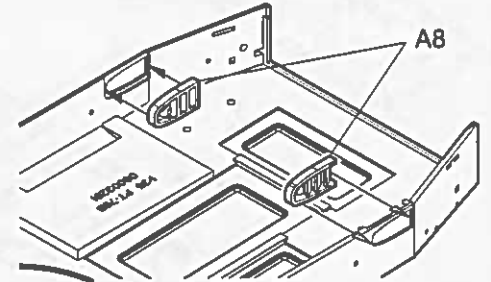
6 履带安装
Attaching tracks

《车底》
Lower hull

A20

《履带》
Tracks

B44

B45

A20

7 车面组装
Upper hull assembly

A18

D3

B14

B15

B18

A25

弯曲
Bend

PE-C6

PE-A3

8 车面组装
Upper hull assembly

B46

A4

制作2组
Make two

A11

A21

B19

B31

B30

B33

B29

A21

9 车面组装
Upper hull assembly

PE-A2

PE-A1

弯曲
Bend

A Runner

A Runner

B16

B17

10 车面组装
Upper hull assembly

A8

11 车面组装
Upper hull assembly

B50

A5

A5

A5

A5

B2

B48

A15

A19

A12

B34

B34

A17

A12

12 车面组装
Upper hull assembly

A16

B1

A17

A7

A7

A15

A19

制作2组
Make two
《棉绳》 ∅1x120mm
Rope

A7   A7

13 车面组装
Upper hull assembly

A6

A12

A17

B34

B34

A15

A12

A19

14 车面组装
Upper hull assembly

A23
A19
A15
A7
A17
A16
《棉绳》∅1x120mm
Rope
A7
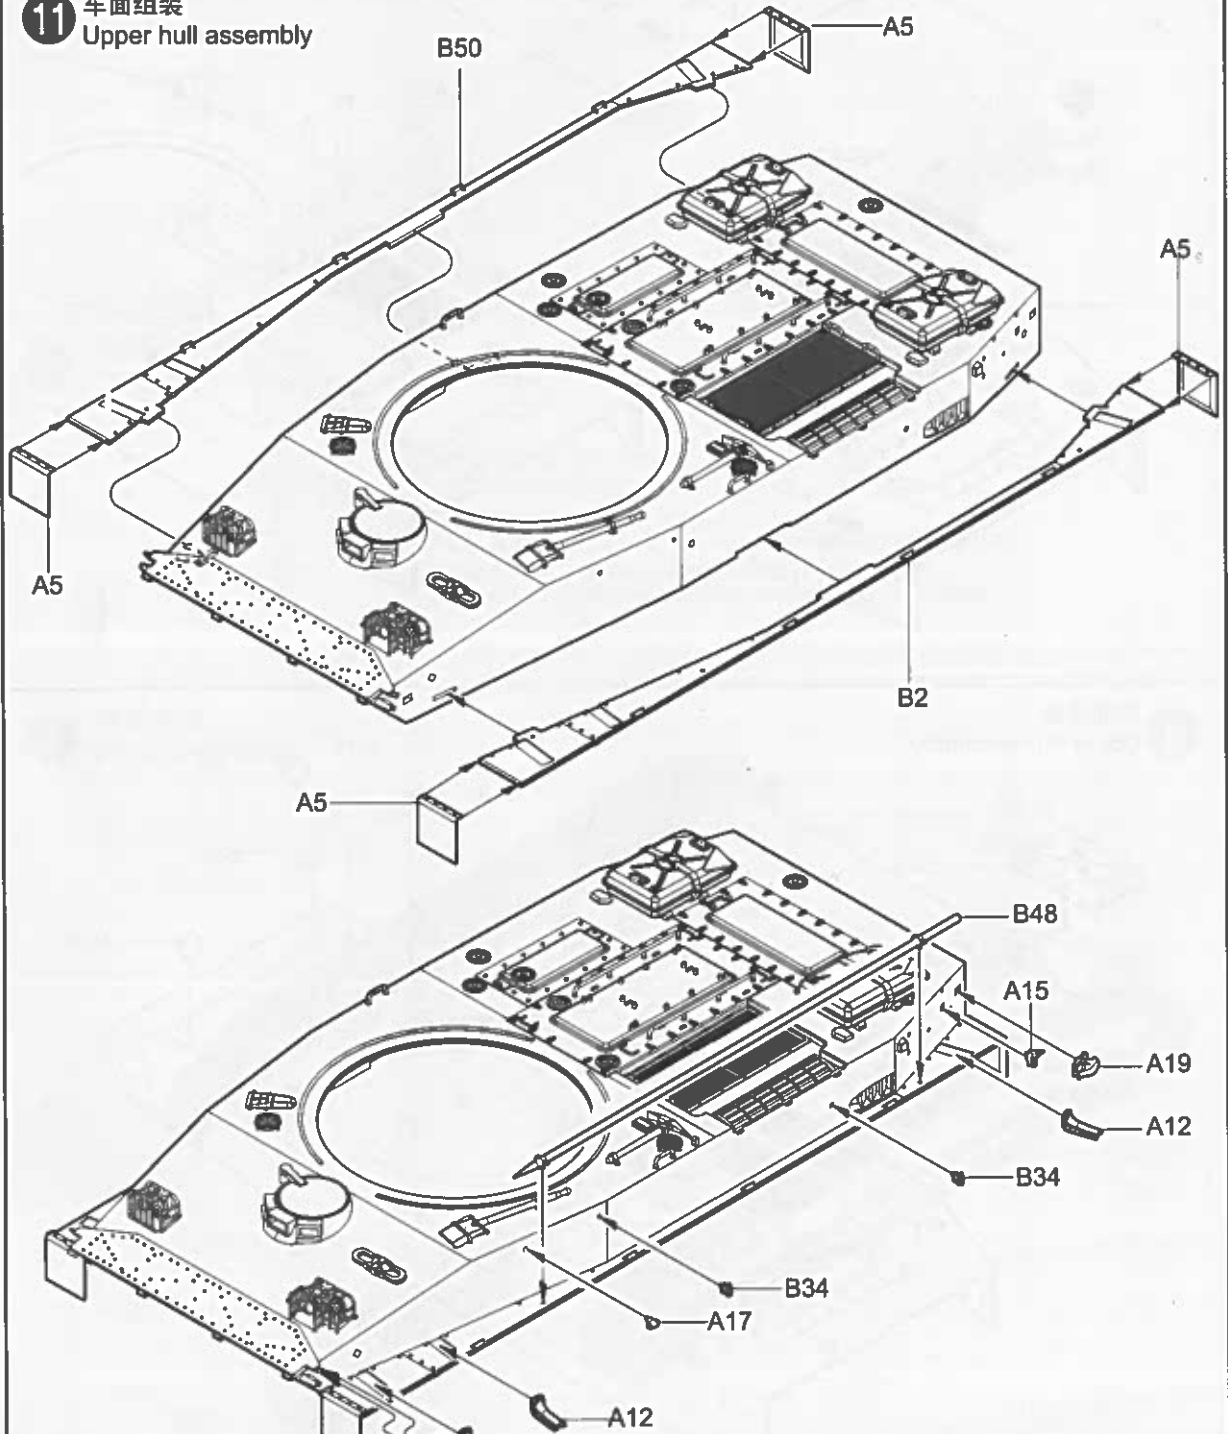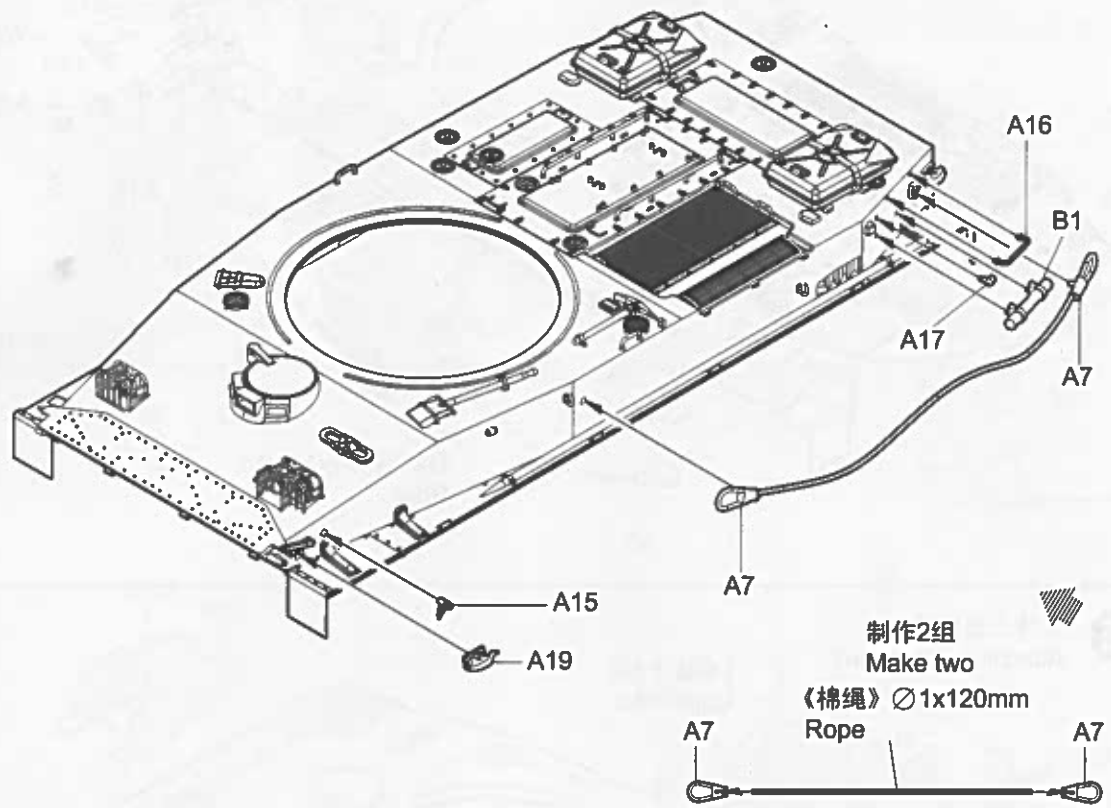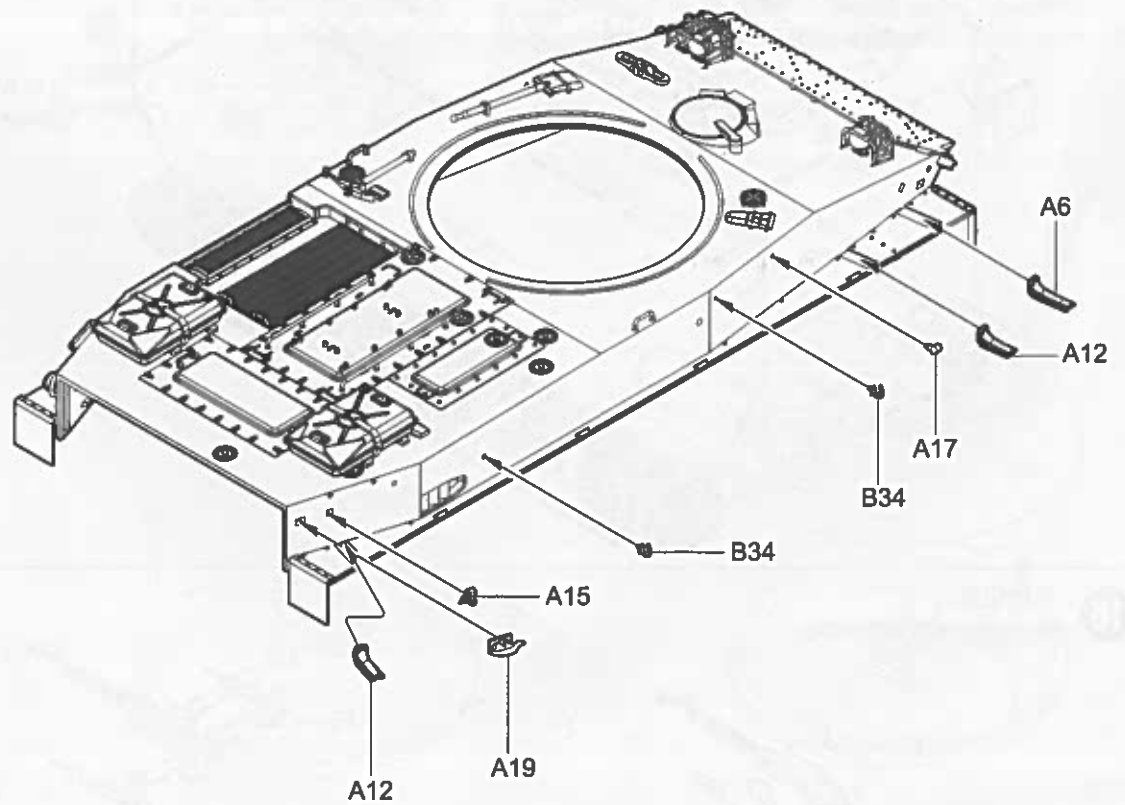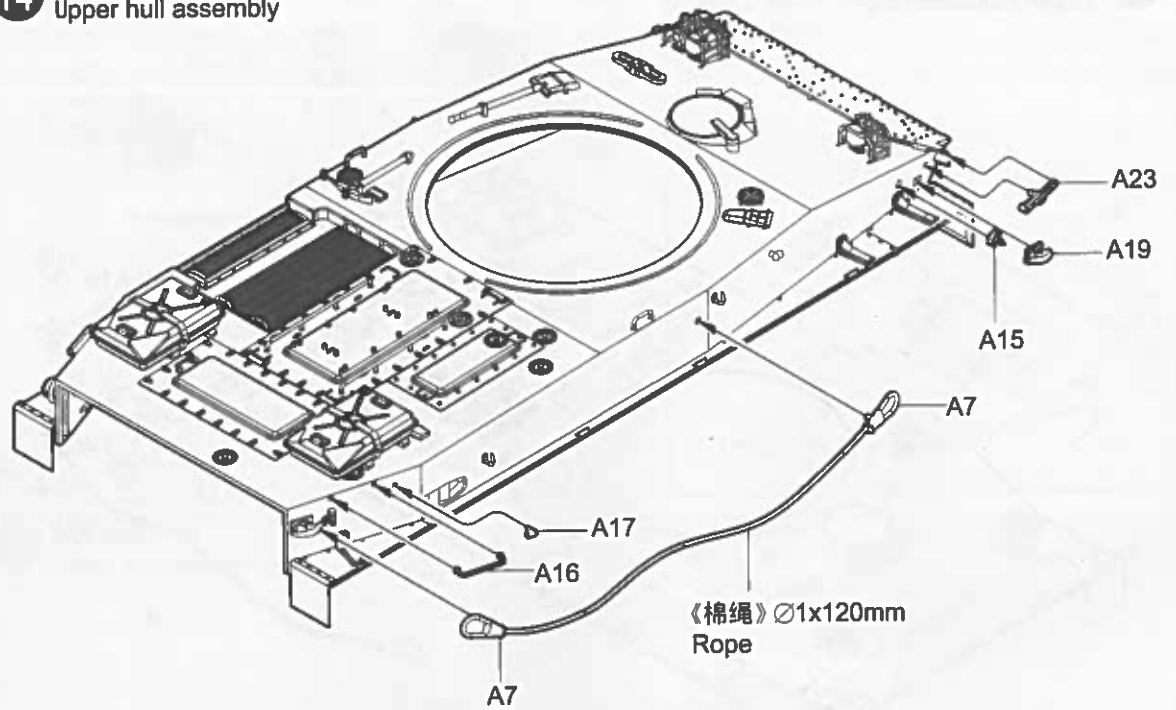
15 车体上部安装
Attaching upper hull

《车体上部》
Upper hull

《车底》
Lower hull

16 机枪组装
Maching gun assembly

F4
F7
F9
F5
F8
F1
F2

E4

B10

B51

E5

A17

E1

B51

B6

B38

B38

B51

B40

B36

B9

B47

B32

B24

E3

A17

D4

B51

B11

D1

B13

B12

B39

B27

B37

B49

E2

B35

B42

B5

?

《选择》
Optional

B41

D2

A22

A22

B7
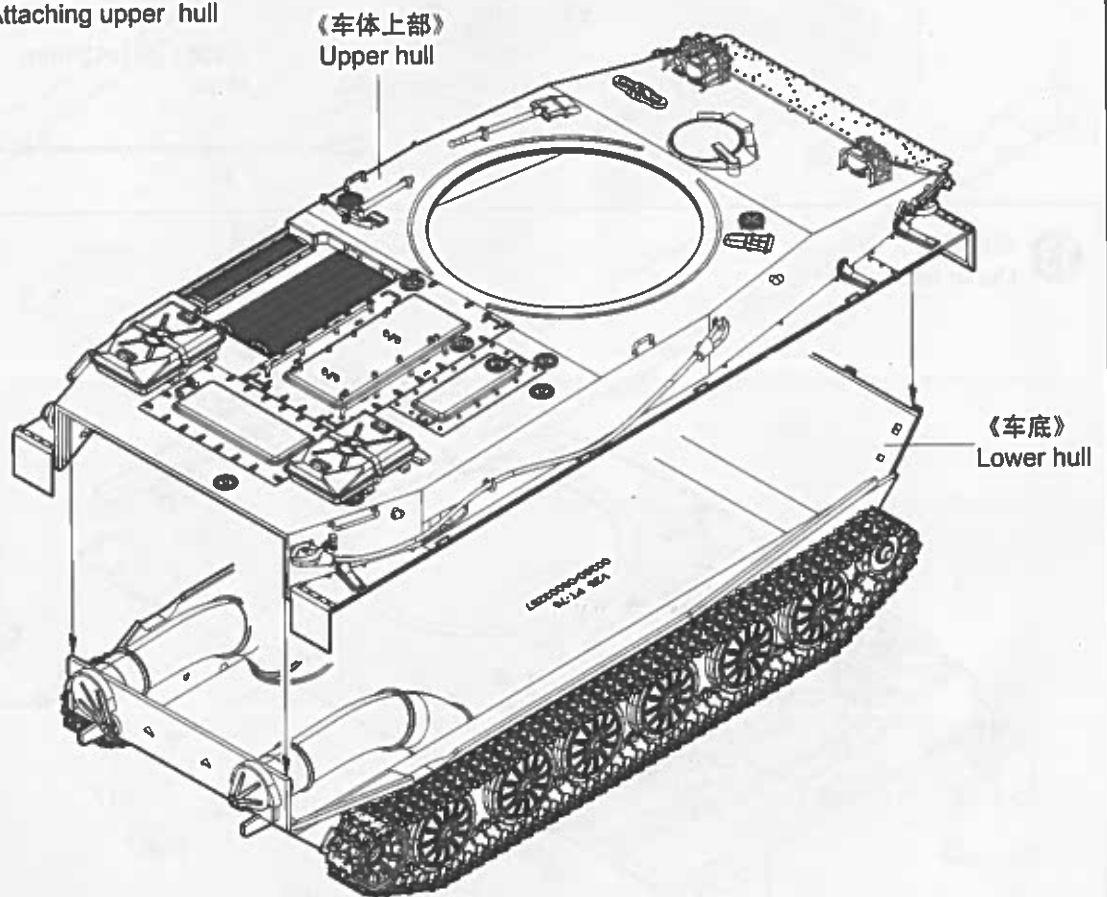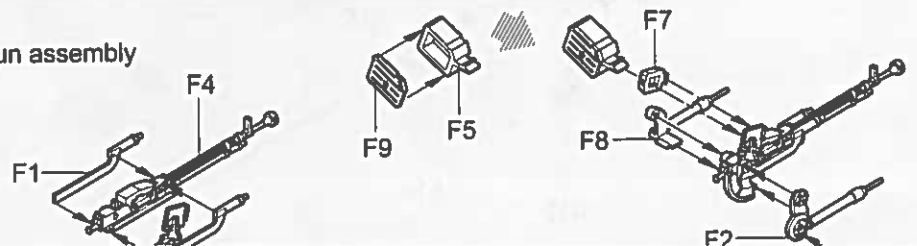
18 炮塔组装
Turret assembly

《机枪》
Maching Gun

B4

B52

B22

B23
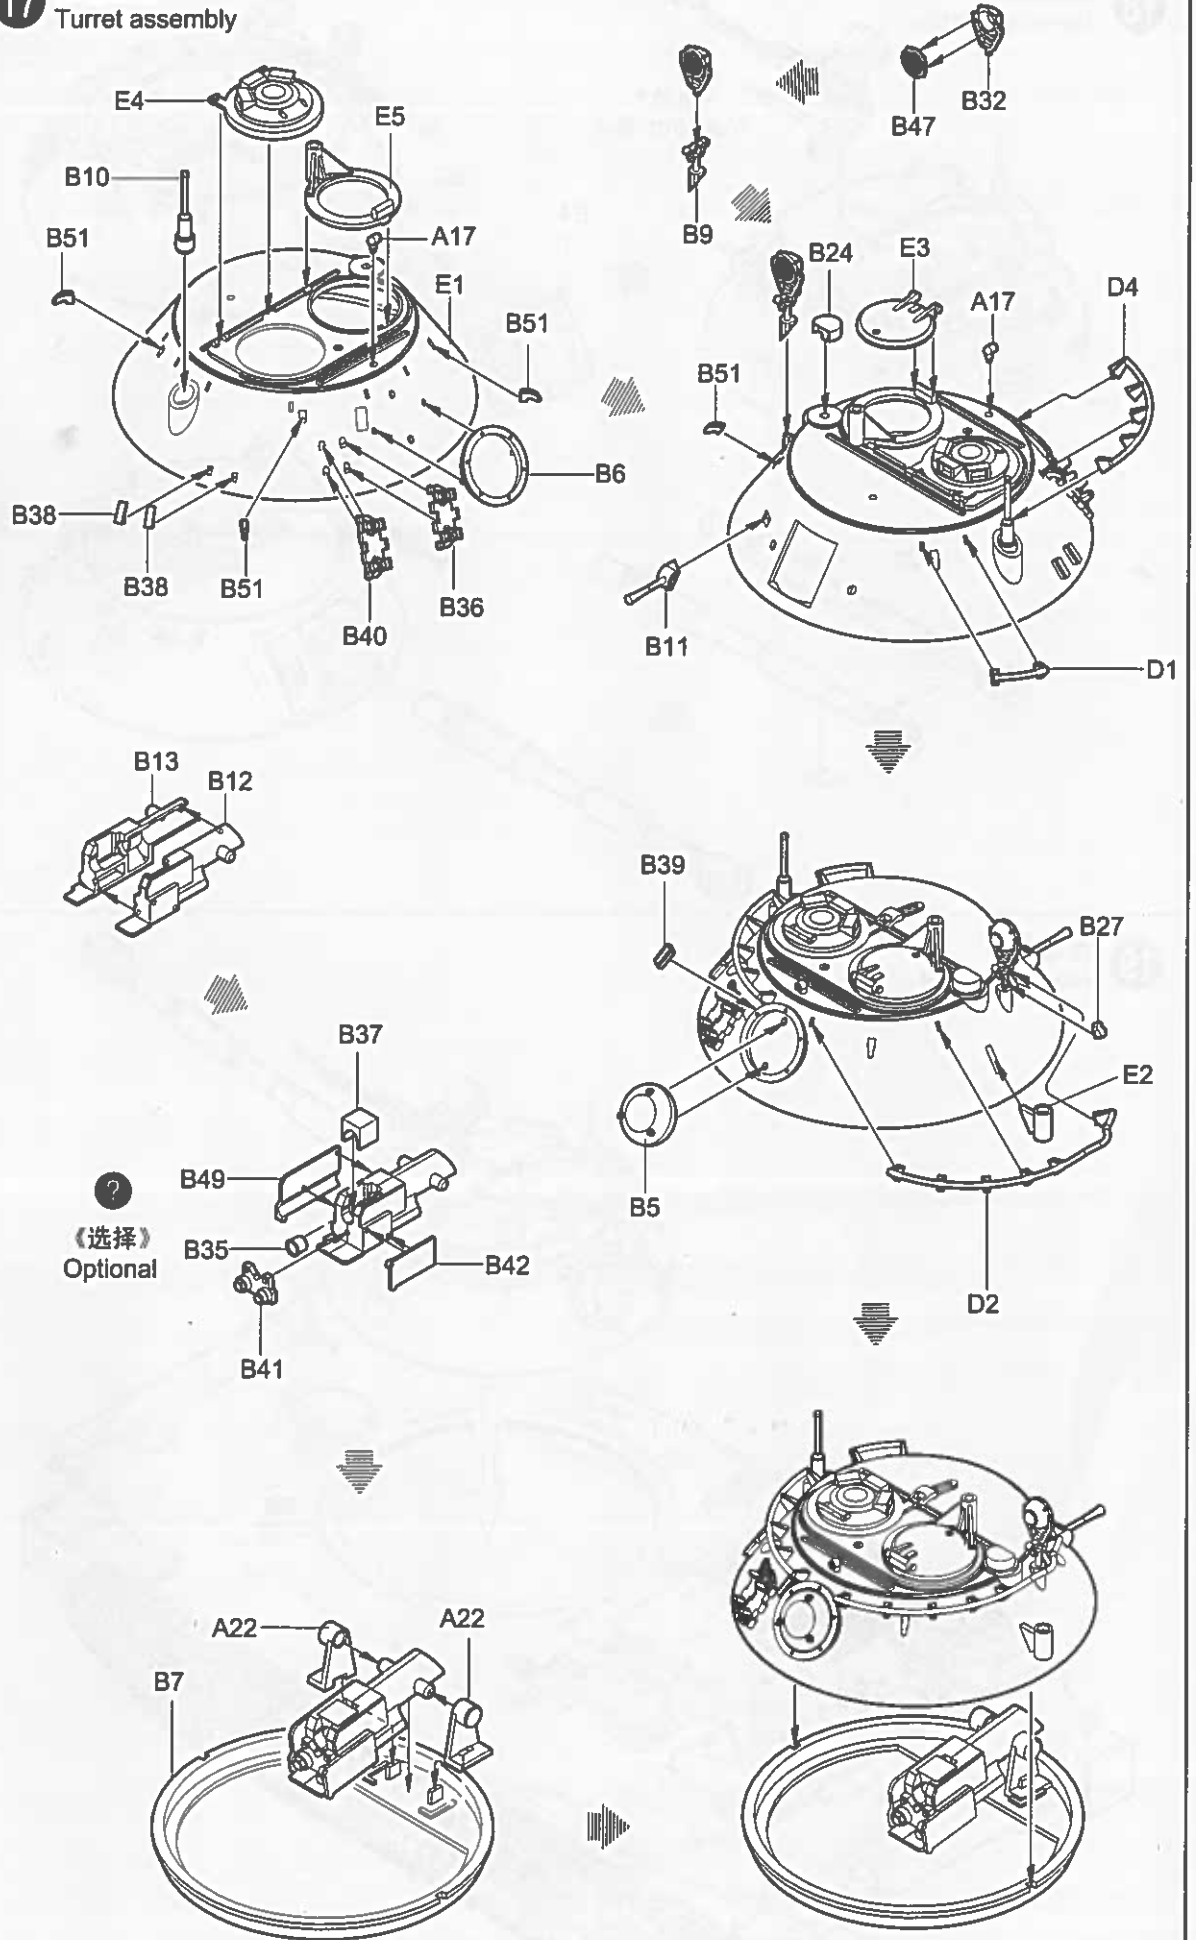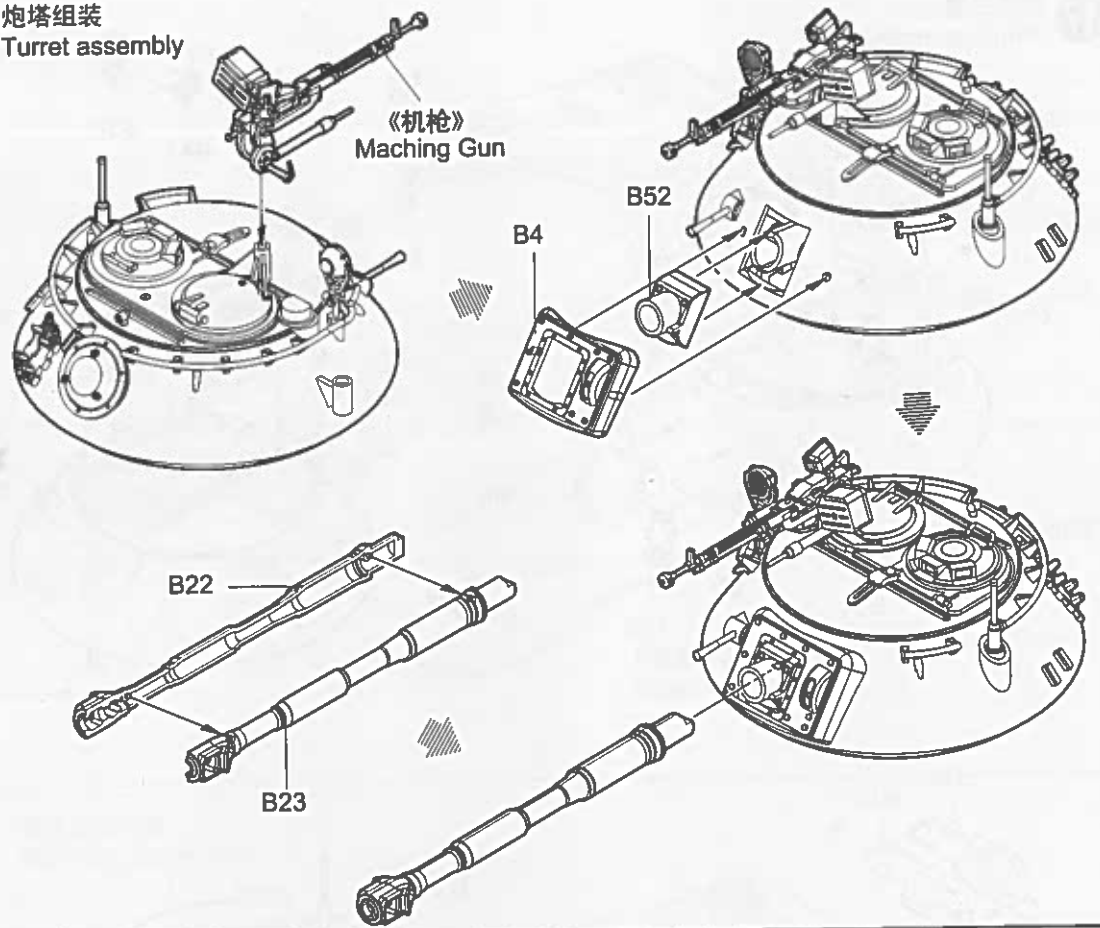
19 炮塔安装
Attaching turret