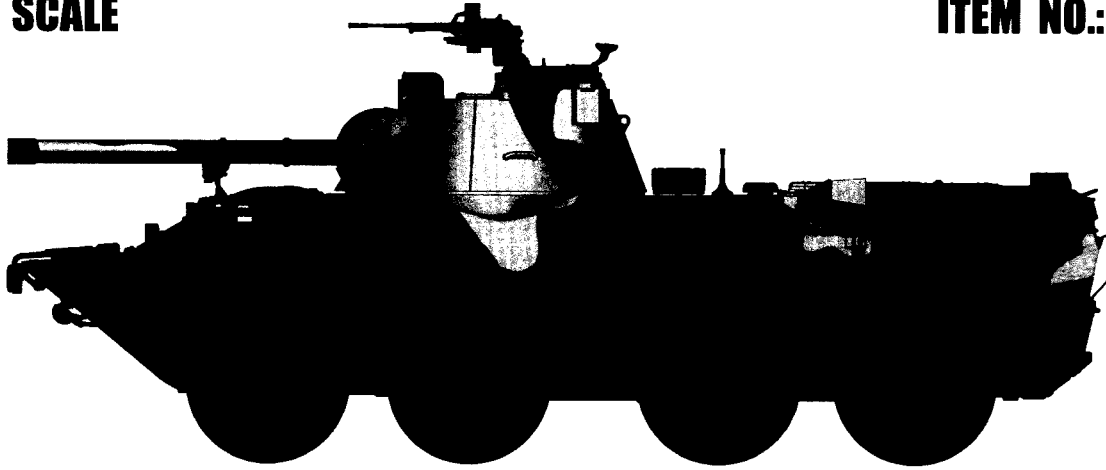# 2S23 Nona-SVK 120mm Self-propelled Mortar System

2S23"诺娜"-SVK 120mm自行迫榴炮

READ BEFORE ASSEMBLY:

- Study and understand these instructions thoroughly before beginning assembly
- When needed, remove photo-etch parts carefully using a modeling knife or photo etch sprue cutter, being careful not to damage or lose small parts.
- Take extra care in handling photo etch parts in order to avoid injury
- Apply instant cement sparingly to photo etch parts where instructed
- Tools recommended(not included in kit):Plastic and instant cements, sprue cutters,long nose pliers,modeling knife, small files, tweezers, pin vise & scissors. Soft cloth and sandpaper will also assist in construction
- Glue and paint are not included in the kit. Use plastic cement and hobby paints only. Color guide for purchasing paint is included in the kit.

装配之前仔细阅读

- 小心用模型锉刀锉平所有零件表面的注射浇口。
- 小心用刀片切下蚀刻片零件，不要遗失小零件。
- 用强力快干胶水粘合蚀刻片零件和金属轴。过量快干胶水使用可能导致可动零件会粘住，小心涂胶。
- 取蚀刻片时应特别注意安全，防止利边划伤手指。
- 某些零件表面需贴上水贴纸，请选择在装配的同时进行。
- 推荐模型工具（自备）：胶水，水口剪刀，长咀钳，刀片，锉刀，镊子，钳，钻，剪刀，瞬间快干胶。
- 软布同砂纸同时也应该是必备工具。
- 请使用塑料胶水和油漆，模型内不含。

| 配重 Weight	使用强力胶 Cyanoacrylate glue	钻孔 Make hole	切除 Cut / Remove	贴纸 Decal
锉平 File / Sand	选择 Option	不涂胶水 No cement	弯曲 Bend	先装 Install it first

水贴纸的使用：

1.从水贴纸上剪下印花；
2.将印花放入温水中浸10秒，然后放在干净布上。
3.拿着印花纸板将印花移到模型上；
4.手指蘸水将印花移到适当的位置；
5.用软布轻压印花直至水干，汽泡消失

DECAL APPLICATION

1.Cut decals from sheet as needed
2.Dip the decal in warm water for about 10 seconds and then place on soft clean cloth.
3.Hold the decal backing sheet edge and gently slide the decal onto the model in its proper position.
4.While still wet,decal can be adjusted for better fit on model by dampening it gently with your finger.
5.When placed in the proper position,gently press decal down with a soft cloth until excess water and air bubbles are gone.
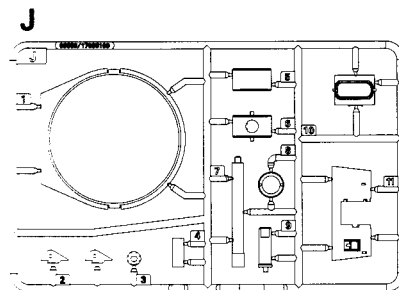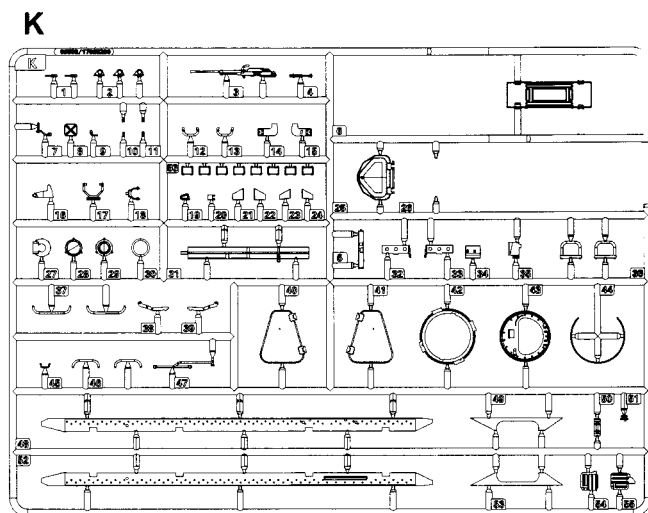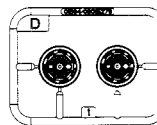6.Allow decal to dry completely before handling model

A×4

B×2

C×4

M

G

H
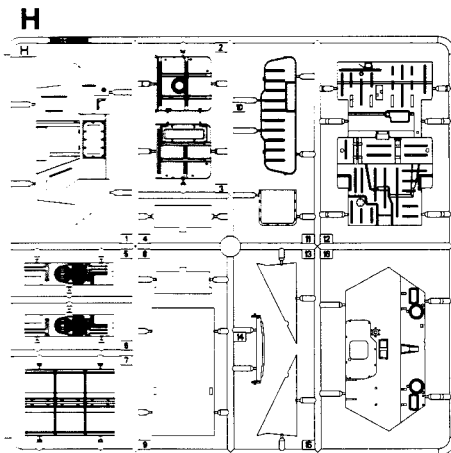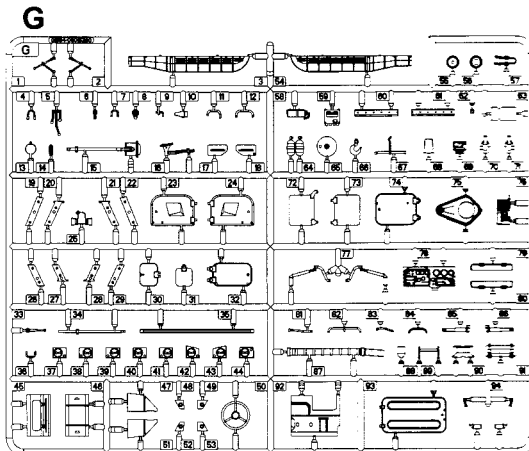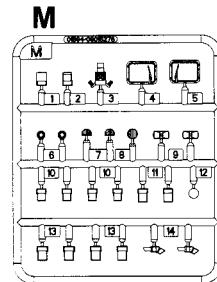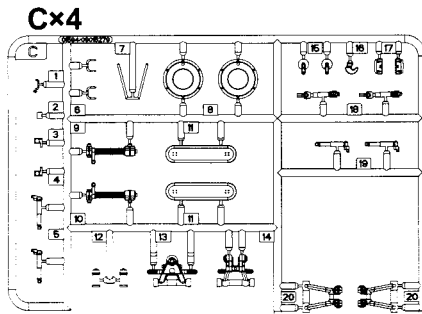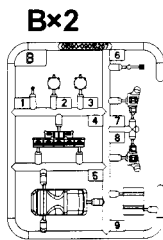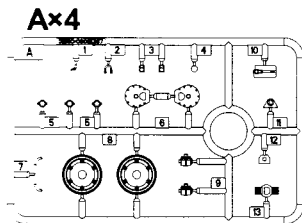
《聚乙烯套》
Poly cap

《轮胎》
Tyre x8

K

J

D×4

GP

铜缆
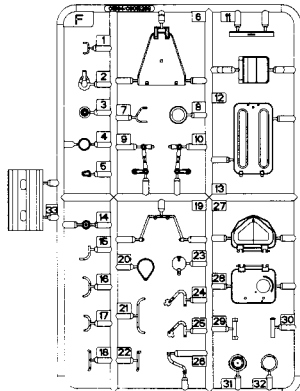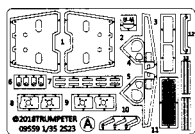Brass wire

车面
Upper hull
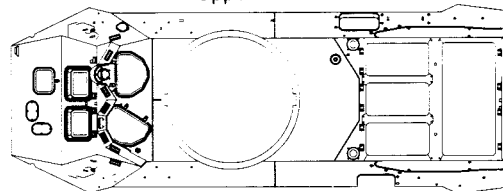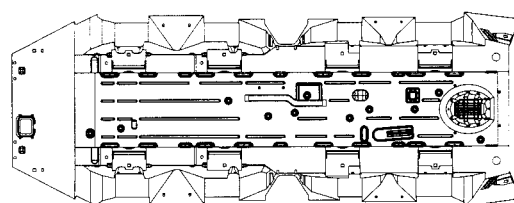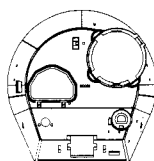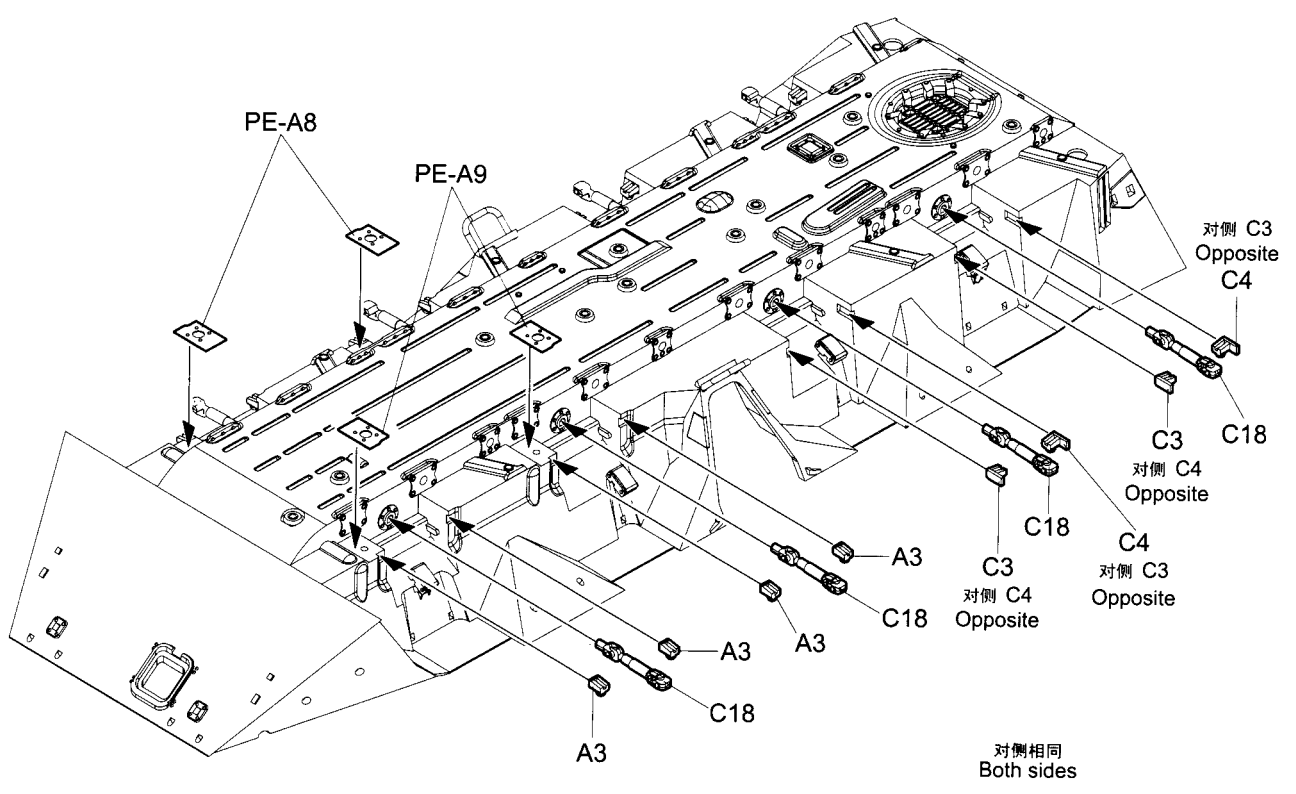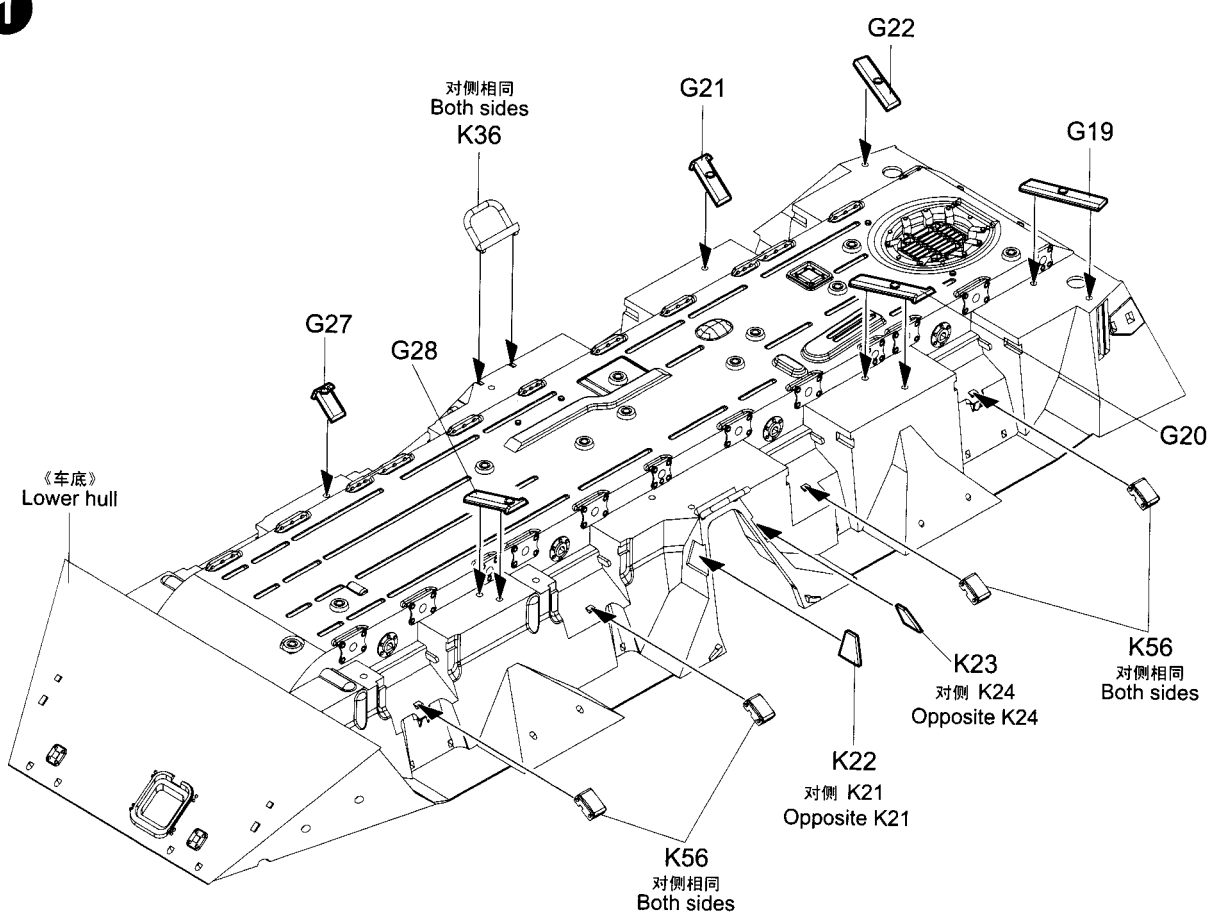
F×2

PE-A

《炮塔》
Turret

《水贴》
Decal

0 0 1 2 3 4 5 6 7 8 9 573 573

0 0 1 2 3 4 5 6 7 8 9

0 0 1 2 3 4 5 6 7 8 9

09559 1/35 2S23 Nona-SVK 120mm Self-propelled Mortar System

《车底》
Lower hull

1

G22

G21

G19

对侧相同
Both sides
K36

G27

G28

G20

《车底》
Lower hull

K23
对侧 K24
Opposite K24

K56
对侧相同
Both sides

K22
对侧 K21
Opposite K21

K56
对侧相同
Both sides

PE-A8

PE-A9

对侧 C3
Opposite
C4

C3
C18

C18

C4
对侧 C3
Opposite

C3
对侧 C4
Opposite

A3

C18

C4
对侧 C3
Opposite

A3

A3

C18

A3

对侧相同
Both sides

②

对侧 G29
Opposite G29
G26

对侧相同
Both sides

对侧相同
Both sides

A4

C14

制作4组
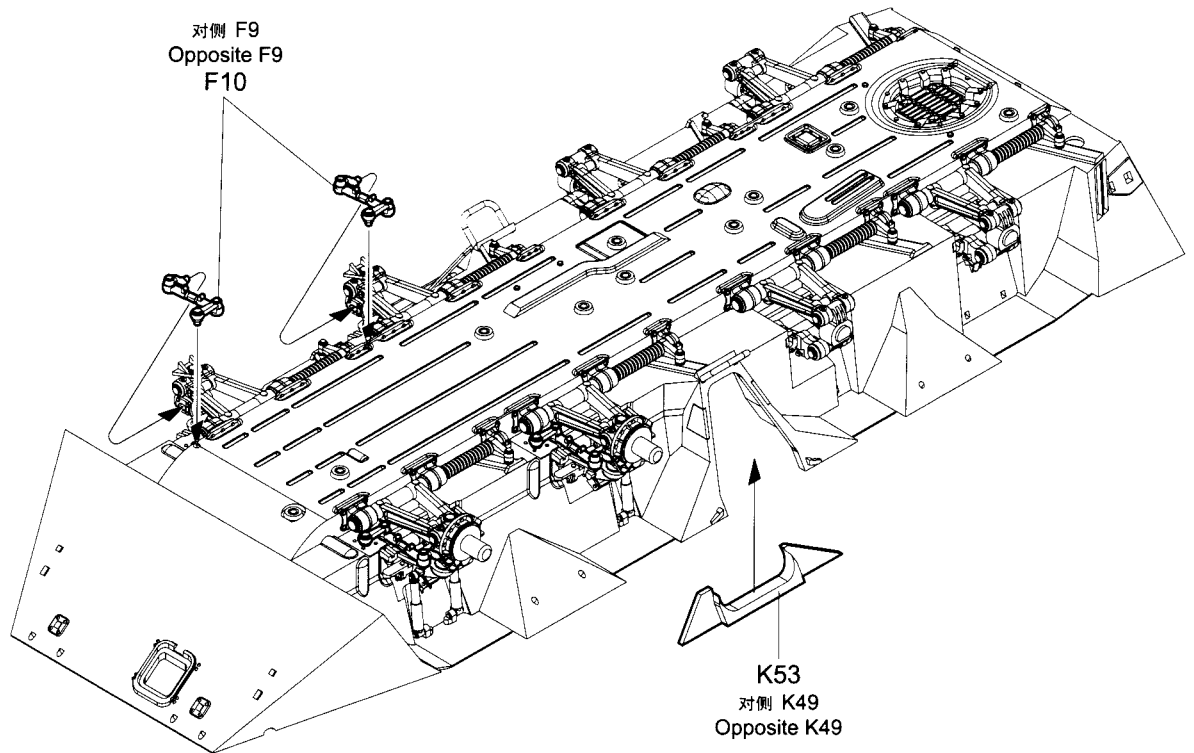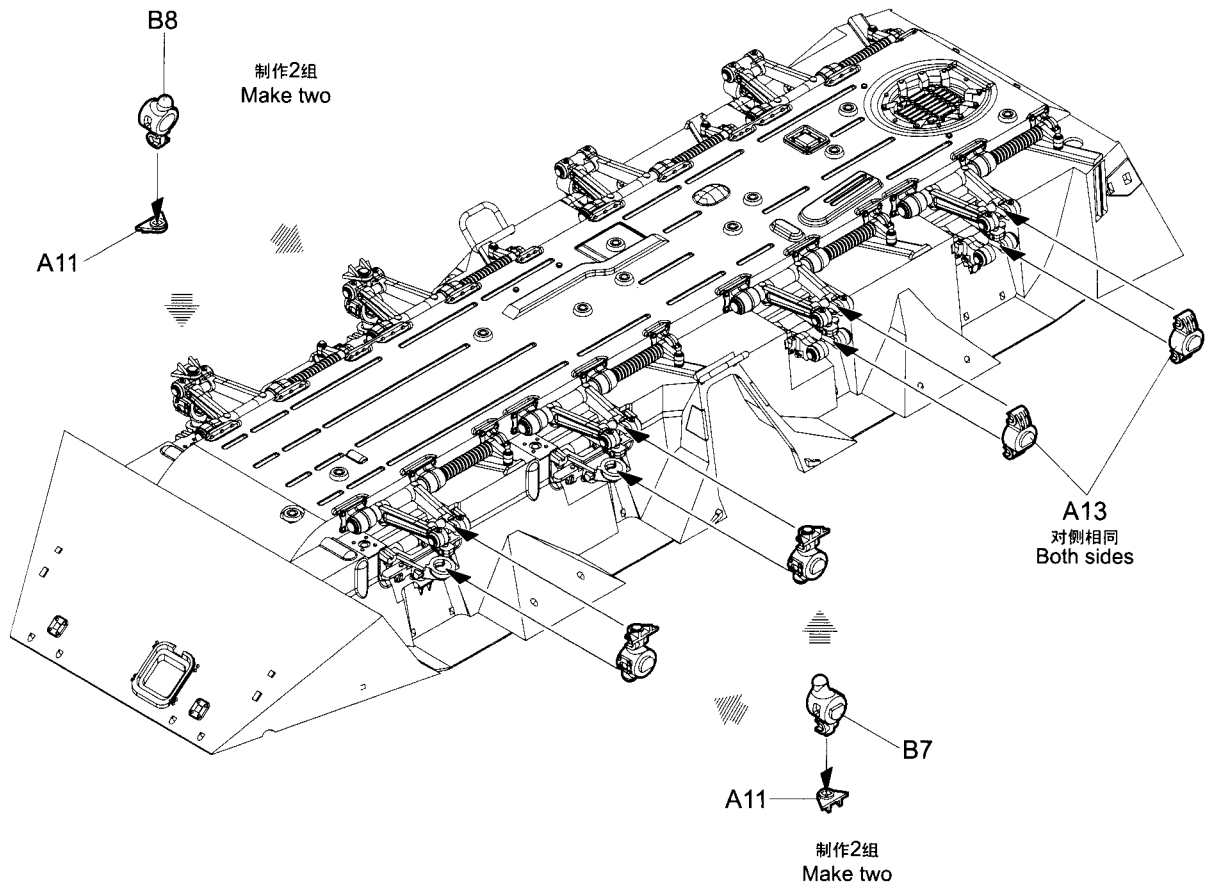Make four

C13
对侧相同
Both sides

H15
对侧 H13
Opposite H13

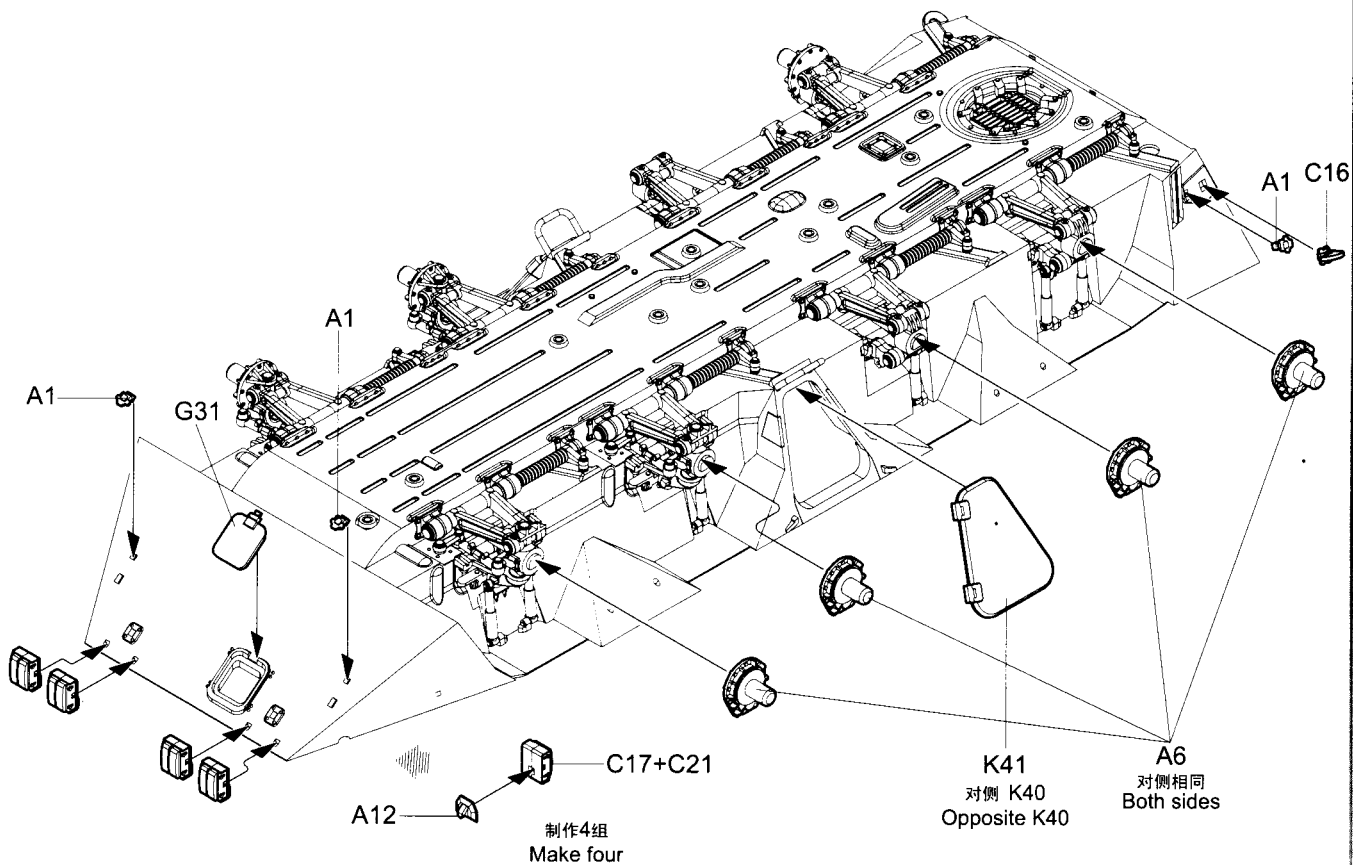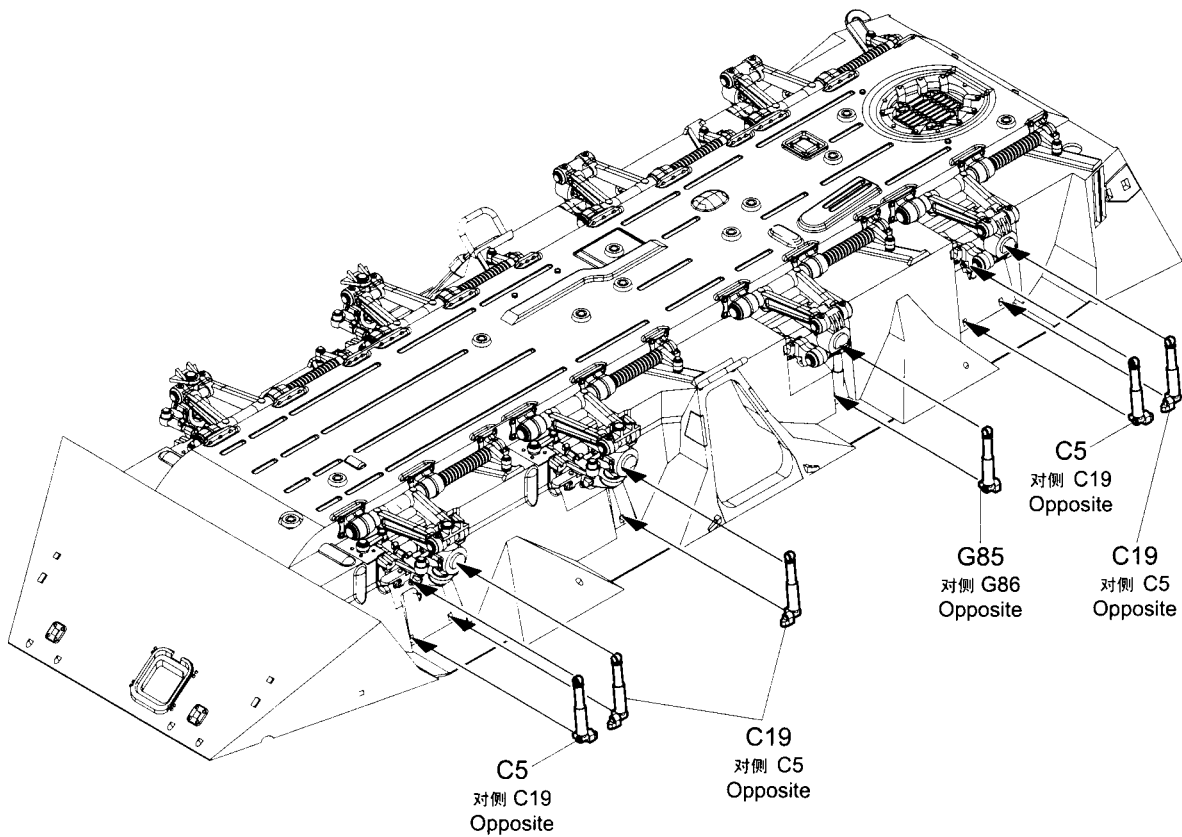C9

制作4组
Make four

C20

A9

C10

C20

A9

制作4组
Make four

09559

4

3

B8

制作2组
Make two

A11

A13
对侧相同
Both sides

B7

A11

制作2组
Make two

对侧 F9
Opposite F9
F10

K53
对侧 K49
Opposite K49

C5
对侧 C19
Opposite

G85
对侧 G86
Opposite

C19
对侧 C5
Opposite

C5
对侧 C19
Opposite

C19
对侧 C5
Opposite

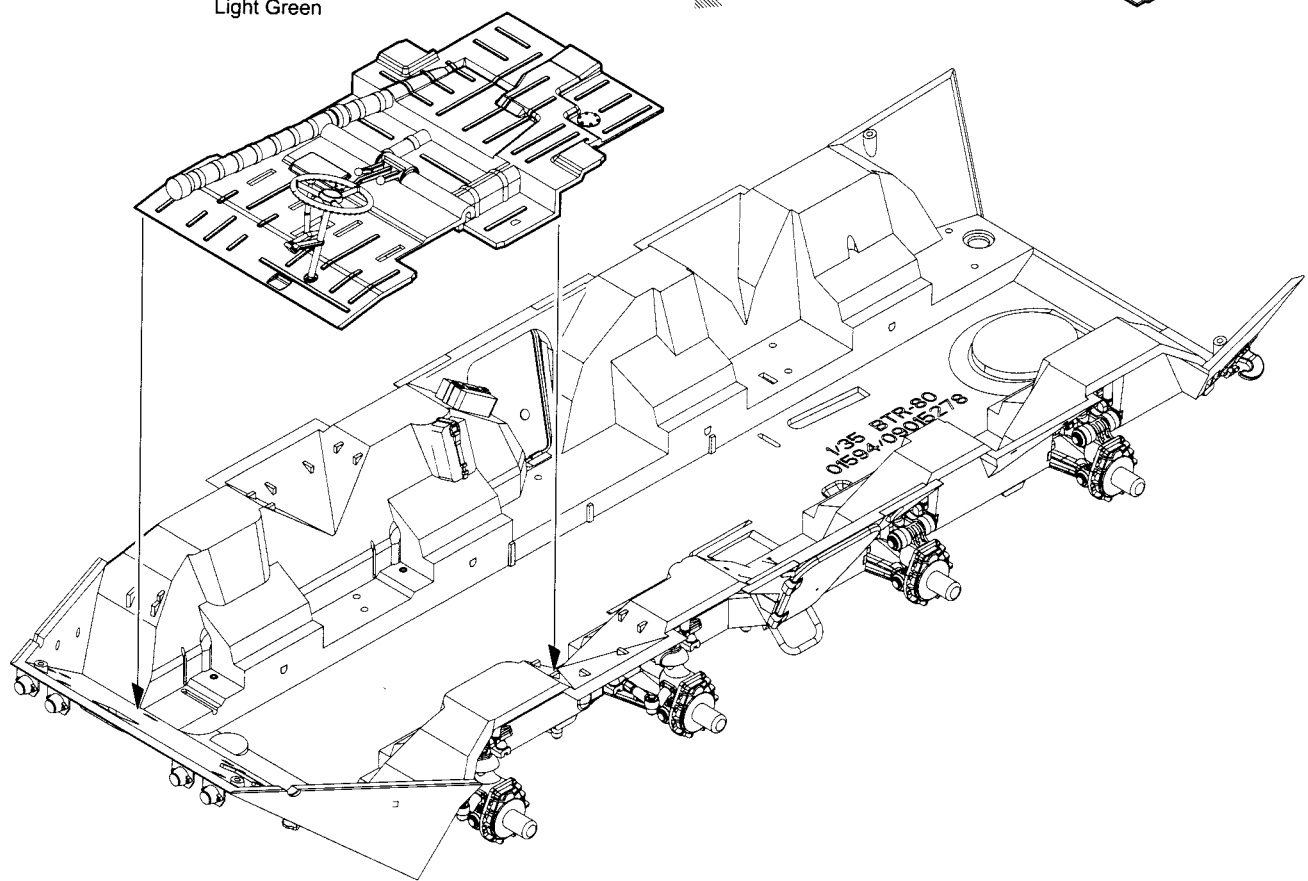A1 C16

A1

G31

A1

C17+C21

A12

制作4组
Make four

K41
对侧 K40
Opposite K40

A6
对侧相同
Both sides

5

H12

G5

G83
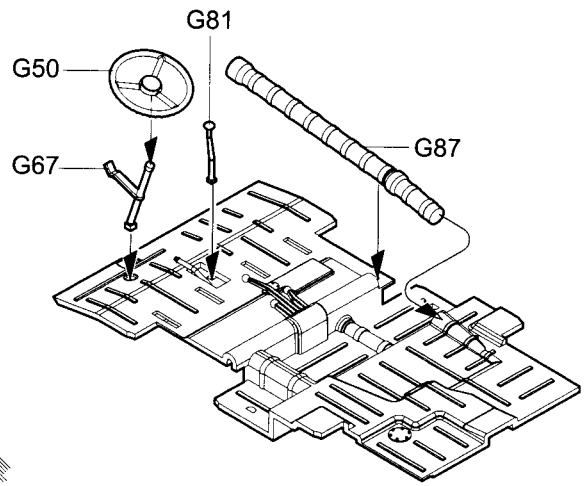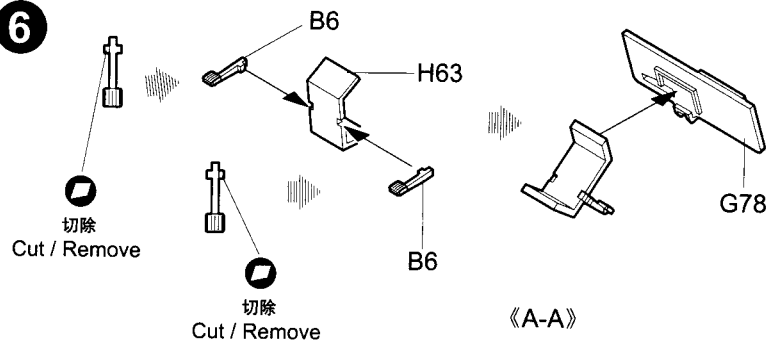
H 303 303
绿色
Light Green

G50

G81

G67

G87

V35 BTR-80
0ſS94/090E278

6

B6

H63

切除
Cut / Remove

切除
Cut / Remove

B6

G78

《A-A》

7

G92

G69

G59

《B-B》

❽

F30

F12

制作2组
Make two

对侧相同
Both sides
A10

贴纸 (4)
Decal

《A-A》 G14

H 304 304
橄榄色
Olive Drab

G76

B5

B9

制作2组
Make two

对侧相同
Both sides
B4

H 12 33
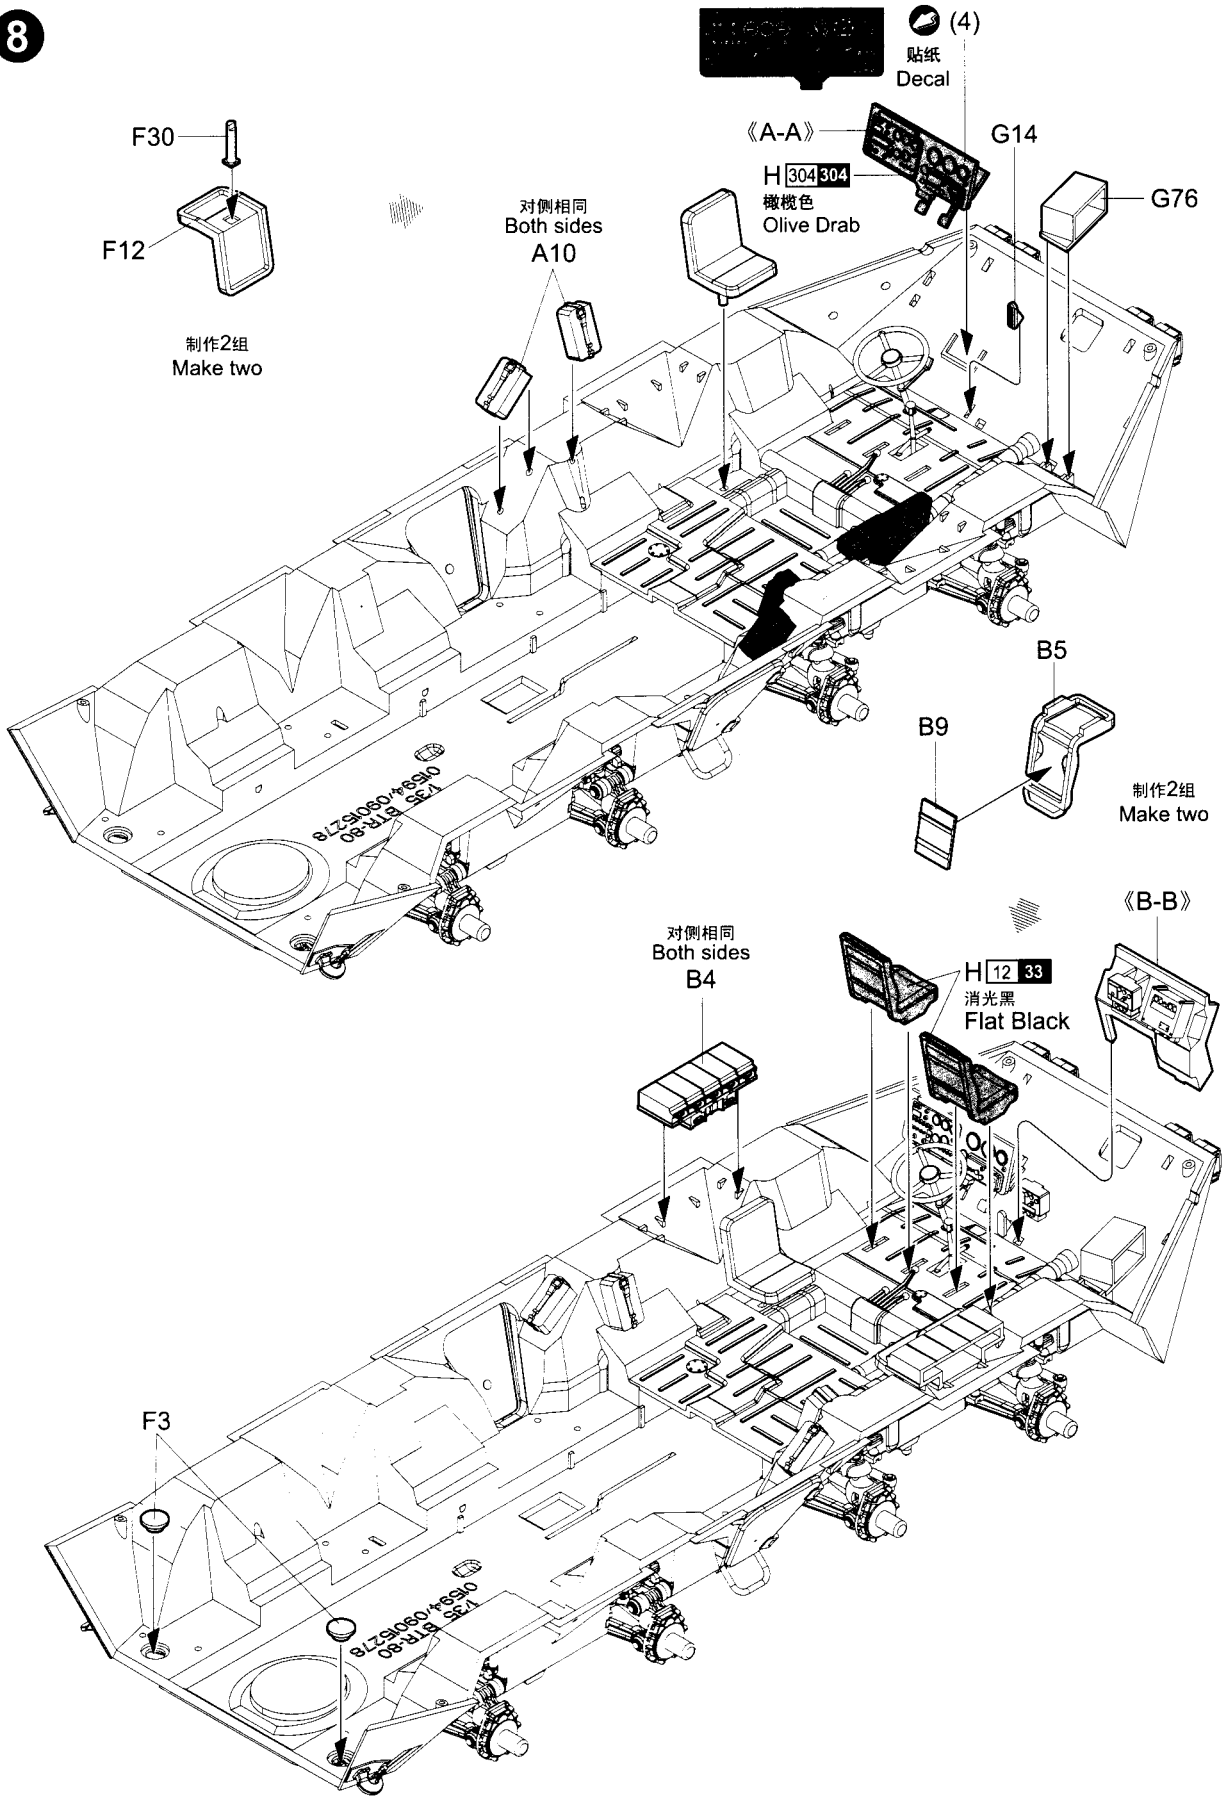消光黑
Flat Black

《B-B》

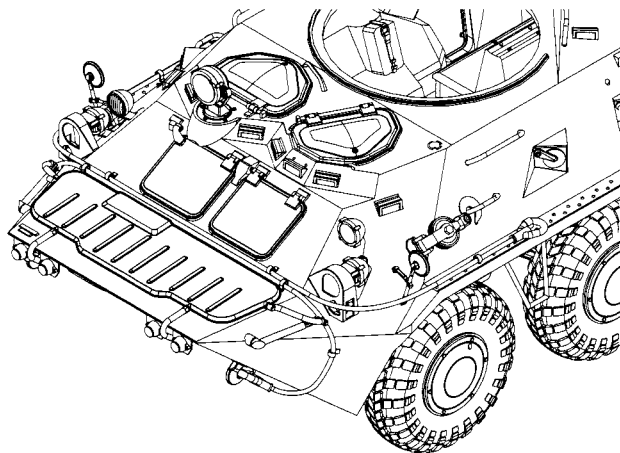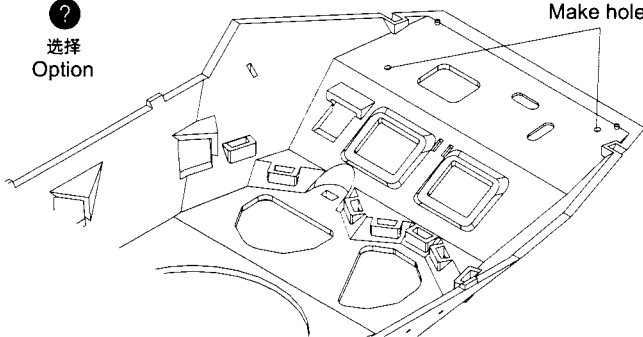F3

V35 BTR-80
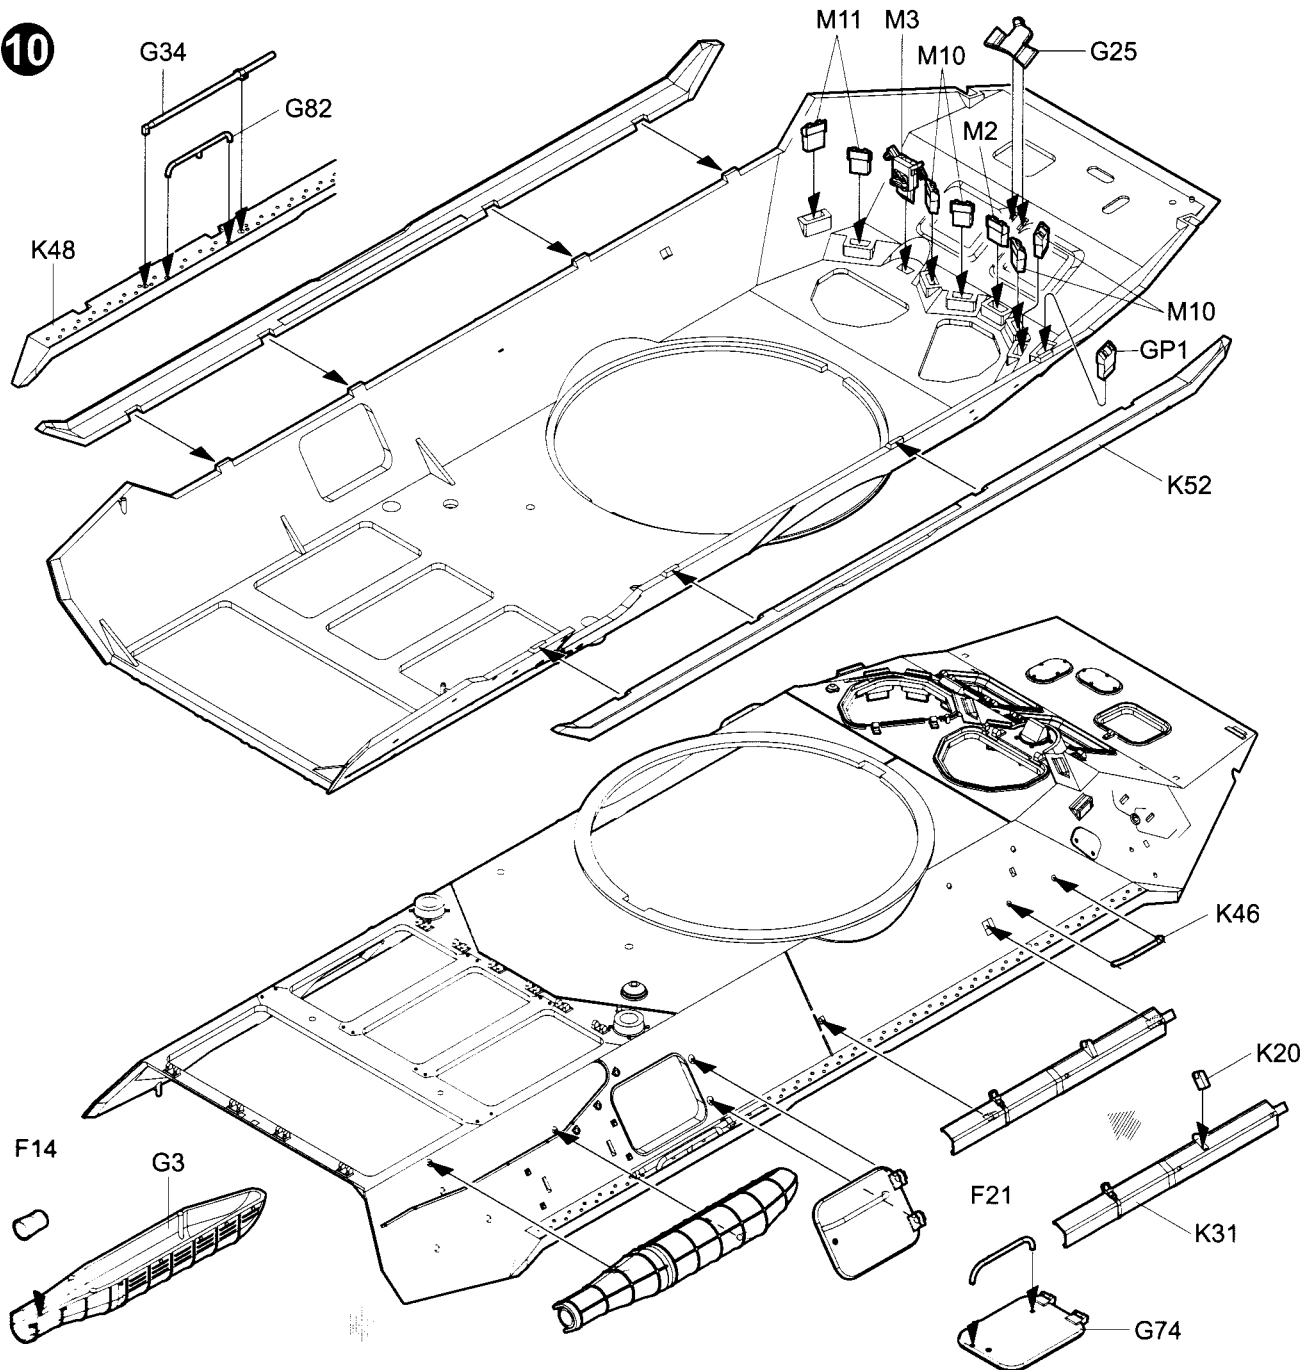0IS84/090I6Z18

V35 BTR-80
0IS84/090I6Z18

⑨ L7 收起状态，车面开孔，参考第14页。
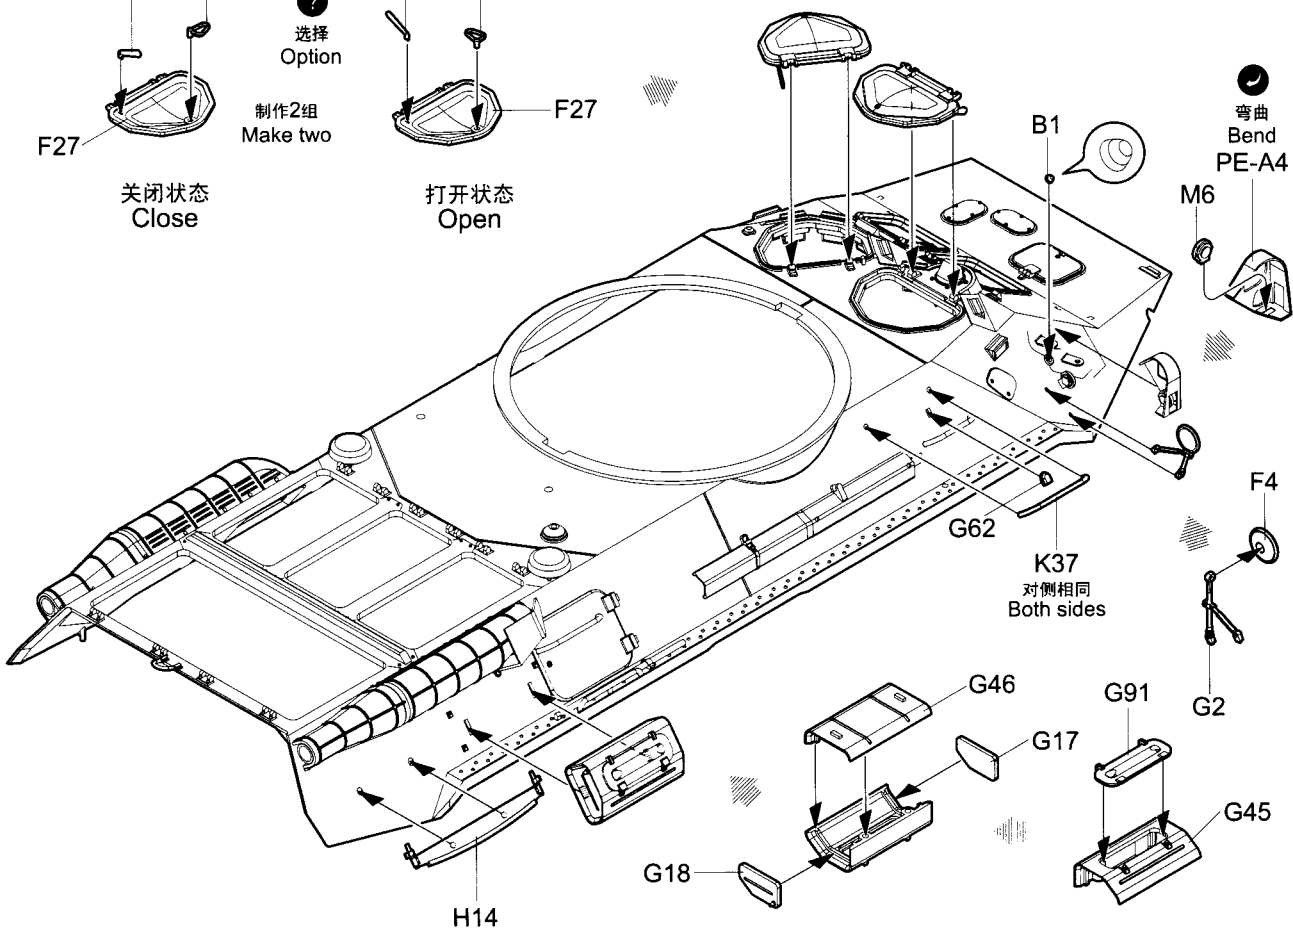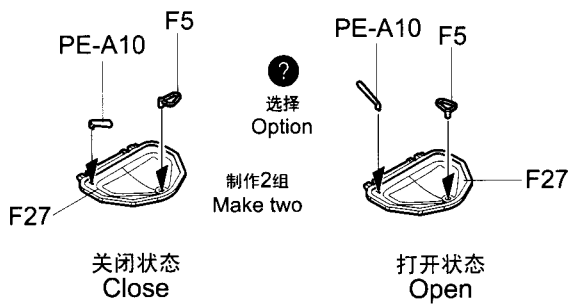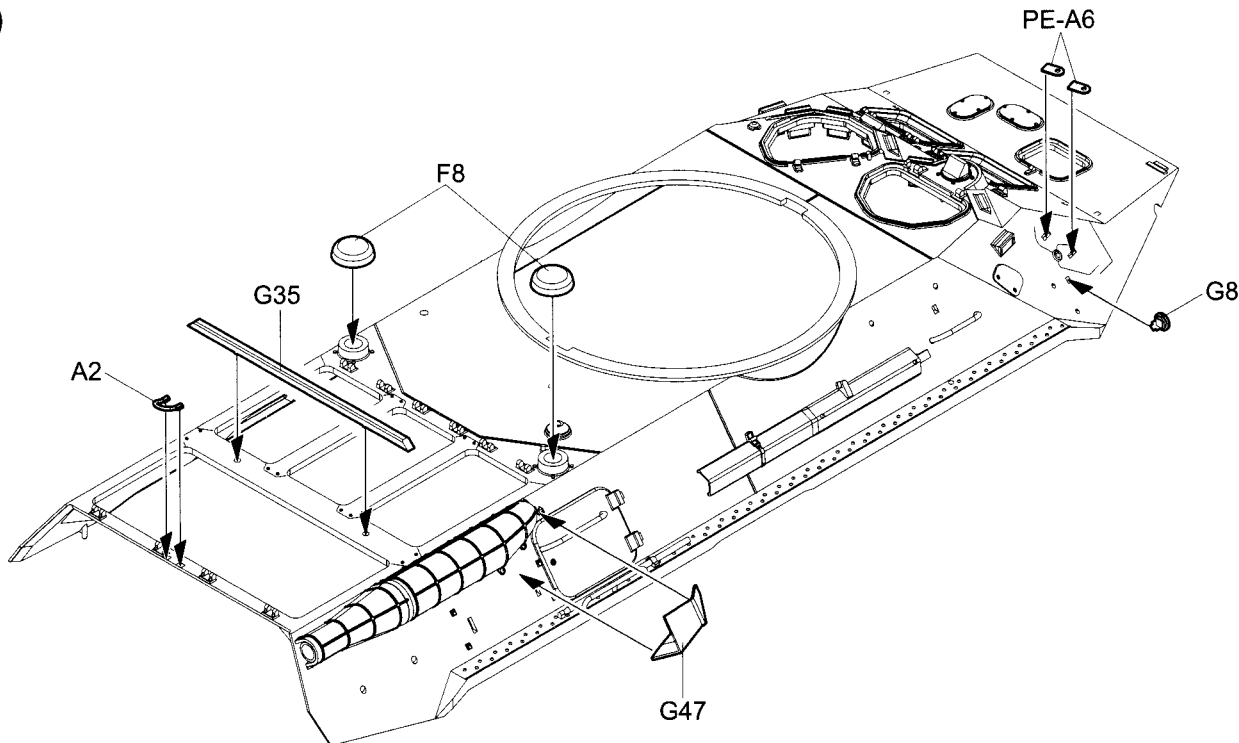L7 close, upper hull make holes,
refer to the 14 page.

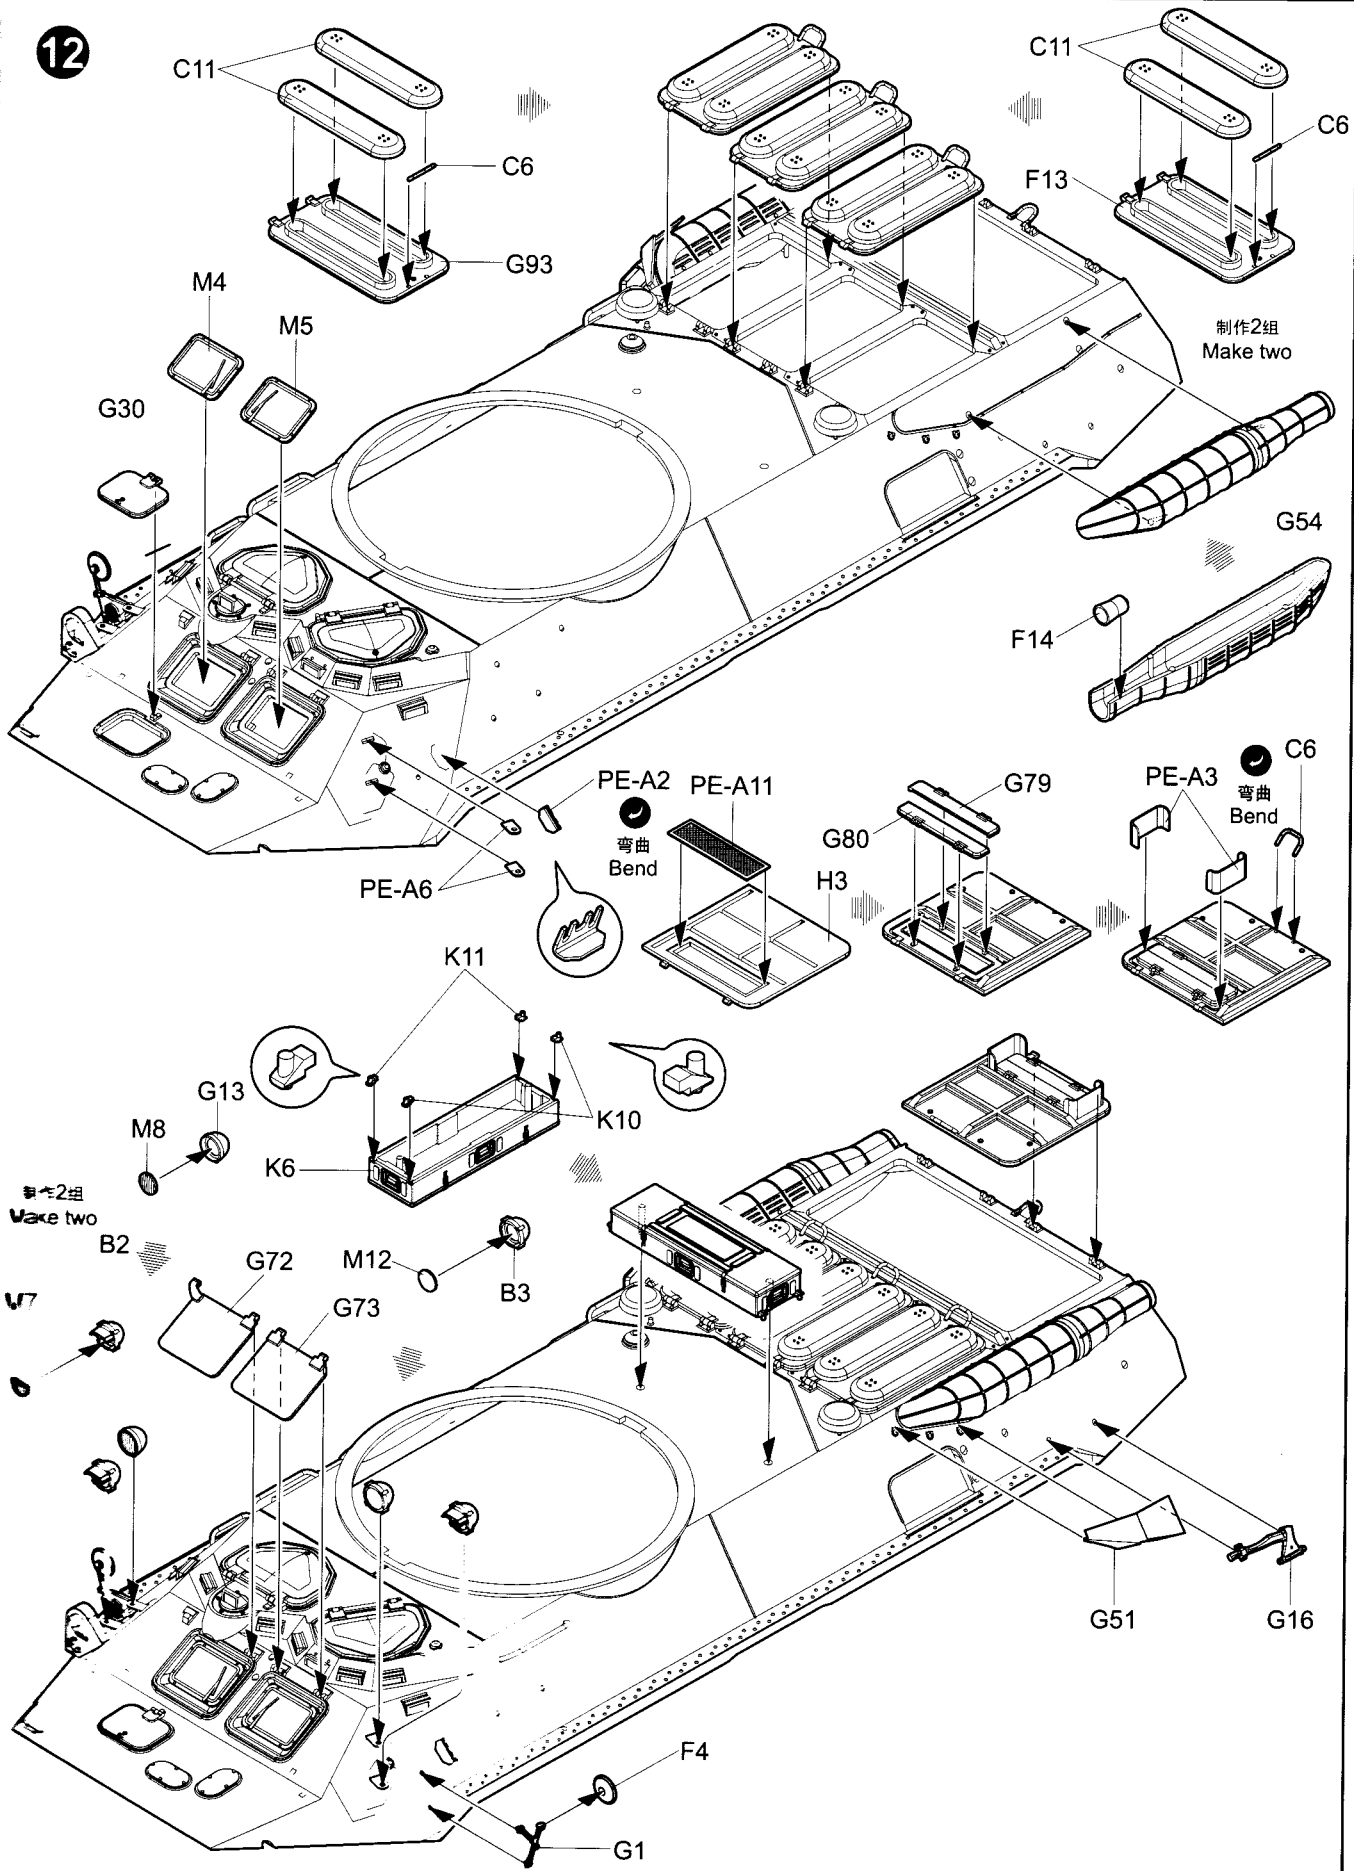**?** 选择
Option

! 钻孔
Make hole

⑩

G34

G82

K48

M11 M3

M10

M2

G25

M10

GP1

K52

K46

K20

F14

G3

F21

K31

G74

PE-A6

F8

G35

A2

G8

G47

PE-A10　F5

PE-A10　F5

? 选择 Option

制作2组 Make two

F27

F27

F27

关闭状态 Close

打开状态 Open

B1

弯曲 Bend PE-A4

M6

G62

K37 对侧相同 Both sides

F4

G46

G17

G91

G18

G45

G2

H14

12

C11
C6
G93
M4
M5
G30
F13
制作2组
Make two
C11
C6
G54
F14
PE-A2
弯曲
Bend
PE-A11
G79
G80
PE-A3
弯曲
Bend
C6
H3
PE-A6
K11
K10
K6
G13
M8
B2
V7
G72
G73
M12
B3
G51
G16
F4
G1
制作2组
Make two

13

G7 G66

G55 G56

G57

《C-C》

PE-A12

弯曲
Bend

M6 PE-A5

弯曲
Bend

F31 F32

G10

14

K4

C6 G11

H2

G15

F16

F21 G32

K46

《C-C》

1/35 BTR-80
0159409559278

《车底》
Lower hull

15

G16

M9

G68

G88

G90

F23

M9

F23

G9

F11

F11

PE-A1

PE-A1

弯曲
Bend

G75

G12

G89

制作2组
Make two

F33

70°

C7

对侧相同
Both sides

C7

16

G77

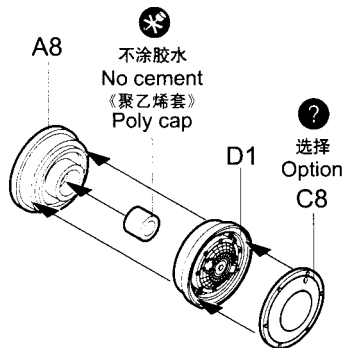F24

G77

H10

展开状态
Open

?
选择
Option

收起状态
Close

H10

F25
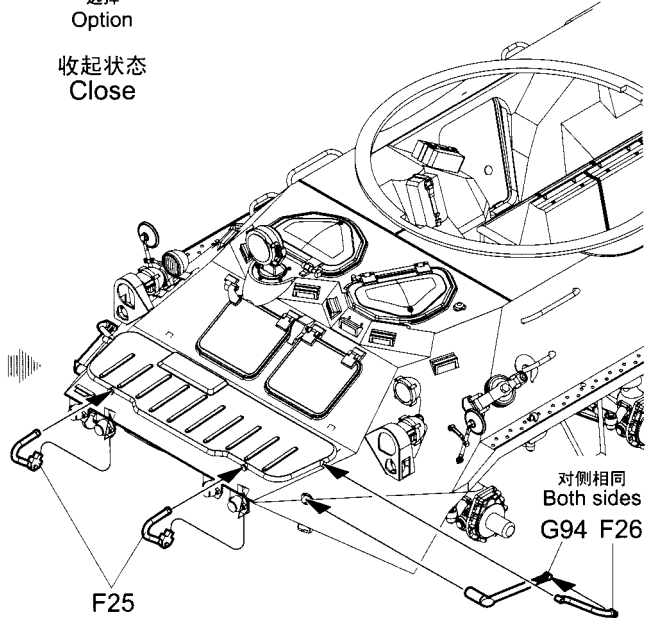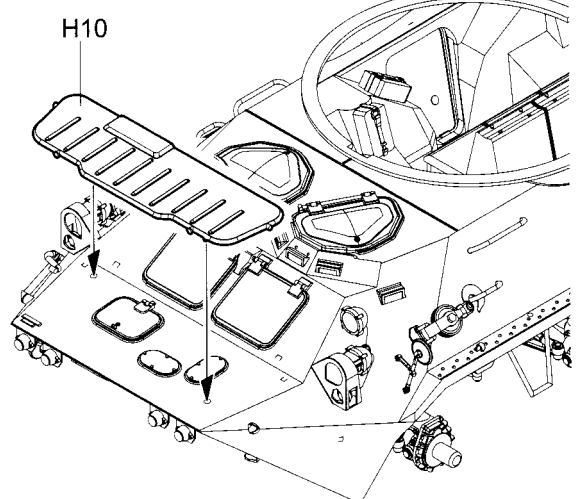
对侧相同
Both sides
G94 F26

17

《轮胎》
Tyre

《左侧轮胎》
Left tyre
制作4组
Make four

A8

✳
不涂胶水
No cement
《聚乙烯套》
Poly cap

D1

?
选择
Option

C8
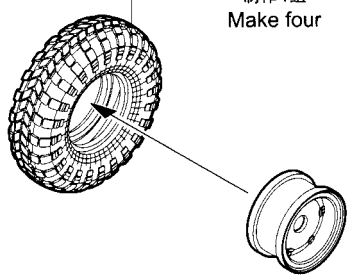
《右侧轮胎》
Right tyre
制作4组
Make four

《轮胎》
Tyre

制作8组
Make eight
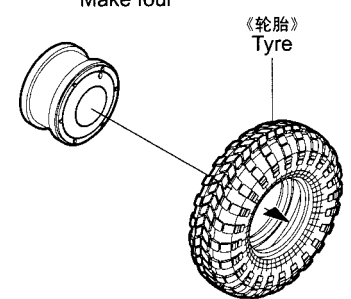
(18)

《左侧轮胎》
Left tyre
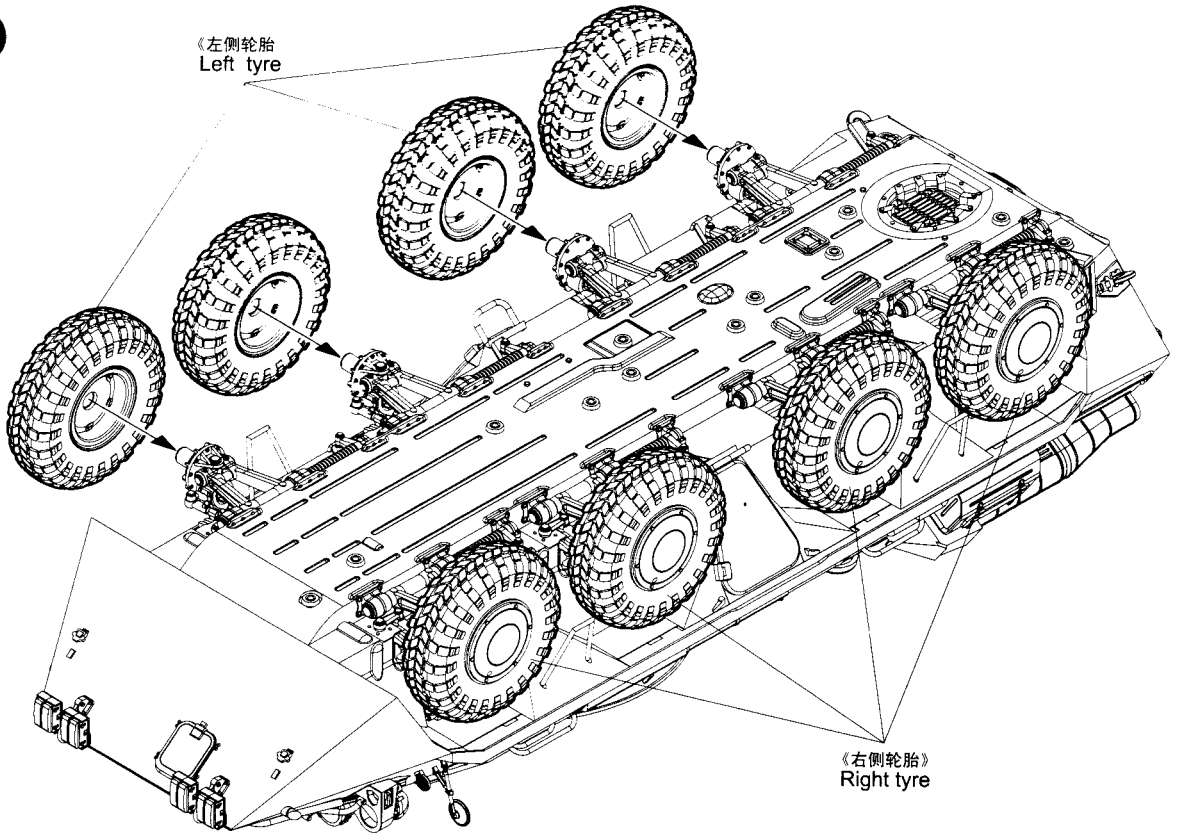
《右侧轮胎》
Right tyre

(19)

❋
不涂胶水
No cement

K42

K9

J1

GP3

J2

J5

J6

J2

K2

《炮塔》
Turret

K1

K19

K16

K45

K1

K47

K27

K8

K7

⟨25⟩

K30

K26

K43

K44

K2
对侧相同
Both sides

J11

J10

GP1

J8

PE-A13x4

J3

J7

J4

J9

《D-D》

20

K35

K3

K14+K15

K29

K17

K28

K18

K39

K5

K38

K34

GP3

K50

K54+K55

K51

《D-D》

《E-E》
对侧《F-F》
Opposite《F-F》

K13
对侧 K12
Opposite K12

G71
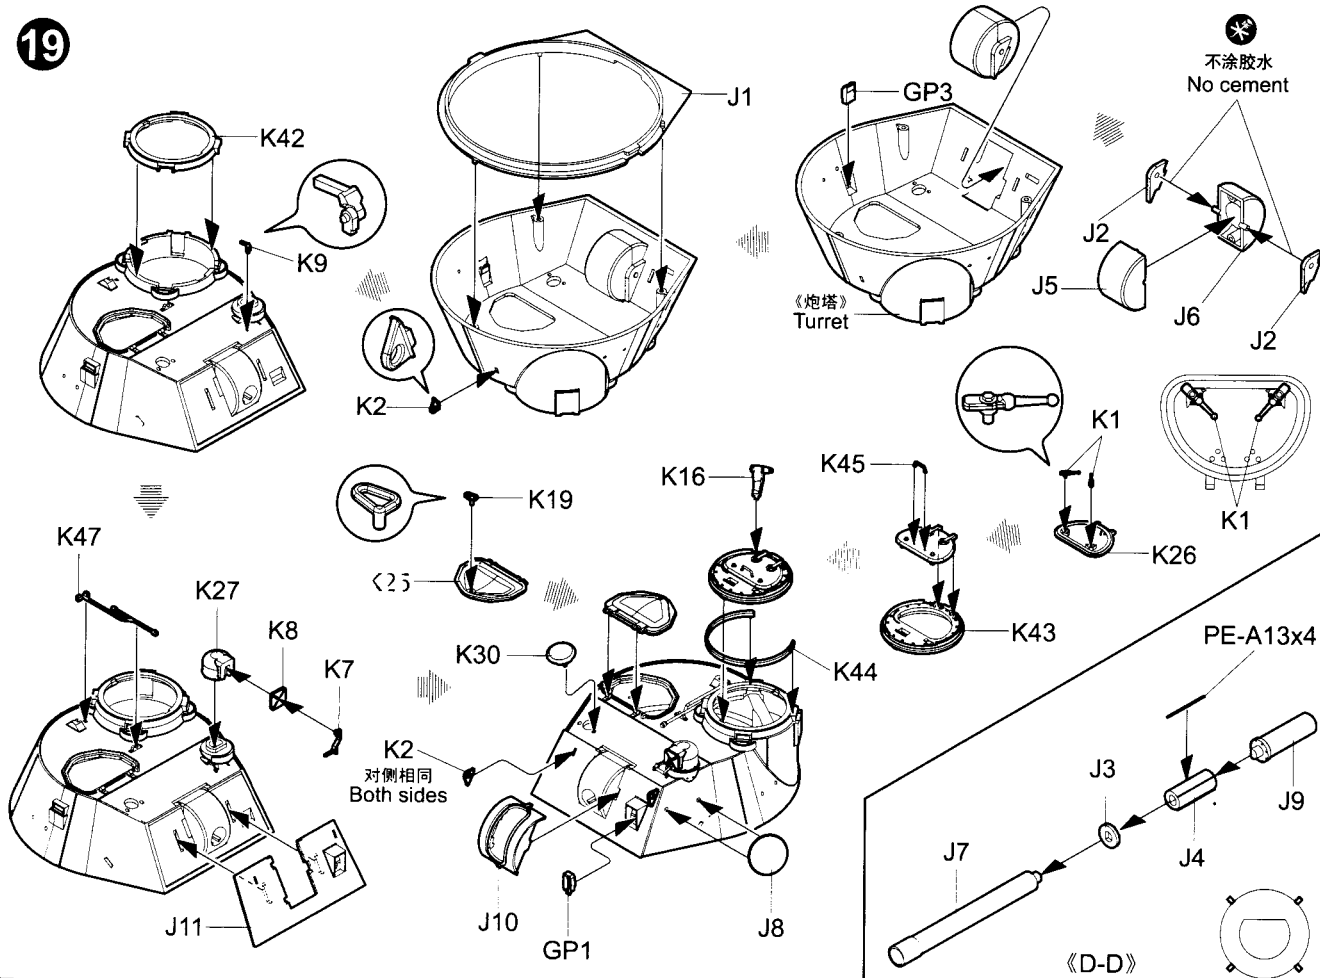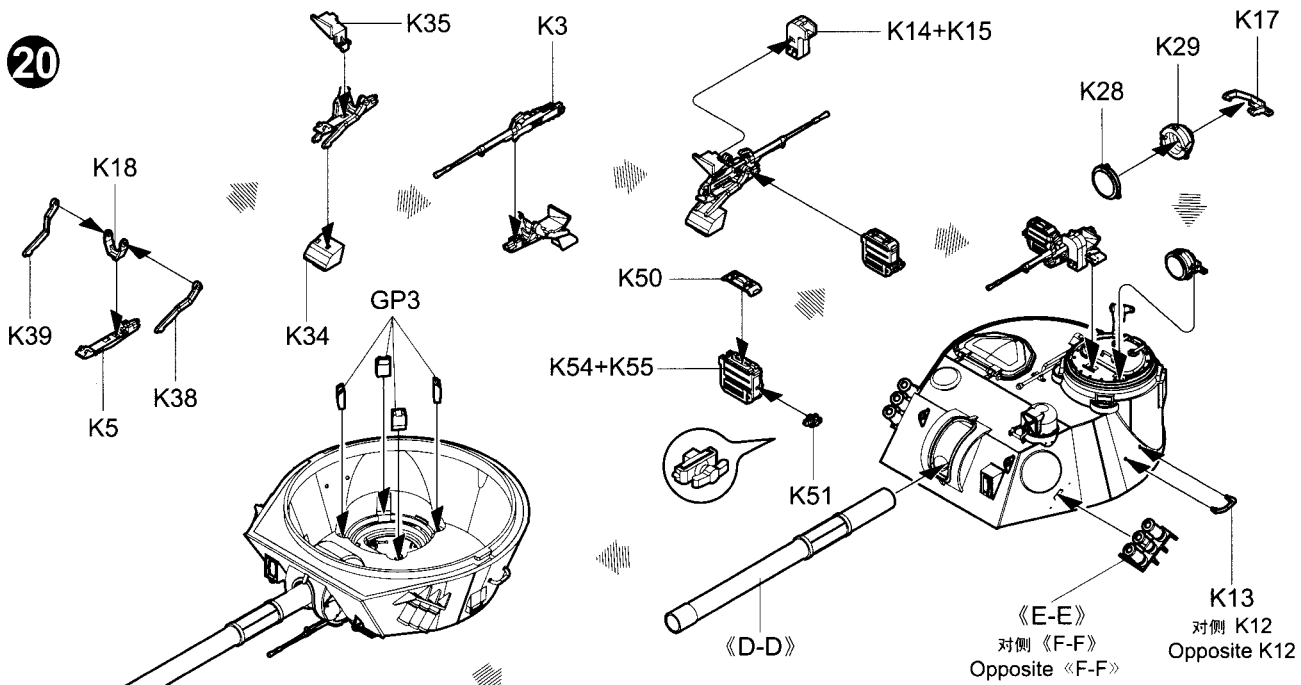
《铜缆》Ø0.6x165mm
Brass wire

弯曲
Bend
PE-A7x8

C12x3

K32

《E-E》

C12x3

K33

《F-F》

G70
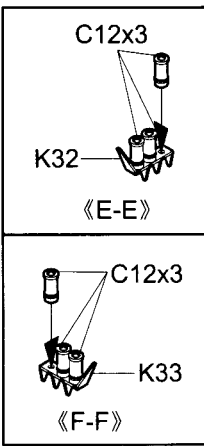
F2

PE-A7x2

弯曲
Bend
对侧相同
Both sides

《铜缆》Ø0.6*120mm
Brass wire

C16x2

F2